

5.1.2 CHANNEL DOLBY ATMOS SOUND BAR



Model: Rainevery Pro Series 5
Email: Support@RainEvery.com
Phone/ SMS: 1-617-329 9994
(Mon-Fri 9am – 4pm ET)

Table of Contents

| | |
|-----------------------------------|----|
| Safety & Warnings | 2 |
| Package Contents | 4 |
| Proper Placement | 5 |
| Sound Bar Setup | 5 |
| Wall Mounting | 6 |
| Subwoofer Setup | 8 |
| Satellite Speakers Setup | 9 |
| Remote Control | 10 |
| Display Input Indicators | 12 |
| Sound Bar Control Button | 12 |
| Operation – Optical Input | 13 |
| Operation – HDMI ARC Input | 14 |
| Operation – AUX Input | 15 |
| Operation – USB Input | 16 |
| Operation – Bluetooth Input | 17 |
| Troubleshooting | 18 |
| Technical Specifications | 21 |

SAFETY & WARNINGS

Thank you for purchasing our sound bar. Before using this product, please read and understand the following safety and warning information to ensure safe and proper usage.

Safety Precautions:

- 1. Electrical Safety:** This sound bar should be plugged into a properly grounded electrical outlet to prevent electrical hazards such as electric shock or fire. Do not use extension cords or damaged electrical cords with the sound bar.
- 2. Placement:** Place the sound bar on a stable surface and ensure that it is positioned securely to prevent it from falling or tipping over, which could cause injury or damage.
- 3. Ventilation:** Do not block the ventilation openings of the sound bar. Ensure that there is adequate ventilation around the sound bar to prevent overheating and ensure safe operation.
- 4. Liquid and Moisture:** Do not expose the sound bar to liquid or moisture, as it may result in electrical shock or damage to the product. Keep liquids away from the sound bar at all times.
- 5. Cleaning:** When cleaning the sound bar, always disconnect it from the power source and use a soft, dry cloth. Do not use liquid or abrasive cleaners that may damage the surface of the sound bar.
- 6. Cables:** Use only the cables provided with the sound bar or cables that are compatible with the product. Improper cables may result in poor performance or damage to the sound bar.
- 7. Children:** Keep the sound bar and its accessories out of reach of children, especially small parts that could pose a choking hazard. Do not allow children to play with the sound bar or its components.
- 8. Overheating:** If the sound bar becomes excessively hot during use, immediately disconnect it from the power source and allow it to cool down before handling or further operation.


Warnings:

- 1. Hearing Safety:** Listening to sound at high volumes for extended periods of time may damage your hearing. Use the sound bar at a comfortable volume level and take breaks if listening for prolonged periods.
- 2. Electrical Hazards:** Do not attempt to open or disassemble the sound bar as it may expose you to dangerous electrical components. Repairs should only be performed by qualified technicians.
- 3. Compatibility:** Ensure that the sound bar is compatible with your audio source, and follow the manufacturer's instructions for setup and configuration. Using the sound bar with incompatible devices may result in damage to the product or poor audio performance.
- 4. Power Source:** Only use the provided power cord or a cord that meets the manufacturer's specifications. Using an improper power cord may result in electrical hazards or damage to the sound bar.
- 5. Use in Approved Locations:** Only use the sound bar in indoor environments and in accordance with local regulations and guidelines. Do not use the sound bar in damp or wet locations or expose it to extreme temperatures or humidity.
- 6. FCC Compliance:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- 7. Battery Safety:** If the sound bar is powered by a battery, follow the manufacturer's instructions for safe battery usage, charging, and disposal. Do not attempt to replace the battery with a non-approved battery.


Please read and follow these safety and warning instructions carefully to ensure safe and proper use of your sound bar. Failure to do so may result in personal injury, damage to property, or voiding of the warranty. If you have any questions or concerns, please contact our customer service department at: Support@RainEvery.com for assistance.

Note: This safety and warning information is not an exhaustive list, and it is important to use common sense and exercise caution when using any electronic product. Always refer to the sound bar's user manual and follow the manufacturer's instructions for safe.

Package Contents

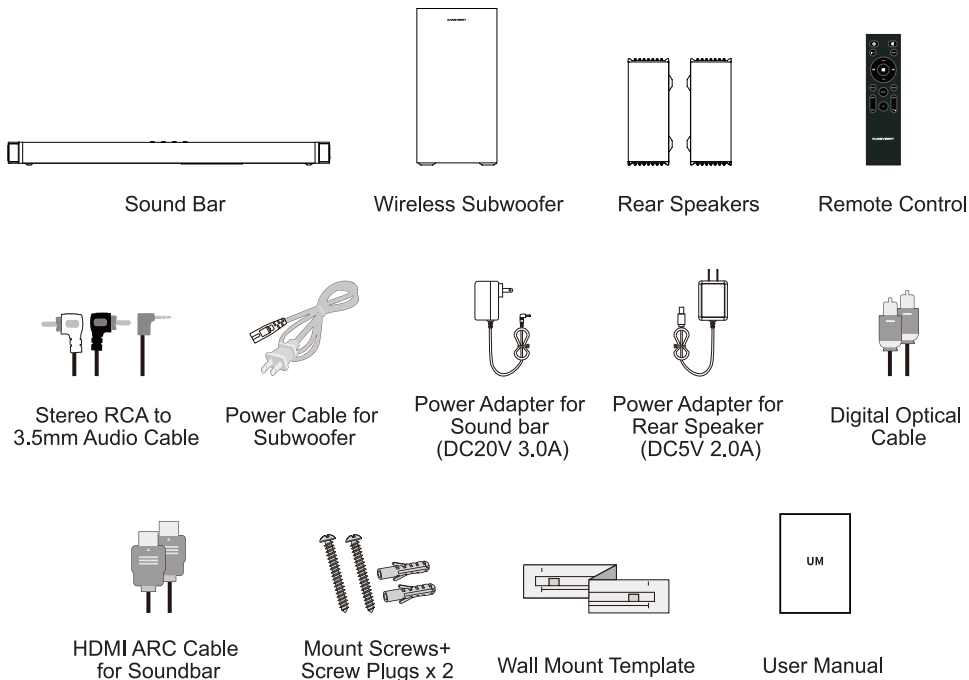


Proper Placement

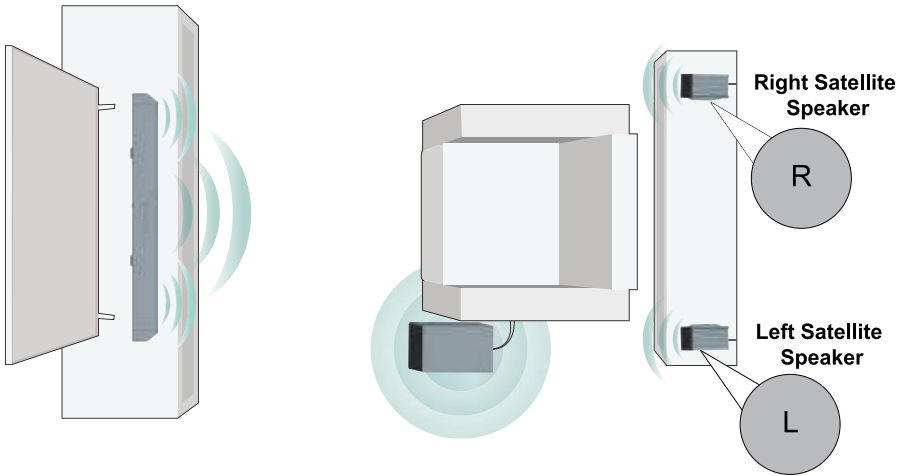

Note: L satellite speaker placed on your left-hand side, R satellite speaker on right-hand side.


For Sound Bar

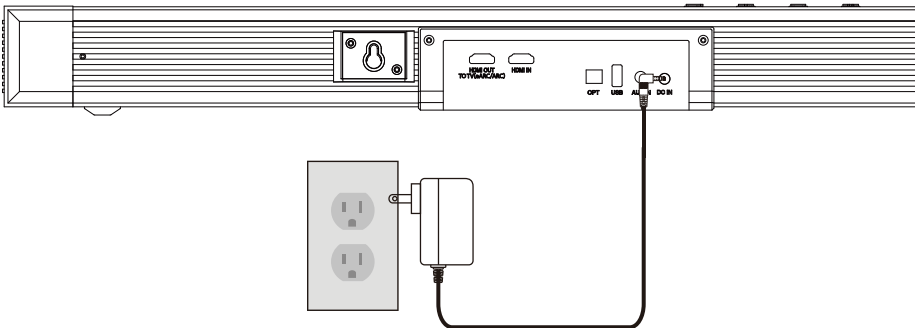

Connect using the power adapter (DC 20V 3A) to the sound bar DC IN as shown. Plug the power cable into an electrical outlet.

Wall mounting the Soundbar

1. Tape the included wall mounting template on the wall. Mark the two bracket holes using a pencil.

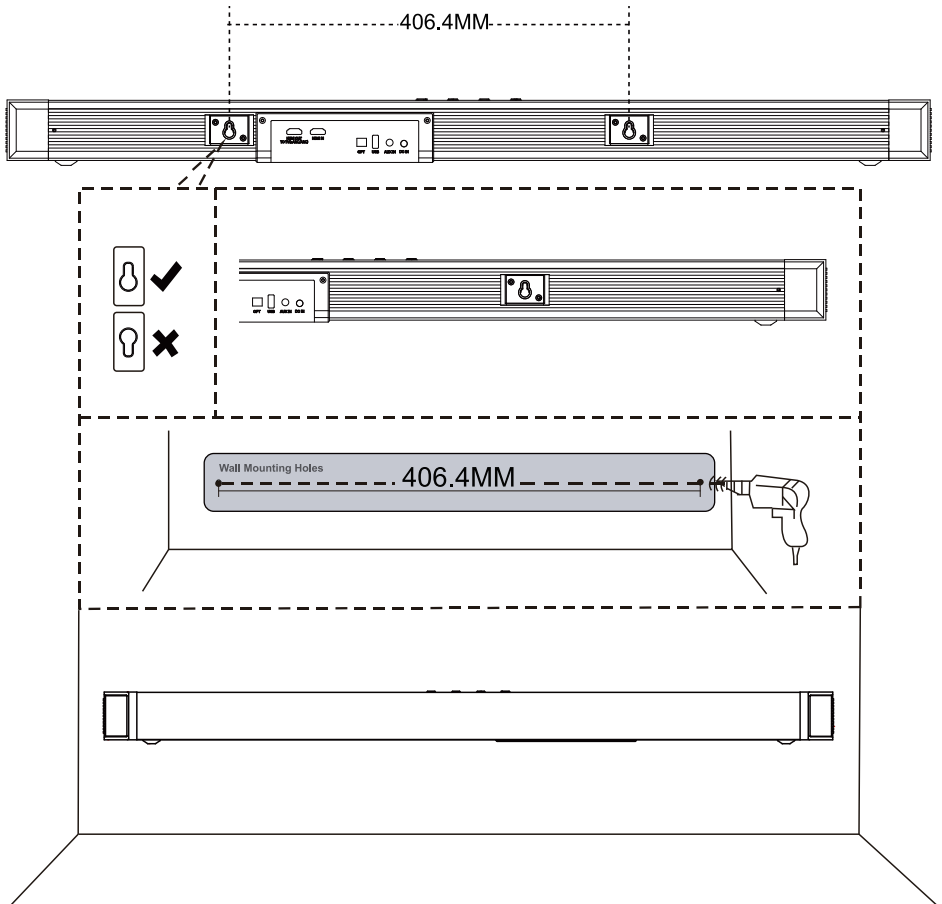

2. Drill two parallel 406.4 millimeter holes using the mounting template paper. Secure the supplied anchors, and screws into the holes. Please Make sure the screws protrude 5 millimeters from the wall.

***Anchors are only required when mounting onto a solid wall.**

Anchor




Solid wall (i.e., solid brick, solid concrete, solid wood)




Drywall, plastered wall ect.

3. Hang the sound bar on the fastening screws.


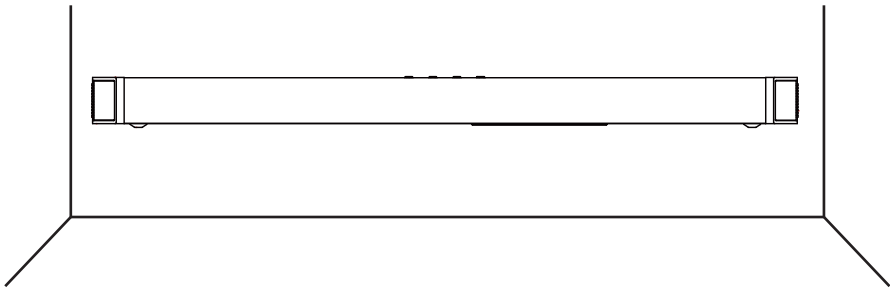


4. Gently push the sound bar down to lock it in place and secure it.

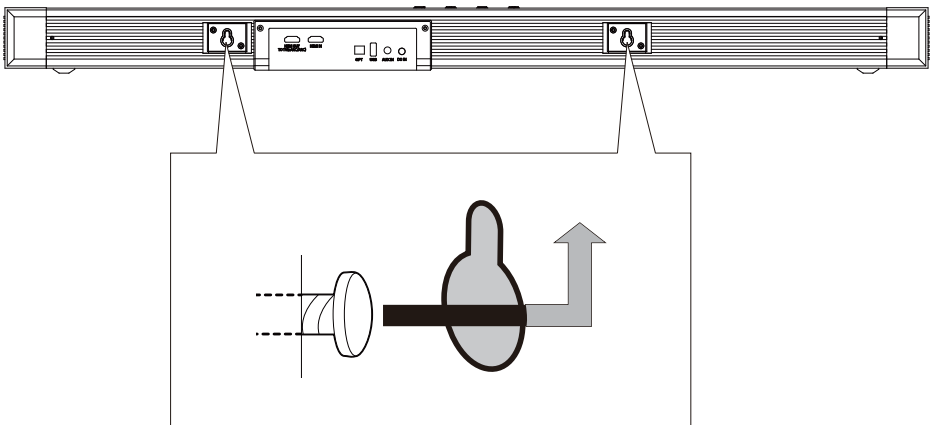


Note: If you need any assistance mounting, please email us at Support@Rainevery.com to provide you with more direct help!


For Subwoofer

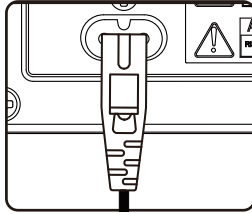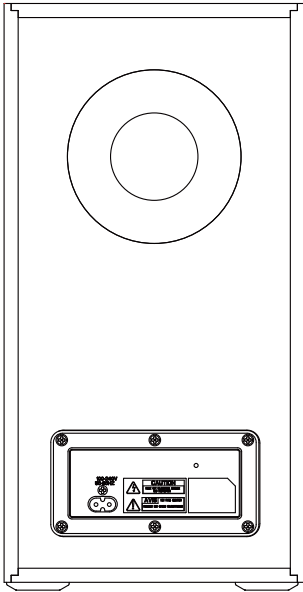

Connect the power cable to the back of the subwoofer.


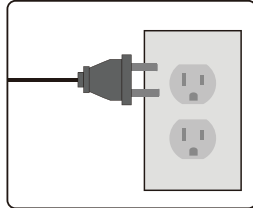


Plug other end of the power cable to the power outlet.

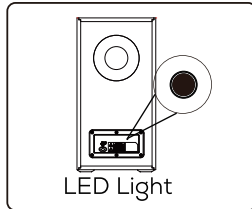

The subwoofer will automatically pair to the sound bar after plugged in. The solid red light confirms the connection.

For Satellite Speakers

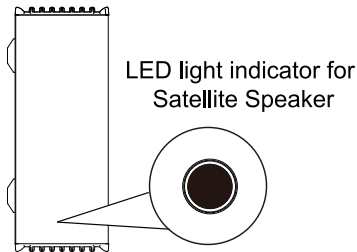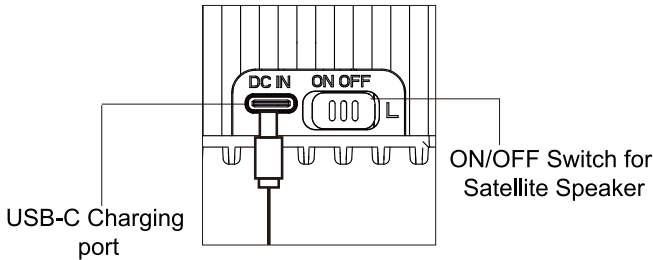

*** The satellite speakers can last up to 5-6 hours on a full charge. For daily use, it is safe to leave the satellite speakers on the charger at all times.**


To turn on the satellite speakers, flip the ON/OFF switch to ON on the back of both speakers. A solid white light on the speaker side will confirm connection.

- If the battery is low (rapidly flashing white light or no light), plug the USB-C satellite speaker charger into a power outlet and charge the speakers.
- A solid red light on the speaker side will indicate that the speakers are charging. The red light will go out after battery is fully charged.


The sound bar has already been paired by Raineverry. However, if you're not getting any sound, or noise from one of the speakers, feel free to contact us. We may need to replace the subwoofer or satellite speakers for you. If the connection is lost, the white LED light will flash slow. To try reconnecting, unplug the power for the sound bar and subwoofer and then turn them on again.

Please contact us: Support@RainEverry.com


Remote Control Battery Replacement

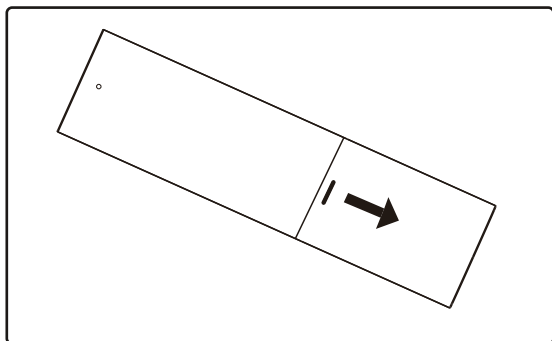

A. Remove the battery compartment cover.

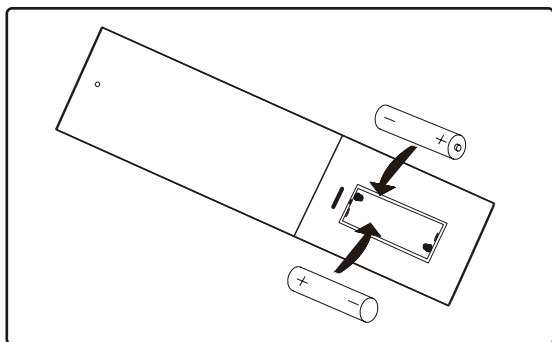


B. Insert 2 AAA batteries according to the marking inside compartment.

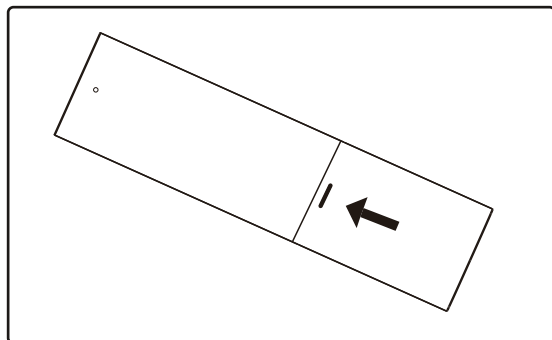

C. Close the compartment.

Remote Control

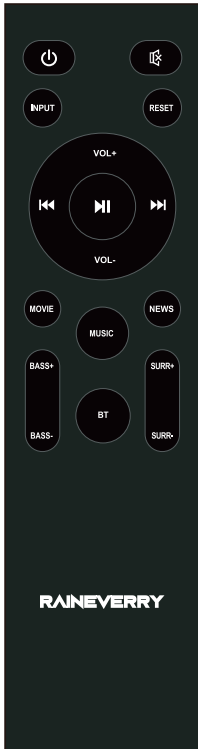


| | | | |
|--------------|------------------------------------|--------------|---|
| | Power on / off | INPUT | Change input source (ARC, Optical, AUX, BT) |
| | Mute / Unmute | MOVIE | Movie equalizer mode |
| VOL+ | Increase volume | MUSIC | Movie equalizer mode |
| VOL- | Decrease volume | NEWS | Dialogue equalizer mode |
| | Previous track | BASS+ | Increase subwoofer bass |
| | Pause / Play | BASS- | Decrease subwoofer bass |
| | Next track | SURR+ | Increase satellite speaker volume |
| BT | Bluetooth | SURR- | Decrease satellite speaker volume |
| RESET | Reset volume, EQ, Input to default | | |

***The volume range for the sound bar is from 0 to 50.**

***The volume range for the satellite speakers is from 0 to 10.**


***The volume range for the for the bass / subwoofer is from -6 to +6.**

Display Input Indicators

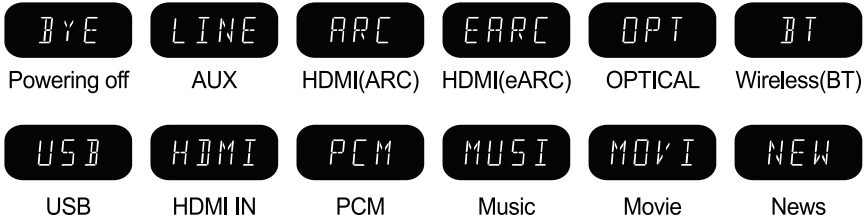

Note: The sound bar remains power on at all times. After setting the sound bar to the ideal volume, most of our users do not need to use our remote. The sound will automatically play when TV is on. The display remains off after 5 minutes of use for energy saving.


Sound bar Control Button

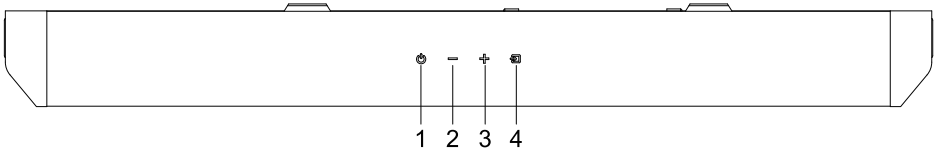

1. Short press to turn on/power off
2. Decrease volume
3. Increase volume
4. Short press to change input to BT / AUX / OPT / ARC

Operation

Digital Audio Out (Optical)

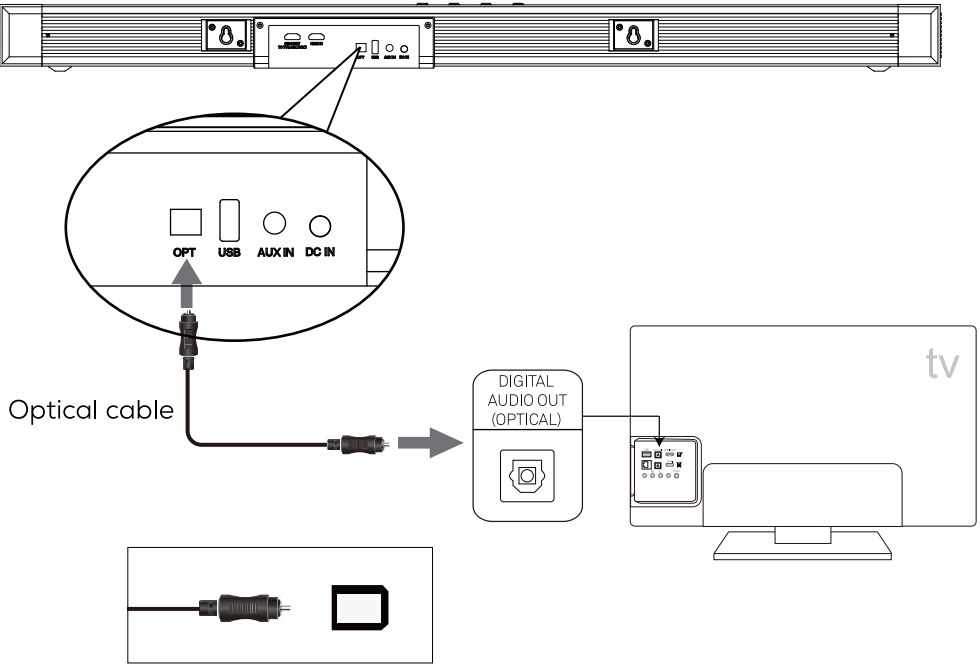


*Take the caps from optical cable before plug in

To connect the sound bar to a TV with a Digital Audio Out (Optical) port, please follow these steps:

1. Connect the included optical cable to the Digital Audio Out (Optical) port on your TV.
2. Connect the other end of the optical cable to the OPT port on the sound bar.
3. Change the sound bar input to OPT by pressing the INPUT button on the remote or the soundbar until "OPT" is shown on the sound bar display.

NOTE: Please remember to change your TV audio input to Audio Out / External Speaker.

HDMI (ARC)

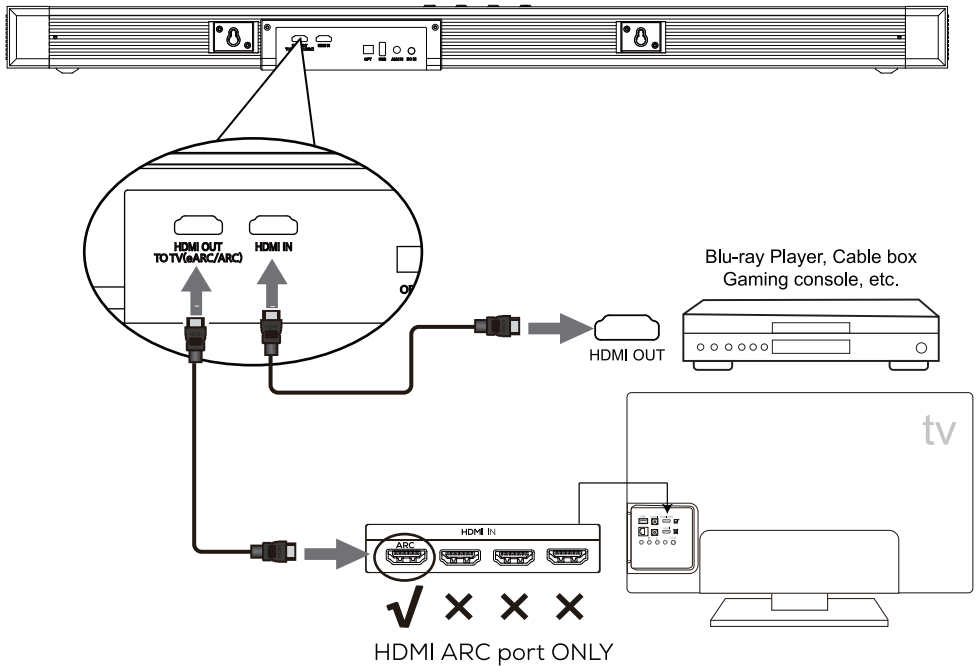

To connect the sound bar to an ARC-compatible TV, please follow these steps:


1. Connect the included HDMI cable to the HDMI OUT port on the sound bar.
2. Connect the other end of the HDMI cable to the ARC port on your TV.
3. Change the sound bar input to ARC by pressing the INPUT button on the remote or the sound bar until “HDMI” is shown on the sound bar display.

Note:

- You may also connect external devices, such as a Blu-ray player, cable box, or gaming console, to the sound bar's HDMI IN socket using another HDMI cable.
- Set your TV's sound/audio output as HDMI (ARC).

IMPORTANT: Before use, please make sure that your TV is HDMI-ARC compliant.

AUX / Audio Out

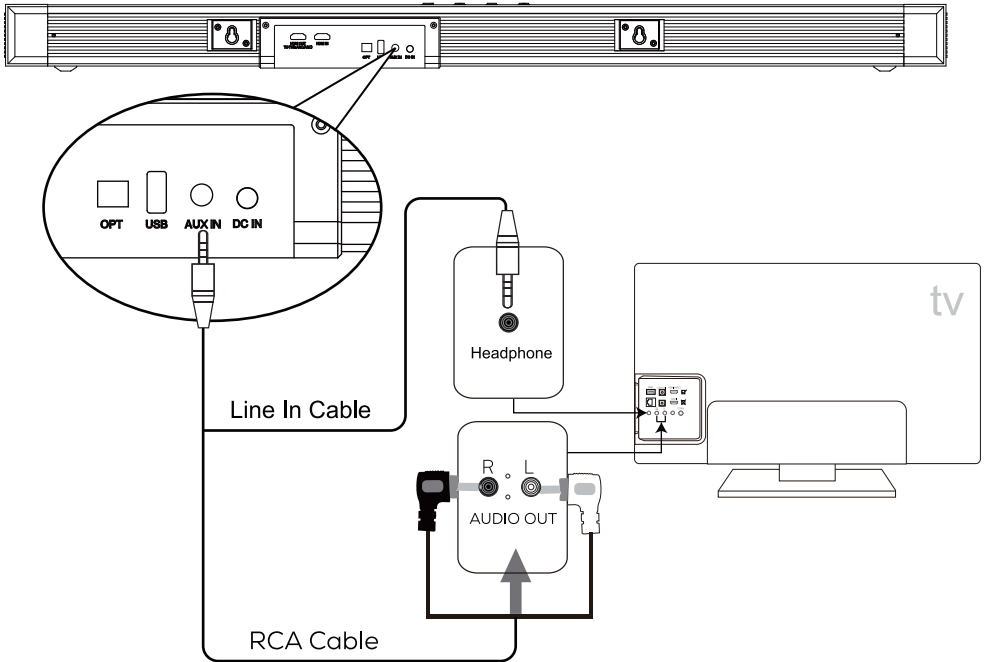


To connect the sound bar to a TV with an AUDIO OUT / Head phone port, please follow these steps:

1. Connect the included RCA to 3.5 mm audio cable or a 3.5 mm audio cable (not included) to the AUDIO OUT port on your TV.
2. Connect the other end of the cable to the AUX port on the sound bar.
3. Change the sound bar input to AUX by pressing the INPUT button on the remote or the sound bar until "LINE" is shown on the sound bar display.

Note:


- Please remember to change your TV's audio input to Audio Out / External Speaker.
- Make sure that you connect to the AUDIO OUT/Headphone port on your TV. Some TVs only have AUDIO IN, which will not work with any external speakers.

USB Mode (Flash Drive Only)

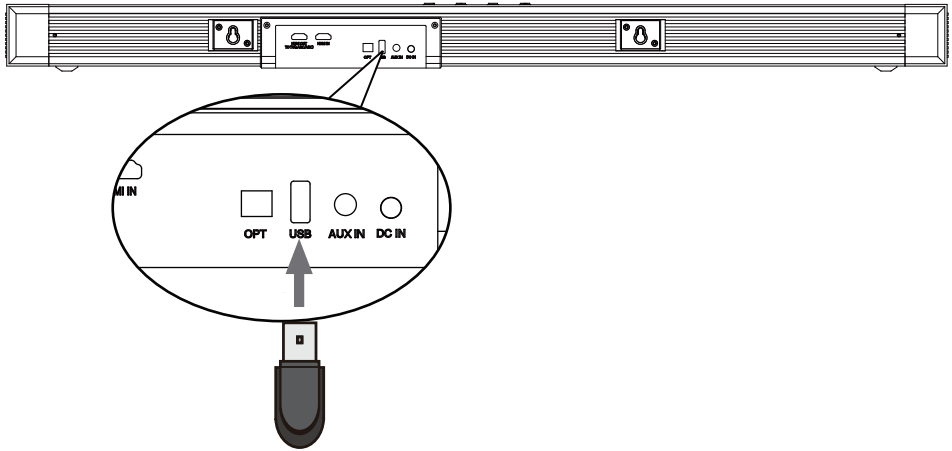

The sound bar can play MP3 and WAV audio files directly from USB flash drives up to 64GB in size. To play the first compatible track in USB mode, insert a compatible drive into the USB port on the back of the sound bar. You can then use the media controls on the remote control to play, pause, and navigate between tracks on the flash drive.

Bluetooth

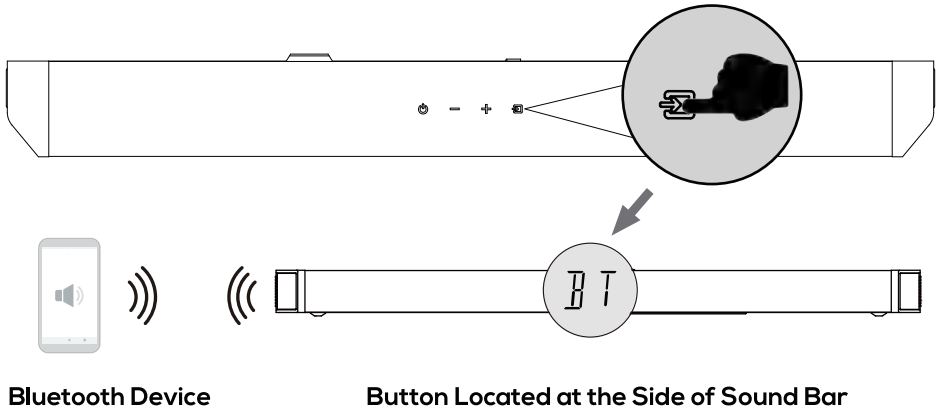

To connect your Bluetooth device to the sound bar, please follow these steps:

1. Use either the buttons on the soundbar or the "BT" button on the remote to enter Bluetooth input. The flashing "BT" LED indicator will confirm that you are in Bluetooth mode.
2. Go to the Bluetooth function on your phone or other Bluetooth device and select "Rainevery Pro Series 5".
3. You will hear a tone when the pairing is successful, and the BT LED will stop flashing.

Notes:

- If your Bluetooth device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.
- To connect a different Bluetooth device to sound bar that is already connected with Bluetooth: Press and hold the "Play/Pause" button on the remote for 5 seconds. This will cause the "BT" on the sound bar display to start flashing again, indicating that the sound bar is now ready to be paired to a new device.

Troubleshooting

Q) No sound comes out after connecting to the TV using ARC/ Optical (Common):

Please make sure the HDMI cable is plugged in to the “HDMI OUT” port on the soundbar, and your TV support ARC output. The ARC port on TV is labeled differently than the regular HDMI port. Then go to Setting in your TV Setting (may vary due to different brands):

- 1) Setting > Sound > Select Speaker to: external speaker (optical mode)/ turn off TV Speaker
- 2) ARC: Setting > Sound(audio) > Sound output > Receiver (HDMI) Optical: Speaker Settings> Speaker Select > Audio Out.

Please select the correct input mode on the soundbar shown on the LED display.

Q) How is the battery life for the satellite speaker? Can I leave them plugged in all time?

The satellite speakers can last up to 5-6 hours on a full charge. Yes! For daily use, it is safe to leave speakers on the charger at all times.

Q) Why won't my Bluetooth device connect to the sound bar?

- You have not enabled the Bluetooth feature on your device or the sound bar.
- The sound bar is connected to another Bluetooth device if the LED display is not flashing. Disconnect the connected device and try again.
- Long Press the “Play/Pause” button on the remote to reset Bluetooth.

Q) Why am I hearing buzzing or humming?

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Blu-ray player, etc.) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the sound bar.

Q) Can I use my TV remote to control the sound bar?

Yes, please connect the sound bar using ARC input. TV remote will control the sound bar volume automatically. But we highly recommend using the included remote for the best experience, and advance settings (EQ/Bass/Rear Speakers).

Q) One of the speakers/subwoofer does not have sound.

Please make sure all the speakers are connected and have a solid light on the back of speakers. Please charge the rear speakers if the batteries are dead.

If the connection is lost, the indication light will flash. Please unplug the power for the soundbar & speakers. and power again to try reconnecting. If still not working, please contact us: Support@RainEvery.com

Q) Remote not working.

- 1: Double-check if the batteries are installed correctly in the battery slot.
- 2: Replace two brand new AAA batteries.
- 3: Point the remote to the center of the sound bar (IR is built in the middle of the LED.)

If the issue still exists after you did the above steps, please send an email to us: at Support@Rainevery.com with your Amazon order ID, and we will provide you with a free replacement.

Q) Why is the soundbar display blinking/flashing?

The soundbar display flashes when you are in mute (Except Bluetooth mode).

Please press the mute button again to unmute.

Q) How do you mount it on the wall?

Mounting our sound bar on the wall is very simple. Please find the mounting screw kit within our package. And measure and screw them on the wall using the measuring paper we included. Finally, attach the back of the sound bar to the mounted screw.

If you need any further assistance, please email us at Support@Rainevery.com to provide you with more direct help!

Technical Specifications

| | |
|--|---|
| Model | Rainevery Pro Series 5 |
| Peak Power: | 500 Watts |
| Connectivity | Bluetooth / AUX IN / USB Playback / Optical / HDMI in / HDMI out |
| 3D Audio Technology | Dolby Atmos |
| Frequency Response | 40Hz-70KHz |
| Signal-to-Noise Ratio | 110 dB |
| Power Input | 20V,3A adaptor for Soundbar 110V-240V power supply for subwoofer |
| Bluetooth | V5.1, Range: up to 15 meter (Straight line) |
| Soundbar Dimension (L*W*H) | 940 x 104 x 66 MM / 37.0 x 4.1 x 2.6 in |
| Subwoofer Dimension | 192 x 375 x 293 MM / 7.5 x 14.8 x 11.5 in |
| Satellite Speaker Dimension | 160 x 97 x 66 MM / 6.3 x 3.8 x 2.6 in |
| Compliance | FCC Class B |
| Satellite Speakers Battery type | 3.7V, 2600mAh, 9.62Wh |

IMPORTANT: If you need any assistance, don't hesitate to contact: Support@Rainevery.com
Here at Rainevery, we truly value customer satisfaction!

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

技术要求:

1.名称: SRA5818G说明书

2.尺寸: 148x210mm

3.材质: 80G书写纸

4.颜色: 单黑印刷 骑马钉

5.数量: 1台/说明书

禁止包装含矿物油