

ITB2024B Sound Bar Instruction Manual

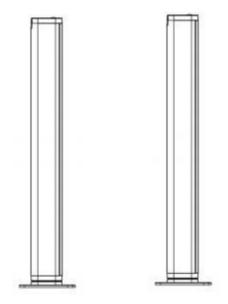

Pictures are for reference only, if there is any error with the actual machine, please refer to the actual machine!

1. Product panel introduction

Button and jack definitions:There are 4 buttons; there are 3 jacks, defined as follows:

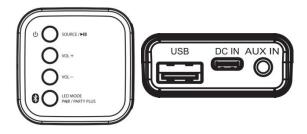

1、 . U/SOURCE/ ▶ I : long press to switch on and off; short press to play and pause bluetooth and usb; two short presses to change function mode minus.

VOL+ : short press to increase volume; long press to skip to the next song in bluetooth or usb mode
VOL- : short press to reduce volume; long press to skip to previous song in bluetooth or usb mode

4、LED/MODE, PAIR/TWS : short press to change various lamp effect; long press to disconnect and re-pai bluetooth; short press twice to connect TWS pairing

5、USB: U-DISK input playback jack

6、DC- IN: DC charging input jacks

 AUX-IN: for external audio input jack (specifications: 3.5mm plug)

Remarks: When the machine is switched on in any mode, press and hold the volume up+ and volume down- buttons synchronously for 5 seconds to switch off the voice of each function of the machine; press and hold the volume up+ and volume down- buttons again for 5 seconds to switch on the voice of each function again!

Power supply method:

Machine built-in battery power supply, long press the machine switch button, you can power on, long press again to switch off. How to machine low power shutdown, please connect the user to the machine's TYPE-C charging cable to charge the machine, charging process, the red indicator light long; fully charged red indicator light off!

6. Operating instructions

Bluetooth Pairing Playback Mode :

After switching on the machine, the machine directly enters the Bluetooth function mode, the blue indicator light flashes and Bluetooth enters the pairing state!

 Place your mobile phones within 3 metres of each other;

- Activate the Bluetooth function of the mobile phone so that the phone starts to look for a Bluetooth device (please refer to the instructions for your mobile phone for details);
- Select "ITB2024" from the mobile phone's searched devices and click on Connect at , the blue indicator light will be on permanently.
- 4). Press the return key of the mobile phone to exit the mobile phone menu, make sure that the distance between the mobile phone and the mobile phone is within 10 metres and there is no obstacle, at this time you can play music through the machine.
- 5). Short press the "SOURCE" key on the key board of the main unit to play and pause the sound; long press the "VOL+" or "VOL-" key to select the song up and down.
- 6). If you need to disconnect, long press the "PAIR" button on the main unit, at this time you can also use another mobile phone device to connect to Bluetooth playback; if you do not choose to connect, the indicator light blinks blue.

7). If you want to play two machines at the same time, turn on two machines at the same time, the machine first do not connect the mobile phone device bluetooth, any two short press one of the machine above the "PAIR" button, the blue light off the machine for the vice, on behalf of the two machines TWS connection success, the mobile phone device connects to the machine will be able to play the two synchronised! Playing operation volume, up and down to skip songs,

etc.; long press the "PAIR" button of any machine again, the blue light flashing represents disconnected the TWS connection of two machines, and can return to a single machine to play!

Note: 1, Priority short press two "PAIR" button, two machines TWS connection, priority short press two "PAIR" button machine is defined as the host, and the other one is the vice (the opposite is also true)

2, Two machines TWS connection, the vice can not operate the conversion function, can not read the USB, AUX IN function mode can not be connected to the audio playback (can only be achieved in the host all); can only operate the volume size and colour light mode control (two machines do not TWS connection, a separate machine all the functions of the operation are available)!

USB playback mode

After power on, insert the USB flash drive into the USB jack, SHORT PRESS THE "SOURCE" key on the machine twice to "USB" function state, start listening to the USB audio music; short press the "SOURCE" key on the host to play and pause the music. "key on the main unit to play and pause the music. Long press "VOL+" or long press "VOL-" key can be up and down to select songs.

AUX IN playback mode:

After switching on the machine, use the 3.5mm plug audio cable to connect the external audio input to the AUX IN jack on the machine, SHORT PRESS THE "SOURCE" key on the machine twice to "AUX IN" function, at this time will be an external audio source, such as: MP3 / CD and other audio sources connected to the audio cable into the AUX IN jack on the machine, start listening to external audio music. At this time, connect an external audio source such as MP3/CD to the AUX IN jack on the machine, and start listening to external audio music. (Please adjust the volume of the external audio source to be moderate and in the playing state).

Volume adjustment mode:

A. After switching on the machine, in any mode of playback, short press the "VOL-" key to reduce the volume; short press the "VOL+" key on the machine to increase the volume.

Switch off the machine:

Machine in the boot state, long press the host \bigcirc "key can be shut down; if the machine power is too low, it will be the first time the voice prompts "Low_Battery", the indicator red light flashes slowly, the second time the prompts, the red light flashes quickly, the voice prompts again "Low_Battery", after a few minutes, the machine will shut down automatically. Please connect the TYPE-C charging cable with the device to fully charge the device and continue to use it!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receivingantenna.
- Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure equirement.

The device can be used in portable exposure condition, compliance with exposure requirements.