

说明书:  
 展开尺寸: 305\*127MM  
 成形尺寸: 76.2\*127MM  
 材质: 80g铜版纸  
 正反四色印刷  
 工艺: 表面过哑油

### 05 | USING THE SPEAKER (CONT.)

**HANDS-FREE MODE**  
 Press the [MODE] Button on the speaker until the Mode indicator light becomes BLUE. The speaker is now in Bluetooth Mode and is now capable of receiving incoming calls.  
 Press the [CALL] Button to accept an incoming call.  
 Press the [CALL] Button again to disconnect.  
 To send an incoming call to voicemail, press the [CALL] Button for 3 seconds.

**USING THE USB 1A PORT**  
 Connect the USB end of your device's charging cable to the USB 1A output charging port on the back of the speaker.  
 Connect the other end of your device's charging cable to your device's charging port. (Please refer to your device's user guide for charging instructions).  
 Use your device's battery indicator to determine when the device is fully charged.  
 When your device is fully charged, remove the cable from the ports.

**i** The USB output 1A port is suitable for charging small devices such as smartphones, MP3 Players and wireless headphones. Larger devices require greater charging Amperage. Please consult your device's user guide for battery specifications and proper charging instructions.

### 06 | LIMITED WARRANTY

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

**WARRANTY**  
 This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

**TO OBTAIN WARRANTY SERVICE:**  
 Call the Customer Support number located below, or go to our website portal to receive an SRO number.  
 Provide proof of the date of purchase within the package (Dated bill of sale).  
 Prepay all shipping costs to the authorized service center, and remember to insure your return.  
 Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.  
 Describe the defect or reason you are returning the product.  
 Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.  
 The shipping address of the authorized service center is:  
 AIT, Inc.  
 ATTN: Customer Service (2nd Floor)  
 14-C 53rd Street  
 Brooklyn, NY 11232  
 Toll-free customer service:  
 1-877-768-8481, Monday- Friday 8 a.m. - 10 p.m. (EST)  
 Customer service online: [www.southerntelecom.com](http://www.southerntelecom.com); click on "Product Support."  
 Made in China | Designed in the U.S.A.

### 07 | FCC PART 15

**FCC PART 15**  
 Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The Catherine Malandrino trademarks, names, and logos are trademarks of CM Brand Holdings, LLC. © CM Brand Holdings LLC. iPhone® is a trademark of Apple Inc. Registered in the U.S. and other countries. All rights reserved. Made in China. Distributed by Southern Telecom, Inc. 14-C 53rd Street Brooklyn NY 11232 © 2015 All rights reserved.

After Trademarks and Trade names are those of their respective owners.

CATHERINE MALANDRINO

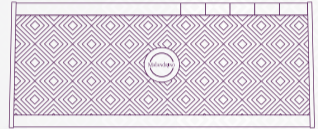BLUETOOTH-ENABLED WIRELESS SPEAKER





If you have any questions, call 1-877-768-8481 | [www.southerntelecom.com](http://www.southerntelecom.com) and click on "Product Support"

FRONT

### 01 | IN THE BOX




**A** BLUETOOTH SPEAKER




**B** MICRO USB CABLE

---




**C** MANUAL



**D** AUX CABLE

### 02 | LOCATION OF CONTROLS

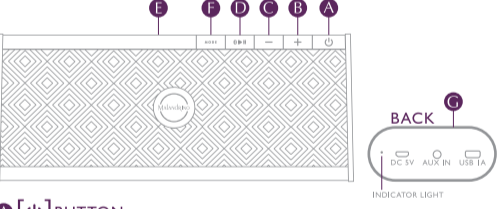

**A** [Φ] BUTTON  
 Quickpress to tune to NEXT channel in FM Radio Mode.  
 Longpress to INCREASE volume  
 Quickpress to skip to NEXT track in Bluetooth Mode.

**B** [+ ] BUTTON  
 Quickpress to tune to PREVIOUS channel in FM Radio Mode.  
 Longpress to DECREASE volume  
 Quickpress to skip to PREVIOUS track in Bluetooth Mode.

**C** [- ] BUTTON  
 Auto search channels in FM Radio Mode.  
 PLAY/PAUSE music in Bluetooth Mode.  
 PLAY/PAUSE music in AUX Mode.  
 Accept / Decline phone call in Bluetooth Mode.

**D** [▶||] BUTTON  
 BLUE LED indicator light: Bluetooth Mode.  
 GREEN LED indicator light: FM Radio Mode.  
 PURPLE LED indicator light: AUX Mode.

**E** MICROPHONE

**F** [MODE] INDICATOR LIGHTS

**G** BACK [ FROM LEFT TO RIGHT ]  
 RED LED charging indicator light      USB 1A output charging port  
 Micro USB charging port                      (For charging small devices such as Smartphones)  
 AUX IN port

### 03 | CHARGING / PAIRING THE SPEAKER

**1** Connect the small end of the Micro USB cable into the Micro USB charging port on the back of the speaker.  
 Connect the large end of the Micro USB cable into a USB on your computer or other USB charging device.  
 The LED charging indicator light flashes RED when charging. It will remain RED when the speaker is fully charged.  
**NOTE: Make sure that you charge the speaker for at least 3 to 4 hours before using it for the first time.**

**1** PAIRING THE SPEAKER  
 Press and hold the [ Φ ] Button for approximately 2 seconds. A tone will be heard and the Bluetooth Indicator light will quickly flash BLUE.  
 Keep the speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.  
 Set your mobile phone or other Bluetooth device to search for Bluetooth device.  
**NOTE: If a paired device is in range, the speaker will connect to it automatically when Bluetooth mode is enabled.**  
 When your Bluetooth enabled device finds the speaker, select "CMY500" from the list of found devices.  
 If required, enter the password 0000 (Four Zeros). Select OK or YES to pair the two units.  
 After a successful pairing, the LED Bluetooth indicator will remain BLUE.  
**NOTE: If you would like to connect the speaker to another device, you must unpair the unit from the currently paired device FIRST. In your device's Bluetooth settings, select "CMY500" then select UNPAIR or FORGET DEVICE. When the speaker is unpaired, it will automatically go into pairing mode again and the LED Bluetooth indicator light will quickly flash BLUE.**

### 04 | USING THE SPEAKER

**1** POWERING ON | OFF  
 Turn the speaker on by pressing the [ Φ ] Button for approximately 2 seconds.

**1** ADJUSTING THE VOLUME  
 Long Press the [ + ] Button on the speaker to gradually increase the volume to maximum level.  
 Long Press the [ - ] Button on the speaker to gradually decrease the volume.

**1** FM RADIO MODE  
 Long Press the [ + ] Button on the speaker to gradually increase the volume to maximum level.  
 Long Press the [ - ] Button on the speaker to gradually decrease the volume.

**NOTE:**  
 The Green LED Indicator light will flash when scanning stations. After scanning and saving stations, the indicator light will remain Green. If the Bluetooth speaker is turned OFF and then back ON be sure to select your preset stations with the [ + ] and the [ - ]. If you press and hold the [▶||] the scanning process will start over.

**1** AUX IN MODE  
 Connect one end of the 3.5mm Auxiliary cable to the AUX IN port on the speaker and the other end to an external device's headphone port (Smart Phone, tablet or MP3 Player)  
 Press the [MODE] Button on the speaker until the MODE becomes PURPLE. The speaker is now in AUX Mode.  
 Open a media player on your device and press PLAY to listen to your music.  
 Use the controls on your connected device to control music playback.

**i** When a device is plugged into the AUX IN port, only the [▶||] Button and volume can be controlled by the buttons on the speaker. You must use your connected device to control music playback.

INSIDE