

正面

User Guide
SoundMagic™ Mini
Model No.: RC201

Thank you for choosing Latte SoundMagic™ Mini. Inspired by Djembe (a traditional drum from West Africa), the SoundMagic™ Mini is built with a sound optimized oval shape sounding box, resulting in the most balanced and profound sound for its size.

Please read the manual carefully before use.

<Caution>

- Do not use the product in extremely hot, cold, dusty or damp environments.
- The product contains a lithium battery and should be kept away from fire or extremely high temperature environments to avoid explosion.

- Do not disassemble, repair, or modify the product arbitrarily. These actions will void the manufacturer's standard warranty.
- Please charge the unit fully before you start using the product for the first time.
- If the product has not been in use for an extended time, please make sure you charge the unit fully before you start using it again.
- The product specifications and design may be changed without prior notice.

1. Accessories

- Bluetooth speaker ×1
- User Guide ×1
- Micro USB charge cable ×1
- AUX Cable (Micro USB + 3.5mm Jack) ×1

2. Main features and Specifications

- Music Play via Bluetooth V3.0+EDR
- Handsfree Function (Built-in Microphone)
- Φ3.5mm Audio Input Interface
- RMS Output Power: 1 X 2W
- Speaker: 38mm/4 Ω/3W
- Frequency Response: 100Hz-20kHz
- Supported Profiles: A2DP, AVRCP, GAVDP, AVDTP
- Run Time : 8+ hours
- Built-in 600mAh rechargeable Lithium battery
- Power Source: Via Micro USB Cable, DC 5V Micro USB Power Adapter (sold separate)
- Charging Time : Approx. 3 hours

Dimensions: 2.56in (Diameter), 3.18in (Height)
Weight: Approx. 0.27lb

3. Main Keys

1: ON/OFF : Power switch

1: ☉ : microphone
2: DC 5V / AUX IN: MICRO USB charging jack and AUX-IN jack
3: ▶/◀: Play and pause during the Bluetooth music play mode.
4: LED indicator

4. LED indicator lamp:

- LED (Blue): Power on and Bluetooth not connected. The blue light will flash (the middle decorative ring - 4)
- LED (Blue): Power on and Bluetooth connected. The blue light will be on (the middle decorative ring - 4)
- LED (Red): The AUX cable connected. The red light will be on (the middle decorative ring - 4)
- LED (Red): The red light will be on when the speaker is being charged. The red light will be off when the speaker is fully charged. (near the DC 5V charging port of the unit)

5. Power On/Off

- Power On: Slide the power switch located on the bottom of

the speaker to "On" position

- Power Off: Slide the power switch located on the bottom of the speaker to "Off" position

6. Charging

Plug one end of the Micro USB charging cable to the computer and the other end to the DC 5V jack of the speaker (2) to charge the speaker. When the speaker is charging, the red light in the middle decorative ring will be on. The red light will be off when the speaker is fully charged.

NOTE: When you charge the speaker while you are playing music, the sound might not be stable because the current consumption during charging is high. If that happens, please charge the speaker fully first and then start playing music again.

反面

7. Bluetooth Operation

- Slide the power switch on the bottom of the speaker to "ON" position. The blue light will be on and flashing.
- Go to "Setting" on your cell phone or Bluetooth enabled device and activate the "Bluetooth" function. Scan for available Bluetooth devices nearby.
- When "SoundMagic Mini" appears on the available Bluetooth device list, select "SoundMagic Mini" to establish connection (if asked for a passcode, enter "0000").
- When the connection is successfully established, it produces a connection tone, and the blue light will be on without flashing.

- While music is playing, the music will stop when you receive a call. You can do one of the following.
- Answer the call:** Press ▶/▶ key shortly to answer the call.
- End the call:** Press ▶/▶ key shortly to end the call. The music will resume automatically.
- Reject the call:** Press "▶/▶" key for about 3 seconds to refuse

Note:
*When the number of the previously paired devices with the speaker exceeds the maximum capacity (4 units), the speaker will automatically clear the first device paired in its memory.
*When the speaker is currently connected to a Bluetooth

device and you want to pair a different Bluetooth device, please disconnect the currently paired device before you attempt to pair a new device.

8. Audio Input Operation

When the speaker is on, please insert the AUX cable's Micro USB end to the speaker and the 3.5mm line-in audio end into the audio input port (AUX-IN Jack, 2) of your music player. Once connected, the indicator light will change from blue to red.

9. Volume Control

The speaker doesn't have volume control. You will need to adjust the volume from your music playing device.

10. Changing Color of the speaker

Available Colors (Sold separately). Please visit www.LatteZone.com Red, Pink, Yellow, Green, Blue

The bottom part of the speaker has a replaceable silicon skin. You can simply change this silicon skin to match your mood anytime and anywhere. Hold the top end of the silicon skin and pull it down. Get the new color silicon skin and put the new one on. Make sure to match the holes of the silicon skin to the right parts of the speaker. Once you put the new one on, slide the silicon case all the way up by using your two thumbs until it touches the middle LED ring tightly.

8. Troubleshooting

Issue	Solutions
Power is on, but the blue light is off. Cannot pair.	1. Low battery. Please charge the product fully before you start using the speaker again. 2. Please check if any other phone or Bluetooth device is already paired and connected to the speaker. The speaker can only be connected to one Bluetooth device at a time. In this case, please disconnect the currently connected device and pair the device you are trying to connect again. 3. Move the speaker closer to your phone or Bluetooth device. 4. Please check if your phone is connected to "SoundMagic Mini" in your phone's Bluetooth setting.
Bluetooth pairing cannot be established.	1. When your phone is connected to the speaker, the Bluetooth volume of your phone is not turned up enough or muted. Please turn up the Bluetooth volume of your phone. 2. The output volume of your phone is too low. Please try to test it with different Bluetooth devices to check if the issue is with the speaker or the Bluetooth device. Please check if there are any obstacles between your Bluetooth device and the speaker.
The sound from the speaker is too low or there "a no sound.	1. Please check if there are any obstacles between your Bluetooth device and the speaker. 2. Check if the distance between your Bluetooth device and the speaker exceeds the connection range (33ft). Please shorten the distance between your Bluetooth device and the speaker. 3. Low battery. Please charge the product fully before you start using the speaker again. 4. Please lower the volume a little bit.
The Bluetooth connection range is too short.	If the speaker is currently paired with one Bluetooth device, you cannot pair another Bluetooth devices. To pair another device, disable the current connection and try to pair the new connection with a different Bluetooth device.

Music plays normally, but with interrupted sound.

Bluetooth cannot connect to other Bluetooth devices.

Note: If the problem still cannot be solved, please contact technical support or customer service.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

尺寸：直径60mm

128g铜版纸，双面印刷；首页背对末页