

# Energizer



## Universal FM Transmitter ENG-FMT1

### Technical Specifications

- Frequency: 88.1 - 107.9 MHz
- Coverage: Up to 5 M
- Distortion:  $\leq 0.5\%$
- Input power:  $\leq 20$  mA


FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

### Functions

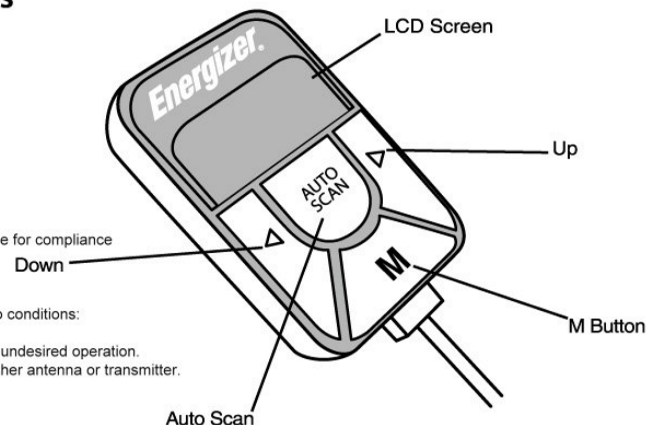

### Features

- Plays music from your iPod®, iPhone®, MP3, or any audio device with a 3.5 mm port on your car stereo system using FM transmission.
- Provides an illuminated LCD screen display for easy viewing at night or during the day.
- Supports the full frequency range of 88.1 - 107.9 MHz.
- Finds the best frequency and preset using AUTO SCAN.
- Saves up to four preset frequencies.
- Uses two AAA batteries (included in the package) for power.
- Powers on automatically when it detects audio input.
- Powers off automatically when it does not detect audio input from an audio device for 60 seconds.

### 1-Year Limited Warranty

Premier Accessory Group, LLC, warrants that the enclosed product will be free from defects in materials and workmanship for a period of 1 year from the date of initial retail purchase. This warranty is for the original retail purchaser only and is not transferrable. This warranty does not cover damage caused by accident, unreasonable use or modifications to the product. During the 1-Year Warranty period we will either repair or replace this product (at our option). Please include a money order or cashier's check for the amount of \$4.95 for shipping and handling of this product. Send product to:

Premier Accessory Group  
Attn: Product Support Center  
11-11 44th Drive  
Long Island City, N.Y. 11101

This guarantee gives you specific legal rights, and you may also have other rights which vary from state to state.

Energizer and other marks, including graphics, are trademarks of Energizer and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with Energizer or Premier Accessory Group, LLC.

© 2011 Premier Accessory Group, LLC. All rights reserved.

Questions? Visit [www.PremierAccessoryGroup.com](http://www.PremierAccessoryGroup.com) or call 1-888-492-8338 Toll Free

Made in China for: Premier Accessory Group, LLC 11-11 44TH Drive  
Long Island City, NY 11101 Phone: 1-888-492-8338

Energizer and other marks, including graphics, are trademarks of Energizer and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with Energizer or Premier Accessory Group, LLC.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. For additional information or questions about this product call us toll free at 888-492-8338 or email us at [info@premierxsre.com](mailto:info@premierxsre.com)

### Instructions

1. Install two AAA batteries (included in the package) into the battery tray.
2. Connect the transmitter into the 3.5 mm port of your audio device (such as an iPod). When the transmitter detects audio input, it automatically displays the frequency on the screen.
3. To manually tune:
  - a. Tune the car's FM stereo to a clear frequency.
  - b. Tune the transmitter to the same frequency by using the down (<) or up (>) buttons.
4. To automatically scan for the best clear frequency:
  - a. Press the AUTO SCAN button.
  - b. Tune the car's FM stereo to the same frequency.
5. To automatically store the four best frequencies in memory, press the AUTO SCAN button down for three seconds.
6. To tune to a frequency stored in memory:
  - a. Display the four frequencies stored in memory, press (M).
  - b. To go to the next frequency in memory, press (M) again.
  - c. Tune the car's FM stereo to the same frequency.

