

75 X 110mm



Technical Specifications


- Frequency: 88.1 - 107.9 MHz
- Coverage: Up to 5 M
- Distortion: ≤ 0.5 %
- Input power: ≤ 20 mA

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Functions

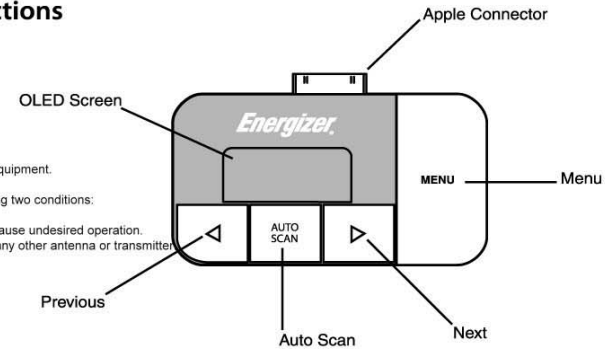

Features

- Plays music from your iPod®, iPhone® on your car stereo system using FM transmission.
- Provides a highlighted OLED screen display for easy viewing at night or during the day.
- Finds the best frequency and preset using AUTO SCAN.
- Allows you, by using track controls, to control playback of your iPod® or iPhone® music from the display.
- Saves up to three preset frequencies.
- Charges your iPod® or iPhone® when the micro USB cable is connected to a USB charger.
- Powers off automatically when it does not detect audio input from an iPod® or iPhone® for 60 seconds.

1-Year Limited Warranty

Premier Accessory Group, LLC warrants that the enclosed product will be free from defects in materials and workmanship for a period of 1 year from the date of initial retail purchase. This warranty is for the original retail purchaser only and is not transferrable. This warranty does not cover damage caused by accident, unreasonable use or modifications to the product. During the 1-Year Warranty period we will either repair or replace this product (at our option). Please include a money order or cashier's check for the amount of \$4.95 for shipping and handling of this product. Send product to:

Premier Accessory Group
Attn: Product Support Center
11-11 44th Drive
Long Island City, N.Y. 11101

This guarantee gives you specific legal rights, and you may also have other rights which vary from state to state.

Energizer and other marks, including graphics, are trademarks of Energizer and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with Energizer or Premier Accessory Group, LLC.

© 2011 Premier Accessory Group, LLC. All rights reserved

Questions? Visit www.PremierAccessoryGroup.com or call 1-888-492-8338 Toll Free

 
Made in China for: Premier Accessory Group, LLC 11-11 44TH Drive
Long Island City, NY 11101 Phone: 1-888-492-8338

Instructions

1. Plug the transmitter into your iPod® or iPhone®. When the transmitter is powered on, it displays the default screen interface shown below:



2. Play music on your iPod® or iPhone®.
3. To manually tune:
 - a. Tune the car's FM stereo to a clear frequency.
 - b. Tune the transmitter to the same frequency by using the down (<) or up (>) buttons.
4. To automatically scan for the best clear frequency:
 - a. Press the AUTO SCAN button.
 - b. Tune the car's FM stereo to the same frequency.
5. To automatically store the three best frequencies in memory, press the AUTO SCAN button down for three seconds. The transmitter displays the three best frequencies and automatically saves them to memory.



If you do not press one of the memory buttons (M1, M2, M3) within five seconds, the transmitter automatically tunes to the first one and then displays the default screen.

6. To tune to a frequency in memory:
 - a. Press the MENU button. The display shows the three stored frequencies above the three buttons. If there are no present frequencies, the transmitter displays the default screen.
 - b. Press the M1, M2, or M3 button.
 - c. Tune the car's stereo to the same frequency.
7. To control your iPod® or iPhone® from the transmitter's display, press the MENU button twice. The transmitter's display shows the iPod® controls above the three buttons: Previous, Pause/Play next.



The iPod® control interface remains on screen until you press the MENU button.

Energizer and other marks, including graphics, are trademarks of Energizer and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with Energizer or Premier Accessory Group, LLC.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. For additional information or questions about this product call us toll free at 888-492-8338 or email us at info@premierxsre.com