

Press the **Right Soft Key**  **Forward** to send the selected message to another.

## Message Settings

To access and configure your Message Settings, from the standby screen, press the **Left Soft Key**  **Menu, Messages**, and  **Message Settings**.

### Message Alert

Allows you to set the Sounds, Volume, Alert Type, and Alert Interval.

### Save To

Allows you to choose whether to save to the SIM Card or the Phone.

### Signature

Allows you to create, edit, and delete your signature, which can be configured to be sent out with your outgoing messages.

### Text Message

Allows you to set preferences for text messages. The following options are available:

- ▶ **Text Templates:** Predefined messages that can quickly be sent. Press the **Left Soft Key**  **Options** to access the following available options:
  - **Send:** Allows you to send the selected template via Message.
  - **Delete:** Allows you to delete the selected template message.
  - **Edit:** Allows you to edit the selected template message.
  - **Delete All:** Deletes all messages in the folder.
  - **Cancel:** Returns to Text Message menu.
- ▶ **Msg Center No.:** Allows you to view and edit the phone number for the Message Center. Do not edit unless instructed to do so by your service provider.
- ▶ **Insert Signature:** Allows you to insert your signature in outgoing messages.

### Multimedia Message

Allows you to set your preferences for multimedia messages.

The following options are available:

- ▶ **Multimedia Templates:** Allows you to add, edit, and delete multimedia templates. Press the **Right Soft Key**  **New** to create a new multimedia template. Press the **Left Soft Key**  **Options** while creating a message to access the following available options:

- **Text Entry Mode:** Sets the text input mode. For more details, refer to Entering Text (page 15).
- **Text Entry Settings**
  - **Text Entry Language:** Allows you to set the text entry language to English or Spanish.
  - **T9 Word Candidate List:** Displays the word candidates as you type.
  - **T9 Next Word Prediction:** Allows the phone to predict the next word when typing in T9 mode.
  - **T9 Dictionary:** Allows you to add, delete, reset, and modify words.
- **Cancel:** Allows you to exit the text input mode without saving your message.

#### ► **Download Options**





- **Download Without Ask:** Allows Multimedia Messages to be downloaded automatically.
  - **Ask Always:** You are prompted to download when a Multimedia Message is received.
  - **Discard:** Enabling this option will block incoming Multimedia Messages from being received.
- **Message Center:** Allows you to view and edit the phone number for the Message Center. Do not edit unless instructed to do so by your service provider.

## **Voicemail**



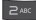
This menu allows you to set the Voicemail Center Number if this feature is supported. Please check with for details of their service in order to configure the phone correctly.

## Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press the **Left Soft Key**  **Menu**, select Email and choose the account you want to use.
- 2 Press the **Left Soft Key**  **Menu** Options and choose  **Write Email** to write an email.
- 3 Enter the recipient's address in the **To** field. Then use the down Navigation Key to access the Subject and Messages fields.
- 4 Enter your message using the keypad and press the **OK Key**  **Send** to send the email.

## Retrieving your email

- 1 Press the **Left Soft Key**  **Menu**, and select **Email**.
- 2 Select the account you want to use.
- 3 Press the **Left Soft Key**  **Options** and select  to connect to your email account and retrieve your new messages.

## Message folders

Open Email, press the **Left Soft Key**  **Options**, and select  **Mailbox**. The list of folders will be displayed.


- ▶ **Write Email:** Create your new message.
- ▶ **Inbox:** All the e-mails you receive are placed into your Inbox. From here you can reply, forward and more.
- ▶ **Drafts:** If you don't have time to finish writing a e-mail, you can save what you have written so far in here.
- ▶ **Outbox:** This is a temporary storage folder while e-mail are being sent or stores the messages that are failed to sent.
- ▶ **Sent:** Copies of all the e-mail you send are kept into your Sent folder.
- ▶ **Trash:** All the e-mail you remove are placed into your Trash.

## Changing your email settings

- 1 Press the **Left Soft Key**  **Menu**, choose Email > **Left Soft Key**  **Options** >  **Mailbox** >  **Options** >  **Settings**.
- 2 Set any of the following options.
  - ▶ **Accounts:** You can edit e-mail account settings.

- ▶ **Notification:** Choose whether or not to be alerted to new emails.
- ▶ **Default Account:** Choose which account to compose e-mail by default.
- ▶ **Signature:** Create an email signature and switch this feature on.

# Alarm Clock

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval, and alarm tone. If there is no alarm setting, press the **Left Soft Key**  **New** to add a new alarm.

To access Alarm Clock, from the standby screen, press the **Left Soft Key**  **Menu, Alarm Clock**.

## Edit Alarm

▶ **Time:** Input your desired alarm time by specifying the hour and minutes.

You can also choose a predefined amount of time (15 Minutes Later, 30 Minutes Later, 45 Minutes Later, 1 Hour Later, Off).

▶ **Repeat:** Select the desired repeat mode (Once, Daily, Mon ~ Fri, Sat ~ Sun, Select Weekday).

▶ **Alarm Tone:** Press the **OK Key**  **List** to access the list of available Alarm Tones.

▶ **Volume:** Press the **OK Key**  **List** and then set the volume of the alarm by pressing the up and down **Volume Keys**. Then press the **OK Key**  **Set**.

▶ **Type:** Select the Ring Alert Type between **Ring, Vibrate, Ring & Vibrate and Vibrate after Ring**.

▶ **Memo:** Enter an alarm name.

▶ **Snooze Interval:** Select the snooze interval between 5 Minutes, 15 Minutes, 30 Minutes, 45 Minutes, 1 Hour and Off.

Press the **Left Soft Key**  **Save** to save your new Alarm.

# Browser



Browser is one of the services provided by your network operator and it gives you access to all the cool things you can do with your wireless phone.


## Note

Check the availability of services, pricing, and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.


Please contact your service provider to open an Internet account.

## Launch the Browser

To launch the browser from the standby screen, press the **Right Soft Key**  **Browser** or press the **Left Soft Key**  **Menu** and select the **Browser** using the **Navigation Keys**.

To exit the browser at any time, press the **End/Power Key** .

## Using the Browser

Once you are connected to the Internet, the following menu options are available when you press the **Left Soft Key**  **Options**:

▶ **Zoom**: Allows you to zoom in/out for better look.

## Note

You can also adjust the Browser text and image size by pressing the up and down **Volume Keys** to zoom in and out.

- ▶ **Home**: Directs you to the homepage.
- ▶ **Windows**: You can have several browser windows to navigate different web pages at the same time.
- ▶ **Enter URL**: Allows you to enter URL you desire to visit.
- ▶ **Send Link**: Allows you to send link
- ▶ **Bookmarks**: You can add or save the current page to Bookmarks or view the list saved under Bookmarks.
- ▶ **Navigation Mode**: Allows you to select Back, Forward, and Refresh.
- ▶ **Search Text**: Allows you to search the text.
- ▶ **Recent Pages**: Allows you to view your history of recently viewed web sites.

- ▶ **Settings:** Allows you to set options for web pages and appearance.

## **Menus for the Browser**

You can surf the Internet using either the phone keys or the Browser menu.

## **Using the Navigation Keys**

When surfing the Internet, the **Navigation Keys** function similarly from when the phone is on standby mode.

# Camera

To access Camera from the standby screen, press the **Left Soft Key**  **Menu** and select **Camera**.

## Take Photo

Using the camera you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message.

The following options will appear (as icons) at the bottom of the screen.

- ▶ **Album:** Allows you to see saved image and video files.
- ▶ **Video:** Allows you to switch to Camcorder mode.
- ▶ **Capture:** Allows you to capture the image.
- ▶ **Zoom:** Allows you to set the zoom level.
- ▶ **Brightness:** Allows you to set the Brightness.

Press the **Right Soft Key**  **Settings** for the following options:

### Preview Tab

- ▶ **Image Size:** The resolution of the image can be captured in 1280\*960, 640\*480, 320\*240.
- ▶ **Color Effects:** Allows you to choose from Off, Mono, Sepia, or Negative.
- ▶ **White Balance:** Set the White Balance as Auto, Daylight, Cloudy, Illuminate, or Indoors.

- ▶ **Night Mode:** Set Night Mode to On or Off.
- ▶ **Timer:** Timer can be set to Off, 3 Seconds, 5 Seconds, or 10 Seconds.

### ▶ Shot Mode

- **Normal:** This set as normal camera mode.
- **Continuous Shot:** This is great for taking photos of moving objects or at sporting events. The continuous shot is only available in QVGA(320x240) mode and can be set to 3, 6, or 9 shots per event.

- ▶ **Image Quality:** The quality of the captured image can be set to Super Fine, Fine, or Normal.

### Others Tab

- ▶ **Shutter Tones:** You can choose from Tone 1, Tone 2, Tone 3, or Off.
- ▶ **Reset settings:** Allows you to set the Camera to the default settings.

### Using Zoom

In Camera mode, you can zoom in and out by using the up and down **Volume Keys**. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
1280*960	Not Available
640*480	Level 1 ~ Level 10



Resolution	Zoom scale
320*240	Level 1 ~ Level 10

## Record Video

Allows you to record a video clip with your phone.

Before starting to record, press the **Left Soft Key** 

**Settings** to configure your settings.

The following options will appear (as icons) at the bottom of the screen.

- ▶ **Album:** Allows you to see saved image and video files.
- ▶ **Photo:** Allows you to switch to the Camera function so you to take a picture.
- ▶ **Rec:** Allows you to begin recording the video.
- ▶ **Zoom:** Allows you to set the zoom level.
- ▶ **Brightness:** Allows you to set the Brightness.

Press the **Left Soft Key**  **Settings** for the following options:

### Preview Tab

- ▶ **Color Effects:** Allows you to choose from Off, Mono, Sepia, or Negative.
- ▶ **White Balance:** Set the White Balance as Auto, Daylight, Cloudy, Illuminate, or Indoors.

- ▶ **Video Quality:** Allows you to set video quality to Super Fine, Fine, or Normal.
- ▶ **Duration:** Set the recording duration to General Mode or MMS Video Mode.

### Others Tab

- ▶ **Recording Tones:** Allows you set Recording Tones to On or Off.
- ▶ **Reset settings:** Allows you to set the Camcorder to the default settings.


### Note

In Video mode, you can adjust the zoom scale by using the up and down **Volume Keys**. The zoom scale ranges from Level 1 to Level 9.

# Camera Album

Allows you to view the pictures and videos that are captured with the camera.

To access Camera Album, from the standby screen, press the **Left Soft Key**  **Menu** and select **Camera Album**.

When a file is highlighted, the following options are available when you press the **Left Soft Key**  **Options**:

For image file:

**Use As/Send Via/Print Via Bluetooth/Delete/Rename/Select Multiple/File Information.**





For video file:


**Send Via/Delete/Rename/Select Multiple/File Information**

# Calendar

When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates saved schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item.

The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
	Weekly
	Daily
	Annually
	Monthly

To access Calendar, from the standby screen, press the **Left Soft Key**  **Menu** and **Calendar**.

The following options are available when a Calendar event is selected from the Calendar menu.

- ▶ **Search:** Allows you to search the saved schedule(s).
- ▶ **Set Holiday:** Allows you to set specific dates to display as Holidays on your calendar.
- ▶ **View All:** Allows you to view all saved schedules.

- ▶ **Week View:** Allows you to view the calendar by week.
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Selective Delete:** Allows you to delete Old Schedules or All Schedules selectively.
- ▶ **Settings:** Allows you to set various calendar settings.

# My Folder

## Audio

To access Audio, from the standby screen, press the **Left Soft Key**  **Menu, My Folder**, and  **Audio**.

- ▶ **Record Voice:** Allows you to record voice notes.
- ▶ Saved audio files are displayed in the list.

## Music

You can access Music by pressing the **Left Soft Key**  **Menu, My Folder**, and  **Music**. The following options are available:

- ▶ **All Songs:** Allows you to view all the songs in your music library.
- ▶ **Playlists:** Allows you to create your own playlists.
- ▶ **Artists:** Shows the list of artists of all the songs in your music library, and shows all the songs by a chosen artist.
- ▶ **Albums:** Shows the list of albums of all the songs in your music library, and shows all the songs on a chosen album.
- ▶ **Genres:** Shows the list of genres of all the songs in your music library, and shows all songs of a specific genre.
- ▶ **Shuffle Songs:** Allows you to play all the songs in your music library in random order.

### Tip!



The music player plays formats such as MP3, AAC, AAC+, and WMA.


### Note

Music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.

## Playing Music

To listen to music that you have in your phone, follow these quick easy steps:

- 1 Press the Left Soft Key  **Menu** and **My Folder**.
- 2 Select **Music** and then choose from **Now Playing**, **All Songs**, **Playlists**, **Artists**, **Albums** and **Genres** or **Shuffle Songs** to shuffle your collection.
  - Press the **OK Key**  **Play/Pause** to play and pause a selected song. While playing, press the up or down Navigation Keys to change the volume and the left or right Navigation Keys to go to the previous or next song.

- While playing music, press the **Left Soft Key**  **Options** to access other functions while music is playing.

## Adding Music To Your Phone

Music files can be added to your phone by using one or more of the following methods:

- Download music and ringtones over the network directly to your device.

### Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

Additional charges may apply when downloading music, ringtones, etc.

## Pictures

To access Picture, from the standby screen, press the **Left Soft Key**  **Menu, My Folder,** and  **Pictures.**

- ▶ **Take Photo:** Allows you to take a picture.
- ▶ The picture files saved on your phone are displayed.

## Video

To access Video, from the standby screen, press the **Left Soft Key**  **Menu, My Folder,** and  **Video.**

- ▶ **Record Video:** Allows you to record a video.
- ▶ The video files saved on your phone are displayed.

### Note

Please note that DRM can restrict some functions, such as sending and editing.

## Other Files

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are saved in this folder.

To access Other Files, from the standby screen, press the **Left Soft Key**  **Menu, My Folder,** and  **Other Files.**

The following options are available by pressing the **Left Soft Key**  **Options:**

- ▶ **Send Via:** Send the selected file via Message, Email, or Bluetooth.
- ▶ **Delete:** Allows you to delete the selected file.




- ▶ **Move:** Allows you to move the selected file to another folder.
- ▶ **Copy:** Allows you to copy the selected file to another folder.
- ▶ **Rename:** Allows you to edit the name of the selected file.
- ▶ **Select Multiple:** Allows you to select multiple files at once to perform various functions.
- ▶ **Sort By:** Allows you to sort the files by Name, Date, and Type.
- ▶ **File Information:** Allows you to view information about the selected file or used memory space on your phone.

## File Manager

This function allows you to view the content in your internal phone memory.

To access File Manager, from the standby screen, press the **Left Soft Key**  **Menu, My Folder**, and  **File Manager**.

## Voice Command

Voice Command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the Voice Command function, there are five possible commands, Call <Name or Number>, Listen Voicemail, Missed Calls, Messages, and Time & Date. To activate the Voice Command function, hold down the **Clear/Back Key**  while the phone is in standby mode or press the **Left Soft Key**  **Menu, Tools, and**  **Voice Command.**

**1 Call <Name or Number>:** This function is activated only when the user says the command "Call" followed by the name stored in the address book or say the phone number. Please note that interfering noise might cause a problem displaying candidates. Additionally, the user has the option to select a number type at the end, such as "mobile", "home", or "work".

**2 Listen Voicemail:** This command is activated when the user says "Listen Voicemail". The user will then be automatically connected to voicemail.

**3 Missed Calls:** This command is activated when the user says the words "Missed Calls". The mobile phone presents the missed call list.

- **Follow-up Commands Available**

- **Yes:** Make the phone call.
- **No:** Moves to the next result.
- **Cancel:** Go back to the main Voice Command menu.
- **Exit:** Terminate Voice Command.
- **Next:** Moves to the next result.

**4 Messages:** This command is activated when the user says "Messages". The phone displays details of unread text or multimedia messages.

**5 Time & Date:** This command is activated when the user says "Time & Date". The phone displays the current local time and date.

### Voice Command Options

When the Voice Command option is activated, you can press the **Left Soft Key**  **Options** for the following options:

- **Mode**

- **Speed:** Voice Command is abbreviated.
- **Normal:** Voice Command is played normally with prompts.

- **Best Match**

- **1 Match:** The most likely match will be displayed when finding a number from the address book.