

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm (0.59 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm (0.59 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1.5cm (0.59 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Conformité aux normes FCC Part 15 Class B

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

Utilisation comme appareil portatif

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 1.5cm (0,59 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 1.5cm (0,59 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composantes métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 1.5cm (0,59 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

LG-C195 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

P/N: MFLXXXXXXXX(1.0)

www.lg.com

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card
- 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Quick feature reference

Menu 1. Games & apps.

You can install new games and applications on your phone to keep you amused when you have spare time. Press Menu and select **Games & apps**.

Menu 2. Logs

You can check the record of all missed, outgoing, incoming call logs and messages. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- **All logs:** View a complete list of all your dialled, received and missed calls and also sent and received messages.
- **Calls Only:** View a list of all the numbers you have called, received and missed.
- **Messages Only:** View a list of all the numbers to which you have sent messages or received messages from.

Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Press **OK** key.
- 3 Select **⏸** to pause the song.
- 4 Select **⏩** to skip to the next song.
- 5 Select **⏪** to skip to the previous song.

TIPI To change the volume while listening to music, use the volume keys on the left hand side of your phone.

Note: The copyright of music files can be protected in international treaties and national copyright laws.

Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

- **Missed logs:** View a list of any calls you have missed.
- **Outgoing logs:** View a list of all the numbers you have called.
- **Incoming logs:** View a list of all the numbers that have received.

Menu 3. Camera

• Camera

- 1 Press Menu and select Camera choose Camera.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press OK to take a photo.

• Video Camera

- 1 Press Menu and select Camera and choose Video Camera. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Select the Rec. icon on the bottom-centre of the screen and press OK to take a video. Rec will appear at the bottom of the viewfinder. Press again to stop recording.

FM Radio

Your LG-C195 has an **FM radio** feature so you can tune into your favorite stations and listen on the move.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the radio. You will need to insert your headphone in order to listen to the radio. Insert them into the headphone socket.


• Listening to the radio

- 1 Press **Menu**, select **Music** and choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

• Recording the Radio

- 1 Press Rec. during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press Stop. If recording is done, the recorded contents will be saved in My stuff -> Sounds as mp3 file.

Getting to know your phone

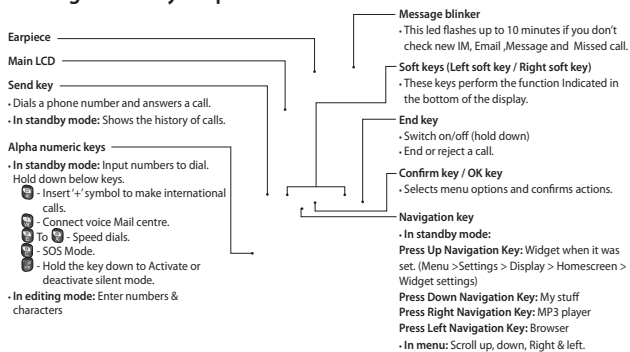

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory. Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.

WARNING: External memory can not exceed 8GB.

Removing a memory card

Carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device and Memory Info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C195 press **Menu** and select **My stuff**. Press right navigation key two times to choose memory card.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

WARNING: Do not remove your MicroSD card during the data transfer.

Menu 5. SNS (Social network services)

Your LG-C195 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Note: SNS feature is a data intensive application. An additional cost may be incurred when connecting and using online services. Check your data charges with your network provider.

Menu 6. Messaging

Your LG-C195 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.

Menu 10. Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Press **Option** and select **New contact**.
- 3 Enter the information you want in the fields provided and select **Done**.

Calling

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press **☎** to begin the call.
- 4 To end the call, press **✂**.

TIPI To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press **☎** to begin the call.

3 Enter your message using the keypad. See Entering text on the right for more information on how to enter text.

4 Select **Options** and choose **Insert** to add an image, Video, Sound, Text template, Multimedia template, Emoticon, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile).

5 Choose **Send to**.

6 Choose a contact from the list of contacts or enter the phone number.

7 Select **Send**.

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **Abc** mode, and **123** mode.

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Menu 11. Tools

• Quick menu

- 1 Press **Menu** and select **Tools**, then choose **Quick menu**.
- 2 Press **Add** and choose the menu you want to quickly approach.

• Alarm clock

You can set up to 3 alarm clocks to go off at a specified time.

• Calculator

This contains the standard functions such as Addition, Subtraction, Multiplication and Division.

• Voice recorder

Use your Voice recorder to record voice memos or other sounds.

• Stopwatch

This option allows you to use the function of a stopwatch.

• Unit converter

This converts any measurement into a unit you want.

Answering and rejecting a call

When your phone rings, press **Accept** or press **Reject** to answer the call. While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press **Reject** or select **Reject** in order to reject an incoming call.

Note: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to **Abc** mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press **☎** key in editor screen.

Menu 7. Music

MP3 Player

Your LG-C195 has a built-in music player so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

• World clock

Allows you to determine the current time in another time zone or country.

• SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Menu 12. Settings

• Profiles

Choose the profile you want to edit. Using flight mode - Flight mode will not allow you to make calls, connect to the internet or send message.

• Device

> **Date and time:** Select **Auto update On**, and the phone will automatically update the date and time.

> **Battery status:** Choose to switch the factory set power save settings **On** or **Off**.

> **Languages:** Change the language of your LG-C195's display.

> **Auto key lock:** Lock the keypad automatically in standby screen.

> **Security:** Change your security to keep your LG-C195 and the important information it holds protected.

Anti-theft mobile tracker: When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "0000".

> **SOS service:** This enables SOS service. After enabling if you press long key of 9 in Idle screen, the SOS message is sent and the phone stays in SOS Mode.

> **Memory info:** You can use the memory manager to determine how each memory is used and see how much space is available.

> **Primary storage setting** - If you insert an external memory card in your phone, you can also select Primary storage settings then choose the default location you prefer items to be saved to.

> **Reset device:** Reset all the settings to the factory definitions. You need the security code to activate this function.

> **Device info:** View the technical information for your LG-C195.

• Display

You can adjust settings for the phone display.

• Call

You can set the menu relevant to a call.

• Connectivity

> **USB connection mode:** You can select the USB connection mode on your phone for several uses.

> **Network:** You can select Select network or Preferred lists.

• Select Network

• **Automatic:** This function automatically searches for a network and registers the handset to that network.

• **Manual:** This function allows you to search for networks and specify which network in the network list to register with, if possible.

• Preferred lists

Select preferred network lists to display and saves in your SIM Card. You can edit the current preferred network list.

* : Shown only if supported by the SIM Card.

> **Internet Profiles** : This menu shows the Internet Profiles.

> **Access Points** : This menu shows the Access Points. You can register, delete and edit by using the Options Menu.

• Bluetooth

Set up your LG-C195 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

• Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device. It allows the phone to connect to local wireless networks or access the Internet wirelessly.

Note: The LG-C195 supports WEP and WPA/PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this popup window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country.

This Feature allows you to update the Software of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone Software update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Backing up and restoring your phone's information

1 Connect the USB cable to your phone and your PC.

2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.

3 Click the "Phone Backup & Restore" in PC suite (Tools > Phone Backup & Restore), and select Backup or Restore.

4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Now select Backup or Restore and Click Finish.

5 Your information will be Backed up or Restored.

Viewing your phone files on your PC

1 Connect the USB cable to your phone and your PC.

2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.

3 Open LG PC Suite icon in your PC which is already installed, after searching the phone it will be connected automatically.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

TIP! You can download the PC suite from the LG website (www.lg.com). Go to www.lg.com > products > Manual & Software > Go to Manual & S/W Download Section.