

<sup>NTT</sup>  
docomo

L-05D

optimus

INSTRUCTION MANUAL

docomo **NEXT** series

Contents / Precautions

Confirmation and  
Settings before Using

docomo Palette UI

Calling /  
Network Services

Settings

Mail / Internet

File Management

Application

Using Overseas

Appendix / Index

## Introduction

Thank you for purchasing "L-05D".

Before or while using, be sure to thoroughly read this manual to ensure its correct use.

### Before Using this Terminal

- This terminal supports LTE, W-CDMA, GSM/GPRS, and wireless LAN systems.
- This terminal uses wireless, therefore, it may not function in locations where it is difficult for radio waves to penetrate or areas where radio wave signals are weak, such as tunnels, underground passages, and some buildings or places out of the Xi and FOMA service areas. Even when you are on a higher floor of a tall building or condominium and nothing blocks your view outside, this terminal may not be able to receive or transmit signals. Also communication may be interrupted even when the Antenna Indication Lamp indicates a strong signal reception with four antenna indication bars.
- Because the terminal uses radio waves, there is a possibility that a third party may intercept your call. However, LTE, W-CDMA, and GSM/GPRS systems automatically support privacy functions for all calls, so even if a third party intercepts a call through a receiver, it is only received as noise.
- This terminal encodes sound communication by wireless and also as digital data. When you are operating your terminal while moving to a location subject to weaker radio wave conditions, the transmitted data may not be correctly decoded and as a result the decoded sound may differ somewhat from the actual sound.
- This terminal is supported in Xi Areas, FOMA Plus-Areas, and FOMA HIGH-SPEED Areas.
- Keep a separate record of any information stored on this terminal and store the copies in a safe location. DOCOMO assumes no responsibility for any loss of your data resulting from malfunctions, repair, changing of the model or other handling of the terminal.
- As with PCs, some applications that you install may cause unstable terminal operation, or may send your location information or personal information registered in the terminal to outside via the Internet and the information may be used improperly. Therefore, verify the supplier and operating conditions of the applications before using.
- It is recommended that you save important data to a microSD card.

## Unlocking SIM

Unlocking SIM is available on this terminal. Unlocking SIM enables a SIM card from other makers to be used.

- Unlocking SIM is available at a docomo Shop.
- A fee is required to unlock the SIM.
- When a SIM card from another maker is used, LTE is not available. In addition, its services and functions may get restricted. DOCOMO assumes no responsibility for any operation problems based on SIMs from other makers.
- Visit the DOCOMO website for detailed information on unlocking SIM.

Download the latest information of this manual from DOCOMO website. Also you can check the latest information from this terminal.

- Quick Start Guide (Accessories, in Japanese only)

Basic function operations are explained.

- INSTRUCTION MANUAL (Applications for this Terminal, in Japanese only)

Details about functions and operations are explained.

Tap "Applications" ► "Instruction Manual" on the Home screen.

- INSTRUCTION MANUAL (PDF file)

Details about functions and operations are explained.

Download from DOCOMO website.

<http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>

\* The URL and information contained in the manual are subject to change without prior notice.

## Supplied Accessories

About other optional accessories and related equipment →P207

L-05D

(with warranty and back cover )

Quick Start Guide

Battery Pack










microSDHC card (4GB) (sample)  
(with manual)



## How to Use this Manual

- Any reprint of this manual is prohibited.
- This manual is subject to change without prior notice.
- "This terminal" indicates "L-05D" in this manual. Please keep this in mind.

### Explanation of operations

The selection operations of those icons and items displayed on the touch screen are described below in this manual.

Description	Operation description
"Applications" on the Home screen	Tap  on the Home screen. <ul style="list-style-type: none"><li>• The icons on the Home screen are explained below.<ul style="list-style-type: none"><li> : Applications</li><li> : Phone</li><li> : sp-mode mail</li><li> : Browser</li></ul></li></ul>
 ▶ "Settings" on the Home screen	Tap  at the bottom of the screen, and then tap "Settings" from the displayed Option menu.
"Wireless & networks" ▶ "Mobile networks"	Tap "Wireless & networks" displayed on the screen, and then tap "Mobile networks".

Description	Operation description
Touch  for over 1 second	Tap and hold the  displayed on the screen for 1 to 2 seconds.

### Note

- The operations described in this manual are followed by the default settings of the Home screen where the Home Switcher is set to "docomo Palette UI". If the contents of the Home screen are changed, the operation description may differ.
- Images used in this manual may differ from those on this terminal.

## Table of Contents



Supplied Accessories .....	2	Home Application Information .....	76
How to Use this Manual .....	4	Calling / Network Services .....	78
Notes on Using this Terminal .....	8	Making/Receiving Calls .....	78
Safety Precautions (ALWAYS FOLLOW THESE PRECAUTIONS) .....	9	Operations during a Call .....	82
Handling and Care .....	22	Call Log .....	83
Confirmation and Settings before Using ...	29	Phonebook .....	85
Part Names and Functions .....	29	Network Services .....	91
UIM .....	31	Settings .....	100
microSD Card .....	33	Settings Menu .....	100
Battery Pack .....	34	Wireless & Networks .....	101
Charging .....	35	Call Settings .....	106
Turning ON/OFF the Power .....	40	docomo Service .....	107
Basic Operations (Touch Screen Operations) .....	41	Sound .....	108
Initial Settings .....	46	Display .....	109
Screen Display/Icons .....	53	Gesture .....	109
Character Entry .....	57	Location & Security .....	110
docomo Palette UI .....	62	Applications .....	115
Viewing the Home Screen .....	62	Accounts & Sync .....	115
Home Screen Management .....	63	Privacy .....	116
Viewing the Application Screen .....	66	Storage .....	116
Manage Applications .....	73	Language & Keyboard .....	117
Group Management .....	74	Voice Input & Output .....	117
Searching Applications .....	76	Accessibility .....	117
Switching Application Screen Display .....	76	Connectivity Settings .....	118
		Date & Time .....	120

About Phone .....	120
<b>Mail / Internet .....</b>	<b>122</b>
sp-mode Mail.....	122
SMS .....	122
Gmail .....	124
Early Warning "Area Mail" .....	125
Browser .....	126
Talk .....	129
<b>File Management .....</b>	<b>131</b>
File Operation .....	131
Folder and File Operations .....	133
Bluetooth Communication .....	134
External Device Connection .....	138
<b>Application .....</b>	<b>141</b>
Camera .....	141
Gallery .....	146
Media Player .....	148
Market .....	156
Maps .....	160
Latitude .....	167
Navigation .....	168
Places.....	169
1Seg .....	169
Osaifu-Keitai .....	177
ToruCa .....	180
Alarm Clock .....	181
Calendar .....	183

Calculator .....	186
SmartWorld .....	186
YouTube .....	187
Polaris Office .....	187
iD設定アプリ (iD appli) .....	188
Electronic Dictionary .....	189
Downloads.....	191
Application Manager .....	191
Data Backup and Settings Backup .....	192
<b>Using Overseas .....</b>	<b>197</b>
Overview of International Roaming (WORLD WING) .....	197
Available Services .....	198
Confirming before Using .....	198
How to Make and Receive Calls at your Destination.....	202
Settings for Network Connection at Overseas.....	205
<b>Appendix / Index .....</b>	<b>207</b>
Introduction of Options and Related Devices .....	207
Troubleshooting (FAQs) .....	208
Warranty and After-Sales Service .....	216
Updating Software .....	218
Main Specifications .....	225
Specific Absorption Rate (SAR), etc. of Mobile Phones .....	229
Radio Frequency (RF) Signals .....	230
Declaration of Conformity .....	232
Important Safety Information .....	233

Export Administration Regulations.....	235
Intellectual Property Right .....	235
Index .....	238




## Notes on Using this Terminal

- This terminal does not support accessing the i-mode site (programs) and i-appli, etc.
- This terminal automatically performs communication for some functions, for example, to synchronize data, update the latest software, maintain connection with the server, etc. When you download applications or watch movies etc., a large amount of packet communication is executed. Therefore, it is highly recommended to use packet flat-rate service.
- This terminal does not support Pubic mode (driving mode).
- You can confirm your own phone number as follows. From the Home screen, tap  ► "Settings" ► "About phone" ► "Status".
- You can confirm the software version of this terminal as follows. From the Home screen, tap  ► "Settings" ► "About phone".
- You can update the software of this terminal. Refer to "Updating Software" (P218) for detailed information.
- In order to improve the quality of this terminal, sometimes the OS is upgraded through software updates. Therefore, it is required to always use the latest version of the OS. Also, applications may not be able to use any longer if the OS is old, or problems may occur.
- This terminal uses only UIM. Bring your miniUIM/ FOMA card to a docomo Shop to exchange it.
- Set screen lock or password for this terminal to ensure its security in case it gets lost. For details, refer to "Location & Security" (P110).
- In case of loss, please change passwords of each service accounts on PC to prevent others from using Google service such as Google Talk, Gmail, Android Market, etc.
- This terminal does not support service providers other than sp-mode, mopera U or Business mopera Internet.
- This terminal does not support 64K data communication.







- Backup your data such as images, videos and music on PC. For details about connection method, refer to "File Management" (P131) and "External Device Connection" (P138). Also, it is recommended to use various on-line data backup services.
- Packet communication fee differs when using tethering depending on the plan. Packet flat-rate service is recommended.
- Subscription to sp-mode is required when using tethering.
- Security between external device and mobile phone is not configured in the default settings for Wi-Fi tethering. Set security as needed.
- For detailed information about fees, refer to <http://www.nttdocomo.co.jp/>.

## Safety Precautions (ALWAYS FOLLOW THESE PRECAUTIONS)

- Before using this terminal, read these "Safety Precautions" carefully so that you can use it properly. After reading the safety precautions, keep this manual in a safe place for later reference.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below indicate the levels of danger or damage that may occur if the particular precautions are not observed.

 <b>DANGER</b>	<p>This sign indicates that incorrect handling has a high possibility of causing death or serious injury.</p>
 <b>WARNING</b>	<p>This sign indicates that incorrect handling poses a risk of causing death or serious injury.</p>
 <b>CAUTION</b>	<p>This sign indicates that incorrect handling poses a risk of causing slight injury or damage to the product or property.</p>

- The following symbols indicate special warnings regarding product usage.

 Don't	Denotes things not to do (prohibition).
 Not disassembly	Denotes not to disassemble.
 No wet hands	Denotes not to use with wet hands.
 Not liquids	Denotes not to use where it could get wet.
 Do	Denotes mandatory instructions (matters that must be complied with).
 Unplug	Denotes that the equipment should be unplugged.


- "Safety Precautions" are explained in the following seven sections.

General Precautions for Terminal, Battery Pack, Adapter, UIM .....	P11
Precautions for Terminal .....	P13
Precautions for Battery Pack .....	P15
Precautions for Adapter .....	P17
Precautions for UIM .....	P19
Precautions on Using near Electronic Medical Equipment .....	P19
Material List .....	P21




## General Precautions for Terminal, Battery Pack, Adapter, UIM


### DANGER

 Do not use or leave this terminal and its accessories in places with a high temperature such as beside fire, under direct sunlight or in cars under the blazing sun.  
Don't Fire, burns, or injury may result.


---

 Do not put this terminal and its accessories in heating appliances such as microwaves or high pressure containers.  
Don't Fire, burns, injury, or electric shock may result.


---

 Do not disassemble or remodel this terminal and its accessories.  
Not disassembly  
Fire, burns, injury, or electric shock may result.


---

 Do not get this terminal and its accessories wet with water, drinking water, pet urine, etc.  
Not liquids  
Fire, burns, injury, or electric shock may result.


---

 Use the battery pack and adapter specified by NTT DOCOMO for this terminal.  
Do Fire, burns, injury, or electric shock may result.


### WARNING

 Do not subject this terminal and its accessories to severe shocks, or throw them.  
Don't Fire, burns, injury, or electric shock may result.

---

 Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging terminal or external connection terminal (microUSB connection terminal, earphone/microphone terminal). Do not put those materials inside the terminal.  
Don't Fire, burns, injury, or electric shock may result.

---

 Do not cover or wrap this terminal or its accessories with bedding, etc. while using or charging.  
Don't Fire or burns may result.

---



Make sure to turn off the terminal or stop charging before going to the places like a gas station where a flammable gas fumes.

Do

Catching fire may result.

Turn off the power when using Osaifu-Keitai at gas stations (before turning the power off, release the lock for Osaifu-Keitai if it is set).

---



If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

Do

- Remove the power plug from the wall outlet or cigar lighter socket.
  - Turn off the terminal.
  - Remove the battery pack from the terminal.
- Fire, burns, injury, or electric shock may result.
- 



## CAUTION



Do not place the terminal and its accessories on unstable locations such as wobbly tables or slanted locations.

Don't

Damage may result from falling down.

---



Do not store this terminal and its accessories in humid, dusty places, or in hot areas.

Don't

Fire, burns, or electric shock may result.

---



If children use this terminal and its accessories, a guardian should explain the precautions and correct operations. Also make sure that the instructions are followed during use.

Do

Injury may result.

---



Keep out of reach of babies and small children. Accidental swallowing or injury may result.

Do

---



Be careful especially when using the terminal with the adapter connected continuously for a long time.

Do

If you use an application or watch 1Seg programs for a long time while charging, the temperature of the terminal, battery pack and adapter may get high.

Directly touching a hot part for a long time may cause redness, itching or rash on your skin, or low-temperature burns depending on your constitution and/or health condition.

## Precautions for Terminal

### WARNING



Don't

Do not lighten the light near eyes. Especially, when you shoot photos of babies or infants, keep the terminal 1 m or more away from babies and infants.

Vision problems may result. Accident may result from being shocked and being blind.

---



Don't

Do not get liquids such as water or foreign objects such as metal pieces or flammable materials into the UIM slot or microSD card slot of the terminal.

Fire, burns, injury, or electric shock may result.

---



Don't

Do not turn on lights in front of the auto driver directly.

Accident may result from the weak vision caused by light.

---



Do

Turn off the terminal in places where use is prohibited such as airplanes or hospitals. Electronic devices or electronic medical devices may be adversely affected. Follow the instructions when using inside medical facilities. Also, you will get punished according to law if any prohibited action, such as using the phone in airplane, is conducted. However, if use is permitted by setting for disconnecting radio wave, etc., follow airline instructions for proper use.

---



Do

When talking on the phone with speaker on or when the terminal is ringing, keep it away from your ear. And, when connecting the earphone/microphone etc. to the terminal and playing a game or music, adjust the volume moderately. Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.

---



Do

If you have a weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting. Harmful effect on heart may result.

---



Do When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.

Harmful effect on electronic medical equipment etc. may result.

---



Do Turn off the terminal in places near high-precision electronic devices or devices using weak electronic signals.

Electronic devices may be adversely affected by reasons such as malfunction.

\* Examples of electronic devices to avoid  
Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.

If you are using an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from radio waves.

---



Do When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of the terminal.

Since the reinforced glass is used on the surface of the display and the camera lens, they are structured for the glass not to scatter. However, if you carelessly touch broken or exposed parts, you may get injured.



## CAUTION



Don't Do not swing the terminal by its antenna, etc. It may hit you or someone else and may result in an accident such as an injury.

---



Don't Do not use a broken terminal. Fire, burns, injury, or electric shock may result.

---



Don't When using the motion sensor, ensure the safety of you and those around you, hold the terminal firmly, and avoid extreme movements. Injury may result.

---



Don't If the display part is accidentally broken and liquid crystal leaks out, do not make the material contact with your skin of face or hands.

It may cause loss of sight or skin problems. If liquid crystal gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the material adheres to skin or clothing, use alcohol etc. to wipe it off, and then wash with soap.



Do If you use this terminal in a car, contact the car manufacturer or dealer to ask about the effect from radio waves.

Depending on the type of car, in-car electronic devices could be adversely affected. In this case, stop using this terminal immediately.



Do Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the terminal immediately, and then seek medical attention.

- For the material of each part → "Material List" (P21)



Do When watching the display, take a certain distance from the display in a fully bright place. Visual loss may result.

## Precautions for Battery Pack

- Confirm the battery type referring to the label on the battery pack.

Display	Battery type
Li-ion00	Lithium-ion battery



**DANGER**



Don't Do not get the terminal placed in contact with metal materials such as a needle. Also, do not store or bring in contact with metallic necklaces.  
Fire, explosion, getting heated or liquid leak of the battery pack may result.



When inserting battery pack into the terminal, make sure to confirm the direction of the battery pack and not place excessive force on it.

Don't

Fire, explosion, getting heated or liquid leak of the battery pack may result.

---



Do not throw the terminal into fire. Fire, explosion, getting heated or liquid leak of the battery pack may result.

Don't



Do not sting the terminal with a nail, and do not hammer or step upon the terminal. Fire, explosion, getting heated or liquid leak of the battery pack may result.

---



When the liquid from battery pack splashes into your eyes, do not rub your eyes. Wash your eyes and go to consult with a doctor immediately. Blindness may result.

Do



## WARNING



Do not use this terminal when transformation or damage is resulted from falling down. Fire, explosion, getting heated or liquid leak of the battery pack may result.

---



When battery pack leaks liquid or gives off odor, stop using it and keep it away from fire. Fire, explosion may result from liquid.


---




Do not let the pet bite the battery pack. Fire, explosion, getting heated or liquid leak of the battery pack may result.

Do


## CAUTION

 Do not discard it as combustible waste. Fire and environmental pollution may result.  
Don't Bring the terminal to a docomo Shop after insulating the battery pack by wrapping the terminal with tape or follow the local disposal regulations.

---


 Do not use or charge the terminal when the battery pack is wet.  
Don't Fire, explosion, getting heated or liquid leak of the battery pack may result.

---


 If battery fluid or another substance leaks from the battery pack, do not allow it to get on the skin of your face, hands, etc.  
Do It may cause loss of sight or skin problems. If battery fluid or another substance gets in your eyes or mouth, or on your skin or clothing, rinse it off with clean water immediately.  
Furthermore, if battery fluid gets in your eyes or mouth, rinse your eyes or mouth with clean water and then consult a doctor immediately.

## Precautions for Adapter


### WARNING

 Do not use it if the adapter cord gets damaged. Fire, burns, or electric shock may result.  
Don't


---

 Do not use the AC adapter in a bathroom or other highly humid area.  
Don't Fire, burns, or electric shock may result.


---

 DC adapter is only for minus earth car. Do not use it on plus earth car.  
Don't Fire, burns, or electric shock may result.

---

 When it starts to thunder, do not touch the adapter.  
Don't Electric shock may result.

---

 Do not short the charging terminal while being connected to the outlet or cigar lighter socket. Do not touch the charging terminal with a part of your body such as your hands or fingers. Fire, burns, or electric shock may result.

---



Do not place heavy objects on the adapter cord.  
Don't Fire, burns, or electric shock may result.

---



When you insert and remove AC adapter from the power outlet, do not contact a metal strap or other metal objects with the terminal.  
Don't Fire, burns, or electric shock may result.

---



Do not touch the Adapter cord or outlet with wet hands.  
No wet hands Fire, burns, or electric shock may result.

---



Do Only use with the specified power source and voltage. When charging overseas, use a compatible AC adapter.  
If incorrect voltage is used, this may cause fire, burns or electric shock.  
AC adapter: AC 100V  
DC adapter: DC 12V/24V (only for minus earth car)  
AC adapter for overseas use: Between AC 100V and 240V (Connect to the AC outlet for internal household use)

---



Use the specified fuse when the fuse of DC adapter blows.  
Do Fire, burns, or electric shock may result. Refer to the manual for detailed information of the specified fuse.

---



Wipe off any dust that accumulated on the power plug.  
Do Fire, burns, or electric shock may result.

---



When you connect the AC adapter to an outlet, do not fail to properly connect to the outlet.  
Do Fire, burns, or electric shock may result.

---



When you disconnect the power plug from the outlet or cigar lighter socket, do not pull the adapter cord with excessive force. Instead, hold the adapter to disconnect.  
Do Fire, burns, or electric shock may result.

---



Always remove the power plug from the outlet or cigar lighter socket when not using the adapter for an extended period.  
Unplug Fire, burns, or electric shock may result.

---





Immediately remove the power plug from the outlet or cigar lighter socket if water or other fluids get into the adapter.  
Fire, burns, or electric shock may result.

---



Always remove the power plug from the outlet or cigar lighter socket when cleaning the equipment.  
Fire, burns, or electric shock may result.

## Precautions for UIM

### CAUTION



Be careful not to touch the edge of UIM when removing it.

Do Injury may result.

## Precautions on Using near Electronic Medical Equipment

- The description below meets "Guideline on the Use of Radio-communication Equipment such as Cellular Telephones - Safeguards for Electronic Medical Equipment" by the Electromagnetic Compatibility Conference.

## WARNING



Be sure to adhere to the following regulations inside medical facilities.

Do

- Keep the terminal out of operating rooms, intensive care units (ICUs) or coronary care units (CCUs).
  - Turn off the terminal in hospital wards.
  - Turn off the terminal in hospital lobbies and corridors if electronic medical devices could be nearby.
  - If the medical facility has specific zones where use or possession of mobile terminals is prohibited, follow those regulations.
- 



Turn off the terminal in crowded trains or other public places where implanted cardiac pacemaker or defibrillator wearers could be nearby.

Do

Operation of an implanted cardiac pacemaker or implanted defibrillator may be adversely affected by radio waves.

---



If you use electronic medical equipment such as an implanted cardiac pacemaker or implanted defibrillator, use the mobile terminal 22cm or more away from the implanted cardiac pacemaker or implanted defibrillator. Operations of electronic medical equipment may be adversely affected by radio waves.

---



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (using outside medical facilities for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting the manufacturer. Operations of electronic medical equipment may be adversely affected by radio waves.

## Material List

Part		Material	Surface Treatment
Outer case	Display	Tempered Glass	-
	Front cover	PC resin	NCVM
	Back cover	PC resin	SF coating
Power key		PC+TPU resin	UV coating
Volume key		PC+TPU resin	UV coating
Camera panel		Tempered Glass	BK Rear Printed
Flash panel		PC resin	Silk Print
Camera decoration		AL	Diamond-cut aluminum panel
microUSB connector terminal cover		PC+TPU resin	UV coating
Battery compartment		Diecasting (Magnesium)	Urethane coating
Charging terminal connector (Battery compartment)		Ti-Cu	-

Part		Material	Surface Treatment
Speaker grill		PET	-
Screws		Mild steel	ZnB plating
Battery pack	Battery pack	PC resin	PC resin
	Sticker	PET	Ink coating
	Terminals	Au + Ni	Gold plating
microSD card slot	Guide	Stainless steel	Nickel plating
	Fixing plate	LCP	-
	Metal contacts	Phosphor Bronze	Nickel and Gold plating
UIM slot	Guide	SUS304	Nickel plating
	Fixing plate	LCP Pa46	-
	Metal contacts	C_7035	Nickel and Gold plating

## Handling and Care

### General Usage Guidelines

- Keep this terminal away from water. This terminal, battery pack, adapter and UIM are not waterproof. Do not use them in places where high humidity such as a bath or where rain may get it wet. If you carry the terminal close to your body, moisture from sweat may corrode the internal parts causing a malfunction. Note that malfunctions deemed to be caused by water are not covered by the warranty or impossible to repair. Since these malfunctions are not under warranty, even when repair is possible, it will be done at the user's expense.
- Clean the terminal with a dry, soft cloth (lens cleaning cloth), etc.
  - Rubbing it roughly with a dry cloth may scratch the display.
  - Drops of water or dirt left on the display may cause stains.
  - If the terminal is wiped with alcohol, paint thinner, benzene or detergent, the printing may disappear or color may fade.

- Keep the connector contacts clean with a dry cotton swab. Clean the connector contacts with a dry cotton swab to prevent contacts from getting dirty which can result in intermittent connections. Be careful when cleaning the connector contacts.
- Do not place the equipment near air conditioner outlets. Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.
- Do not place excessive force on the terminal or battery pack. If the terminal is inserted to a full bag, or placed in a pocket and sat on, the display, its internal PCBs or battery pack may be damaged or malfunction. Also, while the external device is connected to the external connection terminal (microUSB connection terminal and earphone/microphone terminal), it may damage the connector and cause malfunction.
- Do not rub or scratch the display with metal. The display may get scratched and it may cause malfunction or damage.
- Read the individual manual attached to the battery pack and adapter.

## Notes about the Terminal

- Do not place excessive force on pressing the touch panel, or operate by sharp objects such as fingernails, ballpoint pen and pins. Damage of touch panel may result.
  - Avoid using in extremely high or low temperatures. The terminal should be used within a temperature range from 5°C to 35°C and a humidity range from 45% to 85%.
  - This terminal may adversely affect fixed phones, televisions or radios in use nearby. Use as far as possible from such appliances.
  - Keep a separate record of any information stored on this terminal and store the copies in a safe location. DOCOMO assumes no responsibility for the loss of any of your data.
  - Do not drop the terminal or subject it to shocks. Damage or malfunction may result.
  - Do not insert a microUSB connection terminal, earphone/microphone terminal crookedly or pull them strongly. Damage or malfunction may result.
  - It is normal for this terminal to become warm during use. You can continue using without problems.
  - Do not leave the camera under direct sunlight. Discoloring or burn-in of materials may result.
- Always use the terminal with the microUSB connector terminal cover closed. Malfunction may result from dust or water.
  - Do not use the terminal without the back cover. Battery pack may come off. Malfunction and damage may result.
  - Do not remove microSD card or turn off the terminal while using a microSD card. Data loss or malfunction may result.
  - Do not bring any magnetic cards close to the terminal. The magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
  - Do not bring strong magnetic objects close to the terminal. Strong magnetism may cause malfunction.

## Notes about the Battery Pack

- The battery pack is a consumable accessory. Battery life varies depending on usage conditions, etc., but it is time to change battery packs when the usage time has become extremely short even though the battery pack has been fully recharged. Change to a specified new battery pack.
- Charge the battery pack in an environment with the proper ambient temperature (5°C to 35°C).
- Battery life may differ depending on the use environment or degradation level of the battery pack.
- Depending on the usage condition, the battery pack may inflate slightly when the battery life is almost over. Note that it is not a problem.
- Be careful especially about the following points when storing the battery pack.
  - Keeping under fully charged state (right after the charging ends)
  - Keeping under not charged state (consumed too much to turn on the terminal)The performance and life of the battery pack may deteriorate.  
It is recommended that you store the battery pack with around 40% battery level.

## Notes about the Adapter

- Charge the battery pack in an environment with the proper ambient temperature (5°C to 35°C).
- Do not charge in the following places.
  - Places that are very humid, dusty or exposed to strong vibrations.
  - Near ordinary phone or TV/radio.
- It is normal that the adapter becomes warm while being charged. You can continue using without problems.
- Use the DC adapter only when the car engine is running.  
The car battery may be exhausted.
- When using an outlet with a mechanism preventing unplugging, follow the handling instructions of the outlet.
- Do not give a strong impact to the adapter. Also, do not deform the charging terminal or terminal guide. Malfunction may result.

## Notes about the UIM

- Do not put excessive force on the UIM when inserting into or removing from this terminal.
- Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using a UIM with other IC card reader/writer.
- Always keep the IC portion of the UIM clean.
- Clean the UIM with a dry, soft cloth (lens cleaning cloth), etc.
- Be sure to keep a separate note of the information registered on the UIM.  
DOCOMO assumes no responsibility for the loss of any of your data.
- Visit docomo Shop to return the UIM for the environmental purpose.
- Do not scratch, touch carelessly or short circuit the IC portion.  
Data loss or malfunction may result.
- Do not drop or give force to the UIM.  
Malfunction may result.
- Do not bend or put heavy things on the UIM.  
Malfunction may result.
- Do not insert UIM into this terminal with labels or stickers attached on.  
Malfunction may result.

## Notes about the Bluetooth Function

- To secure the Bluetooth communication security, the terminal supports the security function compliant with Bluetooth standards, but the security may not be sufficient depending on the settings. Be aware of the communication using the Bluetooth function.
- Note that DOCOMO is not responsible for data or information leakage when making data communications using Bluetooth.
- In the terminal, applications for Hands free, Headset, Object push, Serial port, Audio, Phonebook access, File transfer (server) are available. Also Audio/Video remote control may be available for Audio (only compatible Bluetooth devices).

## ■ Frequency band

Frequency bands used by the terminal Bluetooth function/Wireless LAN function are described on the terminal battery compartment. They are described as follows.

2.4FH1/DS4/OF4

- 2.4 : Indicates radio equipment using 2,400 MHz.
- FH/DS/OF : Indicates that modulation methods are FH-SS, DS-SS or OFDM.
- 1 : Indicates that assumed inducing interference from distances is 10 m or less.
- 4 : Indicates that assumed inducing interference from distances is 40 m or less.
- ■ ■ : The full band between 2,400 MHz and 2,483.5 MHz is used and the band of the mobile identification device is avoidable.

Available channels vary by the country.

For use in an aircraft, contact the airline company beforehand.

## ■ Bluetooth Device Cautions

The operating frequency band of this terminal is used by industrial, scientific, consumer and medical equipment including microwave ovens, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring no license) and amateur radio stations (hereinafter referred to as "another station").

1. Before using this terminal, confirm that "another station" is not being operated nearby.
2. In the event of this terminal causing harmful radio wave interference with "another station", promptly change the location or stop radio wave emission by turning off the power, etc.
3. If you have further questions, contact docomo Information Center provided on the last page of this manual.



## Notes about Wireless LAN (WLAN)

Wireless LAN (WLAN) uses radio waves to enable communications between compatible devices, thus allowing connection to a local area network from anywhere within range. However, there is a risk of data interception by malicious third parties unless security is established. Users are advised to assess their responsibilities and accordingly configure security settings.

### ■ Wireless LAN

Do not use wireless LAN near magnetic devices such as electrical appliances or AV/OA devices, or in radio waves.

- Magnetism or radio waves may increase noises or disable communications (especially when using a microwave oven).
- When using near TV, radio, etc., reception interference may occur, or channels on the TV screen may be disturbed.
- If there are multiple wireless LAN access points nearby and the same channel is used, search may not work correctly.

### ■ 2.4 GHz Device Cautions


The operating frequency band of the WLAN device is used by home electrical appliances such as microwave ovens, industrial, scientific, consumer and medical equipment including premises radio stations for identifying mobile units used in the manufacturing lines of plants stations (radio stations requiring no license) and amateur radio stations (radio stations requiring a license).

1. Before using the device, confirm that premises radio stations for identifying mobile units, specified low power radio stations and amateur radio stations are not being operated nearby.
2. If the device causes harmful radio interference to premises radio stations for identifying mobile units, immediately change the frequency band or stop use, and contact "docomo Information Center" on the last page of this manual for crosstalk avoidance, etc. (e.g. partition setup).
3. If the device causes radio interference to specified low power radio stations or amateur radio stations, contact "docomo Information Center" on the last page of this manual.

## Handling the FeliCa Reader/Writer

- The FeliCa reader/writer function for this terminal handles delicate signals that require no radio station license.
- The 13.56 MHz frequency band is used. If there is another reader/writer near the terminal, keep enough distance between the terminal and the reader/writer. Also, make sure that there is no radio station using the same frequency band nearby.




## Caution


- Do not use a modified terminal. Using a modified terminal results in violating the law of Electromagnetic Compatibility.  
This terminal has been complied with technical standard of wireless equipment stipulated by law of Electromagnetic Compatibility. As a proof, "Technical standard compliance mark  is indicated in the inscription seal.  
If this terminal is modified by turning the screw to the left to disassemble, technical standard compliance becomes invalid.  
Please do not use this terminal during the time when technical standard compliance is being invalid, since you are in violation of the law of Electromagnetic Compatibility.

- Be careful when using the terminal while driving. Using the mobile phone in your hand while driving is subject to punishment.  
However, absolutely necessary cases such as rescue of a sick person or maintaining public safety are exempted.
- The FeliCa reader/writer function can only be used in Japan.  
The FeliCa reader/writer function for this terminal is compliant with the radio standards for Japan. Overseas usage may be subject to punishment.
- Do not make unauthorized modifications to the basic software.  
Repairs may be refused if the software has been modified.

# Confirmation and Settings before Using

## Part Names and Functions

- 1 Earpiece (receiver)
- 2 Front camera
- 3 Proximity sensor:  
Switch the touch screen to on or off to prevent from unintentionally activating functions resulted from face touch while making a call.
- 4 Display (touch screen)
- 5  Menu key
- 6  Home key
- 7  Back key

- 8 Bluetooth/Wi-Fi antenna area<sup>\*2</sup>
- 9 Main camera
- 10 microSD card slot (internal)
- 11 Flash
- 12 UIM slot (internal)
- 13 GPS/Xi antenna area<sup>\*2</sup>
- 14  mark
- 15 Back cover<sup>\*1</sup>
- 16 Speaker
- 17 Xi antenna area<sup>\*2</sup>

\*1 Do not remove stickers from the back surface of the back cover. If a sticker is removed, the IC card may not be read or written.




\*2 Antenna is built inside the terminal. If the antenna area is covered by your hand, quality may be affected.

- 18 Earphone microphone terminal
- 19 Top microphone
- 20 microUSB connection terminal
- 21 Power key/Screen lock key
- 22 1Seg antenna
- 23 Volume key
- 24 Bottom microphone

Note

- Do not put any sticker on the sensor area.

There are three keys on the front of the terminal. The roles of these keys are shown below.

	<b>Menu key</b> Tap this key to display the options menu for the current screen or application.
	<b>Home key</b> <ul style="list-style-type: none"><li>• If you tap this key, you will return to the Home screen, regardless of the application being used or the screen being displayed.</li><li>• If you touch this key for over 1 second, the icons of the most recently used applications appear. Tap an icon to open the application. (It may be displayed as horizontal screen.)</li></ul>
	<b>Back key</b> Tap this key to return to the previous screen. It also closes a dialog box, an options menu, the Notification panel, or the on-screen keyboard.

## UIM

UIM is an IC card that stores informations of each customer.

You cannot use some of the terminal functions if the UIM is not inserted. Before inserting or removing the UIM, you must always turn OFF the power and disconnect the AC adapter cable.


This terminal uses only the UIM. Bring your miniUIM/FOMA card to a docomo Shop to exchange it.

### UIM security codes

The UIM can set security code named PIN code. This code is set to "0000" at the time of subscription, but you may subsequently change it. For details about changing this security code, refer to "Security Code and UIM Protection" (P111).

## Inserting the UIM

- 1 Insert a fingernail into the groove in the back cover, and pull up in the direction of the arrow (1) while pressing ● part slightly to remove the back cover

- 
- 2 Remove the battery pack (P35), and insert the UIM into the slot with the gold-colored IC side facing down

## Removing the UIM

- 1 Remove the back cover and the battery pack. Gently press the UIM with your fingertip and slide it out

## microSD Card

A microSD card can be used with any other compatible devices.

- When a microSD card is not inserted, camera functions and playing or downloading music or videos are not available.
- The terminal supports a microSD card of up to 2 GB, and a microSDHC card of up to 32 GB (as of November 2011).
- Consult with the manufacturers about the supporting microSD cards.

### Inserting a microSD Card

- 1 Remove the back cover (P31)

- 2 Insert the microSD card into the slot with the metal contacts facing down
  - Insert a microSD card properly, paying attention to the insertion direction. Improper insertion of a microSD card may damage the card itself and the slot, or may be unable to eject the card.


### Removing a microSD Card

- 1 Remove the back cover and take out the microSD card

## Battery Pack

### Attaching the Battery Pack

- 1 Remove the back cover (P31)
- 2 Insert the battery pack in the direction of the arrow (1) with the "CE" mark facing up. Ensure that the tabs on the terminal and the battery pack are aligned with each other

- 3 Check the direction of the back cover and attach it to the terminal (2). Press  portion to close it firmly (3)
  - Make sure there is no gap between the terminal and the back cover.



## Removing the Battery Pack

- 1 Remove the back cover (P31)
- 2 Put your fingernail into the groove, and lift out the battery pack in the direction of the arrow (2), pushing it to the direction of the arrow (1)

### Note

- Turn the power OFF before attaching/removing the battery pack.

## Charging

### Battery Pack Life

- The battery pack is a consumable accessory. The usage time of the battery per one charge decreases gradually each time the battery is recharged.
- When the usage time from one charge becomes about half of a new battery pack, the life of the battery pack is assumed to be almost over. We recommend that you replace the battery ahead of time. Refer to "Repairs" on the back of the manual or consult a specified DOCOMO repair center for battery exchanging information.

### Battery Charging

- For detailed information, refer to manuals for FOMA charging microUSB conversion adapter L01, FOMA AC Adapter 01/02 (optional), FOMA AC Adapter 01 for Global use (optional) and FOMA DC Adapter 01/02 (optional).
- FOMA AC Adapter 01 only supports AC 100V. FOMA AC Adapter 02 and FOMA AC Adapter 01 for Global use support AC 100V to 240V.

- The shape of the AC adapter plug is for AC 100V (Japanese standard). The conversion plug adapter for overseas is required if you use an adapter for AC 100V to 240V. Also do not use a transformer for overseas travel.
- Do not force the connector when inserting/pulling it out. Instead, insert/pull it out slowly.
- If you start charging when the battery pack is empty, you may not be able to power ON the terminal for a while.
- Make sure to unplug the power cord after finishing charging.
- When charging in combination with the FOMA charging microUSB conversion adapter L01, it is not possible to fully charge if charging starts when the battery pack is empty.

#### Do not charge for a long time (several days)

- If you carry on charging the terminal after it has been fully charged, the battery pack will start supplying power to the terminal. This will reduce the actual usage time and deplete the battery. If this happens, please charge it again correctly. Before recharging, remove the terminal from FOMA charging microUSB conversion adapter L01 and reset.

## Charging Time (estimate)

The estimated time for charging an empty battery pack is shown below. Charging under low temperatures requires longer time.

FOMA AC Adapter 01/02	Approx. 330 minutes
FOMA DC Adapter 01/02	Approx. 330 minutes

## Usage Time (estimate)








A list of the charging time (estimate) of a fully charged battery is shown below. The usage time varies depending on the usage conditions and the battery pack condition. For details, refer to "Main Specifications" (P225).

Continuous standby time	Xi/LTE	Stationary (Automatic): Approx. 240 hours
	FOMA/3G	Stationary (Automatic): Approx. 300 hours
	GSM	Stationary (Automatic): Approx. 240 hours
Continuous call time	FOMA/3G	Approx. 340 minutes
	GSM	Approx. 240 minutes
1Seg watching time		Approx. 240 minutes

## Charging with the AC Adapter

How to use the supplied AC adapter to charge the terminal is described below.

- 1 Insert the USB connector of the supplied USB connection cable into the USB connection terminal of AC adapter

- 2 Open the microUSB connector terminal cover of the terminal
- 3 Insert the microUSB connector of USB connection cable into the microUSB connection terminal of the terminal
  - Insert the USB connection cable horizontally with the USB mark facing up.
- 4 Insert the AC adapter plug into the power outlet
  - During charging, the battery level icon in the status bar either appears like  or changes its appearance in the order of  ►  ►  ►  ► .
  - When the battery pack is fully charged, the battery level icon on the status bar changes to .
- 5 When charging is completed, remove the microUSB connector from the terminal and close the microUSB connector terminal cover
- 6 Remove the USB connector of USB connection cable from the USB connection terminal of AC adapter
- 7 Remove AC adapter plug from power outlet

## Charging with the Desktop Holder

Using the optional desktop holder L12, you can charge by attaching the terminal, and also charge by attaching the battery pack L15.

By dragging the terminal display while charging, it is possible to display the clock and calendar, and to use the slideshow of images stored in the Gallery.

### ■ Charging by attaching the terminal

- 1** Insert the USB connector of the supplied USB connection cable into the USB connection terminal of AC adapter
- 2** Insert the microUSB connector of the USB connection cable into the connection terminal on the back of the desktop holder L12.
  - Insert the USB connection cable horizontally with the USB mark facing up.
  - The charge indicator on the desktop holder blinks Red → Green → Orange.
- 3** Open the microUSB connector terminal cover of the terminal
- 4** While holding the desktop holder L12, insert the terminal in the **1** direction shown in the figure, and then attach it firmly to the connection terminal of the desktop holder L12

## 5 Insert the AC adapter plug into the outlet

- Charging begins. The charge indicator turns OFF during charging.
- After charging is completed, a message explaining that charging is completed is displayed on the screen.

## 6 When charging is completed, remove the terminal according to the reverse procedure while holding the desktop holder L12

## 7 Remove AC adapter plug from power outlet

### ■ Charging by attaching only the battery pack

You can insert the battery pack to the slot opening for the battery pack on the top surface of the desktop holder L12 for charging. The charge indicator turns red during charging. After charging is completed, the charge indicator turns green.

### ■ Charging by attaching the battery pack and terminal together

Charging begins for the terminal first. The charge indicator turns OFF while the terminal is charging. After charging of the terminal is completed, the battery pack begins to charge. At that time, the charge indicator turns red.

## Charging with a PC

### 1 Open the microUSB connector terminal cover of the terminal

### 2 Insert the microUSB connector of USB connection cable into the microUSB connection terminal of the terminal

### 3 Connect USB connector of USB connection cable to PC USB port

### 4 "Charge only" ► "OK"

- For details about the connection method between the terminal and PC, refer to "Connecting the Terminal with a PC" (P138).


### 5 When charging is completed, remove the microUSB connector from the terminal and close the microUSB connector terminal cover

### 6 Remove the USB connector from the PC USB port


## Turning ON/OFF the Power

### Turning ON the Power

- 1 Press and hold the power key for over 1 second

- 2 Tap  to release the screen lock.

#### Note

- The "Locked" screen appears when the power is turned ON or when the backlight is turned on.
- If the screen lock has been set using a screen unlock pattern, the "Draw pattern to unlock" screen appears when the power is turned ON.
- If the screen lock has been set using a PIN code or password, the "Locked" screen appears when the power is turned ON. After releasing the screen lock by following Step 2, enter the PIN code or password and tap "OK". To correct the typing error, tap .

### Turning OFF the Power

- 1 Press and hold the power key for over 1 second
- 2 "Power off"
- 3 "OK"

## Turning on Backlight

To prevent unintended operation and to save power, the backlight turns off after a set period. If you then turn on the backlight to release the screen lock, the screen that was displayed before the backlight was turned off appears again.

### 1 Press the power key

- The "Locked" screen appears. The backlight automatically lights up when you receive a call or when alarm is ringing.

#### Note

- Screen gets locked if pressing the power key while the backlight is on.
- You can set the length of time before the backlight turns off. For details, refer to "Display" (P109).
- If a screen unlock pattern has been set, you will be prompted to enter the pattern when pressing the power key. For more details about setting a screen unlock pattern and releasing the screen lock, refer to "Location & Security" (P110).

## Basic Operations (Touch Screen Operations)

The display of the terminal has a touch screen that allows you to perform various operations by touching it.

### Precautions on Using Touch Screen

The touch screen has been designed for finger touching slightly. Do not press it with sharp objects (fingernail, ballpoint pen, pin etc.) or press it hard with your finger. The following user actions may cause the touch screen not to work properly. They may also cause malfunction.

- Touching the screen with gloved hands
- Touching the screen with the tip of a fingernail
- Placing a foreign object on the screen
- Sticking a protective sheet or seal on the screen

## Touch Screen Operations

You can perform the following actions on the touch screen.

- Tap: Touch the screen lightly
- Double-tap: Touch the screen lightly twice successively
- Touch for over 1 second: Touch and hold down the screen
- Swipe: Lightly flick the screen
- Drag: Touch and hold down to flick the screen, and then release your finger
- Pinch-out: Touch the screen with 2 fingers and then move them apart
- Pinch-in: Touch the screen with 2 fingers apart and then move them together, as if pinching

## Opening Items


- 1 Tap an item

## Checking or Unchecking Options


- 1 Tap an item that has a checkbox
  - If the checkbox was unmarked, a check mark now appears in it.
  - If the checkbox was marked, the check mark now disappears from it.

## Scrolling Screen

You can scroll the screen up or down. On some web pages, you can also scroll side to side.

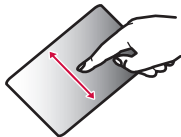

Drag up or down to scroll.

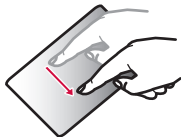

Swipe to scroll quickly. To stop scrolling, touch the screen.



## Zooming In or Out

Some applications allow you to zoom in on small text that is difficult to read. After zooming in, you can also zoom out to a full-screen view.








The movement of your fingers enlarges the screen display by pinching it out.




- The movement of your fingers reduces the screen display by pinching it in.
- Pinch in on the Home screen to display the Home screen list, and then set the Home screen.

### Note

- Sometimes  appears when you drag the screen. You can also zoom in or out by tapping this zoom control icon. Tap  to zoom in by one level. Tap  to zoom out by one level. However,  or  grays out if you have already zoomed in to the maximum or zoom out to the minimum. This grays out indicates that you cannot zoom in or out any further.

## Using Motion Gesture

Various functions can be operated simply by moving the terminal.

- To use motion gestures, tap  ► "Settings" ► "Gesture" from the Home screen, and place a check mark in each item.

### Using motion gesture on alarm

#### ■ Stopping alarm

- 1 Flip the terminal while alarm is ringing
  - Alarm stops.

### Using motion gesture while an incoming call arrives

#### ■ Muting ringtone

- 1 When an incoming call arrives, flip the terminal
  - The ringtone is muted.

## Using motion gesture in gallery

### ■ Viewing previous/next image


**1** While an image in gallery is being displayed, tap the left or right side of the terminal

- The left or right image is displayed.

## Changing Screen Orientation

The terminal screen automatically rotates to horizontal (landscape) or vertical (portrait) views, depending on the direction in which it is turned.

### Note


- Screen orientation may not change in some applications.
- You can disable screen rotation by tapping  ► "Settings" ► "Display" on the Home screen, and unmarking the "Auto-rotate screen" checkbox on the "Display settings" screen.

## Initial Settings

### First-time Settings

When the power is first turned ON, you need to set the language and date for the terminal. Once you set those settings, there is no need to set them the next time the power is turned ON. You can also change these settings later.

- Procedures differ depending on the connection with network and settings. Here, an explanation is given for the docomo Palette UI.

- 1** Press and hold the power key for over 1 second
- 2** Tap  to cancel the screen lock
- 3** On the "あなたのL-05Dです。ガイドに沿って設定をはじめましょう" screen, tap "続ける"
- 4** "English (United States)" / "日本語" on the "言語の選択" screen
- 5** Set each item on the "Set date & time" screen and tap "Next"
- 6** "Mobile network or Wi-Fi" / "Wi-Fi only" on the "Set internet connection" screen

- 7** Set each item on the "Wi-Fi settings" screen and tap "Next"
- 8** Tap "Next" on the "Add a Google account" screen and set by following screen instructions
  - If you tap "Skip", you can skip the operation and make the settings later.
- 9** "OK" on the "Software Update" screen
- 10** "Next" on the "docomo service initial settings" screen
- 11** "Install" / "Not install" on the "Install all apps" screen ► "Next"
- 12** "Set" / "Not set" on the "Use Osaifu-Keitai" screen ► "Next"
- 13** Tap "Set" on the "docomo apps password settings" screen, input a docomo apps password, and then tap "OK"
- 14** "Location providing ON" / "Location providing OFF" / "Unknown blocking" on the "Location providing setting" screen ► "Next"
- 15** "OK" on the "Complete setting" screen

### Note

- A data connection (LTE/3G/GPRS) is required to set online services. For details on enabling data connection, refer to "Wireless & Networks" (P101).

## Configuring Wi-Fi Settings



The terminal connects to the Internet via access points for Wi-Fi networks or public wireless LAN services. To connect, you must configure the access point connection settings on the terminal.

- Reception interference caused by Bluetooth devices
  - As the terminal's wireless LAN devices and Bluetooth device use the same frequency (2.4 GHz), reception interference may occur or the communications speed may lower. Also, you may hear noise or have a connection problem. In these cases, do the following:
    - Keep the wireless LAN device over 10 m away from the Bluetooth device.
    - Within 10 m, turn off either the wireless LAN device or the Bluetooth device.


### Note

- Packet communication can be connected, even when Wi-Fi function is ON. However, while Wi-Fi is available, Wi-Fi is prioritized. When the Wi-Fi network is disconnected, the terminal automatically connects to the LTE/3G/GPRS network. Packet communication charges apply if you use it with LTE/3G/GPRS connected.
- You can reduce battery consumption by turning OFF Wi-Fi when you are not using it.



### Wi-Fi network status



When the terminal is connected to a Wi-Fi network,  appears in the status bar. An open network with no security protection is detected when Wi-Fi network notification is set to ON,  always appears in the status bar.





## Connecting to a Wi-Fi network

- 1 From the Home screen, tap  ► "Settings"  
► "Wireless & networks"
  - The "Wireless & network settings" screen appears.
- 2 Place a check mark on "Wi-Fi"
- 3 "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 4 Tap the Wi-Fi network that you want to connect to
  - If you try to connect to a protected Wi-Fi network, you will be prompted to enter the security key for that Wi-Fi network. Tap the "Password" box, enter the network password and tap "Connect".
  - Usually, when you enter a password, the last character entered is displayed and as many " • " as the number of characters appear instead of previously entered characters. All characters can be displayed when you place a check mark on "Show password".



### Note

- There are two types of available networks - open networks and protected networks. The network type is indicated by an icon to the network name.  represents an open network and  represents a protected network.
- The icon also indicates the signal strength.


Strong signal	
Weak signal	

- To search Wi-Fi network again, from the Home screen, tap  ► "Settings" ► "Wireless & networks" ► "Wi-Fi settings", and then tap  ► "Scan".
- Network name does not appear depending on the settings for the access point even if the network is connectable. If this happens, you can still connect to the network. Refer to "Adding a Wi-Fi network" (P50).
- When establishing a Wi-Fi network connection, the required information is generally obtained from a DHCP server automatically. However, it is possible to specify these items separately.
- To check the Wi-Fi MAC address and IP address, from the Home screen, tap  ► "Settings" ► "Wireless & networks" ► "Wi-Fi settings", and then tap  ► "Advanced".


## Connecting to a Wi-Fi network by specifying a static IP address

- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2  ► "Advanced"
- 3 Place a check mark on "Use static IP"
- 4 Tap in the order of "IP address", "Gateway", "Netmask", "DNS 1", and "DNS 2" to set
  - A menu appears for each item. Set the appropriate value for each item. Make sure to enter value on "IP address", "Gateway", "Netmask", and "DNS 1".


## Notifying when Wi-Fi network with no security protection is detected

- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2 Place a check mark on "Wi-Fi"
- 3 Place a check mark on "Network notification"
  - You will be automatically notified when an open network with no security protection is detected.


## Adding a Wi-Fi network

- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2 Place a check mark on "Wi-Fi"
- 3 "Add Wi-Fi network"
  - The "Add Wi-Fi network" menu appears.
- 4 Enter the network SSID in the "Network SSID" box
- 5 "Security"
  - "Security" menu appears. Select the appropriate type from "Open", "WEP", "WPA/WPA2 PSK", and "802.1x EAP".
  - The setting method differs depending on the security settings.
- 6 "Save"
  - The Wi-Fi network is added.

## Changing the Wi-Fi network password

- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2 Touch the Wi-Fi network name for over 1 second
  - A menu appears.
- 3 "Modify network"
  - The network settings are displayed. Tap the "Password" box and enter the new password.



## Disconnecting from a Wi-Fi network

- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2 Touch the name of Wi-Fi network that you want to disconnect from for over 1 second
  - A menu appears.
- 3 "Forget network"
  - You are disconnected from the Wi-Fi network.



## Setting Wi-Fi to sleep mode

Set Wi-Fi to sleep mode and specify the timing of switching the terminal to data communications.


- 1 From the Home screen,  ► "Settings"  
► "Wireless & networks" ► "Wi-Fi settings"
  - The "Wi-Fi settings" screen appears.
- 2  ► "Advanced"
- 3 "Wi-Fi sleep policy"
  - "Wi-Fi sleep policy" menu appears. Choose from "When screen turns off", "Never when plugged in" and "Never".

## Setting Online Service Accounts

You can update your status on Google and other online services once you have set up your online service account on the terminal. You can also configure the terminal to automatically sync updates from the online service.

You can also delete unnecessary accounts.


### Adding an online service account

- 1 From the Home screen,  ► "Settings"  
► "Accounts & sync"
  - The "Accounts & sync settings" screen appears.
- 2 "Add account"
  - The "Add an account" screen appears.
- 3 Tap the online service that you want to set an account
  - Follow the screen instructions and enter your login details.
  - When you have finished adding the account, the added online service appears in the "Manage accounts" group.


### Note

- If you mark the "Background data" checkbox, all installed applications on the terminal will automatically communicate with their respective services. If you mark the "Auto-sync" checkbox, the applications will also automatically synchronize data with their respective services. These operations may incur packet communication charges. Marking these checkboxes also runs down the battery.


### Manually synchronizing online service data

- 1** From the Home screen, tap  ► "Settings" ► "Accounts & sync"
  - The "Accounts & sync settings" screen appears.
- 2** Tap the account that you want to synchronize with
  - A list of online service's synchronized data appears.
  - The data with a check mark is synchronized.
- 3** Place a check mark on synchronized data
  - The data with a check mark is synchronized.

### Deleting an online service account

- 1** From the Home screen, tap  ► "Settings" ► "Accounts & sync"
  - The "Accounts & sync settings" screen appears.
- 2** Tap the account that you want to delete
  - The "Data & synchronization" screen appears.
- 3** "Remove account"
  - The "Remove account" screen appears.
- 4** "Remove account"
  - The selected account is deleted.

### Note















- The Google account that you set for the first time cannot be deleted with the operation above. To delete it, initialization of the terminal is required from the Home screen, tap  ► "Settings" ► "Privacy" ► "Factory data reset".
- docomo account cannot be deleted.














## Screen Display/Icons

### Status Bar






The status bar is displayed at the top of the screen. The terminal status and notifications are displayed in the status bar. Notification icons are displayed on the left side, and the terminal status icons are displayed on the right side.











### Main status icons

	Signal strength
	Out of service area
	Bluetooth ON
	Connected to Bluetooth device
	When you are roaming overseas
	GPRS available
	3G available
	LTE available
	FOMA high speed/HSDPA network available
	Communicating by GPRS
	Communicating by 3G
	Communicating by LTE
	Communicating by FOMA high speed/HSDPA network
	Battery level

	The battery needs to be charged
	The battery is charging
	GPS enabled
	GPS is positioning
	Airplane mode activated
	UIM locked or UIM not inserted
	Phone microphone is muted
	Silent mode is set (no vibration)
	Silent mode is set (vibration)
	Alarm is set
	Connected to Wi-Fi
	Synchronizing data
	Osai-fu-Keitai lock activated

## Main notification icons

	New Gmail
	New SMS message
	Problem with an SMS message
	New Google Talk message
	Making a call or during a call
	Call on hold
	Missed call
	New voicemail message
	Upcoming calendar event
	Music is playing
	Discovered Open Network (Wi-Fi)
	UIM is not inserted
	USB is connected
	microSD card is not inserted
	No space in the microSD card

	Uploading data
	Downloading data/Data download completed
	Problem with login or synchronization
	Update of installed application available
	Viewing 1Seg
	More notifications
	Connected to a VPN/Not connected to a VPN
	USB debug mode is connected
	USB tethering available
	Wi-Fi tethering available

## Notification Panel

Notification icons are displayed in the Notification panel. You can open notifications, such as messages, reminders, or event notifications, directly from the Notification panel.

### Opening the Notification panel

- 1 Drag or swipe the status bar downwards
  - The Notification panel appears. Icons are displayed at the top of the Notification panel. Icons are blue when they are on, and gray when they are off.

- 1** Silent mode  
Switch between on and off. Touch for over 1 second to display the "Sound settings" screen.
- 2** Wi-Fi  
Switch between on and off. Touch for over 1 second to display the "Wi-Fi settings" screen.
- 3** Bluetooth  
Switch between on and off. Touch for over 1 second to display the "Bluetooth settings" screen.
- 4** GPS  
Switch between on and off. Touch for over 1 second to display the "Location & security settings" screen.
- 5** Mobile network settings  
When Wi-Fi is not available, set if access to mobile network. Touch for over 1 second to display "Mobile network settings" screen.
- 6** Clear  
Delete notification information and icons.
- 7** Notification information  
Display details of notification information.

## Viewing notification details

- 1** Tap the notification message on the Notification panel
  - The notification details are displayed in the appropriate application.

## Clearing notification informations

- 1** Tap "Clear" on the Notification panel


### Note

- Some notifications cannot be cleared, depending on their content.

## Closing the Notification panel

- 1** Drag or swipe the bottom of the Notification panel upwards

### Note

- You can also close the Notification panel by tapping .

## Character Entry

The terminal has an on-screen keyboard that is displayed in the touch screen for character entry.

### Character Entry Using the On-screen Keyboard

If you tap a text box on the screen, the on-screen keyboard appears in the touch panel. The terminal provides two types of on-screen keyboards: an on-screen 10-key keyboard and an on-screen QWERTY keyboard.

Tap key icon to switch the entry operation such as character mode change.

#### ■ On-screen 10-key keyboard

Use this for entering Japanese in "Kana character input".


#### ■ On-screen QWERTY keyboard

Use this for entering Japanese in "Roman letter input".









- 1 Reverse order key/Undo key  
Displays the previous character (reverse sequence). When "Undo" is displayed, this undoes the last operation.
- 2 Left cursor key  
The highlight moves to the left. Touch this for over 1 second to move it continuously. It can also narrow the conversion range.
- 3 Symbol key  
Displays a list of pictograms, symbols and emoticons.
- 4 Switch character mode key/Setting key  
Switch the character mode. Touch for over 1 second to display "iWnn IME Menu".

- 5 Deletion key  
Deletes the character to the left of the cursor. Touch this for over 1 second to delete the characters continuously.
- 6 Right cursor key  
The highlight moves to the right. Touch this for over 1 second to move it continuously. It can also widen the conversion range. Also, if you tap this icon when the highlight is at the right end of an unconfirmed character string, the number of characters applicable to predictive conversion increases.
- 7 Space key/Conversion key  
Enter a space. Execute consecutive segment conversions.
- 8 Execution key/Enter key  
Confirms the entered characters or converted characters. If the entered characters or converted characters have already been confirmed, this executes the function of the text box in which the characters were entered.
- 9 Shift key  
Switch between upper case letter and lower case letter.  
Tap once: Only the first letter is capitalized  
Tap twice: All letters are capitalized  
Tap three times: Lowercase


### Note

- The key display varies depending on the entry screen or character mode.
- For information on switching the type of on-screen keyboard, refer to "Switching the keyboard" (P58).
- When you no longer need the keyboard, you can close it by tapping . To display it again, tap the text box on the screen.

There are 8 character input modes. The current mode is indicated by the following icons in the status bar.

	Hiragana and Kanji input		Half-width alphabet input
	Full-width Katakana input		Full-width number input
	Half-width Katakana input		Half-width number input
	Full-width alphabet input		Voice Input

### Switching the keyboard


- 1 On the on-screen keyboard, touch  for over 1 second
  - "iWnn IME Menu" appears.




## 2 "10-key ⇔ QWERTY"

- The keyboard is switched.
- When the input mode is changed, the keyboard switches automatically. Switch back using "10-key ⇔ QWERTY".

### Switching the character mode


Each time you tap  on a character entry screen, the character mode switches in the order of "Hiragana-Kanji" ▶ "Half-width Alphabet" ▶ "Half-width Numeric". If you check "Voice Input" on "Common Keyboard Settings", voice input is enabled.

You can also switch the input mode by touching  for over 1 second and then tapping "Input Mode" on the "iWnn IME Menu" that appears.

#### Note

- In some character entry screens, certain character modes may not be available or selectable.


### Entering symbols/emoticons

Tap  in a character entry screen to switch to symbol/emoticon input mode, and display the available symbols and emoticons on the display.

Tap "Symbol" and "Emoticon" to display respectively the available symbols and emoticons. Tap one of the available symbols or emoticons to enter it.

Tap "文字" to return to the on-screen keyboard that was displayed before the symbol or emoticon was entered.



### Changing character entry settings

Tap  for over 1 second on a character entry screen to display "iWnn IME Menu". Tap "Change Settings" to change the character entry settings.

Common Keyboard Settings	
Sound on Key Press	Mark this checkbox to play a brief sound on each key press.
Vibrate on Key Press	Mark this checkbox to make the terminal vibrate on each key press.
Key Preview	Mark this checkbox to display an enlarged popup of the entered key.
Auto Capitalization	Mark this checkbox to automatically capitalize the first letter of the first word at the beginning of a sentence.

Keyboard Type	This allows you to set the type of keyboard to use on each screen view (horizontal/vertical) or for each input mode.
Voice Input	Mark the checkbox to enable voice input, and add it to the character entry modes.
10-key Keyboard	
Flick Input	Mark this checkbox to change the input method on the on-screen 10-key keyboard to flick input. Unmark this checkbox to change it back to toggle input.
Flick Sensitivity	If you tap this when the "Flick Input" checkbox is marked, the "Flick Sensitivity(Low↔High)" menu appears, allowing you to set the flick sensitivity using a slide bar.
Toggle Input	If you mark this checkbox when the "Flick Input" checkbox is marked, toggle input is enabled as well as flick input.
Auto Cursor Movement	Specify the speed for auto cursor movement.

Conversion	
Input Word Learning	If you mark this checkbox, the phrase confirmed by the conversion process is learned by iWnn IME.
Word Prediction	Mark this checkbox to display the predictive conversion candidates.
Typing Error Correction	Mark this checkbox to display the candidates for corrections for input errors.
Wildcard Prediction	Mark this checkbox to display conversion candidates based on the number of characters in the word or phrase.
Lines of Candidate Area	This allows you to set the number of lines of conversion candidates displayed in horizontal (landscape) and vertical (portrait) screens.
Font size of candidate	This allows you to set the font size for characters displayed in the conversion candidate window.
External Application	
Mushroom	This allows you to set whether to use the Mushroom application.

Dictionary	
Japanese User Dictionary	Tap this to display the "Word List in Japanese User Dictionary" screen. Tap  to register, edit or delete words, or to delete the entire Japanese User Dictionary.
English User Dictionary	Tap this to display the "Word List in English User Dictionary" screen. Tap  to register, edit or delete words, or to delete the entire English User Dictionary.
Clear Learning Dictionary	Delete all contents of the learning dictionary.
About IME	
iWnn IME	Displays information about iWnn IME, such as its version.

# docomo Palette UI

The docomo Palette UI is a home application that allows you to quickly find and operate what you want such as access to the Web and applications.

## Viewing the Home Screen

You can customize the Home screen by adding or moving shortcuts and widgets, and by changing the wallpaper.

The Home screen has up to 12 screens each on the left and right for adding shortcuts and widgets.

## Home Screen Management

### What You can Add to the Home Screen

You can customize the Home screen.

- 1 Touch the Home screen for over 1 second
  - The "Add to home screen" list screen appears.

Shortcut	You can create shortcuts.
Widget	You can layout Widgets.
Folder	You can create folders.
Kisekae	You can select the background and icon design.
Wallpaper	You can choose the wallpaper for the Home screen.
Group	You can select from groups.

- 2 Tap the item you want to add/set.
  - It is added/set to the Home screen.


### Moving Shortcuts, etc.

- 1 From the Home screen, touch the icon you want to move for over 1 second
- 2 Drag the icon and release your finger
  - The icon is moved.

#### Note

- You can also drag the icon to one of the Home screen's extended screens to the left or right.

### Deleting Shortcuts, etc. from the Home Screen

- 1 From the Home screen, touch a shortcut icon or widget for over 1 second
- 2 Drag it to  and release your finger
  - The icon is deleted from the Home screen.

#### Note

- It is also possible to delete by tapping "Delete" displayed in the balloon of Step 1.

## Uninstalling Applications and Widgets

- 1 From the Home screen, "Applications"
- 2 Touch the application you want to delete for over 1 second ▶ "Uninstall"
- 3 "OK"
  - The application is deleted.

### Note


- Applications installed in the terminal when purchasing cannot be uninstalled.

## Changing Folder Names

- 1 From the Home screen, tap a folder you want to change name
  - The folder window opens.
- 2 Touch the title bar for over 1 second
  - The "Edit name" menu appears.
- 3 Enter a new name of the folder and tap "OK"
  - The name of the folder is changed.

## Changing Kisekae

Change the wallpaper and icon of the Home screen to change the image.


- 1 Touch the Home screen for over 1 second
  - The "Add to home screen" list screen appears.
- 2 Tap "Kisekae", select a design, and tap "Set"
  - It is possible to select and set designs that you like from a website.
  - It is also possible to set from the Home screen by  ▶ "Kisekae/Wallp" ▶ "Kisekae".

## Changing Wallpaper

- 1 Touch the Home screen for over 1 second
- 2 "Wallpaper"
- 3 "Gallery" / "Live wallpapers" / "Wallpaper gallery"
  - If you have tapped "Gallery", tap an image that you want to use as wallpaper. Drag the square displayed on the screen to select the section that you want to use as wallpaper, and then tap "Save".
  - Live wallpaper list appears when tapping "Live wallpapers". Tap to select one of the live wallpaper, then tap "Set wallpaper". Depending on the type of wallpaper, you can set the live wallpaper settings by tapping "Settings...".


## Adding Home Screens

You can add Home screens.



- 1 From the Home screen,  ► "Home screens"
  - The "Home screens" screen appears.
  - You can create up to 12 Home screens.
- 2 Tap one of the thumbnails with a "+" mark
  - The "+" appears for screens that can be added.

## Sorting Home Screens

You can sort the scroll order for Home screens.

- 1 From the Home screen,  ► "Home screens"
  - The "Home screens" screen appears.
- 2 Touch the thumbnail for over 1 second, and drag it to the location where you want to move it

## Deleting Home Screens

- 1 From the Home screen, tap  ► "Home screens"
  - The "Home screens" screen appears.
- 2 Touch the thumbnail for over 1 second, drag it over to  and release your finger

### Note

- It is also possible to delete by tapping "Delete" displayed in the balloon of Step 2.





## Viewing the Application Screen






- 1 From the Home screen, "Applications" Groups of applications are displayed as an icon list.
















## Application List






Some applications need to be applied separately (paid).







DOCOMO Services		
	dmenu	This is a shortcut application for "dmenu" to easily find fun and convenient contents for smart phones including contents used in i-mode.
	dmarket	This is the application for starting dmarket. From dmarket, you can purchase contents such as music, videos, and books. Also, applications from the Android market are introduced.
	iチャンネル	This is the application for using i-Channel.
	Machi-chara	This is the application for displaying characters on the terminal screen. Characters move on the Widget, and notifies information such as incoming calls and email.






	docomo backup	This is the application for backing up and restoring data such as for the phonebook.
Basic Functions		
	Phone	Make or receive a call. (P78)
	Phonebook	Register Phonebook, make a call or send a message from the registered phonebook. (P85)
	PhoneBookCopy	This is the application for moving and copying phonebook data using external recording media such as a microSD card. (P89)
	声の宅配便	This is the application for easily using "Koe-no-Takuhaibin" on a smart phone. You can easily record and play voice messages. (P90)

	spモードメール	This allows you to send and receive emails using a docomo email address (@docomo.ne.jp). It allows you to use pictograms and Deco-mail, and also supports auto receive. (P122)
	Gmail	Send and receive Google account emails. (P124)
	Area Mail	This is the application for receiving and confirming early warning "Area Mail". (P125)
	Messaging	Available to send and receive SMS. (P122)
	Talk	It allows you to chat (text chatting) with friends who have Google accounts. (P129)
	Anshin Scan	This application is for protecting the terminal from viruses. It can detect viruses in installed applications and in the microSD card.





	災害用キット	This application is for registering and confirming messages on the disaster message board.
	Browser	Browse web page. (P126)
	Google Search	Search for Phonebook, application, web page, etc. inside the terminal.
	Voice Search	Search by voice.
	Downloads	Confirm, display or play the downloaded data. (P191)
	Market	Access applications and games directly via Android market to download and install them to the terminal. (P156)
	Instruction Manual (Japanese)	Manual of this terminal. Activate the function you want to use from the description.









Entertainment		
	Hulu	This is the application for watching popular Hollywood movies and overseas dramas at a fixed rate.
	Qik Video	This service is for enjoying integrated video communication for social video sharing/video chat/video mail/video archives using one application.
	JOOKEY	This is for viewing information variety programs provided by celebrities and experts, mainly Yoshimoto entertainers.
	Media Player	This is the application for playing music and videos. (P148)
	Music	You can play songs from the Songs, Albums, Artists, and Playlists folders.







	Gガイド 番組表	With this application you can view program guides for terrestrial digital, BS digital, and other broadcast services. You can search for a program by keyword, genre, etc., and schedule watching 1Seg programs.
	TV	You can watch TV (1Seg). (P169)
	YouTube	Play YouTube videos, and upload the videos you have shot to YouTube. (P187)
	ビデオ マーケット	You can enjoy various high-quality video programs.
	ジークラウド	This application is for enjoying games using the cloud provided by NHN Japan.
	SF IV HD Trailer	This is the application for downloading STREET FIGHTER IV HD.




	Book Store MyShelf	This is the application for viewing e-books that were purchased through the dmarket BOOK Store.
	BOOKストア 2Dfacto	This is an electronic book store where you can purchase and browse a variety of books such as literary books, popular comics, and famous business books.
	Twonky Special	This is the application for connecting terminals with home electrical appliances. Wirelessly play videos, photos and music stored in the terminal or on the Internet via TV or audio.
	Twitter	This is the official Twitter client application. You can publish short messages on site to communicate with others.
	Gallery	A software to view still images (photos) and videos. (P146)

Tools		
	Camera	A software for shooting still images (photos) or videos. (P141)
	Memo	Memo is available to use.
	Schedule	Memos can be registered and schedule management is possible.
	Calendar	View calendar and manage schedule. (P183)
	地図アプリ	Supplies Maps, Shop Search, Navigation, Transfer and Visited places functions to support you when you are outdoors.
	ご当地ガイド	This is for introducing information for recommended locations throughout Japan including pictures and local foods to help support walking tours.
	Maps	View current location, search places or routes. (P160)

	Navigation	Voice guidance is available to show the route to destination. (P168)
	Places	Search for the nearest restaurant, cafe, Japanese-style bar, travel spot, ATM or gas station. (P169)
	Latitude	Confirm your friend's location and share status message. It also enables you to send emails and search for a route to your friend's location. (P167)
	Evernote	Save website content and information such as the shot images, the memos of ideas, etc. to a server to search or view when necessary. The information can also be saved or viewed from a PC or other devices in addition to this terminal.

	Name card creator	This is the application for creating original name cards that can be displayed to your My profile box in the "Phonebook" application.
	Calculator	Four arithmetic operations are available. (P186)
	Alarm Clock	You can use the stopwatch, and set the timer, world clock, and alarms. (P181)
	Dictionary	Look for a word and register the word to Wordbook. (P189)
	Polaris Office	Read and edit various document formats. (P187)
	Application Manager	This allows you to manage application. (P191)
	Link Backup	Backup call log, calendar (Schedule), etc. to microSD card. (P192)
	SmartWorld	Enables to enjoy various applications, dramas and variety shows. (P186)

Osaifu/Shopping		
	Osaifu-Keitai	You can set Osaifu-Keitai. (P177)
	iD 設定アプリ	This is the application for setting e-money iD for using. (P188)
	ToruCa	Acquire, display, search and update ToruCa. (P180)
Settings		
	Settings	Set various settings. (P100)
	ecoモード	This is the application for setting "eco Mode" for reducing battery consumption by adjusting various settings such as screen brightness.
	AUTO-GPS	This application is for using auto GPS compatible services that notify weather information, local information such as shops, and tourist information according to your current location.

	docomo location information	This is the application for providing location information by imadoco search, imadoco kantan search, Keitai-Osagashi Service, and emergency information location notifications. You can also change various settings and access the setting site/ service site.
	ドコモ海外利用	This is the application for supporting overseas packet communication. You can easily set data roaming and carrier for using overseas Pake-hodai.
	Home Switcher	This is the application for switching the home application.

### Note

- This is a list of the applications that have been installed in this terminal at the time of purchase.
- If the software is updated, application content and icon positions may change.
- The names of some applications may not be fully displayed below their respective icons.

## Manage Applications

### Adding Shortcuts to the Home Screen

- 1 From the Home screen, "Applications"
- 2 Touch the application icon for which you want to create a shortcut for over 1 second, and tap "Add"  
The shortcut icon is added to the Home screen.

### Uninstalling an Application

- 1 From the Home screen, "Applications"
- 2 Touch the application icon you want to uninstall for over 1 second, and tap "Uninstall"
- 3 The confirmation screen appears, then tap "OK"


## Moving Applications

- 1 From the Home screen, "Applications"
- 2 Touch the application you want to move for over 1 second
- 3 Drag the application and release your finger
  - The application is moved.

## Group Management

Manage groups on the application screen and sort icons.

### Adding Groups

- 1 From the Home screen, "Applications"
- 2  "Add group"
- 3 Enter a group name and tap "OK"
  - The group is added on the application screen.

### Sorting Groups

- 1 From the Home screen, "Applications"
- 2 Touch the group name for over 1 second, and drag it
  - The group location is moved.



## Editing Group Names

- 1 From the Home screen, "Applications"
- 2 Touch the group name for over 1 second, and tap "Edit name"
- 3 Enter a new group name and tap "OK"
  - The group name is changed.

## Changing Group Colors

- 1 From the Home screen, "Applications"
- 2 Touch the group name for over 1 second, and tap "Edit label"
  - Select a color and tap.


## Adding Groups to the Home Screen

- 1 From the Home screen, "Applications"
- 2 Touch the group name for over 1 second, and tap "Add"
  - The group shortcut icon is added to the Home screen.

## Deleting Groups


- 1 From the Home screen, "Applications"
- 2 Touch the group name for over 1 second, and tap "Delete"
- 3 "OK"
  - The group is deleted.

## Searching Applications

- 1 From the Home screen, "Applications"
- 2  ▶ "Search"
  - The Search widget starts. Enter a keyword or use Voice Input to search.


## Switching Application Screen Display

Select the display for the Application screen as Tile or List.


- 1 From the Home screen, "Applications"
- 2  ▶ "List format" / "Tile format"

## Home Application Information


You can view the operation guide for the docomo Palette UI.

- 1 From the Home screen,  ▶ "More" ▶ "Help"
  - An explanation for the docomo palette UI operation is displayed.

## Version Information

- 1 From the Home screen,  ▶ "More" ▶ "Application info"
  - The application name, provider, and version are displayed.

## Home Application Settings

1 From the Home screen,  "More" ►  
"Home settings"

- "Home settings" screen appears.

Personal area	Personal area is displayed.
Wallpaper loop	The wallpaper display is looped.
Sync function	Auto communication is executed when personal area information is updated.
International roaming	Auto communication is executed during international roaming.

# Calling / Network Services

## Making/Receiving Calls


### Making a Call


You can use the terminal to make international calls and emergency calls, as well as standard calls. You can also enter a pause when using phone services, such as reserving tickets or checking your bank balance.

#### Making a call

**1** From the Home screen, "Phone" ► "Dial"

- The "Dial" tab appears.



**2** Enter the phone number ► Tap 

- If you enter a wrong number, tap  to delete the number.

- 1** Tab  
"Recent calls" tab (P83)  
"Favorites" tab (P89)  
"Dial" tab: Dial screen appears.  
"Phonebook" tab (P85)
- 2** Phone number entry box  
The input phone number is displayed.
- 3** Dial key

- 4 Call button
- 5 "Add to phonebook" button  
The input phone number is registered to the Phonebook.
- 6 Edit button  
The input text is deleted.
- 7 "Koe-no-Takuhaibin" button  
The Koe-no-Takuhaibin is sent to the input phone number. (P90)
- 8 "SMS" button  
Create and send SMS. (P122)

### Entering a pause

- 1 From the Home screen, "Phone" ► "Dial"
  - The "Dial" tab appears.
- 2 Enter the phone number and tap  ► "Add 2-sec pause"
  - A comma "," is displayed after the phone number.
  - It is also possible to send a push signal manually by touching "\*" for over 1 second. After ";" is entered next to the phone number, go to Step 3.
- 3 Enter the menu number of the service that you are using ► Tap 

### Ending a call

- 1 During a call, "End"

### Emergency call

Emergency call	Phone number
Police	110
Fire department or ambulance service	119
Japan Coast Guard	118

#### Note

- When you are making an emergency call (110, 119, and 118) from your terminal, be sure to notify that you are calling from a mobile phone and give your mobile phone number and present location clearly, as the police/fire department may call you back for confirmation. During an emergency call, be sure to stay where you are so that your call will not be interrupted. After making an emergency call, do not turn off your mobile phone immediately. Keep it on for about 10 minutes so that it can receive an incoming call.

- Depending on the location from which you make an emergency call, connection may be made to the fire department or the police of another jurisdiction.
- In Japan, the 110, 119, and 118 emergency numbers cannot be dialed when UIM is not inserted, from the PIN code input screen or from the PIN unblocking key input screen. For details on PIN code, refer to "Security Code and UIM Protection" (P111).

### Making an international call (WORLD CALL)

WORLD CALL is an international call service that enables you to make a call in Japan via the DOCOMO terminals.

Customers who have subscribed to the FOMA service would also have automatically subscribed to "WORLD CALL" at the same time. (However, you can decline to use "WORLD CALL" when subscribing to the FOMA services.)

- Available to make a call over 240 countries or areas. You can make an overseas call to a fixed line telephone or a mobile phone.
- For information about the possible countries and carriers at overseas, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO "International Services website".
- The fee of WORLD CALL will be charged together with FOMA service communication fee every month.

- Subscription fee and monthly fee will not be charged.
- Contact "General Inquiries" on the back of this manual for detailed information about WORLD CALL.
- When using an international call service company other than DOCOMO, consult with the international call service company you use.
- Depending on the carrier, the caller's number may not be notified or displayed correctly. In that case, making a call from call log is not available.


### Calls to fixed-line telephone

**1** From the Home screen, "Phone" ► "Dial"

- The "Dial" tab appears.

**2** Enter "010" ► Country code ► Area code ► Recipient's phone number, and tap 

## Calls to mobile phone

- 1 From the Home screen, "Phone" ► "Dial"
  - The "Dial" tab appears.
- 2 Enter "010" ► Country code ► Recipient's mobile phone number, and tap 

### Note

- If a recipient's mobile phone number or an area code begins with "0", omit "0". However, "0" may be required when calling some countries or areas, such as Italy.
- "+" (touch "0" for over 1 second to input "+") or "009130-010" can also be used instead of "010".
- For details on WORLD CALL, refer to DOCOMO "International Services website".

## Receiving a Call

The terminal plays a ringtone when there is an incoming call. In Silent mode, the ringtone does not sound. If the terminal has been set to vibrate, it vibrates when there is an incoming call.

## Receiving a call

- 1 When an incoming call arrives, tap "Activate" ► "Accept"
  - You can talk to the caller.

### Note

- If the caller has been saved in Contacts (Phonebook), the caller's name and phone number are displayed. If the caller is not saved in Contacts (Phonebook), only the phone number is displayed.

## Declining a call

- 1 When an incoming call arrives, tap "Activate" ► "Reject"
  - The incoming call is declined.

## Muting ringtone

- 1 Press the Volume key (upper)/Volume key (lower) while an incoming call ringing
  - The ringtone is muted.

## Operations during a Call

During a call, you can adjust the volume, turn the speaker ON/OFF, mute the microphone, and put the call on hold, depending on the usage conditions.

### Adjusting Call Volume

During a call, you can adjust the reception volume.

- 1 Press Volume key (upper)/Volume key (lower)
  - The call volume changes accordingly.

### Using Call Options

During a call, you can put the caller onto speaker or temporarily mute the microphone.

#### Turning the speaker ON/OFF

- 1 During a call, "Speaker"
  - You can hear the caller's voice through the speaker.
- 2 With the speaker ON, "Speaker"
  - You can no longer hear the caller's voice through the speaker.

#### Note

- Do not hold the terminal against your ear with the speaker ON.
- Speak into the terminal from a distance of no more than 50 cm. If you find it difficult to hear what is being said, turn off the speaker.

#### Muting the microphone

- 1 During a call, "Mute"
  - The caller can no longer hear what you are saying.
- 2 With the microphone OFF, "Mute"
  - The caller can hear what you are saying again.

#### Putting the call on hold

- 1 During a call, "Hold"
  - The call is put on hold.
- 2 In the hold state, "Unhold"
  - Hold is canceled, and you can resume the call.





#### Note




- To use the function for putting a call on hold, a subscription to Call Waiting Service (P95) is required.



## Call Log




This automatically records a history of your incoming and outgoing calls. You can also use the call log to call a phone number or add it to Phonebook.

- 1 The names of the recipient and caller are displayed.
- 2 A call is made.
- 3 Log icons are displayed.
  -  : Dialed calls log
  -  : Missed calls log
  -  : Received calls log
  -  : International call log

- 4 Call icon
  -  : Call icon without caller ID notification
  -  : Call icon other than without caller ID notification
- 5 Logs with the same person are displayed together as . The number in parentheses shows the number of logs.


## Calling to Answer a Missed Call

When you have missed calls, a missed call notification appears in the status bar.

- 1 If you see  in the status bar, drag or swipe the status bar downwards
  - The missed call notification appears in the Notification panel. The missed call notification displays the caller's phone number or the caller's name that is saved in Phonebook, and the time or date of the missed call.
- 2 Tap the missed call notification
  - The "Incoming history" tab appears.
  - For the missed call log,  is displayed.
- 3 Tap  on the right of the missed call log
  - The call is made.

## Calling a Number from the Call Log

You can make calls to the phone numbers stored in the call log.

- 1 From the Home screen, "Phone" ► "Recent calls" tab
  - "Incoming history" and "Outgoing history" appear.
- 2 Tap  on the right of the other party's name or phone number
  - The call is made.

### Note

- You can make a call by tapping the name or phone number on the "Recent calls" tab and then "Call".
- You can also make a call by touching the name or phone number on the "Recent calls" tab for over 1 second and then tapping "Call xxx-xxx-xxxxx" in the menu that appears.

## Registering Phone Numbers from the Call Log to the Phonebook

You can register unregistered items from the call log to the Phonebook.

- 1 On the "Recent calls" tab, tap a phone number
- 2 "Add to phonebook"
  - The "Register/Update phonebook" screen appears.
- 3 "Register new"
  - When multiple accounts have been registered, select the account for which you want to create a phonebook.
- 4 Enter information, and tap "Save"
  - It is registered as a Phonebook.

### Note

- It is also possible to register to the Phonebook by touching the phone number that you want to register for over 1 second on the "Recent calls" tab and tapping "Add to phonebook" ► "Register new".


## Deleting the Call Log

The call log is automatically added. However, you can delete a call log or all call logs.

### Deleting a desired call log

- 1 On the "Recent calls" tab, touch a phone number for over 1 second
  - A menu appears.
- 2 "Remove from call log" ► "OK"
  - The call log is deleted.

### Deleting the entire call log

- 1 On the "Recent calls" tab, "Incoming history" / "Outgoing history" ►  ► "Delete all" ► "OK"
  - The entire "Incoming history"/"Outgoing history" call log is deleted.

## Phonebook

In Phonebook, you can enter information about your personal contacts, such as their phone numbers, email addresses and web service accounts.

## Displaying the Phonebook

You can view all the information that is saved in Phonebook.

- 1 From the Home screen, "Phone" ► "Phonebook" tab
  - The Phonebook appears.

- 1 The Phonebook (profile) is displayed.
- 2 Call log is displayed. You can also confirm the sent/received details for sp-mode mail and SMS.
- 3 Your profile (My profile) is displayed.
- 4 Tap the icon that is displayed by selecting the image to make a call, create an email, or use various services on the internet.
- 5 Phonebook belonging to the selected group are displayed.
- 6 A new phonebook is registered.
- 7 Enter a keyword and search Phonebook.

#### Note

- When you open Phonebook for the first time, descriptions for adding Phonebook are displayed. Tap  ► "Others" ► "Import/Export" to import or export contacts from your UIM or microSD card.

## Registering Phonebook

You can register a new phonebook.

- 1 On the "Phonebook" tab, "Register"
  - When multiple accounts are registered, select the account for which you want to create a phonebook.
- 2 Enter information, and tap "Save"
  - The entered information is added to Phonebook.

## Editing Phonebook

You can edit a phonebook that has already been registered.

- 1 On the "Phonebook" tab, tap a phonebook that you want to edit
  - The Profile screen appears.
- 2 "Edit"
  - The "Edit profile" screen containing previously entered information appears.
- 3 Add, delete or edit the information, and tap "Save"
  - The Phonebook is updated.




 
## Searching the Phonebook





You can search for a phonebook on the "Phonebook" tab by dragging in the tab or by text entry.

- 1 On the "Phonebook" tab, "Search"
- 2 Enter the word(s) that you are looking for
  - Search candidates and search results in the terminal are displayed.
- 3 Tap a phonebook
  - The Phonebook menu appears.

## Making Calls/Sending Emails/Chatting via Phonebook

You can make a call directly from Phonebook. If you have added an email address or chat account to the phonebook entry, you can also send an email or launch a chat application.

- 1 On the "Phonebook" tab, tap one of the Phonebook contacts
  - The Profile information is displayed.
- 2 Tap , , , or 
  - You can now make a call, send an email or chat.

	Make a call.
	Send an SMS message.
	Record Koe-no-Takuhaibin
	Send an email.

### Note

- Touch the Phonebook for over 1 second to display the option menu. You can now make a call if you tap "Phone", or send an SMS message if you tap "SMS".

## Viewing the Map of a Contact's Address


If the address has been added to the Phonebook, you can view its location in a map.

- 1 On the "Phonebook" tab, tap one of the Phonebook contacts
  - The phonebook information appears.
- 2 On the "Profile" tab, touch the address for over 1 second ► "Display map"
  - When selecting "Maps" or "地図アプリ", it switches to the application to display the location set as the address.

## Deleting Phonebook


- 1 On the "Phonebook" tab, touch one of the Phonebook contacts for over 1 second
  - The phonebook information appears.
- 2 "Delete" ► "OK"
  - The phonebook is deleted.

### Note

- You can also delete a phonebook by tapping  ► "Delete" on the "Phonebook" tab, placing a mark on the phonebook you want to delete, and tapping "Delete".


## Sharing Phonebook

You can share the phonebook saved in the terminal with other applications.

- 1 On the "Phonebook" tab, tap one of the Phonebook contacts
  - The phonebook information appears.
- 2  ► "Share"
  - A menu listing the applications that the contact can be shared with appears.
- 3 Tap one of the applications
  - The screen of the selected application appears. Follow the instructions on the screen.

## Adding a Phonebook to Favorites

When you add a phonebook to Favorites, it appears on the "Favorites" tab. The "Favorites" tab allows you to quickly display a specific Phonebook.

- 1 On the "Phonebook" tab, tap the phonebook that you want to add to Favorites
  - The Profile screen appears.
- 2 Tap 
  - The phonebook is added to the "Favorites" tab.

### Note

- When you display a phonebook that has been added to Favorites, the star icon in the top right-hand corner of the screen turns yellow.
- If you tap the yellow star icon, it turns gray.
  - If the phonebook has a call log, the phonebook is displayed in the "Favorites" tab.
  - If the phonebook has no call log, the phonebook is undisplayed in the "Favorites" tab.
- If you tap a gray star icon, it turns yellow and the phonebook is displayed in "Favorites".

## Using Phonebook Copy Tool

Copy Phonebook data between this terminal and other terminals via microSD card. Also, you can copy the Phonebook data stored in your Google account to your docomo account.

### Opening the Phonebook copy tool

- 1 From the Home screen, "Applications"
  - ▶ "PhoneBookCopy"
  - For the first time users, to accept the "使用許諾契約書" (License agreement) is required.

### Exporting Phonebook to microSD card

- 1 Insert a microSD card to the terminal
- 2 From "エクスポート" (Export) tab screen, "開始" (Start)
  - Phonebook data stored in docomo account is saved on microSD card.
- 3 "OK"

### Importing Phonebook from microSD card

- 1 Insert the microSD card on which your Phonebook data is saved to the terminal
- 2 From "インポート" (Import) tab screen, tap a file to import ▶ "上書き" (Overwrite) / "追加" (Add)
  - The imported Phonebook data is saved to docomo account.
- 3 "OK"

### Copying Contacts on Google account to docomo account

- 1 From "docomo アカウントへコピー" (Copy to docomo account) tab screen, tap the Google account you want to copy ▶ "上書き" (Overwrite) / "追加" (Add)
  - The copied Phonebook data is saved on docomo account.
- 2 "OK"

### Note

- When the items of Phonebook (number, etc.) in other terminals are different from those in this terminal, the item names may be changed or deleted. The characters may be deleted when they are not registerable on some terminals.
- It is not available to import group information.
- When exporting Contacts (Phonebook) to microSD card, Phonebook data with no name registered is not available to copy.
- When importing Contacts (Phonebook) from microSD card, the file created in the "Link Backup" application cannot be read.

### Koe-no-Takuhaibin

This service is for sending voice messages via phone.

- For details about Koe-no-Takuhaibin, refer to the DOCOMO website.
- The message can be recorded up to 15 minutes per 1 message, up to 500 messages, and stored up to 720 hours. A maximum of 5 messages can be protected, and will automatically be deleted 720 hours after protection cancellation.



## Message recording


- 1 From the Home screen, "Phone" ► "Dial"
- 2 Enter the phone number ► Tap "Koe-no-Takuhaibin"
  - The terminal is connected to the Koe-no-Takuhaibin Service Center. Record a message according to the voice guidance.
  - You can also send it from the "Recent calls" and Phonebook.

## Play messages

The message is recorded and is notified by SMS.

- 1 From the Notification panel, tap the Koe-no-Takuhaibin notification ► "メッセージ再生" (Play Message) ► "はい" (Yes)
  - The terminal is connected to the Koe-no-Takuhaibin Service Center.

### Note

- A call fee will be charged for recording and playing messages.
- Koe-no-Takuhaibin cannot be used from overseas.
- To set Koe-no-Takuhaibin, from the Home screen, tap  ► "Settings" ► "Call settings" ► "Network service" ► "Koe-no-Takuhaibin".

## Network Services

### Available Network Service

You can use the following DOCOMO network services on the terminal.

Service name	Monthly charge	Application	Page
Koe-no-Takuhaibin	Free	Not required	P90
Voice Mail Service	Paid	Required	P92
Call Forwarding Service	Free	Required	P96
Call Waiting Service	Paid	Required	P95
Caller ID Notification Service	Free	Not required	P98
Nuisance Call Blocking Service	Free	Not required	P106
Caller ID Display Request Service	Free	Not required	P106

Service name	Monthly charge	Application	Page
Call Notification Service	Free	Not required	P106
English Guidance	Free	Not required	P106
Public Mode (Power OFF)	Free	Not required	P99


#### Note

- You cannot use the network services when you are outside of the service area or in a location with no radio reception.
- Deactivating a service does not mean canceling the contract of a service like the Voice Mail Service or the Call Forwarding Service.
- For subscriptions and inquiries, contact "General Inquiries" provided on the last page of this manual.
- In this manual, the outlines of each network service are described with menu operations of the terminal. For details, refer to "Mobile Phone User's Guide [Network Services]".


## Voice Mail Service

If you are in a location with no radio reception, the terminal is powered off, or you are unable to take the call within the preset ring time, the Voice Mail Service answers a call with a voice mail greeting and records the caller's message.


#### Note

- The message can be recorded up to 3 minutes per 1 message, up to 20 messages, and stored up to 72 hours.
- If you do not answer an incoming call when the Voice Mail Service is set to "Activate", the call is saved in "Incoming history" as a missed call, and  appears in the status bar.
- This terminal does not record voice messages on internal memory. Use the Voice Mail Service.

## Basic flow of the Voice Mail Service

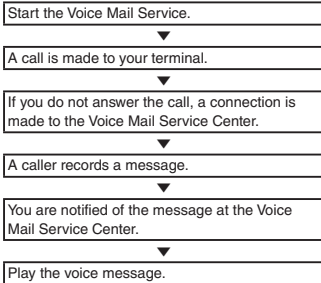



## Setting the Voice Mail Service

- 1 From the Home screen,  ► "Settings" ► "Call settings" ► "Network service" ► "Voice mail service"
- The "Voice mail service" screen appears.

Activate service	Tap "OK" to start the Voice Mail Service.
Ring time setting	Enter 0 to 120 (seconds) for the ring time. If the ring time is set to "0", calls will not be saved in Incoming history.
Deactivate service	Tapping "OK" when setting the Voice Mail Service deactivates the Voice Mail Service.
Settings confirmation	Display the setting state of the Voice Mail Service.
Play messages	Tap "OK" to connect to the Voice Mail Service Center. Follow the guidance to play messages.
Settings	Tap "OK" to connect to the Voice Mail Service Center. Follow the guidance to change the Voice Mail settings.

Checking messages	Check whether there is a new Voice Mail message. After checking, the completion message appears.
Message notification settings	Configure the setting for whether to notify when new messages arrive.

#### Note

- If you have messages at the Voice Mail Service Center,  appears in the status bar. Once all messages have been cleared or stored, following the guidance,  will disappear.

## Playing a voice message

- 1** Drag or swipe the status bar downwards
  - The Notification panel appears.
- 2** "Voice mail" ► "OK"
  - The terminal is connected to the Voice Mail Service Center. Follow the guidance to play messages.


## Call Waiting Service

When there is another incoming call while you are on a call, the in-call ringtone notifies you of the second call. You can answer the second call by putting the first call on hold. You can also put your current call on hold and make a call to another party.

### Note

- Even when the call is on hold, the caller is charged for a call fee.

## Setting the Call Waiting Service

1 From the Home screen,  ► "Settings" ► "Call settings" ► "Network service" ► "Call waiting"

 
- The "Call waiting" screen appears.

Activate service	Tap "OK" to start the Call Waiting Service.
Deactivate service	Tap "OK" to deactivate the Call Waiting Service.
Settings confirmation	The current settings are displayed.

## Putting the current call on hold and answering an incoming call

- 1 If you hear a beep during a call, "Activate" ► "Accept"
  - The first call is automatically put on hold and the incoming call is answered.
- 2 Switch to the first call
  - To end the second call, tap "End". The second call is terminated and you return to the first call.
  - To put the second call on hold, tap "Swap". The second call is put on hold and you return to the first call. Tapping "Swap" switches to the other party.


## Putting the current call on hold and making a call to another party

- 1 During a call, "Add call"
  - The "Dial" tab appears.
- 2 Enter the other party's phone number ►  
Tap 
  - The first call is automatically put on hold and you are put through to the new call. You can also search for a phonebook if you tap the "Phonebook" tab or "Recent calls" tab.
- 3 Switch to the first call
  - To terminate the new call, tap "End". The new call is terminated and you return to the first call.
  - To put the new call on hold, tap "Swap". The new call is put on hold and you return to the first call. Tapping "Swap" switches to the other party.

## Call Forwarding Service

The Call Forwarding Service forwards a call to a preset forwarding number if you do not answer the call within the preset ring time, or are outside of the service area or if the terminal is powered off.

### Note

- If you do not answer an incoming call when the Call Forwarding Service is set to "Activate", the call is saved in "Incoming history" as a missed call, and  appears in the status bar.

### Basic flow of the Call Forwarding Service

Register the forwarding number.



Set the Call Forwarding Service to activate.



A call is made to your terminal.



If you do not answer a call, it is automatically forwarded to the specified forwarding number.

## Call charge for the Call Forwarding Service

Caller

- ▼ Call charges are incurred by the caller.

Subscriber to the Call Forwarding Service


- ▼ Call charges are incurred by the subscriber to the Call Forwarding Service.

Forwarding number

### Note

- Even when the Call Forwarding Service is active, you can answer a call while the ringtone sounds.


## Setting the Call Forwarding Service

- 1 From the Home screen,  ► "Settings" ► "Call settings" ► "Network service" ► "Call forwarding service"
  - The "Call forwarding service" screen appears.

Activate service	Change the forwarding number and the ringing time.
Deactivate service	Tap "OK" to deactivate the Call Forwarding Service.
Change call forwarding number	Enter a new forwarding number and tap "OK" to change the forwarding number.
Call forwarding settings	Tap "Yes" to automatically connect an incoming call to the Voice Mail Service Center if the forwarding number is busy*.
Guidance settings	Turn the guidance ON/OFF.
Settings confirmation	The current Call Forwarding Service settings are displayed.

- \* A subscription to the Voice Mail Service is required.


## Setting the Call Forwarding guidance on/off


- 1 From the Home screen, "Phone" ► "Dial"
  - The "Dial" tab appears.
- 2 "1" ► "4" ► "2" ► "9" ► 
  - Voice guidance is played. Follow the guidance to configure the settings. For details, refer to "Mobile Phone User's Guide [Network Services]".

## Caller ID Notification Service

When making a call, your phone number can be shown in the display of the other party's phone.

### Note

- The Caller ID Notification Service is not available when  (out of service area) is displayed.
- The service is only available when the other party's phone can display the caller ID.
- If an announcement requesting caller ID is heard when making a call, activate Caller ID Notification or add the "186" prefix to the phone number and call again.

- 1 From the Home screen,  ► "Settings" ► "Call settings" ► "Network service" ► "Caller ID notification"
  - The "Caller ID notification" screen appears.


Settings	Set whether the other party is notified of your caller ID. Tap "Notify" to enable notification, and "Not notify" to disable notification.
Settings confirmation	The current Caller ID Notification settings are displayed.



## Public Mode (Power OFF)

When you receive at a public location where you want to refrain from using or while driving, guidance is provided to callers. Public mode (Power OFF) guidance is also played when you are outside of the service area or when there is no signal.


### Public mode (Power OFF) settings

- 1 From the Home screen,  ► "Settings"  
► "Call settings" ► "Network service" ►  
"Public mode (power OFF) settings"
  - The "Public mode (power OFF) settings" screen appears.

Activate service	Tap "OK" to activate Public mode (Power OFF).
Deactivate service	When Public mode (Power OFF) is set, tap "OK" to deactivate the service.
Settings confirmation	The current settings are displayed.

# Settings

## Settings Menu

Tap  ► "Settings" on the Home screen on the terminal to display the "Settings" screen that allows you to configure various settings. The menu displayed on this screen is shown below.

Wireless & networks	Configure various network settings. (P101)
Call settings	Configure various call settings. (P106)
docomo service	Settings for application management, docomo apps password, and auto GPS are configured. (P107)
Sound	Configure settings, such as volume. (P108)
Display	Configure display settings, such as screen brightness and animation. (P109)
Gesture	Set motion gesture settings. (P109)

Location & security	Configure settings such as GPS, screen lock and passwords. (P110)
Applications	Configure applications' settings. (P115)
Accounts & sync	Configure settings for accounts and synchronization. (P115)
Privacy	Delete all data from the terminal. (P116)
Storage	Display free space of the microSD card, mount, format and free space in internal storage. (P116)
Language & keyboard	Configure the terminal's language and keyboard settings. (P117)
Voice input & output	Configure the settings for voice recognizer and reading of text. (P117)
Accessibility	Set the settings of accessibility application. (P117)
Connectivity settings	Set the USB connection mode and On-Screen Phone function. (P118)

Date & time	Configure the date and time settings. (P120)
About phone	Display information related to this terminal. (P120)

## Wireless & Networks

Set whether to enable/disable networks and configure the network connection settings.

Airplane mode	Enable/disable the terminal's emission of radio waves.
Wi-Fi	Turn the Wi-Fi function ON/OFF.
Wi-Fi settings	Configure Wi-Fi settings.
Wi-Fi Direct settings	Connect to Wi-Fi Direct compatible devices directly without an access point.
Bluetooth	Turn the Bluetooth function ON/OFF.
Bluetooth settings	Configure Bluetooth settings.
Portable hotspot	Configure portable Wi-Fi access point settings.
VPN settings	Configure the settings for VPN (virtual private network) communications.

Mobile networks	Set an access point and configure data roaming and network mode settings.
-----------------	---

### Note

- When searching LTE using "Network operators" from "Mobile networks", execute "Search networks" after placing a check mark next to "Data enabled".


## Wi-Fi Tethering Settings

Connect wireless LAN compatible device up to eight devices to the Internet simultaneously using the terminal as a Wi-Fi hotspot.


### Note

- Wi-Fi tethering and USB tethering cannot both be used at the same time.

### Activating Wi-Fi tethering

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Portable hotspot"
- 2 "Portable Wi-Fi hotspot"
  - Confirm the details of the warning and then tap "OK".
  - When activating for the first time, a dialog for entering a new password appears. Enter a new password, and then tap "Save".

### Setting Wi-Fi access point

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Portable hotspot"
- 2 "Portable Wi-Fi hotspot settings"
- 3 "Configure Wi-Fi hotspot"
  - "Configure Wi-Fi hotspot" menu appears.
- 4 Enter network SSID in the "Network SSID" box
- 5 "Security"
  - "Security" menu appears. Select appropriate one from "Open" and "WPA2 PSK".
  - The password entry is necessary if "Security" is set to "WPA2 PSK".
- 6 "Save"



### Note

- Network SSID is set to "AndroidAP", and security is set to "WPA2 PSK" by default. Set Security as needed.

## Connecting to VPN (Virtual Private Network)

VPN (Virtual Private Network) is a technique to access to the information protected in local network from other networks. VPN is generally equipped in companies, schools or other facilities. Users can access the local network and view information outside the premise. To set VPN access from the terminal, security information from network administrator is required.


### Adding a VPN

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "VPN settings"
- 2 "Add VPN"
- 3 Tap a VPN type to add
  - PPTP is unavailable when ISP is set to sp-mode.
- 4 Tap "VPN name" ► Enter a VPN name ► Tap "OK"
- 5 Tap "Set VPN server" ► Enter the settings of VPN server ► Tap "OK"
- 6 Enter other necessary items
- 7  ► "Save"

### Connecting to a VPN

- 1 In VPN list, tap a VPN name to connect
  - A menu appears.
- 2 Tap "Username" ► Enter a user name
- 3 Tap "Password" ► Enter a password
- 4 "Connect"
  - You can also connect to a VPN by touching a VPN name to connect for over 1 second and tapping "Connect to network".

### Editing a VPN

- 1 In VPN list, touch a VPN name to edit for over 1 second
  - A menu appears.
- 2 "Edit network"
  - The detailed setting screen is displayed with the registered information entered.
- 3 Add, delete or edit the information, and tap  ► "Save"
  - The settings are updated.

## Deleting a VPN


- 1 In VPN list, touch a VPN name to delete for over 1 second
  - A menu appears.
- 2 "Delete network" ► "OK"

## Setting the Access Point




The access points (sp-mode, mopera U) required for connecting to the Internet are preset. You may add or change them if necessary.

The sp-mode is set as the default access point.

## Checking the access point being used

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Mobile networks" ► "Access Point Names"

## Setting an additional access point <New APN>



- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Mobile networks" ► "Access Point Names" ►  ► "New APN"
- 2 Tap "Name" ► Enter the network profile name you want to create ► Tap "OK"
- 3 Tap "APN" ► Enter the access point name ► Tap "OK"
- 4 Enter any other items requested by your network operator
- 5  ► "Save"

### Note

- Do not change MCC to anything other than 440, or change MNC to anything other than 10. Doing this will result in not being shown on the screen.
- If the MCC and MNC disappear from the screen after changing the settings, you can either restore default settings or manually set the access points again.

## Initializing an Access Point

When you initialize an access point, it returns to its default settings.

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Mobile networks" ► "Access Point Names"
- 2  ► "Reset to default"


## sp-mode

sp-mode is an ISP for NTT DOCOMO smartphones. In addition to Internet connection, this also provides an email service that uses the same email addresses as i-mode (@docomo.ne.jp). The sp-mode is a paid service that requires subscription. For details about sp-mode, refer to the NTT DOCOMO website.

## mopera U

mopera U is an NTT DOCOMO ISP. If you have subscribed to mopera U, you can use the Internet after making the simple settings. mopera U is a paid service that requires subscription.

## Setting mopera U

- 1 From the Home screen,  ► "Settings" ► "Wireless & networks" ► "Mobile networks" ► "Access Point Names"
- 2 Tap to select the "mopera U" or "mopera U設定" (mopera U settings) radio button

### Note

- "mopera U設定" (mopera U settings) is the access point for setting mopera U. Packet communication fee is free by using the access point for mopera U settings. Keep in mind that you can only connect to the initial setting screen and change settings screen. For details on mopera U settings, refer to the mopera U website.


## Call Settings

Configure various call settings.

Network service	Configure docomo network service settings.
Roaming settings	Configure settings for international roaming. (P203)
Advanced call settings	Configure advanced call settings.

## Network Service Settings

You can configure settings for the docomo network services.

- 1 From the Home screen,  ► "Settings"  
► "Call settings" ► "Network service"

Koe-no-Takuhaibin	"Koe-no-Takuhaibin" (P90)
Voice mail service	"Voice Mail Service" (P92)
Call forwarding service	"Call Forwarding Service" (P96)
Call waiting	"Call Waiting Service" (P95)


Caller ID notification	"Caller ID Notification Service" (P98)
Nuisance call blocking service	Reject nuisance calls from the same number.
Caller ID notification service	Set to play guidance requesting number notification to callers with a do-not-notify setting, and terminate the call automatically.
Second call settings	You can set the connection method for calls received while you are on the phone.
Call notification	SMS is used for notifying you of missed calls when the power is OFF, when you are outside of the service area, or when the incoming call cannot be received.
English guidance	You can set the general voice guidance to English for received and made calls. It is also possible to set the guidance for various network service settings such as "Voice Mail Service" and "Call Forwarding Service" to English.



Remote operation settings	Set to remotely control the terminal from a docomo mobile phone, land-line phone, NTT public phone, etc.
Public mode (power OFF) settings	"Public Mode (Power OFF) Settings" (P99)

## Using Advanced Call Settings

Configure advanced settings for calls.

- From the Home screen,  ► "Settings" ► "Call settings" ► "Advanced call settings"

Sub address settings	Set the separator for when a sub address is added to made calls. The "*" that is included in the phone number is used as a separator for the sub address.
Prefix settings	You can register international phone numbers and area codes to add them to made calls.
Reject unregistered call	Calls from numbers not registered in the Phonebook are rejected.

## docomo Service




Configure docomo services.

Application manager	Configure settings for regular update confirmation, etc.
Wi-Fi	Configure the settings for docomo service via Wi-Fi.
docomo apps password	Set a password for docomo applications.
AUTO-GPS	You can set the AUTO-GPS function and view the location log.
Open source licenses	Open source licenses are displayed.

## Sound

This allows you to configure various sound settings, such as the type and volume of ringtones, Silent mode and Vibrate.

General	
Silent mode	Enable/disable Silent mode. When in Silent mode, all sounds apart from music/video and alarms are muted.
Vibrate	Set when to use the vibrator.
Volume	Set the volume of the ringtone, music/video and alarms. Sound volume of notification also can be adjusted.
Incoming calls	
Phone ringtone	Set the sound used as the ringtone.
Notifications	
Notification ringtone	Set the sound used for notifications.

Feedback	
Audible touch tones	Set whether to play a sound when a phone number is entered.
Audible selection	Set whether to play a sound when a menu item is selected.
Screen lock sounds	Set whether to play a sound when the screen is locked/unlocked.
Haptic feedback	Set whether to vibrate the terminal during specific operations, such as  ,  , and  .

## Display

This allows you to configure display settings, such as screen brightness and animation.

Brightness	Set the screen brightness.
Auto-rotate screen	Set whether to automatically change the screen display when the terminal is rotated.
Animation	Configure the animation settings.
Screen timeout	Set how long to keep the backlight on after the last time you use the terminal.
Screen optimization	Adjust the display of downloaded applications according to resolution.
Sensor settings	
Motion sensor calibration	Adjust the calibration of the motion sensor.

## Gesture

This allows you to enable or disable each motion gesture.

Home screen	
Rearrange items	You can change item locations by tilting the phone to the left and right while an item is selected. <ul style="list-style-type: none"><li>This is only available when the Home setting is "Home". It does not work when "docomo Palette UI" is used.</li></ul>
Incoming call	
Mute	When the phone is flipped while ringing, the ringtone will stop.
Alarm	
Snooze (turn off)	When the phone is flipped while ringing, the alarm will stop.
Gallery	
Previous/next picture	Tap the sides to view the previous/next image.

## Location & Security

This allows you to configure settings such as GPS, screen lock and passwords.

My location	
Use wireless networks	Display the current location in an application using a wireless network.
Use GPS satellites	Set whether to use GPS.
Screen unlock	
Set up screen lock	Set whether to use the screen lock and configure its settings.
SIM/RUIM card lock	
Set up SIM/RUIM card lock	Set whether to lock the SIM card (UIM) and configure its settings.
Passwords	
Visible passwords	Set whether to display the characters entered for the password.

Device administration	
Select device administrators	Add or delete the administrator of this terminal.
Credential storage	
Use secure credentials	Set whether to allow the application to access the secure certification and other certification information.
Install from SD card	Install encrypted certificates from microSD card.
Set password	Set/change the credential information storage password.
Clear storage	Delete all content of credential information storage and reset the password.

## Note

### <On-Screen Unlock>

- If you enter incorrect screen-unlock patterns 5 times, a message prompting you for reentry will appear after 30 seconds. If you forget the screen-unlock pattern, tap "Forgot pattern?" on the reentry screen then log in with your Google account that has been set on your terminal. In this way, you can enter a new pattern.
- Note that you cannot unlock the screen if you forget the PIN or screen-lock password and have not set a Google account.

## Security Code and UIM Protection

For convenient and secure use of the terminal, you can set codes to lock the terminal and network security codes to be used with network services. You can make better use of the terminal by using different codes depending on the purposes.

## Note

- Avoid setting security codes using your birthday, part of your phone number, your address or room number, "1111" or "1234", which can be easily guessed by others. Be sure to write down the security codes and store them in a safe location.
- Do not reveal your security codes to others. DOCOMO is not responsible for damage caused by misuse of your security codes by others.
- If you forget your security codes, you need to bring your identification document (driver's license, etc.), the terminal and the UIM to a docomo Shop. For details, contact "General Inquiries" provided on the last page of this manual.

- Your PIN unblocking key is written in the application form (copy for subscriber) given at the time of contract. If you have subscribed at a place other than a docomo Shop, bring your identification document (driver's license, etc.) and the UIM to a docomo Shop, or contact "General Inquiries" provided on the last page of this manual.

### Network security code

The network security code is a 4-digit number necessary for using the docomo Network Services or identification at reception of your request in docomo Shop or at docomo Information Center. It can be set to any number at the subscription and also changed later by yourself. You can change your network security code to the new one through PC if you have a "docomo ID/Password" on General support site for PC "My docomo".

#### Note

- For information about "My docomo", refer to P246.

### PIN code

The UIM can set security code named PIN code. This code is set to "0000" at the time of subscription, but you can subsequently change it.

PIN code is a 4- to 8-digit number that is entered to check the user when the UIM is inserted in the terminal or the terminal power is turned on. It is intended to prevent unauthorized use of the terminal by a third party. You can use the terminal by entering PIN code.

#### Note


- If you use a UIM that has been currently used when you buy a new terminal, use the same PIN code that had been set on the current terminal. The code is "0000" if the default setting has not been changed.
- If you enter incorrect PIN code three times in a row, the code will be locked. In that case, unlock with "PUK code".

## PIN unblocking key (PUK)


The PIN unblocking key (PUK) is an 8-digit number used to unblock the PIN code. You cannot change it by yourself.

- If you enter the PUK code incorrectly ten times in a row, the UIM will be locked. If this happens, please contact a docomo Shop.

## Enabling UIM's PIN code

- 1** From the Home screen,  ► "Settings"  
► "Location & security"
- 2** "Set up SIM/RUIM card lock"
  - The "SIM/RUIM card lock settings" screen appears.
- 3** "Lock SIM/RUIM card"
  - Set the PIN code on the "Lock SIM/RUIM card" screen.
- 4** Enter PIN code and tap "OK"
  - You are asked to enter the PIN code when the terminal is powered on.

## Changing PIN code

- 1** From the Home screen,  ► "Settings"  
► "Location & security"
- 2** "Set up SIM/RUIM card lock"
  - The "SIM/RUIM card lock settings" screen appears.
- 3** "Change SIM/RUIM PIN"
  - The "SIM/RUIM PIN" screen appears, and you are prompted to enter the PIN code.
- 4** Enter the current PIN code, and tap "OK"
  - You are prompted to enter the PIN code in the "SIM/RUIM PIN" screen.
- 5** Enter a new PIN code and tap "OK"
  - You are prompted to enter the PIN code again in the "SIM/RUIM PIN" screen.
- 6** Enter the same PIN code that you entered in step 5 and tap "OK"
  - The PIN code is changed.

## Enter PIN code

This the following operations if you are asked to enter the PIN code when the terminal is powered on.

- 1 Enter the PIN code of the UIM, and tap "OK"


## Unlocking the PUK locked UIM

Follow the procedures below to unlock PIN when you enter PIN code 3 times incorrectly in a row.

- 1 Enter PUK on PIN unblocking code screen and tap "OK"
- 2 Enter a new PIN code and tap "OK"
- 3 Enter the same PIN code that you entered in step 2 and tap "OK"

## Device management

Configure device management settings to use Omakase Lock.

- 1 From the Home screen,  ► "Settings" ► "Location & security"
- 2 "Select device administrators" ► Select a device administrator ► Place a checkmark
  - At the time of purchase, the Omakase Lock is set to be enabled.

### Note

- To use the Omakase Lock, it is necessary to enable "Omakase Lock". As of November 2011, Omakase Lock cannot be used.



## Applications

This allows you to configure applications' settings.

Unknown sources	Configure whether to allow the installation of the applications that are supplied by other than Android market.
Manage applications	List/delete installed applications.
Running services	List/stop the active services.
Storage use	Display storage status used for application.
Battery use	Display applications which are using battery and battery usage.
Development	Configure the various settings required for application development.

## Accounts & Sync

This allows you to configure the settings of accounts and their synchronization.


General sync settings	
Background data	Set whether the applications always synchronize and send/receive data.
Auto-sync	Set whether the applications automatically synchronize data.
Manage accounts	
Add or delete an account used in this terminal, such as Google account.	

## Privacy

This allows you to initialize data.

Personal data	
Factory data reset	Delete all data from the terminal.

## Initializing Terminal

- 1 From the Home screen,  ► "Settings" ► "Privacy"
- 2 "Factory data reset" ► "Reset phone" ► "Erase everything"

### Note

- Backup your data such as images, videos and music on PC. For details about connection method, refer to "File Management" (P131) and "External Device Connection" (P138).

## Storage

This allows you to display the microSD card status, mount and format, and the free space in internal memory.

SD card	
Total space	Display the total space on microSD card.
Available space	Display free space on microSD card.
Unmount SD card/Mount SD card	<ul style="list-style-type: none"><li>• Unmount the microSD card to remove it safely.</li><li>• Mount the microSD card before using.</li></ul>
Erase SD card	Erase all data (music, photo, etc.) on microSD card.
Internal storage	
Available space	Display free space of internal storage.

## Language & Keyboard

This allows you to configure the terminal's language and keyboard settings.

Language settings	
Select language	Select the language used on the terminal.
User dictionary	Procedures such as registration are required when using the character entry application supplied by Google. You can download the character entry application provided by Google from Android market.
Keyboard settings	
iWnn IME	Set screen keyboard settings.

## Voice Input & Output

This allows you to configure settings for voice input and output.

Voice input	
Voice recogniser settings	Configure the settings of voice recognizer.
Voice output	
Text-to-speech settings	Configure the settings for reading out text.

## Accessibility

Set the settings of accessibility application.

Accessibility	Enable or disable the applications compatible with accessibilities.
---------------	---

### Note

- "No accessibility related applications found" appears when purchased. If you want to set accessibility, download compatible applications from Android Market in advance.

## Connectivity Settings

Configure the settings for USB connection mode and the On-Screen Phone function.

USB connection	
Default connection mode	The default USB connection mode for connecting to a PC is set. (P138)
Always ask	The USB connection mode is always checked when connecting to a PC.
Help	An explanation for USB tethering is displayed.
On-Screen Phone settings	
On-Screen Phone	Change password when connecting a PC with the terminal via a USB or Bluetooth to display the screen of the terminal on a PC and operate the terminal.
Disconnect On-Screen Phone	Disconnect the On-Screen Phone.
Change password	Change the On-Screen Phone password.

### ● What is LG On-Screen Phone (OSP)?

LG On-Screen Phone is a function for displaying the screen of the terminal on a PC, and for using mouse and keyboard input on the PC for simple operation of the terminal\*.

It allows you to type using the keyboard of the PC, receive notifications of alarms, schedules, incoming calls, and other information on the PC, and exchange files between the PC and terminal by dragging and dropping them.

\* Some functions which are available with the terminal cannot be operated with LG On-Screen Phone.

### ● About OSP


- For details on operating procedures, downloading the PC software, and other information, refer to the following site.

From a PC

→ <http://www.lg.com/jp/mobile-phones/download-page/index.jsp> (in Japanese only)

## Activating USB Tethering

Connect the terminal and a PC using USB connection cable to connect the PC to the Internet using the terminal as a modem.

- 1 Connect the terminal and a PC using USB connection cable
  - Confirm the details of the warning and then tap "OK".
- 2 From the Home screen,  ► "Settings"  
► "Connectivity settings" ► "Default connection mode" ► "USB tethering" ► "OK"

### Note

- Hardware requirements of a PC for USB tethering are as follows:
  - OS\*: Windows 7/Windows Vista/Windows XP (Service Pack 3 or later)
  - \* Operations conducted in environment with upgraded OS or in added/changed environment cannot be guaranteed.
- A dedicated driver is required for USB tethering. For details about the method of the download and operation of dedicated driver, refer to the following site.  
<http://www.lg.com/jp/mobile-phones/download-page/index.jsp> (in Japanese only)

## Date & Time

This allows you to configure the date and time settings.

Automatic	Set the automatic retrieval of date and time information via the network.
Set date	Configure the date settings.
Select time zone	Configure the time zone settings.
Set time	Configure the time settings.
Use 24-hour format	Set whether to display the time in 24-hour or 12-hour format.
Select date format	Set the date format.


## About Phone

This allows you to display various informations of the terminal.

Software Update	Change software update settings.
Status	Display information related to this terminal.
Battery use	Display information about battery usage.
Legal information	Display information about the terms of use.
Model number	Display the model number (model name) of your terminal.
Android version	Display the version of Android running on your terminal.
Baseband version	Display the version of baseband running on your terminal.
Kernel version	Display the version of the kernel used in Android running on your terminal.
Build number	Display the build number of Android running on your terminal.

Software version	Display the software version of the terminal.
------------------	---

## Displaying your Own Number

- 1 From the Home screen,  ► "Settings"  
► "About phone"
- 2 "Status"
  - The "Status" screen appears. Your own number appears as "My phone number".

# Mail / Internet

## sp-mode Mail

This allows you to send and receive emails using an i-mode mail address (@docomo.ne.jp). It allows you to use pictograms and Deco-mail, and also supports auto receive. For details about sp-mode, refer to "Mobile Phone User's Guide (sp-mode)".

- 1 From the Home screen, "sp-mode mail"
  - Follow the instruction on the screen.

## SMS



You can send and receive text messages containing up to 70 double-byte characters (or 160 single-byte alphanumeric characters) to other terminals.

### Sending an SMS Message

- 1 From the Home screen, "Applications"
  - ▶ "Messaging"
    - The "Messaging" screen appears.
- 2 "New Message"
- 3 Tap the "To" box ▶ Enter recipient's phone number
  - A list of contacts beginning with the entered number or name appears.
- 4 Tap the "Enter Message" box ▶ Enter a message
- 5 "Send"
  - The message is sent.




## Note

- Tap  ► "Insert smiley" while entering a message to insert a pictogram. Although an emoticon appears on your "Enter Message" box, the pictogram is displayed if the message is received on an Android compatible phone.
- To receive notification that the SMS message is received, tap  ► "Settings" on the "Messaging" screen, and check the "Delivery reports" checkbox.
- You can also send/receive SMS messages to/from users of overseas network operators. For available countries/compatible overseas network operators, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO "International Services website".
- To send SMS messages to users of overseas network operators, enter "+" ► "Country code" ► "Recipient's mobile phone number". Omit "0" if the recipient phone number starts with "0". You can also send an SMS message by entering "010", "Country code" and "the recipient mobile phone number". (To reply to an SMS message sent from overseas, enter "010".)

## Receiving/Viewing an SMS Message

- 1 From the Home screen, "Applications"
  - "Messaging"
  - The "Messaging" screen appears.
- 2 Tap one of the threads
  - The message appears.

## Note

- When you receive an SMS message,  appears in the status bar. To read the message, drag or swipe the status bar downwards to open the Notification panel, and tap a new message.


## Gmail

If you have a Google account, you can send and receive emails using Gmail. If you do not have a Google account, you must open an account before using Gmail.




### Opening Gmail

- 1 From the Home screen, "Applications"
  - ▶ "Gmail"
  - Gmail opens, and the "Inbox" screen appears.

#### Note

- If your Google account settings have not been completed, the "Add a Google Account" screen appears. Follow the displayed instructions. If you do not have a Google account, create one here.
- For details about Gmail, tap  ▶ "More" ▶ "Help" on the "Inbox" screen.

### Creating and Sending an Gmail

- 1 From the "Inbox" screen,  ▶ "Compose"
  - The "Compose" screen appears.
- 2 Enter email address in the "To" box
- 3 Enter a subject in the "Subject" box
- 4 Enter a message in the "Compose Mail" box
- 5 
  - You can also send an email by tapping  ▶ "Send" on the "Compose" screen.

## Early Warning "Area Mail"

You can receive Earthquake Early Warnings provided by the Japan Meteorological Agency.

- Area Mail is a free service that does not require application.
- You cannot receive Area Mail in the following cases.
  - When the phone is turned OFF
  - When you are out of the service area
  - When the terminal is in Airplane mode
  - During voice calls
  - While updating software
  - When you are roaming overseas
  - When sending/receiving SMS messages
  - When using a SIM card from another provider
- You may not be able to receive Area Mail when using packet communication and tethering functions.
- You cannot receive an Area Mail after it has been missed.


## Receiving Area Mail

- 1 Receiving Area Mail automatically
  - When an Area Mail is received, a dedicated ringtone sounds and the text of the Area Mail is displayed.
  - When the screen lock is set, the text of the Area Mail is not displayed. It will be displayed when the screen lock is canceled.
  - You cannot change the ringtone volume.

### Viewing Area Mail later

- 1 From the Home screen, "Applications"
  - ▶ "Area Mail"
  - The "Early warning 'Area Mail' Inbox" screen appears.
- 2 Tap an Area Mail
  - The text of the Area Mail appears.

## Setting Area Mail

- 1 From the Home screen, "Applications"
  - ▶ "Area Mail"
  - The "Early warning 'Area Mail' Inbox" screen appears.
- 2  ▶ "Settings"
  - The "Settings" menu appears.
- 3 Change the settings if required

Receive setting	Check to receive Area Mail.
Beep tone	Configure the beep time settings and operations during Silent mode.
Check screen image and beep tone	You can confirm operations for receiving earthquake early warnings and disaster/evacuation information.
Other settings	To receive Area Mail other than earthquake early warnings and disaster/evacuation information, you can register Area Mail names and message IDs that you want to receive.

## Browser

Browser allows you to view web pages in the same way that you can from a PC.



### Opening Browser

- 1 From the Home screen, "Browser"
  - Browser opens, displaying the last web page that you viewed. The home page appears if you have not used the Browser recently.
  - Pinch out on the web page to zoom in the display, and pinch in to zoom out.

#### Note

- When viewing a web page that has been designed for PCs, it is displayed in full size for the first time use. However, you may zoom in or out, or scroll through the page. For more details, refer to "Touch Screen Operations" (P42).
- Web page operations may vary depending on their format and content.
- For information on the file formats that can be viewed and played on the terminal, refer to "File formats" (P228).

#### 1 Search box

Enter the text you want to search or URL to display a list of web page candidates and search candidates that match the entered characters. Tap one of the listed candidates or finish entering the URL, and tap  to display the web page. If the search box is not displayed on the browser screen, tap .

#### 2 Bookmark button

The "Bookmarks" tab appears.

#### 3 Previous web page

The previous page is displayed.


#### 4 Next web page

The next page is displayed.

#### 5 Zoom

Tilt the terminal toward you while touching to zoom in the web page. Tilt it away from you to zoom out.


#### 6 Switching windows

You can switch to the selected window when accessing web pages via multiple windows. You can close the window by tapping .

#### 7 New window

A list of frequently used web pages is displayed, and you can tap to access in a new window.

## Searching for a web page by voice entry


- 1 Tap the search box
- 2 Tap 
  - "Speak now" appears.
- 3 Clearly speak the search word(s) into the microphone
  - Candidates for the search word are displayed. Tap a candidate word and it will be entered in the search box. Also, a list of web pages including the search word appears.
- 4 Tap one of the listed web pages
  - The selected web page opens.

## Using Bookmark and History


Bookmarking a web page allows you to quickly access that web page.

You can also view previously visited web pages by displaying your browsing history.


### Adding a bookmark

- 1 View the page that you want to bookmark
- 2 Tap 
  - A thumbnail of the bookmarked page appears on the "Bookmarks" tab.
- 3 "★Add"
- 4 Edit the name and URL if required, and tap "OK"
  - Thumbnails of the web pages displayed on the list of bookmarks appear.

### Viewing a bookmarked web page

- 1 Tap 
  - The "Bookmarks" tab appears.
- 2 Tap the displayed bookmark
  - The selected web page opens.

## Changing Browser Settings

- 1 From the Browser screen,  ► "More"  
► "Settings"
  - A menu appears.
- 2 Change the settings if required

Page content settings	Set whether to use the default scaling on web pages, whether to display popup windows, whether to import images, the home page and other items.
Privacy settings	Clear the browser cache, the browsing history, cookies, form data, and location information. Configure the settings about whether to accept cookies, to save form data and to allow location information.
Security settings	Set whether to save passwords and whether to display security warnings. You can also clear saved passwords.
Advanced settings	Return website settings and browser settings to default setting.

## Talk

Google Talk is a Google instant messaging program. It allows you to chat (text chatting) with friends who have Google accounts. To use Google Talk, you must set up your own Google account. For details, refer to "Setting Online Service Accounts" (P51).

## Before Using Google Talk

To use Google Talk, it is required to log in and add a new friend. If you already have a Google account, you don't have to sign in to start using Google Talk.


## Logging in to Google Talk

- 1 From the Home screen, "Applications"  
► "Talk"
  - The set Google account appears.

### Note

- If your Google account settings have not been completed, the "Add a Google Account" screen appears. Follow the displayed instructions. If you do not have a Google account, create one here.

## Chatting

- 1 Tap a friend's account on the "Talk" screen
  - The Chat screen appears.
- 2 Tap the "Type to compose" box ► Enter your message and tap "Send"
  - The text that you entered in the "Type to compose" box is sent.
  - For details about Google Talk, from the Google Talk screen, tap  ► "Settings" ► "Terms & privacy" ► "Help Center" (Talk Help is displayed in English).



# File Management

## File Operation

You can synchronize music with "Windows Media Player" on your PC by connecting the terminal with the PC via the supplied USB connection cable, and transfer the data between the PC and the terminal by dragging and dropping. Sharing some data may not be permitted due to copyright.

- In order for your PC to recognize this terminal, a dedicated driver and Windows Media Player 11 or later are required.
  - For details about the method of the download and operation of dedicated driver, refer to the homepage below.  
<http://www.lg.com/jp/mobile-phones/download-page/index.jsp> (in Japanese only)
  - You can download the latest Windows Media Player on Microsoft website.  
<http://www.microsoft.com/windows/windowsmedia/download> (in Japanese only)
- Some functions such as shooting and playing video may not work while connecting the terminal with PC.

### Note

- Operating environment of a PC for file operation is as follows:
  - OS\*: Windows 7/Windows Vista/Windows XP (Service Pack 3 or later)
  - Windows Media Player: Windows Media Player 11 or later
  - \* Operations conducted in environment with upgraded OS or in added/changed environment cannot be guaranteed.
- Other than the terminal or PC, the following devices and software are necessary to perform file operation on a PC.
  - Dedicated driver

## Folder Structure in the Terminal

When you connect the terminal with PC, the microSD card in the terminal is recognized with the name "Removable disk".

Folders corresponding to files are created automatically in microSD card in the terminal when saving photos and videos shot on the terminal, downloading data such as images and music on the Internet, etc.

- For details about connection method between the terminal and PC, refer to "Connecting the Terminal with a PC" (P138).
- The default folder structure of "Removable disk" is as follows:
  - Android
  - .android\_secure
  - DCIM
  - LOST.DIR

### Note

- Shot photos and videos are saved in "DCIM" folder in microSD card. Music data synchronized with Windows Media Player on PC are saved on "Music" folder.
- Backup your data saved in microSD card inside the terminal to PC. For details about connection method, refer to "File Operation" (P131) or "Connecting the Terminal with a PC" (P138).
- Data saved from other devices such as a PC to a microSD card in the terminal may not be displayed or played on the terminal. Additionally, data saved from the terminal to a PC may not be displayed or played on other devices.

## Folder and File Operations

### Note

- Do not turn off the terminal while reading or writing data.
- Do not unplug USB connection cable while reading or writing data. It results in loss of data.

## Transferring Data with a PC

- 1** Connect the terminal with a PC via the supplied USB connection cable (P139)
- 2** Set USB connection mode to "Mass storage" (P139)
- 3** Open "マイコンピュータ" (My computer) and select "リムーバブルディスク" (Removable disk) on PC
  - A microSD card root folder for the terminal appears.
  - "自動再生" (Auto play) screen may appear depending on the setting. Choose "フォルダを開いてファイルを表示する" (Open the folder to display) when the screen is displayed.

- 4** Drag and drop data between the terminal and the PC

## Synchronizing Data with Windows Media Player

This allows you to synchronize music and videos with Windows Media Player library on PC. In this way, music and videos with copyright protection can be synchronized as well as the copyright information.

- 1** Connect the terminal with a PC via the USB connection cable (P139)
- 2** Set USB connection mode to "Mass storage" (P139)
- 3** Activate Windows Media Player on PC and synchronize

### Note

- For details about Windows Media Player, refer to Windows Media Player help.

- 1 Stop and remove the removable disk safely from PC
  - For example, for Windows® 7/Windows Vista®/Windows® XP, execute operation according to the "ハードウェアの安全な取り外し" (Safely Removing Hardware).
- 2 Remove the supplied USB connection cable from terminal and PC

## Bluetooth Communication

Connect the terminal to Bluetooth devices wirelessly, and enable to exchange data.

- For Bluetooth compatible version or profile, refer to "Main Specifications" (P225).
- For Bluetooth setting and operation procedure, refer to a manual of Bluetooth devices to connect.
- The terminal does not connect wirelessly with all types of Bluetooth devices.

### ■ Notes on using Bluetooth function

- The distance between the terminal and another Bluetooth device keeps within approximately 10 m with no obstructions in sight. The distance that the terminal and a Bluetooth device can make connection may be shorter when there are obstructions between them or depending on the conditions of the surroundings (such as walls or furniture) and the structure of a building. Especially when there is a wall or floor of reinforced concrete between them, they may be unable to connect with each other. Note the above mentioned distance is not guaranteed.
- Make sure to keep the terminal and another Bluetooth device 2 m or more away from home electric appliances, AV devices, OA devices, etc. before connection. The Bluetooth device is liable to be adversely affected by a microwave oven, so keep it 3 m or more away from the microwave oven while using it. Otherwise, normal connection