



ENGLISH

User Guide

 













LG840G








P/N: MFL67580401(1.0)

www.lg.com

On-Screen Icons






The table below describes various display indicators or icons that appear on the phone's display screen.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent profile in use
	Call Forward
	Calendar event with Alarm is set
	Bluetooth is active
	The browser is active
	Vibration mode
	Ring after Vibration mode




Icon	Description
	Ring and Vibration mode
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Battery Charging
	Flight Mode

General Functions





Making a Call

1. Make sure your phone is powered on.
2. Touch  and enter a phone number using the touch pad. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to call the number. Or touch  on the touch pad.

Making International Calls

1. Press the  [SEND] key, and the most recent missed, dialed and received phone calls will be displayed.
2. Select the desired number.
3. Press the  [SEND] key or touch .

Making a Call with the Send Key


1. When entering a phone number, press the  key and the international access character '+' will appear. When using the touch pad to dial, touch and hold .
2. Enter the country code, area code and the phone number.
3. Press the  [SEND] key to call the number. Or touch .

Ending a Call

When you have finished a call, press the  [END] key.



Making a Call from the Contacts


You can store frequently called names and phone numbers in the SIM card as well as in the phone memory known as the Contacts.

You can dial a number by simply selecting a name in the Contacts List and pressing the [SEND] key.

Answering a Call

When you receive a call, the phone rings and the phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

Press the [SEND] or unlock the screen and touch .

If Any Key has been set as the Answer Mode, any key press will answer a call except for the [END] key.

4. End the call by pressing the [END] key.

NOTE: You can answer a call while using other functions or features.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side volume keys of the phone.

In the standby screen, you can adjust the ring volume using the side volume keys.

Setting Profiles

Press either of the side volume keys. You can adjust the ringtone volume from the Ringtone tab and you can also set your ringtone profile to Ring, Vibrate All, Silent All.



Vibration Mode (Quick)

Vibration Mode can be activated by touching and holding **[*0]** from the dial pad. You can also set Vibration Mode by pressing and holding down side volume key as well.

The phone will display 'Vibrating Mode On!'. If you would like to turn Vibration mode Off, touch and hold **[*0]** again.

Signal Strength



If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text


You can enter alphanumeric characters by using the phone's touch pad. For example, storing names in the Address Book, writing a message or scheduling events in the calendar all require text to be entered.

The following text input modes are available on the phone.

Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, touch , then . Then select the desired symbol.


Changing between ABC and 123 Mode

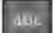You can change the text input mode by touching the Text Input Mode toggle button  on the touch screen.

ABC Mode

This mode allows you to enter letters by touching the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one key touch per number. To change to 123 mode in a text entry field, touch .


Using the T9 Mode


The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you touch each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.



1. When you are in the T9 predictive text input mode, begin entering a word by pressing the touch screen keys.

Touch one key per letter.


▶ The word changes as letters are typed - ignore what is displayed on the screen until the word is typed completely.



▶ If the word is still incorrect after typing completely, touch  on the pop up menu to see the options. Then select the word you want by touch.


(To display the word candidates, first you need to select the Show Candidate option. Touch  > Text Entry Settings > Show Candidate.)

▶ If the desired word is missing from the word choices list, add it by pressing  and selecting  to enter the new word. Then touch Save to save the word into the built-in dictionary.

2. Enter the whole word before editing or deleting any letters.

3. Complete each word with a space by touching .

To delete letters, touch . Touch and hold down  to erase the entire text entry.




NOTE: Pressing the  [END] key will save your unsaved message in the Drafts folder

Using the ABC Mode

Use the touch pad keys to enter your text.

1. Touch the touch key labeled with the required letter;

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, touch . To delete letters, touch . Touch and hold down  to erase the entire text entry.

NOTE: Refer to the table below for more information on the characters available using the keys.


Refer to the table below for more information on the characters available using the keys.

Key	Description	
	Upper Case	Lower Case
1	., '@?!-:/1	., '@?!-:/1
2	ABC2	abc2
3	DEF3	def3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6	mno6
7	PQRS7	pqr s7
8	TUV8	tuv8
9	WXYZ9	wxyz9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode


The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

My Dictionary

The T9 Dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database. The T9 Dictionary function can be selected from the **Text Entry Settings** by using Options . Within the T9 Dictionary function, the user can add, modify, delete or reset personal words.

NOTE: You can select a different T9 language from the same Options menu. By default, T9 entry modes are set to off.



In-Call Menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, touch .



During a Call

Making a Second Call

You can select a number you wish to dial, to make a second call.



Press , enter the 2nd phone number and press .

or



Press  to select a contact from your Address Book and then press the Call button .


Swapping Between Two Calls

Once the second call has been dialed (and answered), you can switch between the two on-going calls.



Press  [SEND] key or touch .

Answering an Incoming Call



To answer an incoming call when the handset is ringing, simply press the  [SEND] key or touch . The handset is also able to warn you of an incoming call while you are already on a call. Two tones will sound in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the  [SEND] key.


Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  [END] key or touching .

Muting the Microphone

You can mute the microphone during a call by touching . The handset can be unmuted by touching  again. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by touching . The loudspeaker is automatically deactivated when you end the call.

WARNING

Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.



Conference Calls


The conference service provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu.


The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call


You can make a second call while currently on a call simply by pressing , entering the second number and pressing the .

When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the  [SEND] key.


Setting Up a Conference Call

To set up a conference call, place the first call. Once that is connected, follow the steps above to make a second call. You can then join the two separate calls by touching  [Options] and select **Merge Calls**.


Activate the Conference Call on Hold

To activate a conference call on hold, press the  key.


Adding Calls to the Conference Call

To add a call to an existing conference call, touching  [Options] and select **Merge Calls**.

Private Call in a Conference Call

To have a private call with one caller from a conference call, touch . When the numbers of the callers are displayed, select the one you wish to speak in private with. Only the person who initiates the Conference Call can initiate a Private Call.


Ending a Conference Call

The currently active conference call can be disconnected by pressing the  key.

Your Standby Screen







From the standby screen, you can access all menu options, make a quick call and view the status of your phone - as well as many other things.

Touch Screen Tips

- ▶ The standby screen is also a great place to get accustomed to the touch screen.
- ▶ To select an item, touch the icon accurately. Your LG 840G can be set to vibrate slightly when it recognises you've touched an option.
- ▶ To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.
- ▶ There's no need to press hard, the touchscreen is sensitive enough to pick up on a light yet firm touch.
- ▶ Use the tip of your finger to touch the option you require. Do not use your fingernail.
- ▶ When the screen light is off, press the  key on the top side twice to restore the standby screen.
- ▶ Don't cover the phone with a case or cover as the touch screen will not work with any material covering it.

The Quick Keys

The quick keys on your standby screen provide easy, one-touch access to your most used functions.

	Touch to bring up the touch dialpad, to make a call. Input the number as you would using a normal key pad and touch  or press the  key.
	Touch to open your contacts and search for the number you want to call. You can also create new contacts and edit existing ones.
	Touch to access the Messaging options menu. From here you can create a new outgoing message.
	Touch to open the full Main Menu which is separated into four sub-menus. Touch the vertical tabs to view further options.






Quick Keys

Home Screen

LG 840G provides three types of Home Screens. To swap between the Home Screens, just swipe quickly over the display from left to right or right to left.

Widget

Allows you to use Widgets and even add them to your Home screen.

- ▶ Touch  **Widget** from the standby screen.
- ▶ Touch  to open widget panel.
- ▶ Drag a widget from the roll-out menu onto the Widget panel. Touch  again to close the Home Screen.
- ▶ You can play songs, add memos, check the calendar, play slide show, set an alarm, set current and second city or add calendar events directly from the standby screen using Home Screen.



Favorite Contacts

 
Allows you to easily contact your friends and family by displaying your favorite contacts on the standby screen.

- First, touch **Contacts** from the standby screen. Then touch **Settings**.





Favorite
Contacts

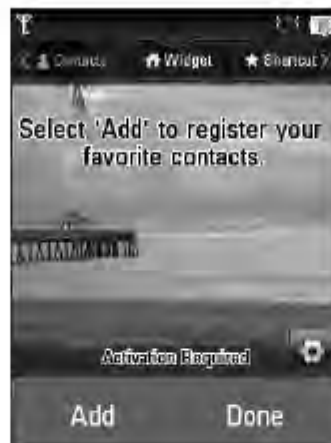


- ▶ Select **Add** to register your favorite contacts. You can add up to 30 contacts on the screen.




- ▶ If you want to delete a contact from this screen, touch **X**.
- ▶ Touch **Done** to finish editing the Contacts on this screen.
- ▶ To access your Contacts, simply touch on their corresponding icon.

 Touch  to call,  to send a message and  to check messages received from that person. And touch  to check call history.

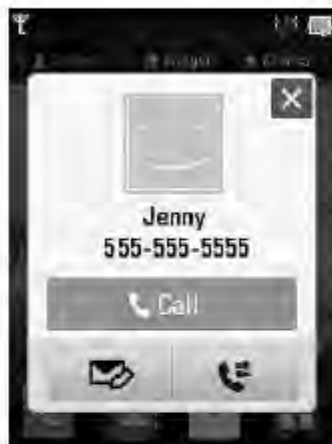


- ▶ If you want to view one of the Contacts, touch the picture. It will turn to the detail view screen.

Shortcuts

- ▶ Add your favorite menu on the standby screen.
- ▶ Touch **★ Shortcut** from the standby screen.
- ▶ To turn to the Edit Screen, touch .







- ▶ Touch **Add** to add another application, touch  to delete the application from Shortcuts, touch **Done** to finish.

Contacts

From the standby screen, touch  and touch . You will see following Address Book options.

Contact List





This menu allows you to save and manage contact address information. The Contact List's functions allow you to add a new address or search saved contact addresses by name. To search for a contact, touch  and input the contact person's name. If you input 'At', it will show all contacts beginning with 'At' in their names. From the standby screen, you can directly search for a contact by touching  and .

- ▶ : Search a contact.
- ▶ : Allows you to quickly jump to a contact of a specific letter.

New Contact


This menu allows you to add a new contact address. You can enter contact address information, including: name, phone numbers, email addresses, group information, pictures, ringtone and a memo.



1. From the standby screen, touch  and touch **Add New**.
2. Touch  to set a Picture ID for a contact by using a saved picture from Pictures or taking a new picture of the contact person. Choose from **No picture**, **Pictures** or **Take New Picture**. After you take a new picture of the contact person, touch  set as the Contact Picture ID.
 - ▶ Enter the First name, last name or both.
 - ▶ Enter a phone number. Touch  so you can set that number as Speed Dial. For more information, see the "Speed Dial" section.
 - ▶ Enter an email address.
 - ▶ Select a Group for the contact.
 - ▶ Set the ringtone for the contact or leave it as default ringtone.
 - ▶ Add memo if necessary.
 - ▶ Choose whether to save the contact to Phone or SIM Card memory.
3. Touch **Save** to save the contact.




Groups

This menu allows you to manage group information. By default, there are 7 groups: BUSINESS, Colleague, Company, Family, Friends, PERSONAL, and School. Or you can put a contact in No Group. You can also configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address within that group is received and there is no ring tone configured for the specific contact address.


1. From the standby screen, touch  and touch **All Contacts**.
2. A drop-down menu will appear, touch **Groups**.

Speed Dial

You can assign a frequently-called contact to a speed dial list. You can select a number from 2 to 9 as a speed dial. You can configure speed dial numbers for any of the 8 numbers for a specific contact address.

1. From the standby screen, touch .
 2. Touch a contact.
 3. Touch  > Set Speed Dial.
 4. Touch the Speed Dial location from 2 through 9 and touch Save.
- ▶ Your Voicemail is already set to speed dial 1. This is a default setting and can not be changed.
 - ▶ To call an assigned speed dial number, touch  from the standby screen. Then touch and hold the assigned number; the call will be placed to the assigned number automatically.

To see your **Speed Dial** entries:

1. From the standby screen, touch  and touch **All Contacts**.
2. A drop-down menu will appear, touch **Speed Dial**.





SIM Management

This menu allows you to copy information from your SIM card, e.g. name, handset number, etc. to your handset. If a name is duplicated during the copying operation, the information is also duplicated.




You can also copy entries from the SIM card to the phone memory and entries from the handset memory to the SIM card (not all the data will be copied).

From this menu, you are also able to delete entries in the SIM card and the Handset.

1. From the standby screen, touch  and touch .
2. A drop-down menu will appear, touch **SIM Management**



Own Number

You can view the list of Service Dial Numbers (SDN) assigned by your network provider. Such numbers could include the emergency services, directory assistance and voice mail numbers.

1. From the standby screen, touch  and touch .
2. A drop-down menu will appear, touch **Service Dial Number**.
3. The names of the available services will be shown.
4. Touch a service number. Press the  [SEND] key.

My Business Card


This displays your own contact information. You can edit and create the contact information. Depending on the SIM card, the number of Biz Cards you can enter can vary.

1. From the standby screen, touch  and touch .
2. A drop-down menu will appear, touch **My Settings > My Contact Info**.
3. Touch an empty field, then enter and save your Biz Card information.
4. If there's a Biz Card stored previously, touch that to view the specific information and edit it.

Messages


This section includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Voicemail as well as the network's service messages.

Create Message


1. From the standby screen, touch .
2. Touch Create New Message.




Editing a message

The following options are available when editing a Message.

- ▶ **Symbol:** You can insert symbols ranging from sentence notes to emoticons. Touching the  twice, and you can select the symbols you want. You can use Previous and Next to scroll through the various pages of symbols.

Inserting Multimedia Files

Inserting Multimedia files in outgoing messages is easy. While editing a message, press  and select an option from below:

- ▶ **Picture:** You can preview the selected picture. Touch  to insert the selected picture.
- ▶ **Audio:** You can insert from your saved Audio files.
- ▶ **Video:** You can insert from your saved Video clips.
- ▶ **Take New Picture:** You can insert a new image taken from the camera by pressing  or touching .

NOTE: Refer to page 63 for camera options.

- ▶ **Record New Audio:** You can record a new audio clip by touching REC.
 - **Recording mode:** MMS mode will limit the recording length so that it can be sent by MMS. General mode will record as long as memory is available.
 - **Quality**
- ▶ **Record New Video:** You can record a new video.
- ▶ **More:** Allows you to insert Template, vCard, vCalendar, vNote, vTask or Contact.

NOTE: vCard, vCalendar, vNote, vTask and Contact are created by the Address Book, Calendar, Notepad and Tasks functions. Go to the corresponding sections for more detailed information.

Using Options


While entering a text message, touch  to use the options below.

- **Text Entry Settings**
 - **Language:** Allows you to set the text entry language to English, Français, Español or Korean.
 - **Show/Hide Candidate:** When in T9 Entry Mode, you can see the word candidates as you type.
 - **Show/Hide Next Word**
 - **T9 Dictionary:** Here you can add/delete/reset/modify words to the T9 Dictionary.
- **Copy & Paste**

- **Preview:** Allows you to preview your message.
- **View attachment:** Allows you to view the message's attachment.
- **Save to Drafts:** Saves the selected message to Drafts.
- **Remove Elements:** Allows you to remove elements from the message.
- **Slide Settings**
 - **Duration:** Allows you to set the duration of the slide presentation.
- **Writing Font Size:** Set the writing Font size to Small, Medium and Large.
- **Cancel Message:** Allows you to exit the Message without saving your input message.

Sending a Message

After completing a message using Insert/Options, select Send To to select recipients.

- Enter the recipient(s). With , you can choose an option from below.
 - **Enter Number:** You can input the recipient(s) number using the Touch keypad.
 - **Enter Email:** You can enter an Email address instead of a phone number.
 - **Caller Groups:** Displays Contact Groups.
 - **Recent Recipients:** Choose a contact from recent messages.
 - **Recent Calls:** Choose a contact from recent calls.
 - **Delivery Options:** Allows you to set Add Cc and Add Bcc.

- **Save to Drafts:** Saves the selected message to Drafts.
- **Text Entry Settings:** This menu allows you to set the text entry Language. It also allows you to Show/Hide Candidate, Show/Hide Next Word and access the T9 Dictionary to delete/add/modify words.
- **Cancel Message:** Allows you to cancel the message.


Message folders

The folder structure on your LG 840G was designed to be fast and easy to use.

- ▶ **Inbox:** All the messages you receive are placed into your Inbox.
- ▶ **Drafts:** If you don't have time to finish writing a message, you can save it as a draft.
- ▶ **Outbox:** All Sending, Sent messages are placed into your Outbox.

NOTE: If you see the message "Message box full. Delete old messages.," then you should delete some messages from your inbox.

Inbox

You will be notified when you receive a message. They will be stored in the Inbox. In the Inbox, you can identify each message by icons. To reach the Inbox, from the standby screen, touch .

The following Options are available in Inbox folder.

- ▶ **Delete:** You can pick a message and delete it.

- ▶ **Standard/Conversation View:** You can select between the two viewing modes.
- ▶ **Sort By:** You can sort all messages by Date, From Read/Unread and Subject.
- ▶ **Message Settings:** Allows you to set messaging settings.
- ▶ **Delete All Read Messages:** You can delete all read messages.

The following view modes are available for your Inbox.

Conversation View

This mode allows you to view all messages with each contact in conversational order.

Touch a conversation and touch **Expand** to expand messages (to display each message in its entirety) or touch **Collapse** to only see the first 2 lines of each message.


Standard View

Allows you to view messages individually. When viewing a message, the following options are available in standard view:


- ▶ **Add to Address Book:** You can save the sender's phone number in the Contact List.
- ▶ **Select Slide:** If the multimedia message has more than one slide, you can select and move to the desired slide.
- ▶ **Extract Data:** You can make a voice call or send a message. You can save the number As New contact or Updating Existing.
- ▶ **View Attachment:** Allows you to view the message's attachments.


- ▶ **Copy to SIM/Phone:** Allows you to copy the message to the SIM card or the phone.
- ▶ **Move to SIM/Phone:** Allows you to move the message to the SIM card or the phone.
- ▶ **Message Details:** You can view information about received messages; message Type, Subject, Sender's address, and message Time.


Drafts


You can view the messages saved as drafts. To see the Drafts folder, touch  from the standby screen, then touch **Inbox** and touch **Drafts** from the drop-down menu.

Outbox


The Outbox is a place where you can find your sent messages. To see the Outbox folder, touch  from the standby screen, then touch **Inbox** and touch **Outbox** from the drop-down menu.

When you press the  [SEND] key, you can make a call to the number of the recipient number of the selected message.

If a message is not successfully sent, you will receive a Message Sending Failure notification on the screen. Another attempt will be made to send the failed message and after two unsuccessful attempts, the message will no longer be sent automatically. In order to send the message that has failed, you must touch  to resend the message.

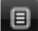

The Outbox will display all failed, sent and pending messages in the order in which they are sent. Touch  to use options available from the Outbox.

- ▶ **Delete:** Deletes a message you choose.
- ▶ **Sort by:** Sorts by Date, To and Subject.
- ▶ **Message Settings:** Allows you to set messaging settings.
- ▶ **Delete All:** Delete all messages.

The following options are available when you select a message in Outbox and touch .

- ▶ **View Status:** Shows the message status.
- ▶ **Select Slide:** If the multimedia message has more than one slide, you can select and move to the desired slide.
- ▶ **View Attachment:** To view the message attachment.
- ▶ **Message Details:** Allows you to view the message information.

Message Settings

To configure **Messaging settings**, touch  from the standby screen, touch , then select **Message Settings** for the following options.

Message Alert

You can set the Sounds, Volume, and Alert Type here.

Save To

Choose a default save location between Phone and SIM Card.

Signature

This feature allows you to create your signature.

Text Message

▶ Text Templates

There are 6 predefined messages in the list. You can view and edit the template messages or create new ones.

The following options are available when you touch .

- **Delete:** Allows you to delete the selected template message.
- **Delete All:** Deletes all text message templates in the folder.

To edit an existing Template, touch it (to open) then touch the text. The Edit Template screen will automatically open.

- ▶ **Message Center:** The details for the Message Center are pre-loaded onto your handset and should not be changed.
- ▶ **Email Gateway:** The details for the Email Gateway are pre-loaded onto your handset and should not be changed.
- ▶ **Reply via Same Message Center:** Allows you to activate or deactivate the Subject field in an SMS message.
- ▶ **Insert Signature:** Insert signature you created.

Multimedia Message

- ▶ **Multimedia Templates:** Multimedia templates are available and can be created here.
- ▶ **Download Options**

- **Download Without Asking:** Allows Multimedia Messages to be downloaded automatically.
- **Ask Always:** You can download a multimedia message manually.
- **Discard:** Used when the user rejects download of the Multimedia Message.

▶ **Message Center:** The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed.

Voicemail Number

This menu allows you to set the voicemail center number if this feature is supported by Tracfone. Please check with Tracfone for details of their service in order to configure the handset correctly.



Service Message

You can set the Service option to determine whether or not you will receive service messages.

Mobile Email

Mobile Email allows you to access your Yahoo! Mail, AOL Mail, AIM Mail, Windows Live Hotmail, Mail, Gmail and Other Providers accounts on your phone. So, now you can quickly and easily check your email while you are away from your computer.

To Set Up Mobile Email




▶ **Open Mobile Email:** From the standby screen, touch  and touch .

- ▶ **Select an Email Provider:** Touch the email provider you wish to use.
- ▶ **Read and Accept the Terms of Use**
- ▶ **Log In**
 1. Highlight the ID entry field, touch and then type in your existing email ID.
 2. Touch the Password field, to highlight it, and enter your password.
 3. To save your password scroll down to Remember Me and select it to check the box.
 4. Select Sign In.
- ▶ **Opening an Email:** Scroll down and highlight the message you want to open, then touch to open the message. When the email is open, select Options to reply, forward or delete.
- ▶ **Deleting an Email:** Scroll down to the email you want to delete, touch the subject line to highlight it, touch Options, and then Delete.

Multimedia




App Manager

Allows you to download and use useful and entertaining applications.




To access Applications from the standby screen, touch  , and then .

Games & Apps

Allows you to download and play JAVA games and Java applications to your enjoyment.





To access Games & Apps from the standby screen, touch  , and then .

Camera

 
From the standby screen, touch  , and then  to access the Camera function.

Take Photo

Using the camera module built into your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message.

Press  to go to camera mode directly. Or choose  from the  tab. You can also take video by pressing and holding .

Getting to know the viewfinder

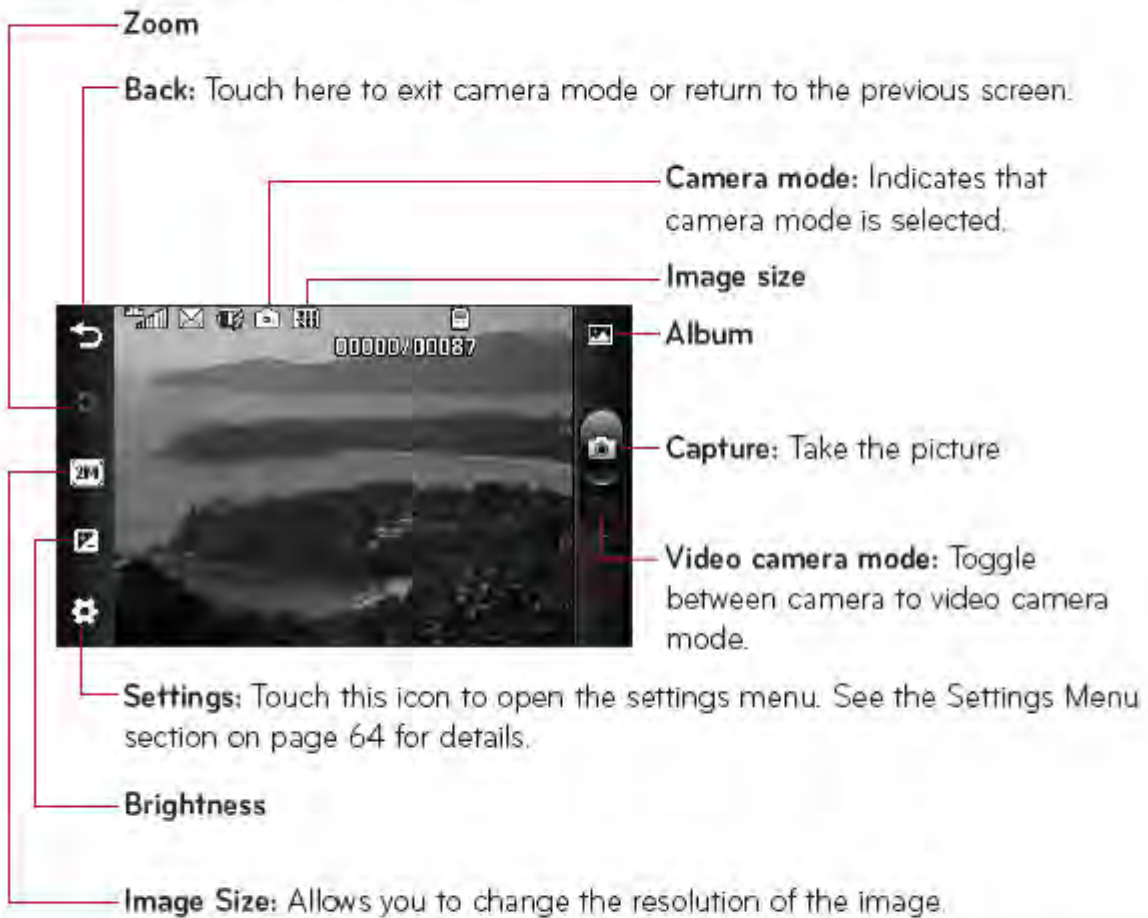

NOTE: The shortcut options disappear after a few seconds automatically. To recall the options, touch the screen again.

Settings Menu

- ▶ **View Mode:** Choose between Full Image and Full Screen.
- ▶ **Color Effects:** Includes options of Off/Mono/Sepia/Negative/Blue.
- ▶ **Timer:** Set the Timer can be set to Off/3 Seconds/5 Seconds/10 Seconds.
- ▶ **Shutter Tones:** Can be set to Tone 1/Tone 2/Tone 3/Off.
- ▶ **Storage:** Choose to save a photo to Phone or Memory Card.
- ▶ **Continuous Shot:** This is great for taking photos of moving objects or at sporting events.
- ▶ **Reset Settings:** Allows you to set to the default settings.


NOTE: In Take Photo mode, you can adjust the zoom scale by moving the slider. The maximum zoom levels depend on the resolution as follows.

Resolution	Zoom scale
1600*1200	Level 1
1280*960	Level 1
640*480	Level 1 ~ Level 10
320*240	Level 1 ~ Level 10

Record Video

When recording video, you have many of the same Settings options as with taking a photo.

 Getting to know the viewfinder

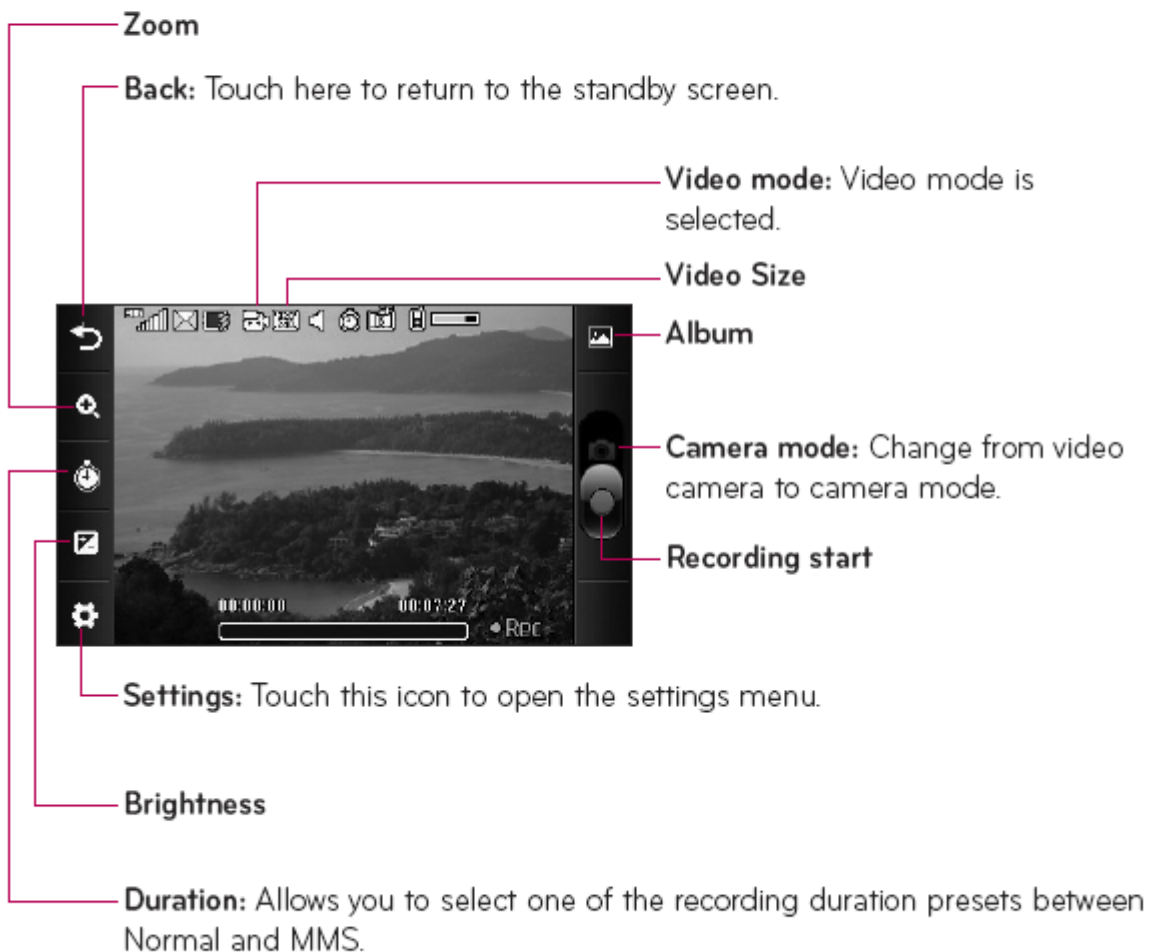

Settings Menu






- ▶ **Video Size:** Sets the size of video to 320*240 or 176*144. The selected size appears on the capture screen.
- ▶ **Storage:** Choose to save a video clip to Phone or Memory Card.
- ▶ **Recording Tones:** Set Recording Tones On or Off.
- ▶ **Reset Settings:** Allows you to set to the default settings.

NOTE: In Video Record mode, you can adjust the zoom scale by moving the slider. The maximum zoom levels depend on the resolution as follows.

Resolution	Zoom scale
320*240	Level 1 ~ Level 10
176*144	Level 1 ~ Level 10




Album

You can view the Album containing your Pictures and Videos. For more available options, touch ▶.

-  **Back:** Goes back to previous menu.
-  **Send Via:** You can send the picture or video via Message or Bluetooth.
-  **Sort By:** You can sort the pictures and videos by date, type, name, of favorite.
-  **Slide Show**
-  **More:** Favorite, Print via Bluetooth, Delete, Delete All.

Music Player

Music Player

To launch Music Player while in the standby screen, touch , , , and select Music Player.

- ▶ **All Songs:** You can view all the songs in your music library.
- ▶ **Playlists:** You can make your own playlists.
- ▶ **Artist:** Shows the list of artists of all the songs in your music library, and shows all the songs by a chosen artist.
- ▶ **Album:** Shows the list of albums of all the songs in your music library, and shows all the songs on a chosen album.
- ▶ **Genre:** Shows the list of genres of all the songs in your music library, and shows all songs of a specific genre.
- ▶ **Shuffle:** Allows you to play all the songs in your music library with shuffle.
- ▶ **Favorites**

NOTE: Copyrights of music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.






Playing Music

To listen to music in your phone or the external memory, follow these quick easy steps:

1. From the standby screen, touch , then open the Multimedia tab by touching  and touch .

2. You can select from All Songs, Playlists, Artist, Album, Genre, Favorites, and Shuffle songs to select your Music. The Now Playing menu will be only available when music is playing.



- ▶ Touch the song you wish to play.
- ▶ Touch  to pause the selected song. While playing, touch  to adjust the volume. Touch  and  to skip to the next song or previous song.
- ▶ Touch  to Minimize the music player and access other phone functions while music is playing.

NOTE: Files under 300 kb may not be displayed in this function and may be categorized as Ringtones.

Adding Music To Your Handset

Music files can be added to your handset by using one or more of the following methods:

- ▶ Download music and ringtones over the network directly to your device via the Shop Music link in the Music Player.
- ▶ From your existing digital media collection on your PC via Windows Media® Player and/or Windows Explorer.
- ▶ From your PC using other music subscription services, such as Napster or eMusic.

NOTE: In order to effectively store all your music files on your SD card, it's important to ensure that there is enough free space available remaining on the SD card to support file transfer. If there is not enough free space on the SD card, this may result in transfer failures or lost data.

(The maximum number of music files that the handset can support is 2000.)




A 512 MB card requires up to 3 MB of free memory.

A 4 GB card requires up to 6 MB of free memory.

A 8 GB card requires up to 15 MB of free memory.

A 16 GB card requires up to 25 MB of free memory.

Purchasing and downloading Music directly to your Device

1. From the standby screen, touch  ,  and then .
2. Select Shop Music.

3. Navigate the Shop Music page to download today's hottest music, ringtones and other personalized content directly to your phone.

NOTE: Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

Additional charges may apply when downloading music, ringtones etc.

Transferring Music using your PC

Before You Get Started

To transfer music from your PC to your device, you will need the following:

- ▶ Windows Media® Player 10 (or above) or other digital music management software such as Napster or eMusic
- ▶ A microSD™ card*
(supports up to 32 GB cards)
- ▶ USB data cable*

* microSD™ card and USB data cable sold separately; go to att.com/wireless for details.

NOTE: This device is not compatible with iTunes and/or iTunes files.

Transferring Music from the Digital Music Service

1. Using your computer, open your preferred PC music management client.
2. Download the selected song to your library.
3. Make sure the microSD™ card is inserted properly into the handset.

4. Use the USB adapter cable to connect the handset to the PC.
 5. Once the USB connection has been established, the handset displays "Connected." and the computer screen then shows the LG 840G device. If the detection does not occur, skip to the **Changing USB Connection Setting** section on page 60.
 6. Follow the instruction in the program to transfer music to your handset.
- NOTE:** If you have a USB hub, connect the handset directly to your computer rather than through the hub.

Transferring Music using Windows Media Player

1. Open Windows Media® Player on your computer (version 10.0 or higher).
 2. Use the USB adapter cable to connect the handset to the PC.
 3. Once the USB connection has been established, the handset displays "Connected." and the computer screen then shows the LG 840G device.
- NOTE:** If the target computer does not detect the newly connected handset or provide an MTP Player dialog window on the PC screen, skip to Changing USB Connection Settings section on page 60.
4. From within the Windows Media® Player application, click on the Sync tab. Previously downloaded songs are then listed on the left side of the application.
 5. Choose the destination location for the media files. The LG 840G Music Sync Player appears in a drop-down list on the right side of the screen.

NOTE: If there are no items present in the playlist, click the Edit Playlist button and begin adding the music files from among the various media categories.

6. Click the Start Sync button to download the selected songs to your handset.

A "synchronization in progress" message appears on the application. Do not unplug the handset during this process. Once complete, the progress bar will disappear.

7. It is now safe to unplug the USB connector from the handset once synchronization is complete.

Drag and Drop Music Using LG 840G As A Mass Storage Device

1. Make sure the microSD™ card is inserted properly into the headset.

2. Connect the device to a PC using a LG 840G USB data cable.

3. A bubble may appear on the PC, "Found New Hardware LG USB Modem".

4. Access My Computer on the PC.

5. The phone's memory card will be listed under "Devices with Removable Storage" in the same location as an optical drive.

NOTE: The PC will automatically assign a drive letter.

6. File explore in a new window for desired music files.



7. Drag and drop the desired music content from the PC window to the "Storage Card" window.

8. Disconnect the device from the USB cable.

9. Access the Music Player on the phone.

NOTE: If the target computer does not detect the newly connected handset as Mass Storage, skip to Changing USB Connection Settings section below.

Changing USB Connection Settings

1. From the standby screen, touch  and .
2. Select **Connection**.
3. Touch **USB Connection Mode**.
4. Touch Music Sync (if using Windows Media® Player or other Digital Music Services) or Mass Storage (if you are going to drag or drop files).
5. Reconnect the device to a PC.

Deleting Music Files

The following are the three options available to delete Music from your Phone:

1. Delete a file using Mass Storage, but not using Music sync function.
2. Delete a file by directly inserting the microSD™ external memory onto the PC.
3. Delete a file using delete function on the phone.

NOTE: If you delete a playlist from the phone, the songs in the playlist will not be removed and remain in All Songs folder.

Do your file operations like Delete, Move and Copy using Music Sync.

Be aware that all of the existing data will be erased on microSD™ card if you use the below process.

- Use the Memory Card function in the Settings menu (Menu > Settings > Phone > Reset > Settings > Master Clear > Memory Card).
- Format external memory using Mass Storage.

Additional Music Services

There may be other music applications preloaded or available for your phone that allow you to:

- ▶ Identify the name, artist and album to a song from a song sample.
- ▶ Listen to the latest Hip Hop, R&B, Rock, Jazz, or Country streaming commercial-free radio channels, anywhere you go.
- ▶ View the latest music videos.
- ▶ View music news and information.
- ▶ Cut custom-made ringtones from the favorite parts of your favorite songs, etc.

NOTE: Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

 
Additional charges may apply for downloading content or use of these services.

My Stuff

Audio




From the standby screen, touch , , and then  to access the Audio folder.

▶ **Voice Recorder:** Allows you to record your own audio by touching



▶ You can view the audio files in the list.

Pictures

From the standby screen, touch , , and then  to access the Pictures folder.

This allows you to view pictures when browsing.

▶ **Take Picture:** It starts up camera mode and allows you to take pictures.

▶ **Make Animated GIF:** You can make an animation file with the selected images in the list.

▶ You can view the graphic files in the list.

Video

From the standby screen, touch , , and then  to access the Video folder.

▶ **Record Video:** You can record your own video.

▶ You can view the video files in the list.

NOTE: DRM sometimes restricts some functions, such as send.

Tools

From the standby screen, touch , , and then  to access the Tools folder.

Voice Recorder

Use the Voice Recorder to record voice memos or other sounds.



► Settings

- **Quality:** You can assign the default quality to the Normal, Economy or Fine.
- **Recording Mode:** MMS record mode shortens the time so that the recording can fit in an MMS message and General mode provides longer recording time.
- **Storage:** You can assign the default storage to the phone memory or memory card.

- ▶ Touch **REC** to start recording. Touch **Pause** to pause recording. To continue recording, touch **Resume**. To stop recording, touch **Stop**. The recording will be saved automatically.



- ▶ To start a new recording, touch **Record New Audio**. To play the recording, touch **Play**. To send the recording by Message or Bluetooth, touch **Send Via Message** or **Send Via Bluetooth**. To delete the recording, touch **Delete** and confirm Yes.

Voice Command

Voice command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the voice command function, there are five possible commands, Call <Name or No.>, Listen Voicemail, Missed Calls, Messages, and Time & Date.


1. **Call <Name or No.>**: This function is activated only when the user says the command "Call" followed by the name stored in the Address Book or specified phone number. The voice engine inside the handset recognizes the user's utterance and displays name lists or phone numbers from the phone's Address Book. However, interfering noise might cause a problem displaying candidates. Additionally, the user has the option to superimpose a number type at the end, such as "mobile", "home" or "work".
2. **Listen Voicemail**: This command is activated when the user says the words "Listen Voicemail". The user will then be automatically connected to voicemail.
3. **Missed Calls**: This command is activated when the user says the words "Missed Calls". The mobile phone presents the missed calls lists.
 - **Commands available to user**
 - **Yes**: Dials the phone call.
 - **No**: Moves to the next missed call on the list.
 - **Cancel**: Returns to the main Voice Command menu.
 - **Exit**: Terminates Voice Command.
 - **Next**: Moves to the next missed call on the list.

4. **Messages:** This command is activated when the user says the word "Messages". The phone displays details of unread SMS or MMS messages.

- **Commands available to user**

- **Yes:** Dials the phone call.
- **No:** Moves to the next unread message.
- **Cancel:** Returns to the main Voice Command menu.
- **Exit:** Terminates Voice Command.
- **Next:** Moves to the next unread message.

5. **Time & Date:** This command is activated when the user says the words "Time & Date". The phone displays the current local time and date.

The Voice Command function also has options accessible by pressing  when in the Voice Command screen. They are:

- **Mode**

- **Speed:** Voice Command is abbreviated.
- **Normal:** Voice Command is played normally.

- **Best match**

- **1 Match:** The most likely match will be displayed to find a number from the Address Book.
- **Matches:** The four most likely matched names will be displayed to find names from the Address Book.

- **Sensitivity**

- **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.
- **Medium:** Operation of voice recognition engine is normally affected by user's voice command and surrounding sound.
- **Low:** Operation of voice recognition engine is strongly affected by user's voice command and surrounding sound.

- **Spk. On Mode**


- **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance.
- **Off:** When this option is selected, sound is quieter, and can only be heard through the Earpiece.

- **Call Alert**

- **Ring Only:** Rings repeatedly when you receive a call.
- **Ring After Name:** Tells the name of the contact you saved once and then rings repeatedly when you receive a call.
- **Name Repeat:** Tells the name of the contact you saved repeatedly when you receive a call.

Calendar

When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates schedule(s) for that day. This function helps to remind you of the schedule. The phone will sound an alarm tone if it has been set for a specific schedule item.

The following options are available when you open the Calendar function and touch the  menu.

- ▶ **New Schedule:** Allows you to add a new schedule on the date you select.
- ▶ **Search:** Allows you to search the saved schedule(s).
- ▶ **Set Holiday:** Allows you to set your personal holiday for the selected date.
- ▶ **View All:** Allows you to view all saved schedules.
- ▶ **Week View:** Allows you to change Calendar view mode from Month View to Week View and vice versa.
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Selective Delete:** Allows you to delete Old Schedules or All Schedules selectively.
- ▶ **Settings:** Allows you set Default View and Weekly Begin day.

Notepad

You can create up to a maximum of 30 memos.

1. From the standby screen, touch , , , and choose Notepad.
2. To create a new Note, touch New Note, input the memo and touch  to save.

World Clock

The World clock function provides time information for major cities worldwide.

To add a new City




1. From the standby screen, touch , ,  and select World Clock.
 2. Touch New City.
 3. Touch the City in the box, a list of available cities (in different time zones) will display. From there you can select what time zone to add.
- ▶ To make it easier, touch  and a globe will be displayed. Touch the continent and choose city you want to know the time of.

NOTE: The first time you use this function, you will be asked to enter the name of your current City.


Tasks

This feature allows you to save and manage a task.

To add a New Task

1. From the standby screen, touch , ,  and select **Tasks**.
2. Touch **New Task**.

3. Input Due Date, Note and Priority for the new Task.
4. Touch **Save** to save the Task item.

The following options are available by pressing  in the main Tasks menu:

- ▶ **New Task:** Allows you to create a new task.
- ▶ **Delete:** Allows you to delete any tasks created.
- ▶ **Delete All**
- ▶ **Send Task Via:** Allows you to send tasks via Text Message, Multimedia Message, and Bluetooth.
- ▶ **Sort By:** Allows you to sort tasks by Date, Status, and Priority.
- ▶ **View Calendar:** The calendar window will display, from there you will be able to create New Tasks.

Stopwatch

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 99 times) and the total time can also be displayed.

▶ New Time

1. From the standby screen, touch , ,  and select **Stopwatch**.
2. Select **New Time**.
3. To start timing, touch .

The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).

4. During the timing, you can record an individual lap time by touching . Up to 99 lap times can be recorded.
 5. You can stop timing by touching  or restart by touching .
 6. To reset the stop watch, touch .
- ▶ **Saved Times:** You can see the saved recorded times.
 - ▶ **Show Last:** Displays the last time taken with the Stopwatch.

Calculator

The calculator function allows you to calculate simple mathematical equations.

To access the Calculator

1. From the standby screen, touch , ,  and select **Calculator**.

Tip Calculator

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

To access Tip Calculator

1. From the standby screen, touch , ,  and select **Tip Calculator**.

Unit Converter

This function converts any measurement into a unit you want.

There are 7 types of units that can be converted: Currency, Area, Length, Weight, Temperature, Volume and Velocity.






To access Unit Converter

1. From the standby screen, touch  , and select **Unit Converter**.

Clock

The alarm clock function allows you to set up multiple separate alarms. You can set the time, repetition interval and desired alarm tone.

To set a New Alarm

1. From the standby screen, touch  , and then .
2. Select **New Alarm**.
3. Configure the following settings:
 - ▶ **Time:** Input your desired alarm time by specifying the hour and minutes. If the time is in the 12 hour format, you have to select either  or  by touching it. You can also choose a predefined amount of time (15 Minutes Later, 30 Minutes Later, 45 Minutes Later, 1 Hour Later, Off).
 - ▶ **Repeat:** Select the desired repeat mode from Once, Daily, Mon ~ Fri, Sat ~ Sun, Select Weekday, and Except Holiday.
 - ▶ **Alarm Tone:** Select the desired alarm tone to use for the set alarm.
 - ▶ **Alarm Volume:** Allows you to adjust the alarm volume.
 - ▶ **Alert Type:** Select the desired Ring Alert Type.
 - ▶ **Memo:** Input alarm name.
 - ▶ **Snooze Interval:** You can set the snooze interval at 5 Minutes, 15 Minutes, 30 Minutes, 45 Minutes, 1 Hour, or Off.

4. Touch **Save** to save your alarm.

Quick alarm

In the Alarm Clock menu, touch **Quick Alarm** to set a Quick Alarm.

1. Drag the bar from left to right to set the time; 60 minutes is maximum set value.
2. Scroll down to configure the options Alarm Tone, Alarm Volume, Alert Type, Memo and Snooze Interval.
3. Touch **Save** to save the alarm.

File Manager

From the standby screen, touch ,  tab, and then  to access the File Manager.

This allows you to view all types of contents files in the internal phone memory and the external memory card.

Touch  for the following options:

- ▶ **Send:** Send the selected file via Bluetooth, Online Locker or MMS.
- ▶ **Delete:** Allows you to delete the selected file.
- ▶ **Move To:** You can move selected files to the Phone Memory or Memory Card.
- ▶ **Copy To:** You can copy selected files to the Phone Memory or Memory Card.
- ▶ **Rename:** You can edit the name of the selected file.


- ▶ **New Folder:** Allows you to create a new folder manually.
- ▶ **Sort by:** You can sort the folders by name, date, and type.
- ▶ **Delete All:** You can delete all files and folders.
- ▶ **Used Space:** You can view internal and external memory status.

NOTE: Limits: System files/folders cannot be listed.

Other Files




From the standby screen, touch   and then  to access the following menus.

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are saved in this folder.

The following options are available when you touch .

- ▶ **Send:** Send the selected file via Bluetooth, Online Locker or MMS.
- ▶ **Delete:** Allows you to delete the selected file.
- ▶ **Move To:** You can move selected files to the Phone Memory or Memory Card.
- ▶ **Copy To:** You can copy selected files to the Phone Memory or Memory Card.
- ▶ **Rename:** You can edit the name of the selected file.
- ▶ **Sort by:** You can sort the folders by name, date, and type.
- ▶ **Delete All:** You can delete all files and folders.
- ▶ **Used Space:** You can view internal and external memory status.

AppCenter

To launch AppCenter while in the standby screen, touch  , and then touch .

Ringtones

This menu option connects to ringtone download site. It allows users to download various ringtones by connecting to the Internet.

NOTE: Additional charges may incur when downloading ringtones. Contact for additional information.

Games

This menu option connects to game download site. It allows users to download the various games by connecting to the Internet.

NOTE: Additional charges may incur when downloading games. Contact for additional information.

Cool Tools/Apps

This menu option connects to application download site. It allows users to download the various applications by connecting to the Internet.

NOTE: Additional charges may incur when downloading applications. Contact for additional information.

Videos

This menu option connects to video download site. It allows users to download various videos by connecting to the Internet.

NOTE: Additional charges may incur when downloading videos.

Color Graphics

This menu option connects to graphics download site. It allows users to download various color graphics by connecting to the Internet.

NOTE: Additional charges may incur when downloading color graphics.

Themes

This menu option connects to theme download site. It allows users to download the various themes by connecting to the Internet.

NOTE: Additional charges may incur when downloading themes.

Answer Tones

This menu option connects to Answer Tone download site. Answer Tones allows the user to choose songs that the caller can listen to instead of the traditional call ringer.

NOTE: Additional charges may incur when downloading Answer Tones.

Browser




This application connects you to the Internet. By default, the account connects you to web site.

Mobile Web is one of the services provided by Tracfone and it gives you access to all the cool things you can do with your wireless phone.


NOTE: Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account.

Launch the Browser

To launch the browser from the standby screen, touch  , and then .

Once connected, the homepage is displayed.

To exit the browser at any time, press the  [END] key.

Menus for the Browser


You can surf the Internet using either the phone keys or the Browser menu.

Using the Navigation Keys

When surfing the Internet, the navigation keys function similarly from when the phone is on standby mode.

Using the WAP Browser Menu

Online menu

Once you are connected to the Internet, the following menu options are available when you touch  [Options]:

- ▶ **Home:** Moves to the initial homepage.
- ▶ **Windows:** You can have several browser windows to navigate different web pages at the same time.
- ▶ **Enter URL:** Connects to the specific URL after editing.
- ▶ **Bookmarks:** You can add or save the current page to Bookmark or view the list saved under Bookmark.
- ▶ **Landscape View:** Allows you to view broad web pages easily.
- ▶ **View Full Screen:** View current page in full screen.
- ▶ **Search Text:** You can search the text what you want to find.
- ▶ **Recent Pages:** Allows you to see a list of recently visited web pages.
- ▶ **Send URL:** Allows the current page URL via SMS to another person.
- ▶ **Settings:** Allow you to set options such as Cache, Cookie and other Browser Settings.
- ▶ **Browser Help:** Opens Help Overview to help make your browsing experience easier.
- ▶ **Exit:** Exits the browser.

Settings

Display

From the standby screen, touch , , and then  to access the Display settings menu.

Wallpapers

This menu allows you to set a picture or color as your background. You may also choose to have no background wallpaper.

Fonts

You can configure the font size and color of the numbers which appear in the Dialing screen when you make a call. You can also set the font size for menus and lists.

Brightness

You can set the brightness of the display screen.

Backlight Timer

Use this to set the duration of the touch screen backlight and keypad.

Phone

 
From the standby screen, touch , , and then  to access the Phone settings menu.

Languages

You can change the language for the display text on your phone. This change will also affect the Language Input mode.

Auto Screen Lock


This allows you to set the amount of time before your screen locks automatically.

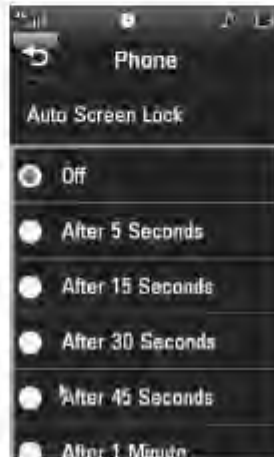

If you set **When Closing Slider** to **ON**, the screen will be locked automatically when you slide down the phone.

Set Flight Mode

 This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prohibited. If you set the flight mode **ON**, you will be prompted to confirm your selection. After you confirm it by touching **Yes**, the Flight mode icon will be displayed on the screen instead of the network signal icon.

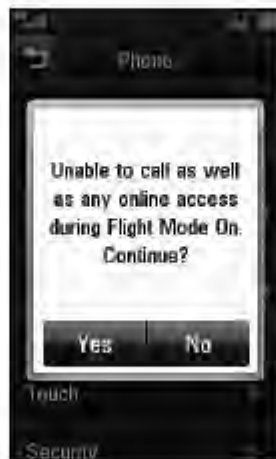

- ▶ **ON**: You cannot make (or receive) any calls, including emergency calls or use other features that require network coverage.
- ▶ **OFF**: Deactivates Flight Mode and re-establishes your wireless connections.

Security

Various codes and passwords are used to protect the features and settings of your phone. They are described in the following sections.

- ▶ **Phone lock**: You can use a security code to avoid unauthorized use of the phone. If you set phone lock to **When Power On**, the phone will request a security code whenever you switch the phone on. If you set the phone lock to **When SIM Changed**, your phone will request a security code only when you change your SIM Card. If you set the phone lock to **Lock Phone Now**, your phone will lock immediately.

- ▶ **PIN Code Request:** When the PIN code request feature is set to **ON**, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

NOTE: Before setting the PIN code request feature to Off, you must enter your PIN.

- ▶ **Fixed Dial Number:** This allows you to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM Card. The PIN2 code is required.
 - **FDN On/Off**
 - **ON** : You can only call phone numbers stored in the FDN List. You must enter your PIN2.
 - **OFF** : You can call any number.
 - **FDN List:** You can enter new FDN entry.
- ▶ **Change Codes:** The Change codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one. You can change the access codes for: Security Code, PIN1, PIN2

NOTE: Not all SIM Cards have a PIN2. If your SIM Card does not, this menu option is not displayed.

Reset Settings

This function allows you to restore factory settings. To do this, you need the security code.

- ▶ **Master Reset:** Restores the settings (e.g.: Audio, Display, Language, Date & Time, Bluetooth Settings) stored in the handset memory to default values.
- ▶ **Master Clear:** Deletes downloaded or user created contents (e.g.: images, videos) from the phone and the external memory card.
 - **Phone**
 - Deletes all downloaded or user Images, Videos & Sounds from the phone memory.
 - Deletes personal information stored in the handset memory (e.g.: address book, messages, tasks, alarm, Calendar schedules) to default values.
 - Restores the settings stored in the handset memory to the default values.
 - **Memory Card:** Deletes all contents from the external memory card.

Call

From the standby screen, touch , , and then  to access the Call settings menu.

Call Forwarding

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. Select one of the forwarding options, for example, select **If Busy** to divert voice calls when your number is busy or when you reject an incoming call.


The following options are available:

- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Answer:** Diverts voice calls which you do not answer.
- ▶ **If Out of Reach:** Diverts voice calls when the phone is turned off or is out of coverage.
- ▶ **Deactivate All:** Turns Off all call forwarding options so that all incoming calls are received by your handset.

Send My Number

This network service allows you to set your phone number to be displayed (**On**) or hidden (**Off**) from the person you are calling. You can select **Set by Network** if you prefer to have different settings for different service providers.

Auto Redial


If you select On, your phone redials the number you're trying to call up to 10 times after you hear a quick, busy signal. Press  to stop the call attempts.

This feature attempts to redial numbers that are engaged due to the wireless network. It does not redial numbers to an engaged party.

NOTE: There will be no alert indicating the call has been connected. You must stay on the line to hear when the call is connected.

Answer Mode

This allows you to determine how to answer the phone.

- ▶ **Any Key:** You can answer an incoming call by touching any key.
- ▶ **Send Key Only:** You can only answer an incoming call by pressing .

Minute Minder

This option allows you to specify whether the phone will beep every minute during a call to keep you informed of the length of the call.

Call Waiting

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Deactivate** to request the network to deactivate call waiting, or **View Status** to check if the function is active or not.

Call Reject

This menu allows you to turn On or Off Call Reject for all numbers or the numbers in the Call Reject List.

- ▶ **Call Reject On/Off:** This feature allows you to choose whether to reject incoming calls or calls from specific phone numbers. When the **Reject All Calls** option is set, all incoming calls are routed directly to Voicemail. **Reject on List** allows you to enable Call Reject for the numbers saved on your Call Reject List.
- ▶ **Call Reject List:** Allows you to view a list of the numbers you wish to reject and add new numbers to the list. You have the option of choosing numbers from your Contacts List or new numbers.

Send DTMF Tones

Select from ON / OFF.

TTY

Select from TTY Full/TTY Talk/TTY Hear/TTY Off.

Hearing Aid

Select from ON / OFF.

Time & Cost




You can check Call Duration and Data Counter.

Touch

From the standby screen, touch , , and then  to access the Touch settings menu.

You can customize the Touch settings and change Touchscreen Feedback. When you set Sound as Touchscreen Feedback type, you can choose your desired sound type and adjust its volume.

Date & Time

From the standby screen, touch , , and then  to access the Date & Time settings menu.

- ▶ **Date Format:** This allows you to enter the day, month, and year.
ddd, MMM DD (day, month date)
MM/DD/YYYY (month/date/year)
DD/MM/YYYY (date/month/year)
YYYY/MM/DD (year/month/date)
- ▶ **Time Format:** This allows you to enter the current time. The time format can be changed between 12 Hours and 24 Hours.
- ▶ **Auto Update:** Allows you to configure the time and date to automatically update according to the current local time zone.

Sound

From the standby screen, touch , , and then  to access the Sound settings menu.

Ringtone

- ▶ **Sounds:** Shows and plays ring tones. You can select your preferred Ringtone by touching the ringtone listed.
- ▶ **Volume:** Allows you to adjust your Ringtone volume.
- ▶ **Alert Type:** Supports 3 ring alert types: Ring, Ring and Vibration, and Ring after Vibration.
- ▶ **Increasing Ringtone:** Allows you to select an Increasing Ringtone type which is played when you receive an incoming call.

Message Tone

- ▶ **Sounds:** Shows and plays message tones. You can select your preferred Message tone by touching the message tone listed.
- ▶ **Volume:** Allows you to adjust your new message alert tone volume.
- ▶ **Alert Type:** Supports 4 message alert types: Ring, Ring & Vibrate, Vibrate and Silent.
- ▶ **Alert Interval:** Supports 5 message alert interval: Once, Every 2 Min., Every 5 Min., Every 10 Min. and Every 15 Min.

NOTE: Full length music tracks cannot be set as either ringtones or message tones.

Alert Tone

- ▶ **Sounds:** Allows you to select a set of alert tones. Supports 2 alert tone types:
Alert Tone 1 and Alert Tone 2.

- ▶ **Volume:** Allows you to adjust your alert tone volume.
- ▶ **Alert Type:** You can select to set Alert Tones to Ring or Silent.

Dial Readout

Select from OFF / ON.

Keypad Tone

This menu option allows you to select a tone that the phone sounds when a key is pressed.

- ▶ **Sounds:** Allows you to select a set of keypad tones. Supports 3 keypad tone types: Beep, MIDI1 and MIDI2.
- ▶ **Volume:** Allows you to adjust your keypad tone volume.

Multimedia

This menu allows you to adjust your multimedia volume.

Call

This menu allows you to adjust your call volume.

Bluetooth

From the standby screen, touch , , and then  to access the Bluetooth function settings menu.

Your phone has built-in Bluetooth® wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth® devices such as a hands-free device, PC, PDA, a remote screen or other phones. The devices registered in your phone can only be connected one at a time.

You can have a conversation via a cordless Bluetooth® hands-free phone or browse the Internet, wirelessly connected, via a mobile phone.

You can also exchange, for example, business cards, calendar items and pictures.

Music playing is supported through a Bluetooth® headset.

Hands-free profile

This icon appears when the hands-free profile is used between the hands-free device. This allows you to call using a Bluetooth® connection.

A2DP profile

This icon appears when the A2DP profile is used between the stereo headset device and the phone. This allows you to listen to an audio clip. A2DP is the Advanced Audio Distribution Profile, which provides support for streaming either mono or stereo audio using Bluetooth®.

Hands-free + A2DP profile





This icon appears when both profiles of the hands-free and the A2DP are used between the compatible device and the phone. This allows you to call and listen to an audio clip using a Bluetooth® connection.

 
When using each device, see the manual that comes with the device.

NOTE: We recommend that your phone and the Bluetooth® device you are communicating with should be no more than 10 meters apart. The connection may be improved if there are no solid objects between your phone and the other Bluetooth® device.

- ▶ **Bluetooth:** This menu allows you to turn Bluetooth On or Off.
- ▶ **My Visibility:** This menu allows your phone to be visible to other Bluetooth® devices for pairing.
- ▶ **Search New Device:** This function allows you to search for and add new devices.

To pair with another device

1. From the standby screen, touch  , and then .
2. Touch  to search for the device you wish to pair.

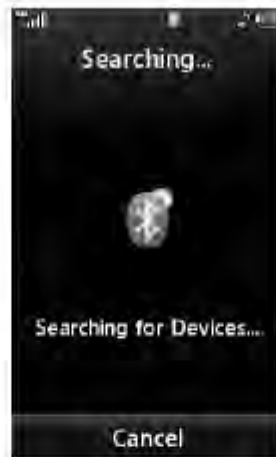

3. If you want to stop searching, touch **Cancel**.
 4. All of the devices found are displayed.
 5. Touch the desired device and enter the password. If you would like to search again, touch **Refresh**.
- ▶ **My Devices:** This function allows you to view the list of all devices that are paired with your phone.
 - ▶ **My Bluetooth Info:** This menu allows you to configure the profile for Bluetooth.
 - **My Device Name:** Allows you to change the handset's name so other Bluetooth devices trying to pair with you can easily find it.
 - **Supported Services:** Shows you all services that the handset supports.
 - **Primary Storage:** Select from Handset and Memory Card to determine the location of files received via Bluetooth.

More

From the standby screen, touch , , and then  to access the More settings menu.

Connection

USB Connection Mode


You can transfer files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable, this will be displayed as a removable disk through Windows Explorer.

The USB Connection Mode determines how your Phone will communicate with other USB devices when they are connected with a USB cable.

Internet Profiles

This menu shows the Internet Profiles. You can add, delete, and edit Internet Profiles by touching .

Access Points

This menu shows the Access Points. You can register, delete, and edit by touching .

Start Up Guide

This menu will start the animated guide. This guide will help you, using animated visuals, quickly learn some of the functions of your LG 840G.

Memory

Used Space

This function shows the status of the user memory of the handset.

- ▶ **Phone Common:** This will display the memory currently used up in your phone and will categorize it by types of files using the memory.
- ▶ **Memory Card:** You can check the current status of the external memory card in the Memory status menu.
- ▶ **Phone Reserved:** This function shows the status of the reserved memory for the user (Text Message, Contacts, Calendar, Tasks, Notepad).
- ▶ **SIM Card:** This function shows the status of the SIM Card user memory.

Set Storage Default

You can set Storage default for each case. When you need to save files from Camera, Internet Download, Bluetooth and Voice Recorder, set Phone Memory or Memory card. You can set each case separately or choose the All option and set the Storage Default all the same.

Applications Settings

This Menu allows you to adjust the settings to the following features on the phone:

Messaging

To set the message settings from standby screen, touch , , and then

Message Settings.

For more information regarding Message Settings, please refer to page 45.

Browser


This menu allows you to customize your Browsing experience by giving you the option of changing the following settings.

Accounts

This includes the network information used to connect the browser to the Internet. Select the desired account by tapping the setting.

This will activate the account that will be used for future connections.

MEdia Net is the predefined account that is set as default.

The following options will be available when you touch :

- ▶ **Delete:** Allows you to delete the account.
- ▶ **Reset All:** Allows you to delete all accounts you have created.

NOTE: You cannot edit and delete pre-installed accounts. In order to create a new account, please fill in the network information.

1. **Account Name:** Name associated with new account.
2. **Homepage:** Homepage URL.
3. **Internet Profile:** You can choose one from the Internet profiles.

NOTE: Creating or editing an account requires caution. The browser cannot connect to the Internet if the account information is incorrect.

Appearance

You can choose the settings of the browser appearance (Text size, Encoding, Show Image, JavaScript).

Cache

The web pages you have accessed are stored in the memory of the phone.

- ▶ **Clear Cache:** Remove all cached data in the memory.
- ▶ **Allow Cache:** Allows you to turn the memory cache On or Off.

NOTE: A cache is a buffer memory, which is used to store data temporarily, especially when it is online.

Cookies

The information of services you have accessed are stored in what is called a Cookie.

- ▶ **Delete Cookies:** Allows you to delete all stored cookies.
- ▶ **Allow cookies:** Allows you to turn cookies On or Off.

Clear Login Info.

Allows you to clear your registered user ID's and passwords.

Rendering mode

You can set the Rendering mode to Standard or Text Only.

Security

A list of the available certificates is shown.

- ▶ **Certificates:** You can see the list of certificates and view them in detail.
- ▶ **Clear Session:** Removes the secure session.

Secure Popup

You can control the pop-up which indicates a secure page.

Voice Command

- **Mode**
 - **Speed:** Voice Command is abbreviated.
 - **Normal:** Voice Command is played normally.
- **Best Match**
 - **1 Match:** The most likely match will be displayed to find a number from the address book
 - **4 Matches:** The four most likely matched names will be displayed to find a name from the address book
- **Sensitivity**
 - **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.
 - **Medium:** Operation of voice recognition engine is normally affected by user's voice command and surrounding sound.
 - **Low:** Operation of voice recognition engine is strongly affected by user's voice command and surrounding sound.
- **Spk. On Mode**
 - **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance.

- **Off:** When this option is selected, sound is quieter, and can only be heard through the Earpiece.
- **Call Alert**
 - **Ring Only:** Rings repeatedly when you receive a call.
 - **Ring After Name:** Tells the name of the Contact once and then rings repeatedly when you receive a call.
 - **Name Repeat:** Tells the name of the Contact repeatedly when you receive a call.

Phone Information

This menu is used to view Operation System, My Numbers, Manufacturer, Model Name, Device ID, Hardware Version, Software Version, Language and DM Client Version information.

Accessories

There are a variety of accessories available for your mobile phone, some of which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery. It supports standard US 120 Volt 60Hz outlets.



Battery



NOTE:

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm (0.54inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm (0.54inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Body-worn accessories that cannot maintain 1.5cm (0.54inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

HAC statement

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use. In the example to the left, if a hearing

aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard. When you’re talking on a cell phone, it’s recommended that you turn the secondary transmitters like a BT (Bluetooth) or WLAN off for HAC.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/hearingaid/>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html