

Digital Photo Printer
DP-1045
Operation Manual

First edition : Aug 8, 2011

Latest edition : -

Revision : -

SINFONIA TECHNOLOGY CO., LTD.

<http://www.sinfo-t.jp>

Handling of this Manual

1. All rights reserved. No part of this operation manual covered by the copyright herein maybe reproduced or copied in any form or by any means, including translation, without the written permission of SINFONIA TECHNOLOGY Co., Ltd.
2. The specifications in this operation manual are subject to change without prior notice.
2. In case of having any difficulties or finding the fault in This manual, your information to SINFONIATECHNOLOGY will be highly appreciated.

Introduction

This manual describes detailed instructions for handling of and basic operation of Digital Photo Printer DP-1045.

We will describe this product as “the printer” in the manual.

Read this manual thoroughly to understand how to install and operate the printer before using it.

Notice

- Keep this manual near the printer and operators can refer to this manual periodically.
- In case, lost or damaged this manual, contact your dealers.
- In the case of transfer, do not forget to put this manual together with the printer.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CONTENTS

PREFACE

Chapter 1. Important Safety Instruction	1-1
Environments	1-2
Handling Instruction	1-3
Handling Instruction - Continued from previous page	1-4
Handling Instruction for Consumable and Printed Output	1-5
Chapter 2. Installing and Set Up	2-1
Unpacking and checking the accessories	2-1
Parts Name and Function	2-3
Connecting Power Cord	2-4
Connecting USB Cable	2-5
Installing Dust Box	2-5
Loading Paper	2-6
Loading Ink Ribbon	2-7
Transporting the Printer	2-9
Chapter 3. Operation Panel	3-1
Operation Panel	3-1
LCD Display	3-2
User Set Up Mode	3-3
Chapter 4. Routine Maintenance	4-1
Cleaning of Thermal Head, Platen Roller, Pinch Roller, Cleaning Roller	4-1
Cleaning of Outer Cabinet	4-4
Cleaning of Filter	4-4
Chapter 5. Error Handling	5-1
Error Message and Corrective Action	5-1
Failure Symptoms	5-3
Upper (R/L) Jam	5-4
Lower Jam	5-6
Power Supply Interrupted during Printing	5-8
When the ribbon is snapped	5-8
Chapter 6. After-sales Service	6-1

Chapter 1. Important Safety Instruction

This manual provides detailed instructions for the safety use of the printer. Read this manual before operating the printer to ensure to have proper use.

- ◆ In this manual, there are notes that require special attention. For your safety operation, Safety notices are separated as follows;



Warning: Inappropriate handling can cause the death or serious wound.



Caution: Inappropriate handling can cause the wound for the users and/or cause the physical damage.

Attention: Explanation about the cause of the trouble and the environmental condition.

- ◆ It is difficult to forecast all the danger in setting and use of the printer. Therefore, warnings in this Operation Manual, in the other documents on the printer cannot cover all the cases. In case of performing the operation or maintenance which are not described in this manual, all the concern for the safety have to be taken care of at the customer side.
- ◆ Operations and the notification for the maintenance described in this manual and other documents are for the proper use of the printer. In case of using the printer for the other purpose, all the concern for the safety has to be taken care of at the customer side.
- ◆ Do not perform the operation which are prohibited in this manual and other documents.
- ◆ The contents that cannot be printed due to a failure while using the use of this printer are not guaranteed.

Chapter 1. Important Safety Instruction

Environments

To use the printer safely, please pay attention to the followings:



Caution: Do not let children to touch the printer or the cables.
It can cause accidents or electric shock.



Caution: Do not place the printer under humid or dusty place.
It can cause a fire, electric shock or printer problem.
Do not place the printer with dust, sand and high humidity such
as bathing place, bathroom, hot spring, on the street.



Caution: Do not place the printer on rickety place and/or inclined place.
Printer may fall down or tumble and it can cause injury.

Attention: Do not place the printer under the low temperature such as ski gelande,
skating rink or open-air with direct sunlight.



Warning: Do not put vase, flowerpot, and cup with water inside or metric
items.
In case the water spilt or metric items fall into the printer, it can
cause the fire and electric shock.



Warning: Do not block the openings of the printer. In case, the opening
blocked, the heat will remain inside and it can cause the fire.



Warning: Do not insert or fall the metallic items or flammable items into
the printer through the openings of the printer, it can cause the
fire and electric shock.

Chapter 1. Important Safety Instruction

Handling Instruction

In handling the printer, please pay attention to the followings;



Warning: Lift the printer from its box and put it onto a flat floor.



Warning: At nearly 70Kg, the printer is too heavy to be lifted by one person. Also please take a good care of your hands and fingers when lifting the printer from the box.



Warning: The printer is heavier at front side than rear side so that please be careful in transportation. When moving the printer, hold the handles provided at the front and the rear. The printer must be handled by more than two persons during the transportation.



Warning: Be careful when you transport the printer on the slippery floor.



Warning: In case the printer was damaged, firstly turn off the power of the printer and remove the power cord, then contact the dealers or service center. To use the printer without any checking, can cause the fire or electric shock.

Attention: At installation, appropriate interface cable will be required with your computer.



Warning: Do not dismantle or remodel the printer. Some sections of the printer contain a high voltage or become very hot. Ignoring this warning may cause electric shock, fire, or burns.

Chapter 1. Important Safety Instruction

Handling Instruction - Continued from previous page



Warning: Secure the power cable firmly.



Warning: The thermal head reaches high temperature during operation but this is normal. Do not touch the thermal head.

Attention: Touching the surface of the thermal directly can cause the damage to thermal head. When a hard object get into the printer, it can cause the damage to the printer mechanism. In such case, please do not use the printer.



Warning: Do not attempt to service the printer beyond the instruction specified in this document. In case, impossible to recover from the problem, please contact to the dealers or service center.



Warning: This product must be grounded, and always used with only the specified power cable or the power cable accompanying this product. If the product is used without ground, and current leakage occurs, fire or electrical shock is most likely to result, and also cause signal-receiving interference to a radio, a television receiver, and other similar electric appliances. If the proper grounding connection is not possible, please contact to the dealers or service center.

Chapter 1. Important Safety Instruction

Handling Instruction for Consumable and Printed Output

In handling the ink ribbon, paper and printed output, please pay attention to the followings;

Attention: Paper Handling

- Use the paper specified by Shinko Electric.
- Store the paper flat.
- Store the paper in a dry and dark place to avoid the direct Sunlight. (Temperature less than 30°C, Humidity: less than 60%).
- Do not touch the paper surface before printing to avoid the fingerprints.

Attention: Ink Ribbon Handling

- Use the ink ribbon specified by Shinko Electric.
- Store the ink ribbon in cool place to avoid the direct sunlight. (Temperature less than 30°C, Humidity: less than 60%)

Attention: Printed Output Handling

- Store the printed output in a dark place to avoid the direct sunlight.
- Store the printed output away from the organic fluid such as benzene, thinner and alcohol which may change or deteriorate the colors.



Caution: When abandon the ink ribbon, please handle it as harmful industrial waste.



Caution: Be careful not to injure your hands with the paper edge when handling paper.

Chapter 1. Important Safety Instruction


<MEMO>

Chapter 2. Installing and Set Up

This chapter explains the unpacking and set up of the printer.


Before proceeding to this chapter, please make sure to read Chapter 1. Important Safety Instruction.

Unpacking and checking the accessories

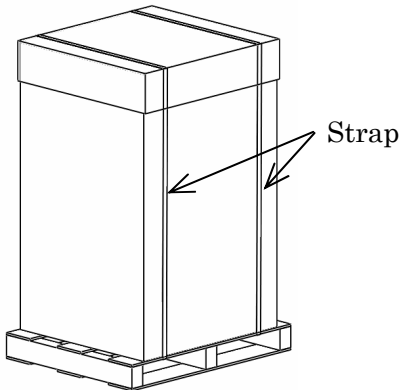


1. Cut the straps and remove Outer Box (Top). Remove Accessory Box and Cushion (Top).
2. Remove Outer Box(Middle). And remove slope cardboard and cushion (Lower Front).

Attention: Keep the packaging materials. The box and protection materials are necessary when moving or transporting the printer. Make sure that they are retained.

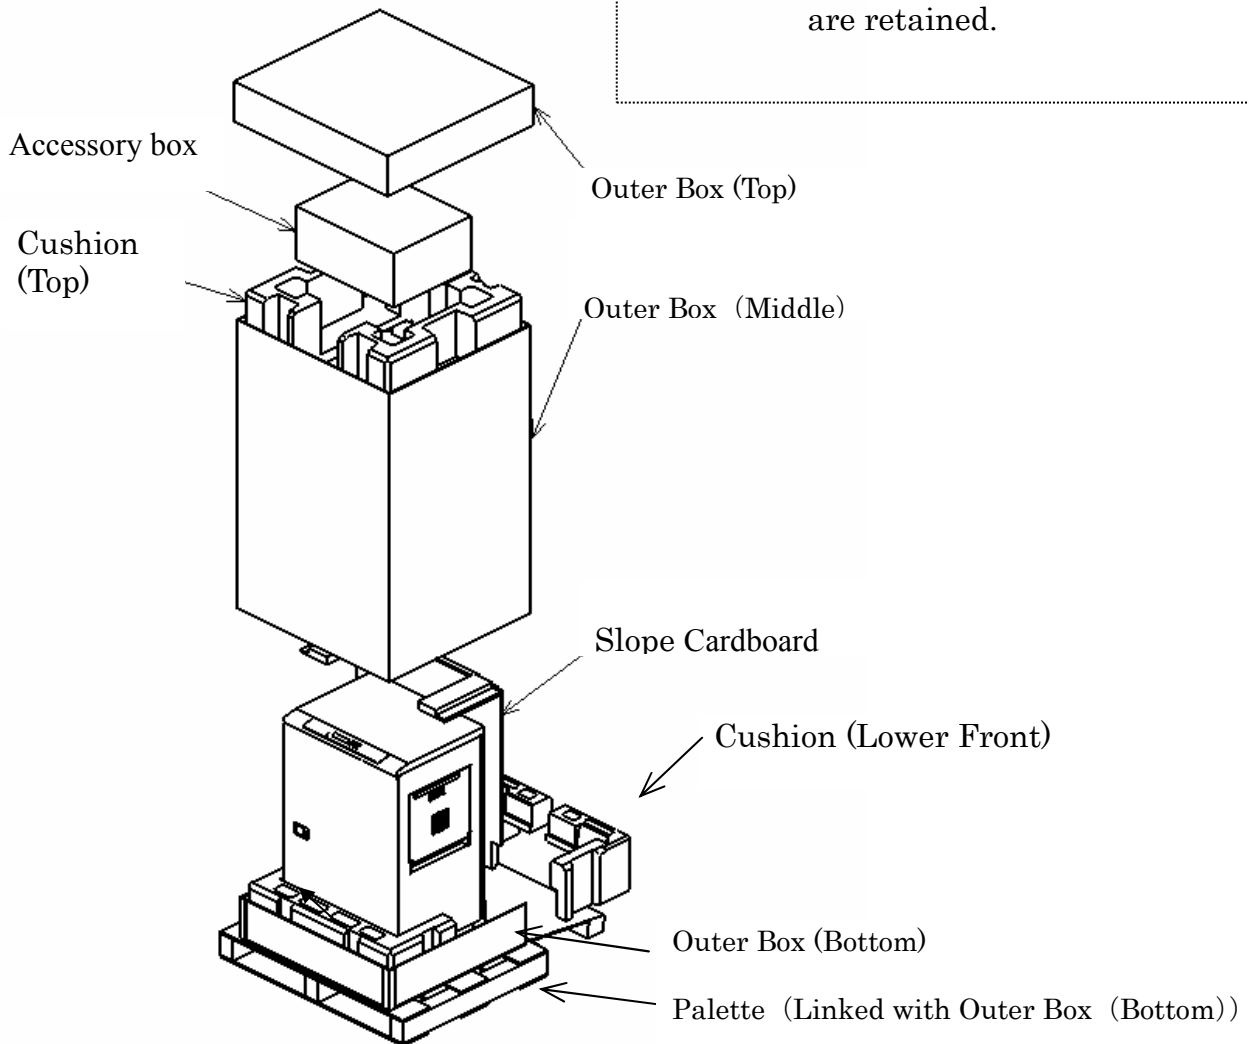

Chapter 2. Installing and Set Up

Cushion (Lower Front)

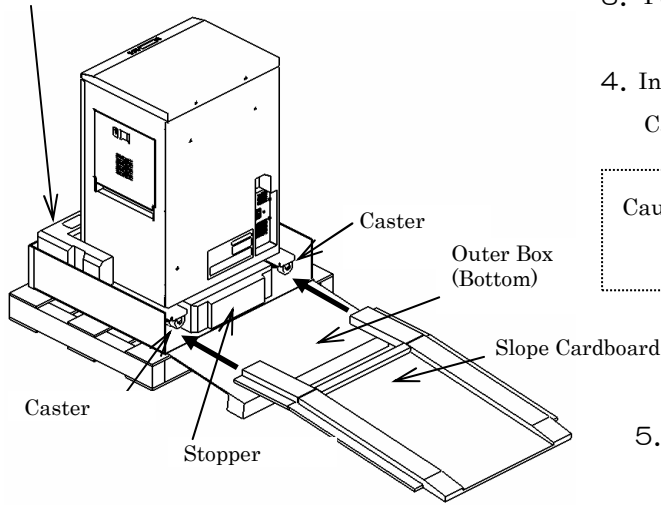


3. Pull down the Outer Box (Bottom) like left side picture.

4. Insert removed Slope Cardboard between Outer Box (Bottom) to Caster of Printer Unit bottom.


Caution: Make sure to install slope cardboard until contact of Stopper.

5. Pull and slide the printer on the slope slowly to unload it with holding handles on both side of printer unit.

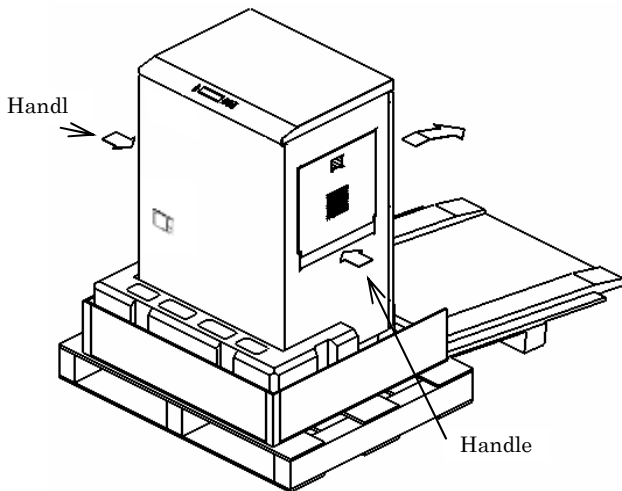


Caution: Please handle it carefully, because the weight of this printer is around 70Kg. And please make sure to use handles.

6. Take out the accessories from the box. Check that the following items, as illustrated below, are present.

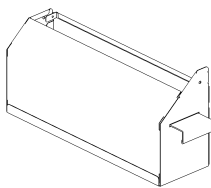

Dust box

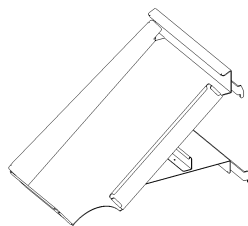

Tray



Paper flange (Black)



Paper flange (blue)




Operation Manua



Power cable

Chapter 2. Installing and Set Up

Parts Name and Function

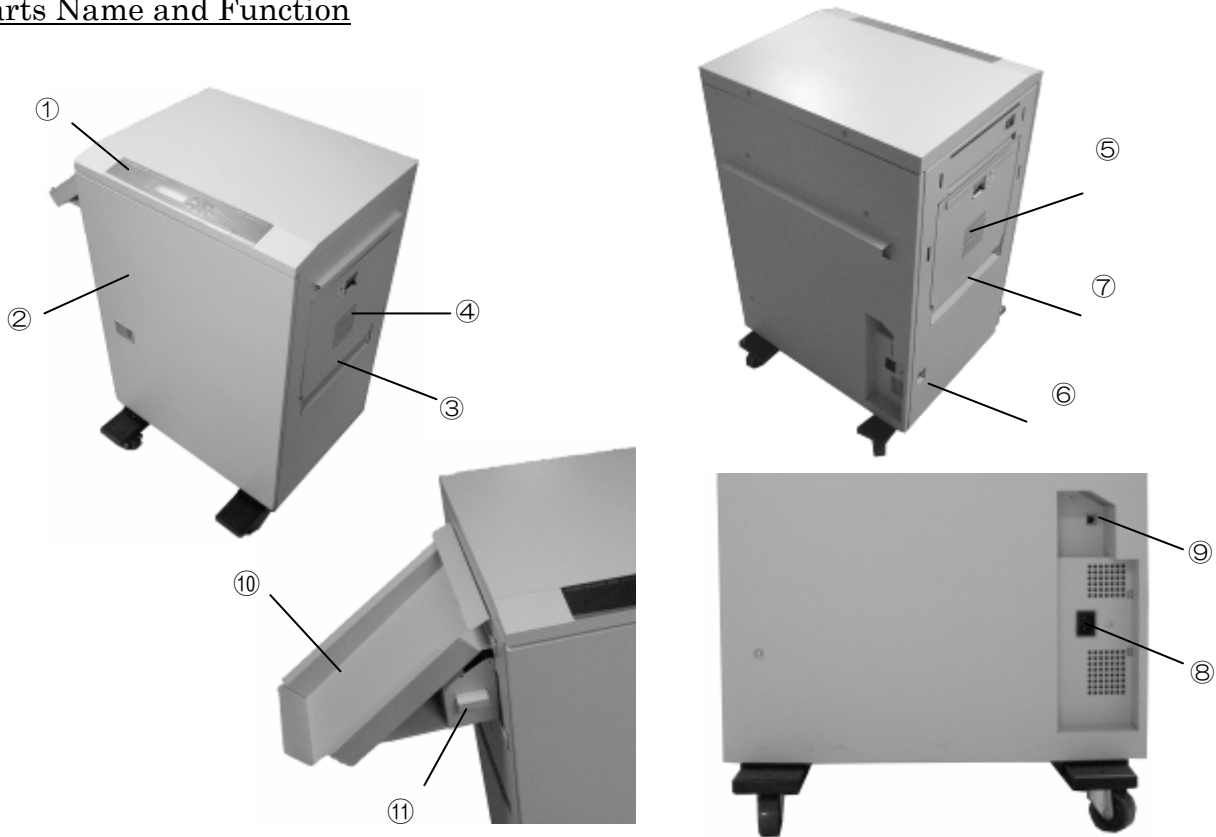

No.	Name	Function
①	Operation Panel	Control buttons, LCD and printer status display lamps are located on the panel.
②	Front Cover	Open the front cover when replacing an ink ribbon or paper, or when performing maintenance.
③	Handle (R)	When moving the printer, hold this handle and the rear handle.
④	Side Upper Cover (R)	Open this cover when inspecting and cleaning the thermal head and cleaning roller and when removing a jamming paper portion.
⑤	Side Upper Cover (L)	Open this cover when inspecting and cleaning the thermal head and cleaning roller and when removing a jamming paper portion.
⑥	Power Switch	This switch turns on/off the power of the printer. When the “ ” marked side of the switch is pressed, the power is turned on. When the “○” marked side of the switch is pressed, the power is turned off. <Caution> Once the printer is turned off, wait at least 3 seconds before turning it on again.
⑦	Handle (L)	When moving the printer, hold this handle and the rear handle.
⑧	Power Connector	To be used to connect the power cord.
⑨	USB Connector	To be used to connect the USB cable.
⑩	Tray	To be used to catch printed papers.
⑪	Dust box	To be used to keep trimmed papers.

Chapter 2. Installing and Set Up

Connecting Power Cord

Connect the power cord according to the safety instructions below.



1. Insert the power cord attached to the printer into the power connector located on the rear of the printer.



Warning: Make sure to turn off the power of the printer before inserting the power cord.



Warning: Make sure to insert the power cord correctly. If not, it can cause the fire or the printer problem.



Warning: Do not insert or remove the power cord with wet hands. It can cause the electric leakage.



Warning: Do not make any damage or any modification to the power cord. Put the heavy items on the power cord, give a strong pull to the power cord and twist the power cord can cause the fire and electric shock.



Warning: When moving the printer, make sure to turn off the power of the printer, remove the power cord in order to have no connection with other devices. Otherwise, the power cord might be damaged and it can cause the fire and electric shock. Also there is a possibility to fall down caught by the cord.




Warning: In case of not using the printer for a long time, remove the power cord for safety.



Warning: Avoid “piled up” connection. It can cause the fire and electric shock.

Chapter 2. Installing and Set Up


Connecting USB Cable

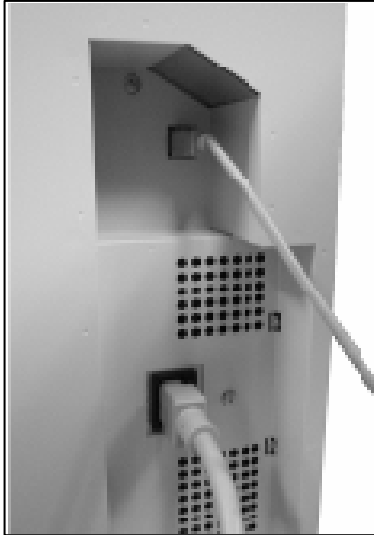


1. Connect the USB cable from the personal computer to the USB connector located on the left rear side of the printer.
Be sure to insert the USB cable all the way.

Attention: To remove the USB cable, make sure that the printer is in the waiting status.
Removing the USB cable during data transfer may not be able to print data correctly.

Installing Dust Box and Tray

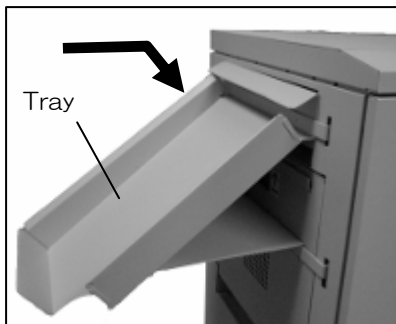

1. Insert the exit tray. Slide it downward into the four slots on the printer.


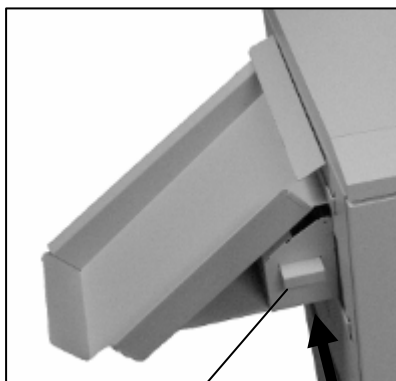


Dust Box

2. Insert the dust box. Align it with the rail on the side of the printer.
If the tray is not inserted properly, a paper jam can occur.

Chapter 2. Installing and Set Up

Loading Paper

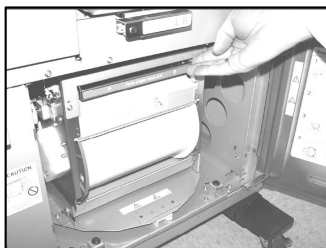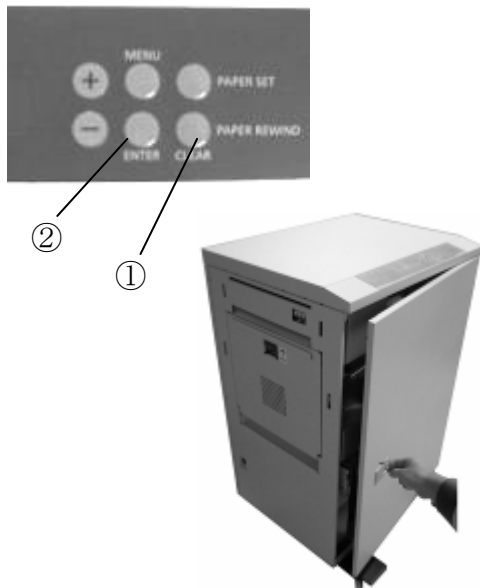

1. After confirm Front Cover is closed, push “|” side of Power Switch to turn on the power of printer.
2. Check the setting.
 - In case paper set is first time. (Step6)
 - In case paper is replaced, go to next step.
3. Push the button of PAPER REWIND button ① on control panel.
4. When “Roll Back OK?” is displayed, push the button of ENTER button②.
5. When “Load Paper” is displayed, open the Front Cover.
6. Hold up the lever to release the lock, and open Paper Unit.
7. Check the setting.
 - In case paper set is first time. (Step10)
 - In case paper is replaced, go to next step.
8. Remove used paper for replacement.
9. Remove Paper Flanges from used paper roll.
10. Install Paper Flange(Blue) and Paper Flange(Black) to new paper roll.
11. The paper is not set correctly if there is a gap of around 10mm between the paper flange and paper. Match the notch of the paper flange and the notch of the paper core by rotating the paper flange.

Do not remove the seal attached to the paper until the paper is set in the printer.
12. Set the paper in the printer.


Set the paper by matching the color of the paper flange and the cover of the holder. After setting the paper, remove the seal from the paper.
13. Close the Paper Unit.




Caution: Paper feed part carefully so as not to catch your fingers.

Chapter 2. Installing and Set Up



Loading Ink Ribbon

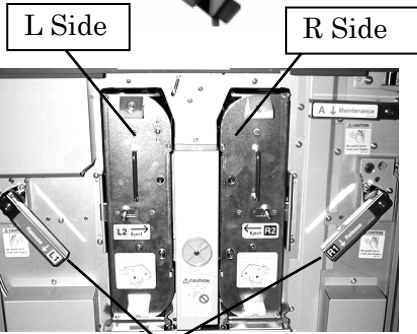

Upper Unit Open Lever

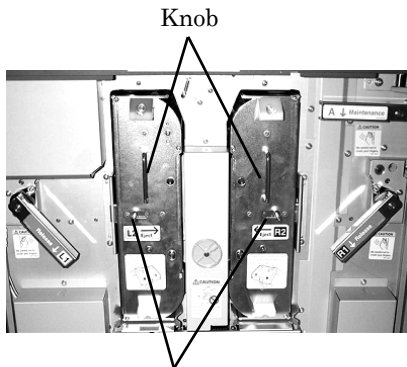

Cassette Eject Lever

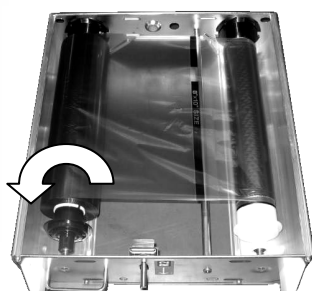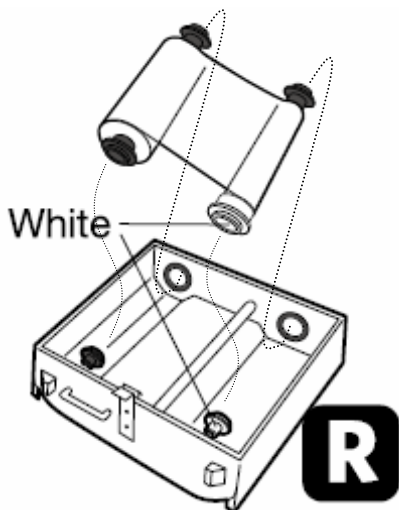

1. Open the front cover.

2. Open Upper Unit by operating Upper unit open Lever. (Lever L1 and R1)


3. Move Cassette Eject Lever in a transverse direction to release the lock, and pull out knob of Ribbon Cassette.
Be careful and operate this step with both hands not to drop the cassette after pullout, (Lever L2and R2)

4. Put the cassette on flat table with handle side to the short direction.

5. Match the color of ribbon core for one point and attach the ribbon.



6. Stretch the ink ribbon by turning the core on the ink ribbon feed side.

Chapter 2. Installing and Set Up

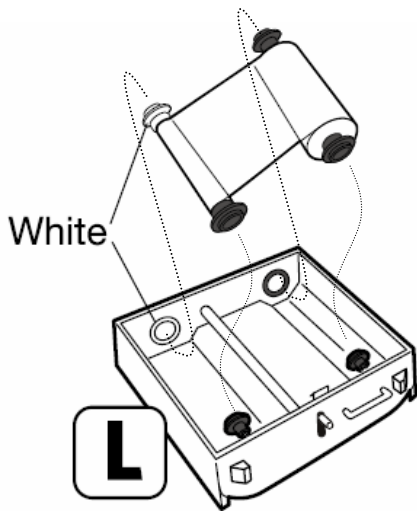

7. Replace the ink ribbon for L side same procedures as R side.

8. Insert the cassette to the original position, and confirm the Eject Lever is locked,

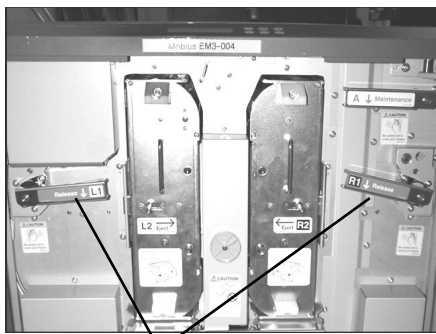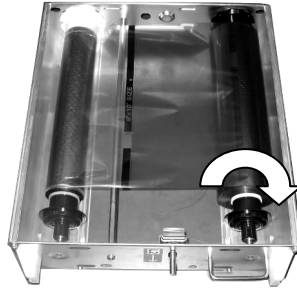

Upper Unit Open Handle

9. Return the position of Upper unit open Lever to the locked position.

10. Close the front cover.

In case Paper and Ribbon are set and the front cover is closed, initial operation is to be started automatically. And printer becomes ready status to print.



Chapter 2. Installing and Set Up

Transporting the Printer

The following cautions are necessary in transportation of the printer.


Since an incorrect transportation method causes a printer fault, follow the correct method.

1. Remove the ink ribbon and paper from the printer before transporting the printer.
If the ink ribbon or paper cannot be removed due to a fault, consult with the distributor.
2. Use a genuine box.
If the box used at the purchase cannot be used, consult with your distributor and purchase a new box.


Chapter 2. Installing and Set Up

(Repacking Procedure)

1. Fix each operation lever of printer and Open and Close Parts of Printer Unit by tapes like below pictures not to open by vibration or shock during transportation. (Use temporary tape like filament tape).


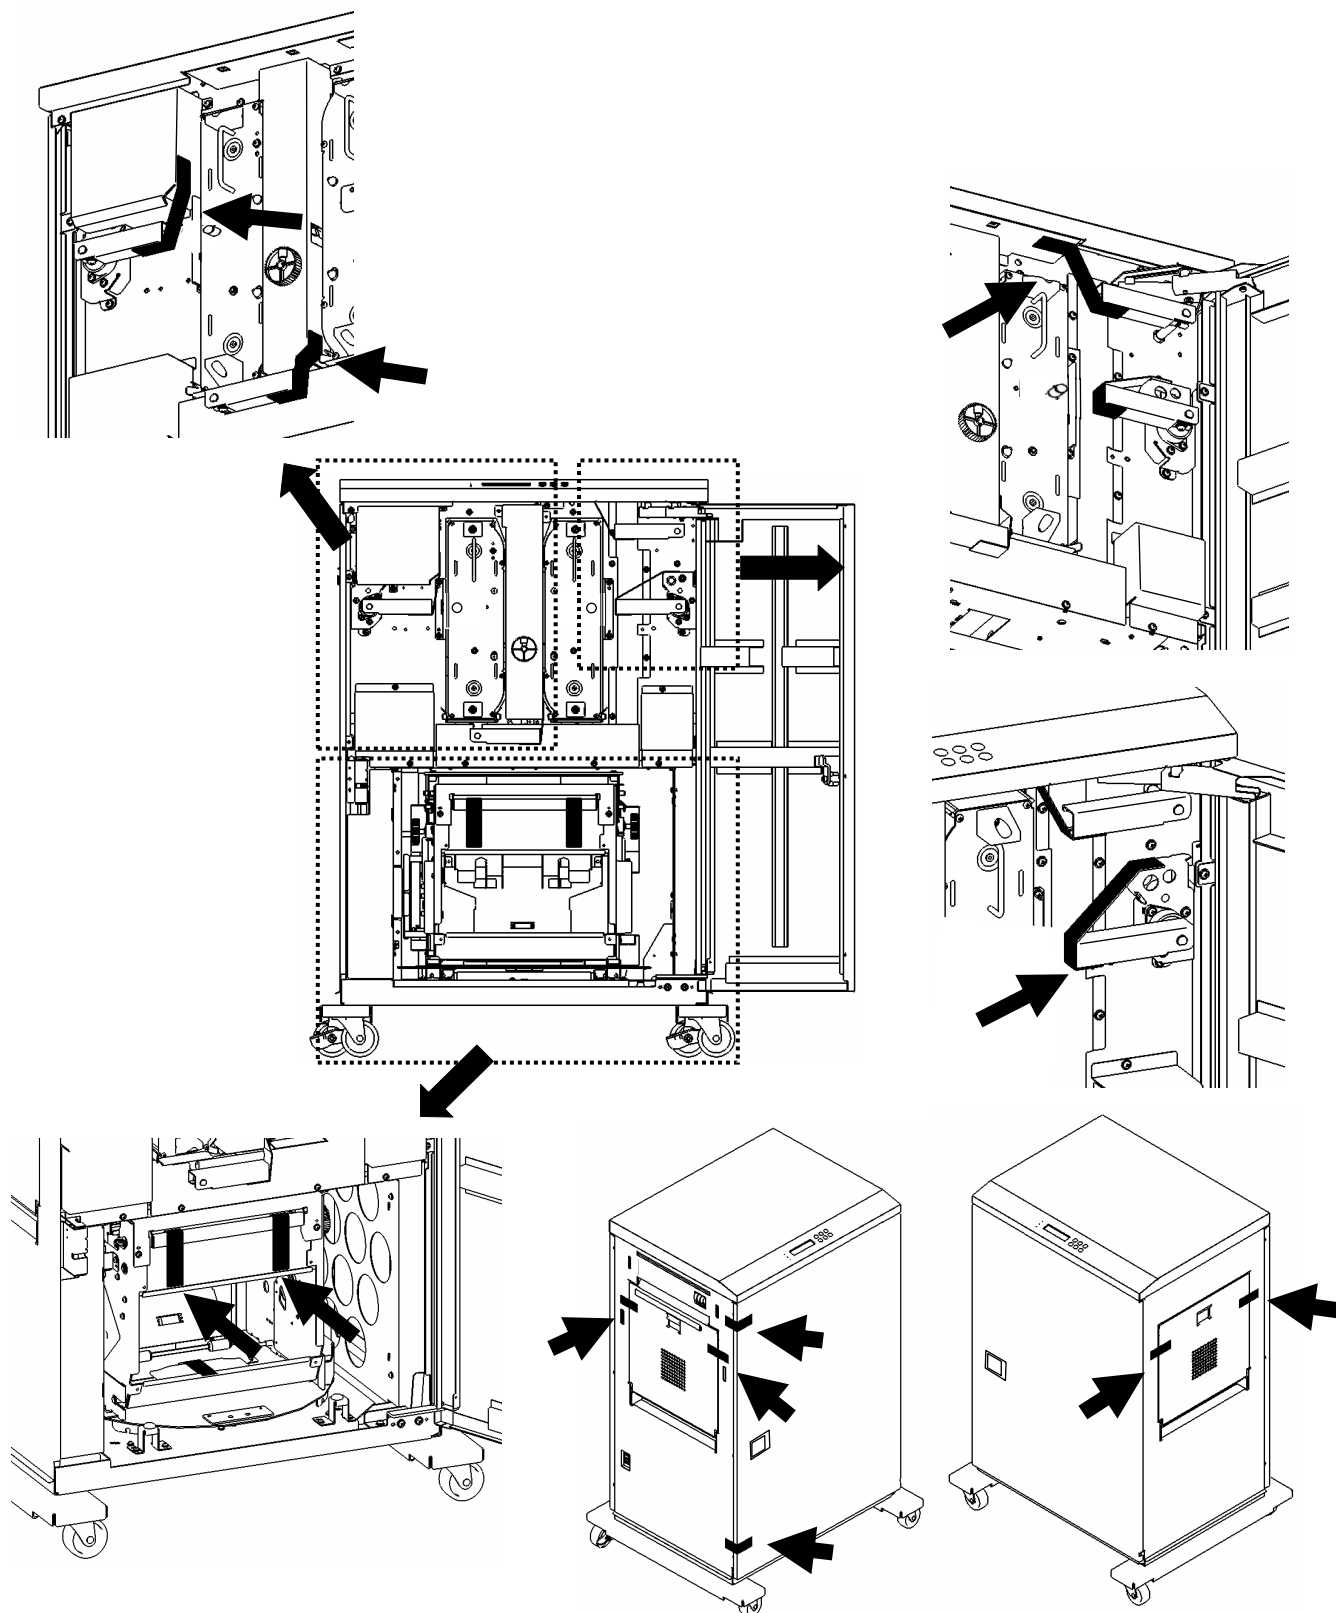


Chapter 2. Installing and Set Up

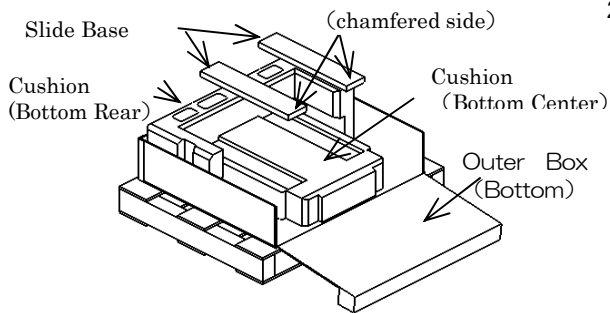

2. Set Outer Box(Bottom), Cushion (Bottom Rear) and Cushion(Bottom Middle) and put Slide Base on the concave parts of Cushion(Bottom Middle).

Caution: Pay attention to the direction of Slide Base.

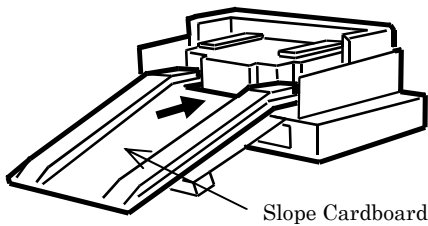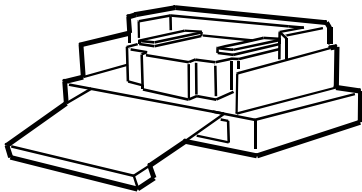


3. Set slope cardboard on the Outer Box(Bottom).

Caution: Impress Stopper Parts of Slope Cardboard to Cushion (Middle).




4. Hold right side of printer and handgrip of left side, and hold up the printer on rails of slope material. Slide the printer on rails slowly, and hold up the printer on cushion (Bottom Middle).

Caution: The weight of this printer is around 70Kg.
Be careful to handle it., And be sure to hold handgrip.

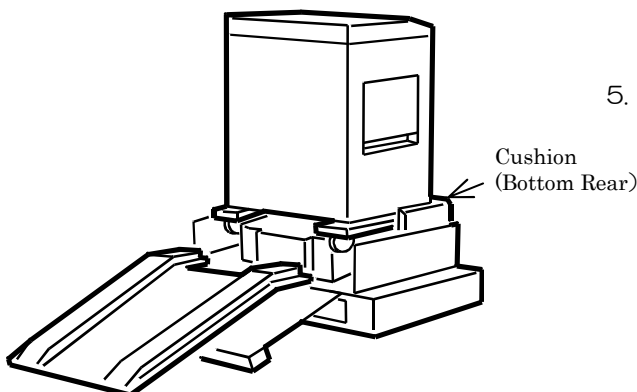


5. Push the printer until Cushion (Bottom Rear) firmly.

Chapter 2. Installing and Set Up

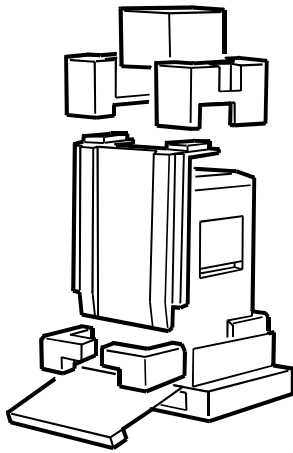


Outer Box (middle)

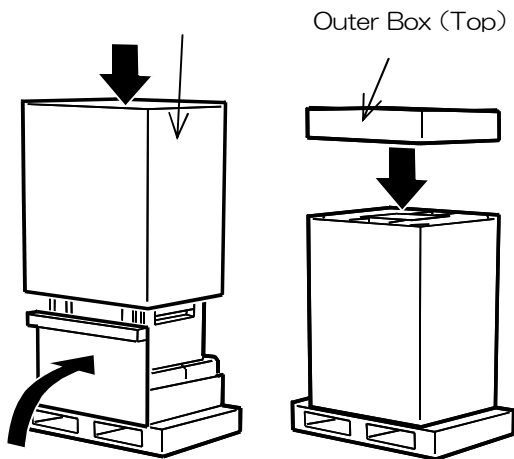

6. Set cushions, slope material and accessories box like left side picture.

7. Fold back the front side of outer box(Bottom), and cover a Outer Box (Middle) and Outer Cover(Top) in order.

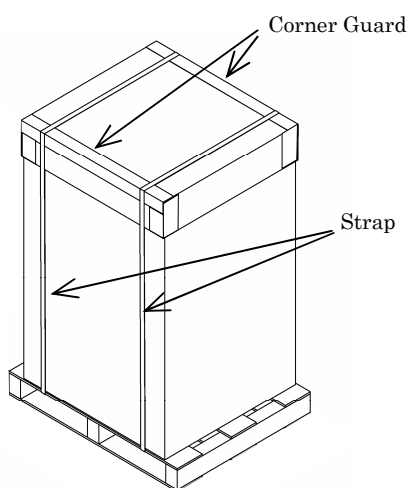

8. Allocate Corner Guards to Outer Box(Top) like left side of picture, and band Outer Boxes (Bottom, Middle and Top). (Use stout band like PP band for Packing.)


Chapter 2. Installing and Set Up

< MEMO >

Chapter 3. Operation Panel

Operation Panel

The buttons, LEDs and LCD display on the operation panel are shown below.

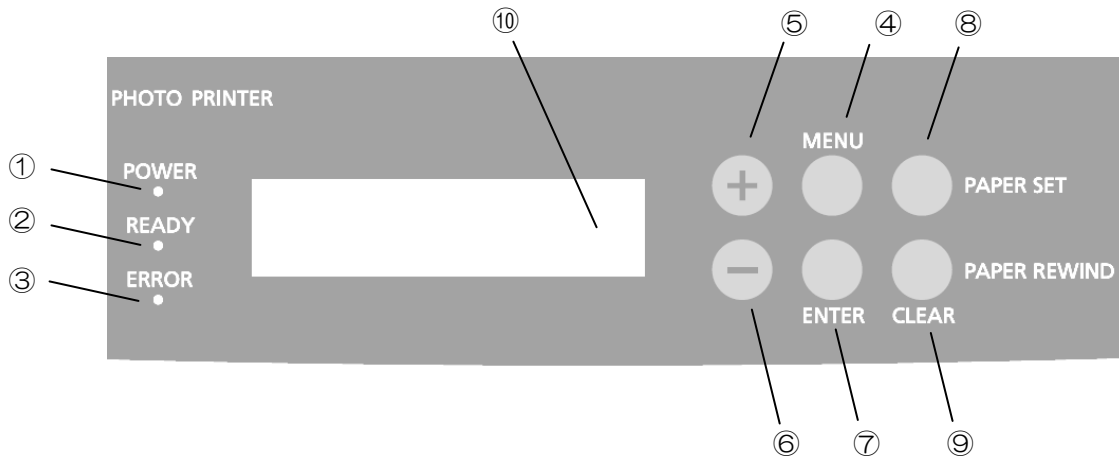

The LED Displays ① to ③ have the following meanings

No.	Name	Color	Description
①	POWER Lamp	Orange	Light when power is ON.
②	READY Lamp	Green	Light when ready to print.
③	ERROR Lamp	Red	Light when error occurs.

Individual Operation Buttons ④ to ⑨ have the following function

No	Name	Function
④	Menu Button	Pressing this button in ready state, the printer is set to a User Set Up mode. (See page 3-3.) Use this button to select an item in the menu.
⑤	+ Button	Not used since the button is for maintenance.
⑥	- Button	Not used since the button is for maintenance.
⑦	ENTER Button	Use this button to determine the selected setting contents in User Set Up mode.
⑧	PAPER SET Button	Pressing this button in ready state feeds a certain length of paper to be cut to reset the paper to the set position.
⑨	PAPER REWIND/CLEAR Button	<ul style="list-style-type: none"> Pressing this button in ready state, the paper is rewound to the feeding unit. In User Set Up mode, control exits from the menu that is displayed when this button is pressed.

Chapter 3. Operation Panel

LCD Display


The LCD Display Ⓢ indicates the following printer status

LCD Display	Description
8×□□ □□□-□□□	Printable status Display is changed depending on ink ribbon being set in the printer.
Initializing	Printer is in initialization.
Ribbon Checking	Winding the ink ribbon.
Paper Loading	Paper is being loaded.
Paper Reloading	Paper is being reloaded.
Printing	Printing.
Cooling Down	The thermal head is being cooled down. Printing is interrupted temporarily until the thermal head is cooled down.
Warming UP	The thermal head is being warmed up. Printing is interrupted temporarily until the thermal head is warmed up.

Chapter 3. Operation Panel

User Set Up Mode

To set the User Set Up Mode, press the Menu button in standby mode. When the MENU button is pressed again, the display changes as follows. To change to the standby mode from each menu, press the CLEAR button.

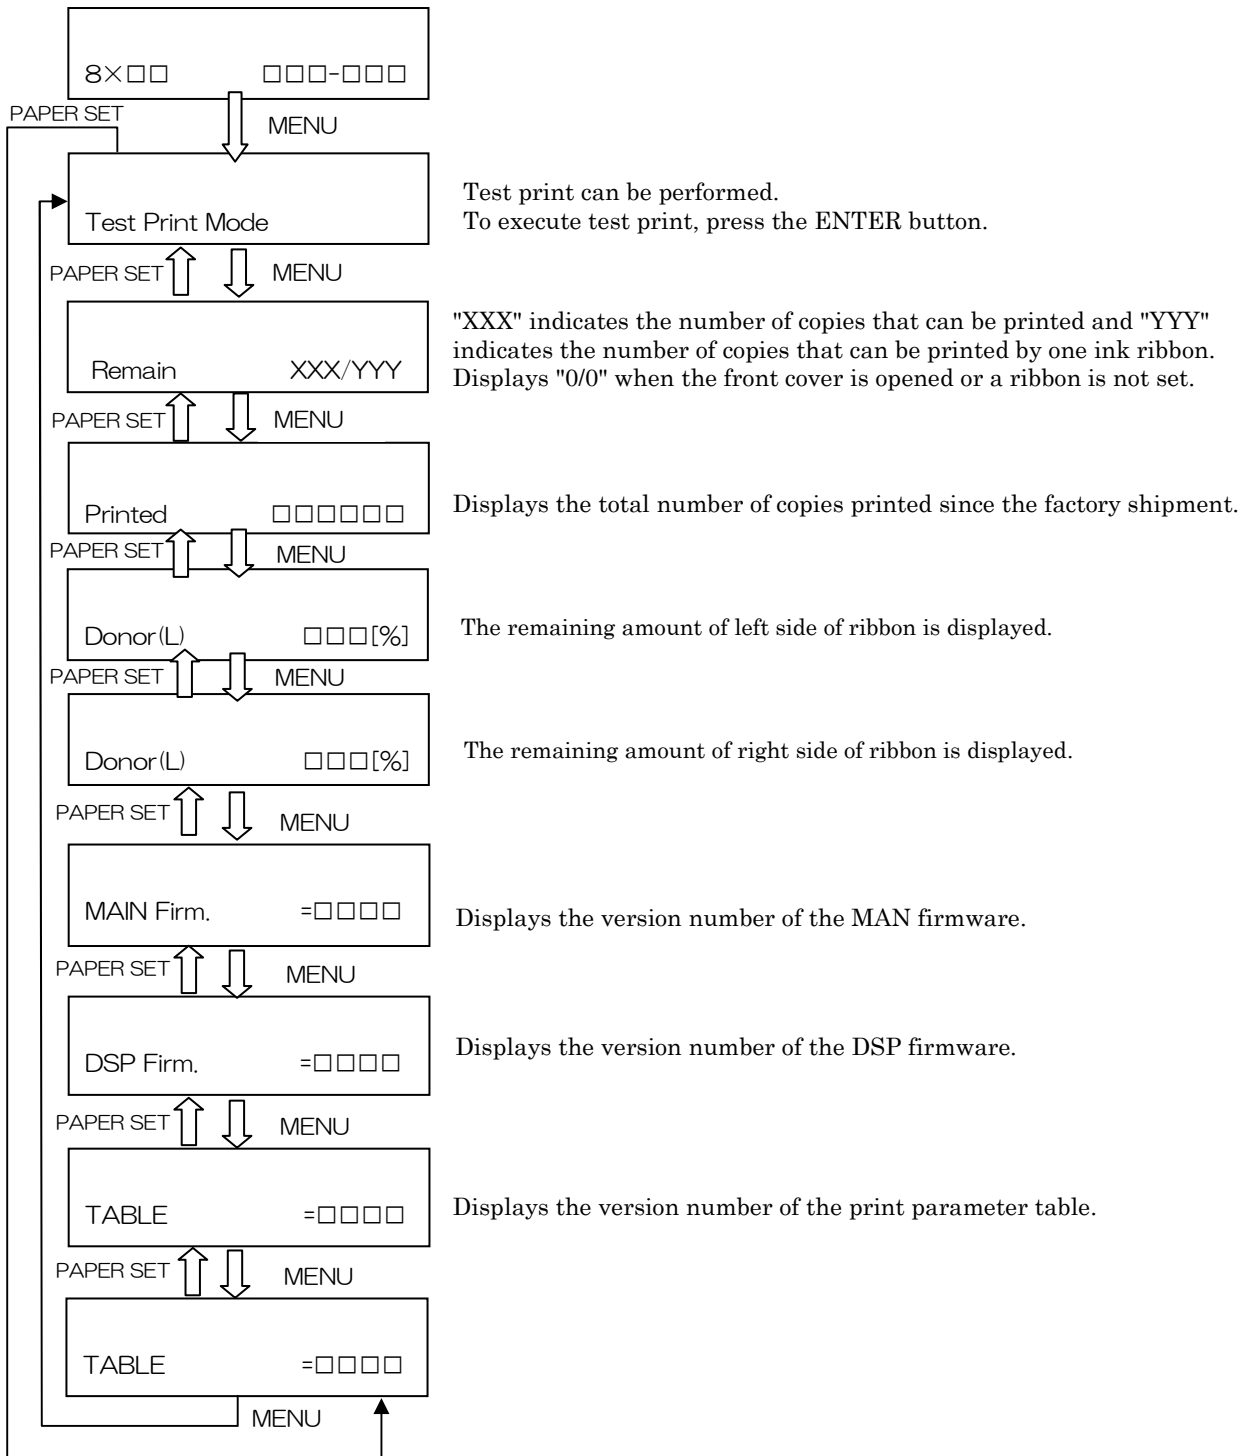

Chapter 4. Routine Maintenance


Cleaning of Thermal Head, Platen, Pinch Roller ,Cleaning Roller

By using thermal transfer technology, daily maintenance is not really necessary if the printer is being use properly.


However, in order to keep the best print quality, it is recommended to do the cleaning of Thermal Head, Platen and Cleaning Roller once in a month.



Caution: Make sure that the power is turned off before starting cleaning. Thermal Head reaches high temperature just after printing. Do not touch directly by hand. Make sure that the thermal head has been sufficiently cooled down before starting cleaning. When fingerprint stick to the heat element, it can damage the Thermal Head. Do not touch directly by hand. Be careful not to be hurt by the projections of the printer.

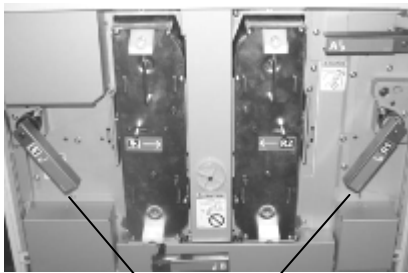

Upper Unit Open Lever

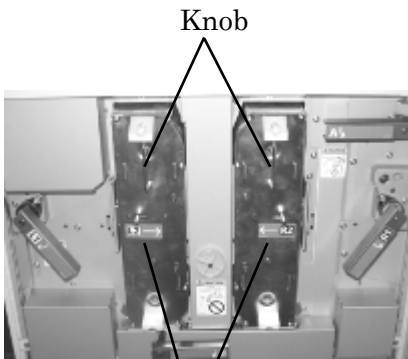


Cassette Eject Lever

1. Open the Front Cover.
2. Open Upper Unit by operating Upper unit open Lever. (Lever L1 and R1)


3. Move Cassette Eject Lever in a transverse direction to release the lock, and pull out knob of Ribbon Cassette. Be careful and operate this step with both hands not to drop the cassette after pullout, (Lever L2and R2)

4. When side upper cover of printer left side is opened, remove dust box and tray. (Refer Page 2-5)


Chapter 4. Routine Maintenance

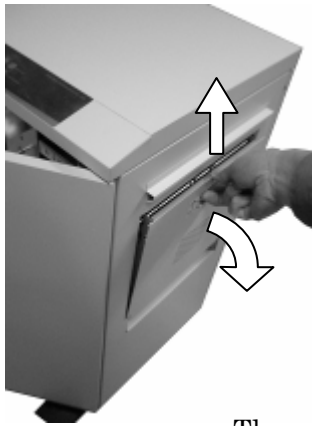


5. Open both of left and right Side Upper Cover slowly.

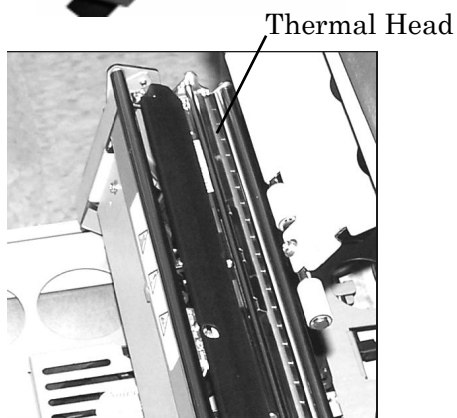

6. Using gauze, clean the Heat Element (Slight belt-like glassy parts) of Thermal Head with isopropyl alcohol or ethyl alcohol. (Right and Left side)

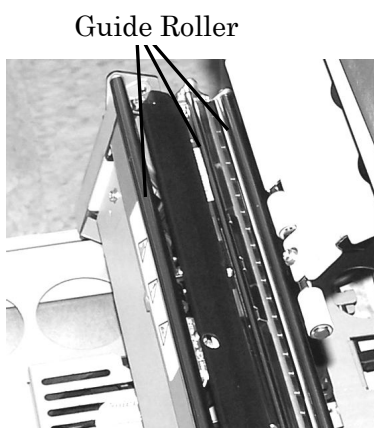


7. Using gauze dipped with isopropyl alcohol or ethyl alcohol, clean "Guide Roller". (Right and Left side)

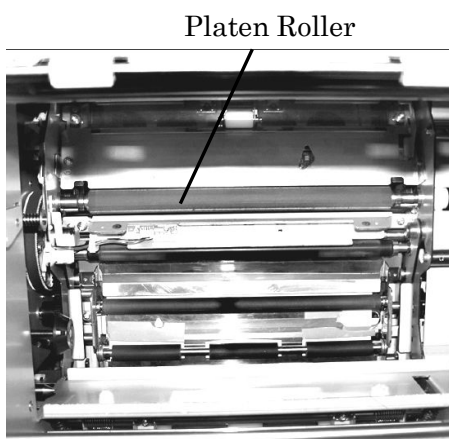

8. Using gauze dipped with isopropyl alcohol or ethyl alcohol, clean the rubber section of the platen roller. (Right and Left side)


Chapter 4. Routine Maintenance

Pinch Roller

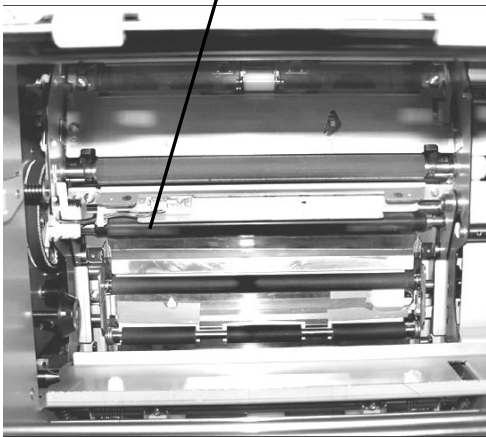


9. Using gauze dipped with isopropyl alcohol or ethyl alcohol, clean the rubber section of the pinch roller. (Right and Left side)

Cleaning Roller (Right Side)

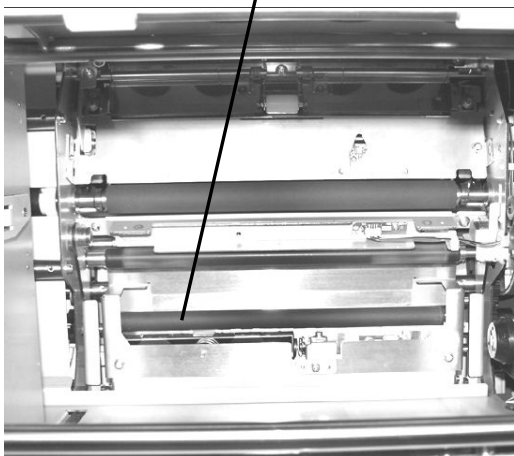

10. Using gauze dipped with isopropyl alcohol or ethyl alcohol, clean the rubber section of the cleaning roller. (Right and Left side)

Cleaning Roller (Left Side)

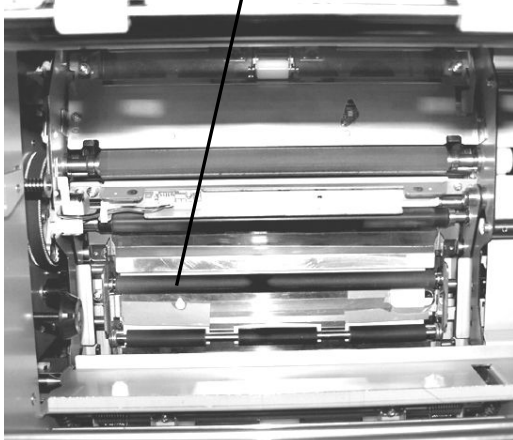

Attention: Printing should be performed after the alcohol dried up completely (approx. 5 minutes)

Chapter 4. Routine Maintenance

Cleaning of Outer Cabinet

Wipe the printer outer cabinet with a soft cloth.

If the stains are not removed, wet the cloth and apply weakened neutral Detergent to it.




Warning: In case, the foreign substance get into the printer, turn off the power of printer, remove the power cord and contact the dealers or service center. Continuous use of the printer under such condition can cause the fire and electric shock.



Warning: Continuous use under the abnormal condition such as high temperature, smoke and strange smell can cause the fire and electric shock. Turn off the power and make sure to remove the power cord, then contact the dealers or service center.

Caution: Do not use volatile solvents or spray insecticide on the printer outer cabinet. Otherwise, discoloration or crack may result.

Cleaning of Filter

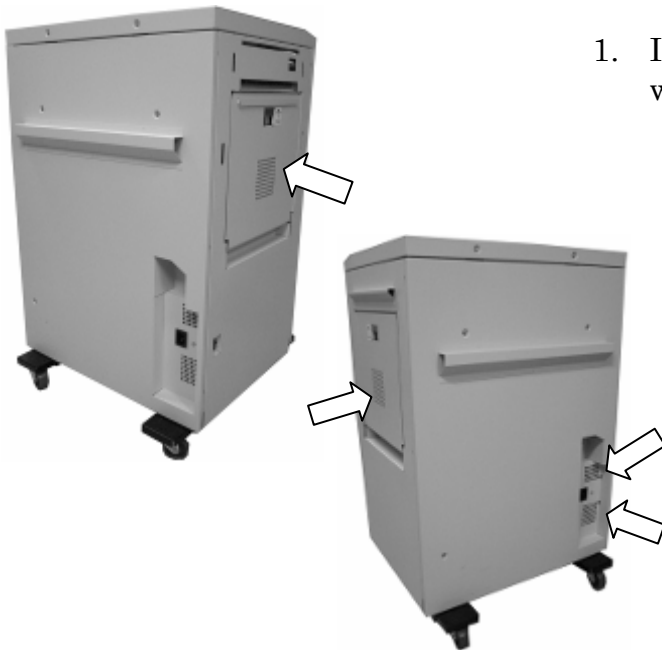

1. If the dust collects on the openings, clean it with vacuum cleaner.

Chapter 4. Routine Maintenance

<MEMO>

Chapter 5. Error Handling

Error Message and Corrective Action

When the error happens, error message will be displayed on LCD on the operation panel.

LCD Message	Status	Corrective Action
Side Cover L Open	The Side Upper Cover (Left) is opened.	Close the Side Upper Cover (Left).
Side Cover R Open	The Side Upper Cover (Right) is opened.	Close the Side Upper Cover (Right).
Upper Unit L Up	The Upper Unit (Left) is opened.	Close the Upper Unit (Left).
Upper Unit R Up	The Upper Unit (Right) is opened.	Close the Upper Unit (Right).
Paper Cover Open	The paper cover is opened.	Close the paper cover.
Front Cover Open	The Front Cover is opened.	Close the Front Cover.
Ribbon Empty L	Run out of Ink Ribbon (Left side).	Replace the Ink Ribbon (Left side).
Ribbon Empty R	Run out of Ink Ribbon (Right side).	Replace the Ink Ribbon (Right side).
Paper Empty	Run out of paper.	Replace paper.
Load Paper	Run out of paper or error of automatic load is happened.	Replace paper.
Incorrect Rib L	The ink ribbon that is set on left side is not supported.	Ink ribbon or printer abnormality is assumed. Consult with the Service Department.
Incorrect Rib R	The ink ribbon that is set on right side is not supported.	Ink ribbon or printer abnormality is assumed. Consult with the Service Center.

Chapter 5. Error Handling

LCD Message	Status	Corrective Action
Control Error□□(*)	Trouble of printer control board.	If the printer does not recover from the error after turning power ON and OFF, repairs are necessary. Consult with the Service Center.
TPH (R/L)Setting Err	Trouble of printer Thermal Head.	
Serial No Error	Trouble of printer control board.	
Mecha Error □□(*)	The printer mechanical section is faulty.	
Sensor Error □□(*)	The sensor inside of the printer is faulty.	
TempSensErr □□(*)	Trouble of temperature sensor in the printer.	
Upper (R/L)Jam □□(*)	Paper Jam occurred through upper paper feed unit.	Remove the paper. If paper jam occurs frequently, consult with Service Center.
Lower Jam □□(*)	Paper Jam occurred through lower paper feed unit.	Remove the paper. If paper jam occurs frequently, consult with Service Center.

* □□ means the code number for maintenance.
Please inform this number when you contact the dealers or service center.

Chapter 5. Error Handling

Failure Symptoms

When detecting a failure symptom, check the printer using the following table.

Symptom	Action
Power is not turned on.	<ul style="list-style-type: none">• Check if the power cable is connected to the plug socket or the printer.
The personal computer does not recognize the printer.	<ul style="list-style-type: none">• Check if the USB cable is connected to the personal computer or printer.
The printer does not become ready.	<ul style="list-style-type: none">• Check if the front cover is closed.• Check if paper is jammed in the printer.• When the paper setting lamp is blinking, remove the edge of the paper until the paper setting lamp goes off.
The front cover does not open.	<ul style="list-style-type: none">• Check if the printer is installed in a flat location.• Check if any object is placed in front of the front cover.
A straight stripe area is not printed.	<ul style="list-style-type: none">• The thermal head may be dirty. Clean the thermal head as described in Chapter 4, "Routine Maintenance".• If the blank area remains after cleaning the thermal head, the head may have been disconnected. Consult with the Service Department.
Dotted areas are not printed.	<ul style="list-style-type: none">• The cleaning roller may be dirty. Clean the thermal head as described in Chapter 4, "Routine Maintenance".


Chapter 5. Error Handling

Upper (L/R) Jam

Paper Guide Open Lever A




1. Open the front cover.
2. Push down the Paper Guide Open Lever A to make paper path release position. (Lever A)

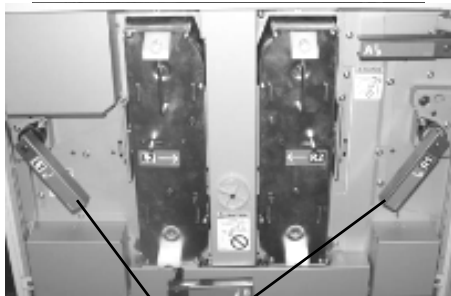

3. Operate Upper unit open Lever to open Upper Unit. (Lever L1 and R1)

Upper Unit Open Lever

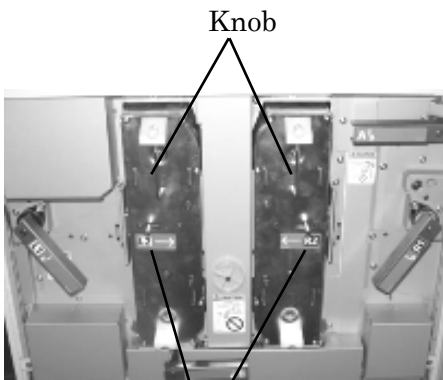


4. Move Cassette Eject Lever in a transverse direction to release the lock, and pull out knob of Ribbon Cassette.

Be careful and operate this step with both hands not to drop the cassette after pullout, (Lever L2 and R2)

5. When side upper cover of printer left side is opened, remove dust box and tray. (Refer Page 2-5)

Cassette Eject Lever

Chapter 5. Error Handling

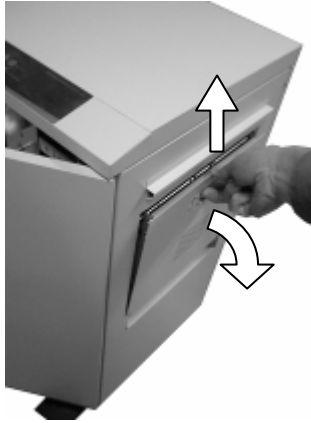

6. Open both of left and right Side Upper Cover slowly.

7. Cut off the folded section or printed section with scissors.


When the paper is folded inside of the printer, pull it out slowly.



Caution: Make sure that the power is turned off before starting cleaning. Thermal Head reaches high temperature just after printing. Do not touch directly by hand. Make sure that the thermal head has been sufficiently cooled down before starting cleaning. When fingerprint stick to the heat element, it can damage the Thermal Head. Do not touch directly by hand. Be careful not to be hurt by the projections of the printer.

8. Rewind paper roll by hand.

9. Return the Steps 1 – 6 in the reverse order.

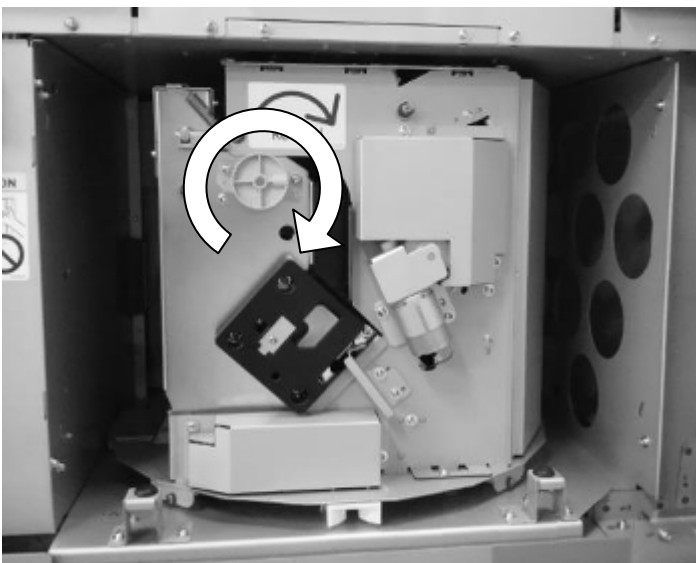


Chapter 5. Error Handling

Lower Jam



Paper Guide Open Lever B

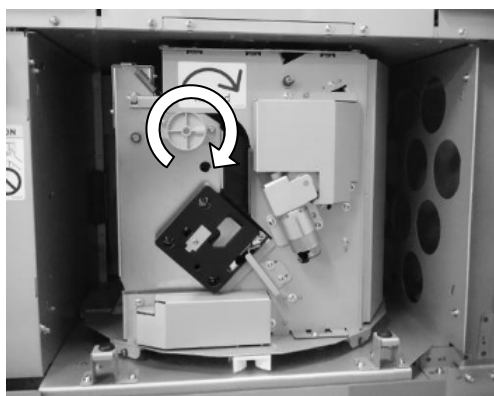



Paper Path Release Lever B

1. Open the front cover.
2. Push down the Paper Guide Open Lever B to make paper path release position. (Lever B)

3. Rewind paper roll by hand.

4. Return the Maintenance Lever B until set position.
5. Close the Front Cover.

Chapter 5. Error Handling

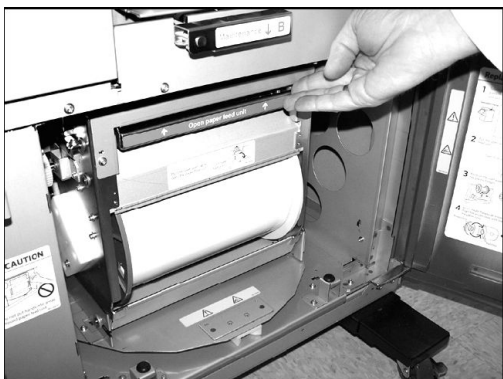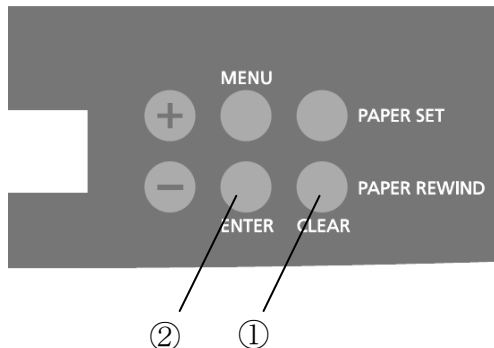

6. Press the PAPER REWIND button ① on the operation panel.
7. After Roll Back OK? Is displayed, press ENTER button ②.
8. When Load Paper is displayed, open the Front Cover.

9. Hold up the lever to release the lock, and open Paper Unit.
10. Cut off the folded section or printed section with scissors.

When the paper is folded inside of the printer, pull it out slowly.

11. Close the Paper Load Unit,
12. Close the Front Cover.

Attention:

- If the paper is used without cutting off the folded section or printed section, paper jam occurs again or the ink ribbon may snap during printing. Always cut off the creased section or printed section of the paper.
- Cut off the paper straight and at right angles to the roll paper direction.
- If paper jam occurs frequently, a defect in the mechanical section is assumed. Consult with the service center.

Chapter 5. Error Handling

Power Supply Interrupted during Printing

In case, power supply interrupted during the printing, Thermal Head will be kept pushing to Platen. Laving this situation for a long time, shape of Platen can be warped. In order to avoid this situation, please follow the instruction below.

1. Turn off the power of the printer.
2. Turn on the power for 3 or more seconds after turning off the power.
3. Paper Jam is displayed on the LCD of the operation panel, open the front cover and take the necessary action according to the instruction provided in 5-3, "Paper Jam".

When the ribbon is snapped



1. Remove the ribbon cassette.
2. Stick the broken part of the ribbon with a tape.



3. Turn the ribbon on the rewinding side and rewind the taped section completely.

Chapter 6. After-sales Service

Contact your dealers or service center for the details about after-sales service.

YTE8-J0507E
Revision