


# KeeNetic

**Sound Boom Bluetooth Speaker  
BS503B**

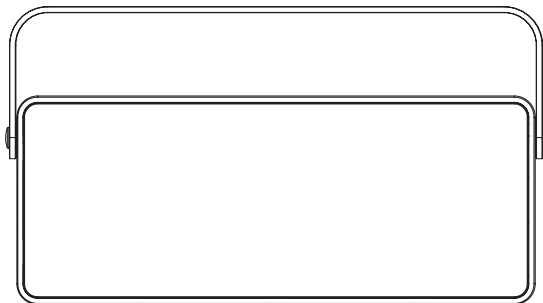

User Manual



## Table of Contents

Warnings	1
Content	1
Parts	1
	1
Charging Your Speaker	2
Bluetooth Mode	2
Aux-in Mode	2
LED Indication	2
	3
Maintenance and care	3
12 Month Warranty	3
Troubleshooting Guide	
Technical Specification	

## Warnings

Do not install your speaker in a confined or built-in space, such as a bookcase or similar unit. Ensure the speaker is used in an open site that is well ventilated. Ensure the ventilation openings on the speaker are not covered with items such as curtains etc.

WARNING: Only uses with accessories recommend or provided.

WARNING: Please refer to the electrical compliance label on the bottom enclosure of your speaker before charging or operating the speaker.

WARNING: To reduce the risk of the fire or electrical shock, do not expose your speaker or rain or moisture. Your speaker shall not be exposed to dripping or splashing and that objects filed with liquids, such as vases, shall not be placed on the speaker.

WARNING: The battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine or fire.


## 1. Content

- Portable Bluetooth speaker

## 2. Parts

Front view

Back view

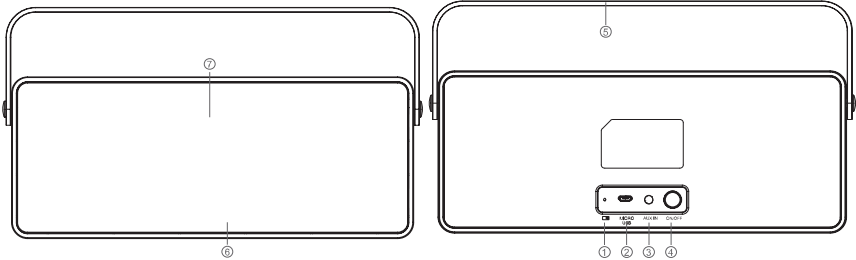

1. Power indicator
2. Micro USB port
3. Aux in Port
4. ON/OFF Button

5. Metal handle
6. Grill
7. LED indicator

## 3. LED Indication

LED indicator status:

Power on: Blue LED light on front of unit quick flash, waiting to be connected.

Blue LED light on front of unit flash slowly when the device is connected.

Red LED Light illuminated on the back of the unit when charging, the LED light will turn off once fully charged.

#### 4. Charging your Speaker

Connect the micro-USB plug into Micro USB jack on the unit.

During charging, the indicator light on the unit will turn Red. Once the unit is fully charged, the indicator light will turn off.

#### 5. Bluetooth mode

- Open the Bluetooth menu on the device you wish to connect to the speakers. Search for the speakers and pair with the main unit. The pairing name "Sound Boom" will appear on your device. Select this and make the connection.
- After successful connection, the blue indicator will flash twice every 3 seconds.
- Play a track on your paired audio player or phone as per normal

**Note: You need to adjust the volume, select the songs on your Bluetooth device**

#### 6. Aux-in Mode

- Insert one end of Aux In cable (not included) into the Line out or Headphone jack on your external audio unit and the other end into the AUX IN jack of the unit, the unit will automatically switch to AUX IN mode. The Bluetooth indicator will light solid blue, indicating that the unit is in AUX IN mode.
- Start playback of the external unit and the external audio device's output sound will be heard through the unit.
- Adjust the volume to desired level.
- To stop playback, disconnect the Aux In cable from the Aux In jack; the unit will switch to Bluetooth mode automatically

#### 7. Troubleshooting Guide

Question	Settlement
Fail to Bluetooth connect	1) Restart the speaker. 2) If need password, please input "0000".
Music play break	1) Please check the Bluetooth connection valid distance or if something cut off the signal.
No sound	1) Check the volume adjustment on the speaker. 2) Check the speaker is in mute or paused.
Line-in no sound	1) Check if the audio cable connected at right way.
Fail to turn on	1) Check if the battery is low.
Speaker frozen	1) Insert a thin metal sticker stick to reset the speaker.

---

## **8. Technical Specification**

USB: Compatible to USB 1.1

Playback time: Around 7.5-8.5 hours

Battery - Built-in 3200 mAh rechargeable Li-ion battery

## **9. Maintenance and Care**

Please use and store this product at room temperature

Do not expose this product to rain or wet conditions

Do not throw and drop this product to avoid product damage

Do not self-dismantling, repair and transform the product

Do not use chemical solvent cleaning the product

Please do not discard or placed the lithium battery in the fire in order to avoid the risk of explosion.

## **12 Month Warranty**

Thank you for your purchase from Amazon.

## Warranty

### 30-Day Money-Back Guarantee for Any Reason

You may return your undamaged product and packaging within 30 days of purchase to receive a FULL REFUND for any reason. If the reason for return isn't quality-related, the customer must pay the return shipping costs.

### 18-Month Warranty for Quality-Related Issues

#### ● Requests within country of purchase

We will take care of all quality-related issues with a REPLACEMENT or FULL REFUND including any return shipping costs. Please note: Any provided shipping labels must be used within 20 days of purchase.

#### ● Requests from outside country of purchase

We will take care of all quality-related issues with a FULL REFUND or REPLACEMENT. International shipping costs must be covered by the customer.

#### ● Requests for orders shipped internationally

We will take care of all quality-related issues with a FULL REFUND including any return shipping costs. This includes purchases shipped overseas from the USA via Amazon or eBay.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

## **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

1. Increase the separation between the equipment and receiver.
2. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
3. Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.