

Instruction Manual for Off-Trak Racer



Thank you for your purchase of Protocol's **Off-Trak Racer**. You are about to experience the best of what remote control driving has to offer. We strongly recommend that you take the time to read this manual thoroughly. It contains many tips and instructions on how to get the most out of this tank, and maintain it for long life.

 
As with any racer, this is a precision driving machine. Treat it well and enjoy all the fun it has to offer, use after use.

AGES
14+

PARTS IDENTIFICATION



CLOSE-UP OF RACER

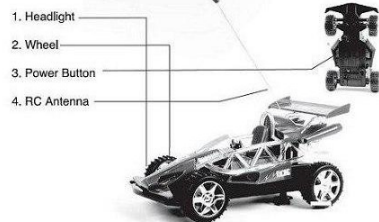

CLOSE-UP OF REMOTE CONTROL

 


Battery Installation for Remote Control (Fig. 1)

1. Make sure the power switch is off on the remote control before installing the batteries.
2. Pull out the battery cover from the back of the remote control and install 2 'AA' batteries (not included) according to indicated polarity.
3. Replace the battery cover.
4. There is no on/off button with the remote control. It is on once the batteries are installed.
5. The power light turns on when the left/right or forward/backward controls are moved. It remains off when nothing is moved. When the power light begins blinking, the batteries are dying and need to be replaced.

Battery Notes: Use only 'AA' batteries for this product. Remove battery if this product is not going to be used for a long time. Always remove exhausted battery from the product and dispose of safely.

Caution: The remote control is water-resistant and not water-proof. Do not submerge the remote control in water.

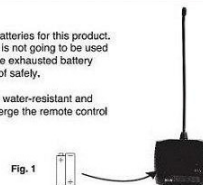


Battery Installation for Racer (Fig 2)

1. Make sure the power switch is off on the racer before installing the batteries.
2. Using a Phillips screwdriver, unscrew, and pull out the battery cover from the bottom of the racer and install 4 'AA' batteries (not included) according to indicated polarity.
3. Replace the battery cover.

Battery Notes: Use only 'AA' batteries for this product. Remove battery if this product is not going to be used for a long time. Always remove exhausted battery from the product and dispose of safely.

 Caution: The remote control is water-resistant - not water-proof. Do not submerge the remote control in water.

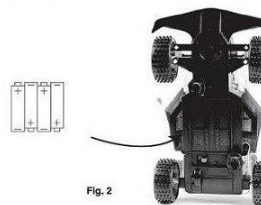

Racer Environment

1. Choose a location that meets the following condition.
2. Make sure the racer is on a smooth surface. While this racer is capable of handling multiple types of terrain, it is easier to maneuver on a flat, smooth surface.

TURNING ON THE RACER

1. Switch the power button on the bottom of the tank to on. The headlights will turn on.

STEERING THE RACER (Fig. 3)

1. To move forward push forward/backward control button forward.
2. To move backward push forward/backward control button backward.
3. To move forward to the right push the left/right control button to the right and the forward/backward button to forward.
4. To move backward to the right push the left/right control button to the right and the forward/backward button to backward.
5. To move forward to the left push the left/right control button to the left and the forward/backward button to forward.
6. To move backward to the left push the left/right control button to the left and the forward/backward button to backward.

Troubleshooting:

Problem	Cause	Solution
The racer will not turn on, take direction, or moves too slow	The batteries may be low.	Replace the batteries in the racer and the remote control.
The racer will not move.	The racer may be on a rough surface, such as grass or thick carpet.	Move the racer to a smooth surface.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.