

CONTENT

| | |
|---------------------------------------|-------|
| 1.WARNINGS | - 1 - |
| 2.GETTING STARTED | - 2 - |
| 3.YOUR PHONE | - 2 - |
| 4. FUNCTION MENU | - 4 - |
| 4.1 CONTACTS | - 4 - |
| 4.2 MESSAGE | - 4 - |
| 4.3 CALL LOGS | - 5 - |
| 4.4 MULTIMEDIA | - 5 - |
| 4.5 INTERNET | - 5 - |
| 4.6 APPLICATION | - 5 - |
| 4.7 MY FILES | - 5 - |
| 4.8 PROFILES | - 5 - |
| 4.9 SETTINGS | - 5 - |
| 5.ENTRY MODE | - 6 - |
| 6. CARE AND MAINTENANCE | - 6 - |
| 7. TECHNICAL INFORMATION | - 7 - |
| 8 BATTERY WARNING | - 8 - |

1. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

2. Getting Started

2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

3. Your Phone

3.1 Making a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key、 Dial keys to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press up/down keys

to adjust volume. Press left soft key to access Options.

3.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.




3.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, Dial keys or left soft key to answer. Press left soft key to access options.

3.4 Rejecting/Ending a Call

Press end key to reject an incoming call or end current call.

3.5 Keypad Definition

1. OK key: To confirm
2. Right soft key: To perform the function of the prompt displayed in lower right corner of the screen.
3. Left soft key: Enter main menu or to perform the function of the prompt displayed in lower left corner of the screen. Click the left soft key then * lock the phone
4. Send key: To dial and pickup calls; on standby mode, to see the record of all calls made.
5. End key: Hold down this key to power On/Off.
6. Number keys: To enter numbers and letters
7. * key: cycle according to * keys to switch and input *, P, W, display symbols list in edit mode;
8. # key: long press # key scene mode switch
9. 0 key: Standby interface, Long press 0 key open power saving mode; Dial interface, Long press 0 key input +.
10. Play music, Please press  to pause; Please press  or  to turn to next or previous.

4. Function menu

4.1 Contacts

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

4.2 Message

After entering Messages, in: Templates, Voice Mail Server, Broadcast Message, SMS Settings and Message capacity.

4.2.1 Write Message

This function can begin a new SMS/MMS. After completing the SMS/MMS, press left soft key to access to options.

4.2.2 Inbox

To check received messages in inbox.

4.2.3 Outbox

Checks the information of unsuccessfully sent message in outbox .

4.2.4 Drafts

Checks the information of unsuccessfully sent message in drafts .

4.2.5 Sent box

Checks the information of unsuccessfully sent message in sent box .

4.2.6 Security inbox

You will like information collection in the security in the box

4.2.7 Templates

10 a template for choice

4.2.8 Broadcast message

Edit broadcast message list

4.2.9 Voice mail server

Edit speech number

4.2.10 SMS settings

Settings Broadcast message

4.3 Call logs

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, call timers, call cost, and GPRS counter.

4.4 Multimedia

Camera, DV, FM radio, Image, Audio, Video, Recorder,

4.5 Internet

4.5.1 Internet

Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information and so on. These services are especially designed for mobile phones and maintained by WAP service providers.

4.5.2 Face book, Whatsapp, WeChat, Opera mini

4.6 Application

Alarm, Bluetooth, Calculator, World clock, E book, Calendar, Snake, Torch Light,

4.7 My Files

Enter this menu; you can check the files store on T-flash card. Press left soft key, you can do options.

4.8 Profiles

This phone provides several profiles, by pressing left soft key, you can enter to set: Active, Customize, Rename, and Enhance Sound.

4.9 Settings

4.9.1 Call settings

Dual-SIM, Call divert, Call waiting, Call barring, Hide ID, Others.

4.9.2 Phone settings

Date & time, language settings, Shortcut settings, Auto power on/off, Restore factory settings press :1234

4.9.3 Display

Wallpaper settings, Idle display settings, Contrast, Backlight, Keypad backlight time

4.9.4 Security

PIN, Modify PIN2, Phone locked, Modify the cell phone password, Privacy, Auto keypad lock, Lock screen by end-key, Guard lock, Fixed dialing, Blacklist

4.9.5 Connections

Network account, GPRS Service, Data connection settings, Network selection

5. Entry mode

You can use several methods for entering text and numbers. By selecting a Text Entry Mode, the phone provides a few Text Entry Mode for new adding, editing contact records, finding contacts, editing SMS and writing memos.

Select Text Entry Mode:

5.1 Letter entry mode

Editing interface, click on the appropriate soft keyboard subtitles.

5.2 Number entry mode

Click the top left corner of the input image to switch to digital input, through the point of the soft keyboard to enter the corresponding number.

6. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery.
- Leaving the battery in hot or cold places, such as in a closed

car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C).

- Battery performance is particularly limited in temperatures below freezing. Cell phones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger.

7. Technical Information

Weight

Size Length × Width × Depth

Battery

Networks:

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)

- Charging procedure used

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

8 Battery warning

8.1 please use original matched battery. If wrong battery is used, there will be danger of explosion.

8.2 Disused old battery,

please handle it according to local environmental protection law and don't throw it at random.

All pictures are for reference only in the instruction book; please refer to the actual phone.

FCC Caution.

Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the

FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: S200 (FCC ID: ZSHS200) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.35

W/kg and when properly worn on the body is 0.25 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 15mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 15mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.