

F1014 Mobile Phone User Manual

Contents

| | |
|---|----------|
| 1. Introduction | 1 |
| 2.1 Keys | 1 |
| 2.2 Function of keys..... | 2 |
| 2.3 Battery | 2 |
| 2.4 Charging the battery..... | 2 |
| 2.5 Installing the SIM cards and the battery..... | 2 |
| 2.6 Unlocking the SIM card..... | 2 |
| 3. Menus | 3 |
| <i>Message</i> | 3 |
| Write message | 3 |
| Inbox..... | 3 |
| Outbox | 3 |
| Drafts | 3 |
| Sentbox | 3 |
| Templates | 4 |
| Voice mail server..... | 4 |
| Settings | 4 |
| Message capacity..... | 4 |
| <i>My files</i> | 4 |
| <i>Contacts</i> | 4 |
| 1.1. Contact list | 4 |
| 1.2. Groups..... | 5 |
| <i>Call logs</i> | 5 |
| STK | 6 |
| <i>Multimedia</i> | 6 |
| Camera..... | 6 |
| DV | 7 |
| Image | 7 |
| Audio | 7 |
| <i>FM radio</i> | 7 |
| Video | 8 |

| | |
|--------------------------------|-----------|
| <i>Organizer</i> | 8 |
| Alarm..... | 8 |
| Calendar..... | 8 |
| Calculator | 8 |
| Sound recorder..... | 9 |
| World clock..... | 9 |
| Unit converter..... | 9 |
| Timer | 9 |
| Momo | 9 |
| Ebook..... | 9 |
| Bluetooth..... | 9 |
| <i>Games</i> | 10 |
| <i>Settings</i> | 10 |
| Call settings | 10 |
| Phone settings..... | 10 |
| Security..... | 12 |
| <i>Profiles</i> | 12 |
| <i>Connections</i> | 13 |
| 4. Safety warning | 13 |
| 5. Caution | 14 |

1.Introduction

Thank you for choosing this mobile phone. With this user manual, you can understand the operation of this phone and enjoy its perfect function and simple operation. Besides basic call, messaging and phonebook function, you will also learn other features, such as FM radio, alarm, calendar, calculator and speed dial key to make your work and life more convenient.

2.1 Keys

Insert the figure.

2.2 Function of keys

Insert the figure.

2.3 Battery

The battery in a newly purchased phone has about 50% charge up. You will get the best battery performance after the first three fully charging & discharging cycles.

2.4 Charging the battery

The remaining battery level is indicated by the battery icon at the upper right of the display screen. When the battery level is very low, the mobile phone will prompt “Battery low” on screen. A charging animation will be shown on screen while the battery is being charged up. When the charging completes, the animation will disappear.

2.5 Installing the SIM cards and the battery

The battery in a newly purchased phone has about 50% charge up. You will get the best battery performance after the first three fully charging & discharging cycles.

- Press and hold the **END** key to switch off the mobile phone.
- Lift the back cover above the battery from the bottom gap to remove it.
- Lift the battery buckle outward from upside gap to remove it.
- Insert SIM card into the SIM card slot carefully with the index corner aligned to the shape of the SIM card slot. Please ensure the SIM is fully inserted and tight.
- Align the metal contacts of the battery with the metal contacts of the phone compartment. Press the battery down until it locks into place.

2.6 Unlocking the SIM card

By setting PIN (personal identification number) code of SIM card and handset lock

code, you can protect your SIM card and phone from illegal use. When this function is put in use, you are required to enter PIN code on every phone power on. To unlock the SIM card,

- Press and hold the **END** key to power on the mobile phone.
- Enter PIN code. Use **RIGHT key** to clear the incorrect input. If you enter a wrong PIN code for three times in total, your SIM card will be locked by network and the phone will ask for PUK code. If you don't know the PUK code, please do not enter any code and send your SIM to the operator for unlock.

3. Menus

Message

Make sure that the information is written before entering the message center number. Access to an information menu, you can edit the message.

Write message

Edit text message or MMS message

Inbox

Messages to show are received messages.

Outbox

Messages are not sent successfully.

Drafts

Draft messages.

Sentbox

Messages are sent successfully.

Templates

There are 10 default sms templates. You can edit preset sms templates.

Voice mail server

You can edit the number in the voicemail, and this function must be implemented with your SIM card support.

Settings

You can change settings for text message, MMS Message, push message.

Message capacity

You can check the number of messages stored on your phone or SIM card

My files

The File Manager lists the all the files stored in your phone or memory card.

Contacts

You can use the phonebook to store records: name and phone number. In the phonebook list, you can select a record to make a call by pressing the dial key. Select a record in the phonebook, you can do the following:

1.1. Contact list

- New:** Create a new contact.
- Write message:** Send SMS or MMS to the number.
- Call:** Dial the current number
- Delete:** Delete selected entry

-
- Delete multiple:** Delete multiple contacts
 - Import/Export:** Copy the selected entry to SIM card or phone or you can import your phone's contacts into a t-card or import from a T card to your phone.
 - Send vcard:** You can send contacts via SMS MMS Bluetooth.
 - Others:** Set the Speed dial.Own number.Service nnumber and Memory status.
 - Speed dial:** Open speed dial. If you long press number keys on the dialing interface, you can call up.
 - Own number:** You can set the native number.
 - Memory status:** View the usage and total Phonebook capacity information.

1.2. Groups

You may set up various groups to categorize your contacts.

Call logs

Missed calls

Enter the missed calls menu, will display the missed calls list. Select missed call records,press the Options key:

- | | |
|---------------------------|--|
| - Details | View the details. |
| - Call | Call the record number. |
| - Write message | Send text message or MMS to the number |
| - Add to contacts | Add to new contacts or Add to existed contacts |
| - Add to Blacklist | Save the number to call blacklist number. |
| - Delete | Delete the number. |
| - Delete all | Delete the all number. |

Dialed calls

Enter the dialed calls menu to display the recent outgoing phone list. Please refer to missed calls for details.

Received calls

Enter the received calls menu to display the recent received mobile number list. Please refer to missed calls for details.

Rejected calls

Enter the received calls menu to display the recent Rejected mobile number list. Please refer to missed calls for details.

Delete all

Press the LSK to select "OK" to enter sub-menu to delete call records.

Call timers

You can see the time of all the phone records

STK

Insert the SIM card, will show STK, if not insert the SIM card does not display this menu.

Multimedia

Camera

Before using Camera, make sure you have inserted a memory card. The photos will be saved in JPG format to your memory card.

Taking pictures in dim lighting may result in poor picture quality. After entering the Camera, the Camera Preview screen will appear with the status icons. Press Center to take the picture.

DV

Before using Camera, make sure you have inserted a memory card. The photos will be saved in Avi or3gp format to your memory card.

Image

Enter the album to view the photo, and you can do some action on the photo, ex: Set as wallpaper、 Power on display、 power off display、 set as contact icon、 delete、 share、 Mark、 Rename、 Slide show、 Details.

Audio

You can play stored music in the memory card.

FM radio

In FM menu, press the OK key to turn on / off FM. Press up/down key to adjust the FM playing volume. Press left/right key to switch previous/next channel.

Press the left soft key "Options" to show FM options menu as follow:

Auto search and save: Auto search FM channels in the channel list.

Channel list: Show FM channel list.

Save: Save your favorite channel.

Manual search: Manually enter your favorite channel and jump to the channel to listen to your favorite radio program.

Open sparck: Choose to listen to programs via headphones or speakers.

Background play: You can play FM on the background.

Record: Record FM.

Scheduled recording: Open the enable scheduled recording, set the

recording time and channel, the time will be recorded automatically.

Record file list: After entering, view the path saved by the recording file.

Storage: You can choose the recording files stored in the mobile phone or memory Card.

Help: After entering, check the FM instructions.

Video

Choose video player sub-menu, you can easily view the saved videos in the video list, press the LSK to enter "Options" to select the video files to do the play, settings etc .

Organizer

Alarm

Select and edit an alarm clock: You can adjust the setting of alarm on / off, Time. You can choose to set to repeat: Once, Daily , Working days.

Calendar

Enter calendar menu, the screen will show a calendar month with the current date marked. Press the up, down, left, and right navigation keys to change the date. Calendar information on the screen will be updated accordingly. Press the left soft key "Options" option to display the calendar menu.

Calculator

Your phone provides you with the basic arithmetic operations. Press the right softkey "Clear", Press the right softkey "Back" to exit the calculator.

Sound recorder

In the sound recorder interface press "option", it shows the items of record.

Start recording : Start a new record. If you press stop, you can save it .
You can press pause and continue to record.

Record file List : Record list.

Storage You can choose to record files in your phone or memory card

File format: You can choose AMR, MP3 or WAV format for recording.

World clock

You can add the world clock.

Unit converter

Weight length and kg - pound kg - ounce conversion

Timer

After entering, you can do countdown operation.

Momo

You can be in the memo record something.

Ebook

You can check the electronic files stored in your phone or T card

Bluetooth

Open the Bluetooth, search to the corresponding equipment connected via Bluetooth, can perform some operations, such as: connected between two devices to transfer files to each other; connect Bluetooth headset, you can use Bluetooth headset to listen to music, and some other operations.

Games

You can play Sokoban,Snake.

Settings

Call settings

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify. The features include:call forwarding unconditional , call forwarding on busy, call forwarding on no reply, Divert if unreachable,cancel call diverts.

Call waiting

If this feature is activated, the network will notify you while a new call

Call barring

You can set the SIM card to Call barring

Hide ID

You can set the SIM card to Hide ID

Other

IP preix ,Call time minute reminder, Auto redial, Vibration when connected,Flight mode,Flight mode select when power..., Auto record voice call.

Phone settings

In the phone settings sub-menu, you can make the following settings:

Date & Time

In this menu, you can change the phone time and date settings.

Language settings

The phone supports many different languages. Set the current language type, then menu and interface refresh for the corresponding language.

Shortcut settings

Shortcuts menu. Press LSK key for options. You can customize the shortcut menu you want.

Auto power on/off

You can set Power on display, Power off display, Auto on/off.

Power manager

The battery percentage

Restore factory settings

Restore you phone to the factory or default settings through this option. You need to input your phone code (default is 0000) for this operation. All data will be deleted when your phone is restored to its factory settings.

Display

Power on/off display: You can customize the switch off.

Wallpaper settings: You can set the Static wallpaper , More pictures , Movie desktop

Screen saver settings: You can choose Off, Sea world, Star, Snake, Game of life, Customized image, Customized animatiom

Contrast: You can set the screen backlight brightness, a total of seven

levels

Keypad backlight time: You can set 20 secs,10 secs,5secs, Night mode, Off

Auto keypad lock: You can set Off, 15secs, 30 seconds, 1 min, 5 mins

Security

Enter the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

PIN: You can start and modify the pin code

Modify PIN2:Change PIN1 and PIN2 passwords. You need to have the default Pin numbers from the network carrier.

phone locked: Turn the phone lock on/off and edit your phone password. The default is 0000.

Modify privacy password: Set the new four to eight digit phone password. The default is 0000.

Privacy: After entering, select the menu you want to set the password to check, you enter the corresponding menu, you need to enter the password, the default password is 0000.

Lock screen by end-key: You can open or close Lock screen function

Fixed dialing: Set the SIM card Fixed dialing.

Profiles

You can configure or change the default general mode, silent mode,

meeting mode, indoor mode, outdoor mode ,Headset mode,Bluetooth mode or custom 5 new situational modes in your phone.

Connections

You can set some parameters of the network accordingly.

4. Safety warning

4.1 General precautions

- Please use your phone in accordance with the local law. Do not use the phone while driving.
- Do not put the battery, phone or the charger into a microwave oven or high temperature apparatus. Do not leave the phone in areas with high temperature, high humidity or with air with heavy dust. Otherwise the phone may malfunction.
- Do not use the phone near fuel or chemicals. Do not use the phone in areas with a potentially explosive environment. Otherwise the phone may malfunction or cause fire.
- Keep the phone out of children's reach. Otherwise the child may use it as a toy and cause injury.
- Only trained professionals are allowed to assemble and repair the phone. It may be of great danger and void warranty to assemble and repair the phone without permission.

4.2 Battery precautions

- Do not dispose your battery or phone into fire. Otherwise the battery may explode.
- Prevent the battery from high humidity. Otherwise excessive heat and fuming will cause corrosion.
- If the battery suffers heating up, discoloration or swollen during use/

charging/storage, please stop using the battery and change for a new one.

- The battery has limited life which is reduced after long and frequent charging. If the battery doesn't work after several cycles of charging, it may be the end of the battery life.
- Always use the battery and battery charger authorized by the manufacturer. Batteries of unauthorized brands may cause leakage, excessive heat, explosion and fire.
- Do not dispose the battery with domestic garbage. Instead, it should be disposed of according to the local regulation.

5. Caution

The manufacturer reserves the rights for:

- The changes in the technical standards without advanced notice.
- The changes in this manual without further notice.
- The changes in the technical specification without advanced notice.
- The interpretation of this manual.

FCC Caution.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specific Absorption Rate (SAR) information:

This **Mobile Phone** meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 10mm for body worn. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm for body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm for body worn must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.