

70	Technical Specifications
71	Safety
72	Maintenance and Care
73	Accessories
74	12. Services
75	11. Extra
76	9. Services
77	8. Settings
78	7. Organizer
79	6. Multimedia
80	5. Messaging
81	4. Call Center
82	3. Time & Date
83	2. Phonebook
84	1. File Manager
85	Menu functions
86	Main operation
87	Call functions
88	Reporting Your Phone
89	About Your Phone
90	For your safety



V330 User Manual

Store the SMS without sending for reediting and sending later.

Access this menu, select one SMS/MMS from list user can send, edit, delete, delete all, copy all, move all and use number, use URL.

5.4 Carbox
Access this menu to view the send failed messages. Press left soft key in viewing message screen to send, edit, delete, copy to phone/SIM, move to phone/SIM, delete all, copy all, move all and use number, use URL etc.

5.5 Sent message
Access this menu to view the sent messages. Press left soft key in viewing message screen to send, edit, delete, copy to phone/SIM, move to phone/SIM, delete all, copy all, move all and use number, use URL etc.

5.6 Delete messages
Access this menu to select delete inbox/drafts/outbox/sent messages/all messages.

5.7 Broadcast message
Broadcast public information sent by the network providers. Use Call Broadcast service, you can receive information on various subjects from local provider. For more available information, please contact your network providers.

5.8 Templates
There are ten predefined texts. User can use them to edit or delete.

5.9 Message settings
5.9.1 SMS settings Access this menu to do the following functions: Profile Settings, Voice mail server, Common settings, Memory Status, Preferred Storage.

5.9.2 MMS settings Access this menu, user can edit settings, send settings, receive settings, server settings. The default profile is china mobile MMS. If you use other network SIM, please contact with the local operator and set the parameters.

Note: The storage space left for MMS in the phone is limited.

Access the menu, you can enter film list and press "option" to choose a movie clip to play, Send, rename, delete, delete all, and sort by.

While playing, press scroll up or down key to adjust play speed, scroll right or left key to adjust the rate of progress, key to switch to full screen and press "2" and "8" key to adjust volume.

6.5 Audio player
Select audio player item in main menu. Press the scroll up key to play or pause and scroll down key to stop Mp3. Press the scroll left/right key to switch to the previous/next song. Press "2" and "8" key to adjust volume. In playing interface, press "List" to enter the list of song, then press "option" to do the work such as Play, Detail, Add to Rings, Refresh List and Settings.

The concrete operations in Settings are "Play setting", "Display settings", "sound effects", "Bluetooth settings".

Note: If "List Update" is opened, the play list will be created automatically from phone or memory card according to the storage. If closed, the user should create or delete the file in play list manually.

6.6 Sound recorder
Select audio recorder supports two formats: WAV and AMR.

When there's no recording file in the current Storage Device, you can touch left soft key or OK key to enter the options as following:

- **New Record:** Start the recorder.
- **List:** Display the recording files.
- **Settings:** Set recording format, AMR or WAV.

When recording files exist in the current Storage Device, you can press left soft key or OK key to enter the following options:

- **Play:** Play the selected recording file.

format"and"Audio quality" state.

- **Record**
Start to record the FM
- **Append**
Append the recording data to the end of the selected file. (AMR and AMWB format files support this operation.)
- **File list**
Display the audio files

Notes: the quality of FM is influenced by the range of broadcasting station.

7. Organizer
You can use various functions provided in this phone, including calendar, to do, alarm, world clock.

Calendar
Access this menu, the calendar will be shown on the screen. Press the direction key to change the date, and the calendar shown on the screen will be changed accordingly.

TASKS
Tasks list may remind somebody to do some special things which are specified by user. When there are some task lists, press left soft key or center key, you may enter a new screen with following:

- **View:** View the selected task list.
- **Add:** Add a new task list.
- **Edit:** Edit the selected task list.
- **Search:** search item by time or by subject.
- **Delete:** Delete the selected task list.
- **Delete all:** Delete all task lists.
- **Jump to date:** jump to specified date.
- **Send to Calendar:** Send task list by SMS, MMS, Blue Tooth, or save it to file.

If you have set the alarm for some task lists, when it time out, your phone will begin to ring, and it will show the task list.

- **Save as file:** save selected task file to file manager.

PC and used as a USB Flash Disk.

- **Webcam:** the phone can be connected to the PC and used as a PC camera.
- **COM port:** the phone can be connected to the PC and used as Dial-Up Network.

7. Power on and off
Press and hold Power key to turn on/off the phone. And if you have set PIN or phone code, input it correctly.

8. Security Codes
PIN Code
The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. It is normally supplied with the SIM card package. Be careful while entering PIN code.

3 wrong tries in entering PIN code will block the SIM from use, requiring input of PUK code to unlock. Please contact your operator for further details.

PIN2 Code
The PIN2 code is required when activating certain special features (such as call costs and fixed dialing). It is normally supplied with the SIM card package. Be careful while entering PIN2 code. 3 wrong tries in entering PIN2 code will block the SIM from use, requiring input of PUK2 code to unlock. Please contact your operator for further details.

PUK Code
The PUK (Personal Unlocking Key) code is required to unlock a blocked PIN code. It is normally supplied with the SIM package; otherwise contact your service provider for the code. Keep your PUK code in a safe place, do not throw it away. Contact your service provider if it is lost.

If your SIM is blocked, your phone will ask you to

Account Name, DNS, user name and password.

8.7 Restore factory settings
You can reset some of the Phone settings to their original values by input phone lock password.

8.8 Sound effect
Audio effect
You can select different effect of the equalizer by pressing left or right key.

9. User profiles
User profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are General, Meeting, Outdoor, Indoor, Headset and Bluetooth.

In standby mode, you can press and hold key * to switch to silent mode.

10. Extra
You can use various functions provided in this phone, including calculator, currency converter, stopwatch, E-Book reader.

Calculator
The phone can be used as a calculator to finish some simple arithmetic work.

Press number key to enter the number. touch "*" key to enter radix point. Touch the scroll up, down, left or right key to enter plus, minus, multiplication or division. Touch the right soft key can delete a number. Touch center key to get the result.

Stopwatch
There are two types of stopwatches: typical stopwatch and nWay stopwatch.

E-Book reader

source, when the charge is weak, recharge immediately to protect the batter life. It is best to drain the battery charge first.

When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. Do not leave the charger connected to the unit or battery for more than a week.

Temperature affects battery charge capacity. Your battery may need to be warm up or cool down before charging. If the battery temperature is lower than 0°C and higher than +45°C, it will not recharge.

Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.

Do not use a damaged battery.

The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.

Do not place the battery in fire, follow local laws and ordinances in disposing used battery.

Maintenance
Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than -10°C and higher than +55°C.

Safety
Use of your phone is subject to safety measures designed to protect users and their environment.

Road safety
Do not use your phone when driving. In order to give you full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Aircraft safety

SAR Info
1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg, transmitting at its highest certified power level in all Your mobile phone is a radio transmitter and receiver. It is at the highest certified power level, the well below the maximum value. This is power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for evaluated as in

compliance with the FCC RF exposure guidelines. SAR information on this model the Display Grant section of http://www.fcc.gov/oeft/coid after searching on FCC ID: ZSWV330.

This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Note:The socket-outlet shall be installed near the equipment and shall be easily accessible.

1. There may be the risk of explosion if the battery is replaced by the wrong type.
2. Dispose of used batteries according to your guidelines.

So if the space is insufficient, please delete some unnecessary MMS

6. Multimedia

6.1 Camera
Select camera item in main menu to enter preview screen. Then press scroll right or left key to adjust the exposure parameter and scroll up or down key to adjust lens. The small icon on the screen to display the image size, image's quality, white balance, delay time and cont shot.

While preview, press soft left key to do the work: photos, camera settings, image settings, white balance, scene mode, effect settings and restore default to set the parameters. And press center key to take photo.

6.2 Image viewer
Access this menu, you can view the pictures in the list. If you select one picture, there are several operations including "view", "browse style", "send", "Use as", "rename", "delete", "delete all files" and "sort by".

You can use as the picture to wallpaper, screen saver, power on display, power off display, phonebook and send the picture as multimedia message or via Bluetooth. Whether the operation can be successful or not is related to some factors such as the size of the screen.

6.3 Video recorder
Enter video recorder, press left soft key can enter some options: Camcorder Settings, Video Settings, white balance, Effect settings, Restore Default.

After setting, press center key to stop or Suspend recording. And then, press right soft key to stop and save.

At the same time press the left/right soft key to return the process. In video preview status. Press center key to enter MMS edit menu.

6.4 Video player

- **Append:** Append the recording data to the end of the selected file. (Only AMR format files support this operation.)
- **Rename:** Rename the selected file name.
- **Delete:** Delete the selected recording file.
- **Delete all:** Delete all the recording files.
- **Use as:** Send recording file to user profiles.
- **Send:** Send recording file to user profiles, MMS, Bluetooth.

6.7 FM radio
In the FM radio screen, you can press the left or right direction key to switch broadcast channels. Press down direction key to stop / play; press up direction key to open auto search. During listening the radio, you can adjust volume by "*"key and "#" key.

- **Search channels**
1. In playing mode, Scroll up to turn on/off automatic searching, then scroll left/right to search the channel automatically, the phone would stop searching after reaching a channel.
- 2. In the option list, select the menu "Preset Auto search" to search channels and save them in the channel list automatically.
- 3. In playing menu, press the number keys to enter the relevant channels.

Channel list
At most 30 channels could be saved in the list.

- **Manual Input**
Directly input the FM frequency of the channel.
- **Auto search**
To search all channels and save them in the channel list automatically.
- **Settings**
To set the "back ground playing", "Loudspeaker", "Record

Alarm
Set the alarm time and it will remind you by alert tone or vibration when the alarm time expires.

You can set 5 alarms in the phone at most.

World clock
Under this menu, you can look up current time and time zones of different cities in the world after selecting the time zone.

8. Settings
8.1 Dual SIM switch
Select with SIM status: Use this function user can select Dual SIM before power the phone.

Use default mode: the same as dual SIM settings mode.

8.2 Dual SIM settings
Use this function user can switch between dual SIM open, only SIM1 open, only SIM2 open, flight mode.

8.3 Phone settings

- **Time and Date**
1. In playing mode, Scroll up to set the home city, time and date, time and date's format.
- **Schedule power on/off**
You can set 4 power on/off schedule, and the phone will power on or power off according to the settings.
- **Language**
Select the operating language.
- **Prof. input methods**
You can set the default input methods in text editor.
- **Display**
Set Wallpaper, Screen Saver, Power On/Off Display, show date and time.
- **Dedicated Key**
Access the menu you can modify the shortcut of the direction keys in standby mode.

Set the phone to ask for your security code each time you start your phone.

8.5.3 Auto keypad lock
If the keypad is locked, you can unlock it by pressing send key, then click on the center point or slip the cover to unlock keypad.

You can set the auto lock time in the submenu of this function, then the key will automatically be locked if there is no more action on the phone.

8.5.4 Change Password
You can change phone lock password here.

8.6 Connectivity
8.6.1 Bluetooth
The phone supports Bluetooth. It can realize the functions such as phone call and data exchange etc while wirelessly connected with headphones, computer or any other handheld devices.

- **Power:** Open or close this function.
- **Visibility:** Active the Bluetooth when searched or not.
- **My Device**
Display the current or once connected device, and inquiry the new one.
- **Search Audio Device**
Search for the supported device (for example: Bluetooth headphone).
- **My name:** display the Bluetooth name.
- **Advanced**
Audio Path: Select the path for Audio. Storage: select the storage status. Sharing permission: Manage shared folder and access right.
- **My address:** Display the Bluetooth information of the phone.

8.6.2 Data account: It contain "GPRS" data account. In order to use WAP function normally, please right setting:

You can read TXT format file. While reading, press "Option" to do the work such as Find, Jump to, Go to bookmark, Add bookmark etc.

Internet service
Your phone support WAP function. After the necessary settings, you can use this function normally.

Note: To open this function, you should apply GPRS service to your SIM card.

In WAP user can visiting homepage, display the exist bookmarks, record the website you have visited recently, store the information sent from the service provider and setting WAP.

12. Shortcuts
You can select application quickly using this function. If you assign the shortcut to the presses of the key, you can run the application as the usual menu action when pressing the key in standby mode.

Accessories
Battery
Extra batteries of various capacities are available from our company or through your dealer.

Charger
Light weight, practical quick chargers used for charging on wall outlets. Charging time is about 1.5 to 4 hours. The charging condition is being displayed on screen. You may use your phone while charging.

Headset
You can accept or reject the coming call by hook key in headset.

NOTE: Don't plug out headset when call in or call out process.

Maintain and Care
Caring for Battery
This phone uses a rechargeable battery as power

Switch input methods
In a text entry state, you can press the # key.

Input method
Switch to uppercase or lowercase mode.
Press a key once to insert the first letter on the key, twice for the second letter, etc.
If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry.

Input special character
When use any kind of method, press * key to display the character list, and then press the direction key to select the item. If you use English method, you can also press "1" key to get the character.

Input blank
When use any kind of method except numeric method, press "0" key to input blank.

Menu operation
The phone provides a serious of menus. And you can select it according to your need. The functions exist in these menus and submenus. Access the menus by pressing the shortcut key or scrolling.

Access menus by scrolling
Press the left selection key to enter the main menu in standby mode. Press the direction key scrolling to access the menu and select OK. If the menu have some submenu, Press the direction key scrolling to access the submenu and select OK. Press "BACK" to back.

Access menus by using a shortcut
Some items like menu, its submenu and options can be accessed by clicking the shortcut icon in stand by mode.

View, Call, IP dial, Send message, Save to phonebook, Add to blacklist, Edit before call, Delete, Delete all, Advanced. Advanced option including call timer, call cost, text msg. counter and GPRS counter.

4.2 General call settings
Divert your incoming calls to voicemail or other numbers for SIM1/SIM2.

There are five diverting ways, each of which can be set to switch on; switch off and search. When the phone is switched on, key in the number to divert according to the indications on the screen.

4.2.1 SIM1 (SIM2) calls settings:

- **Caller ID**
There are these options; "set by network", "hide id", and "send id".
- **Call waiting**
If it is supported by your service provider, call waiting will notifies you of an incoming call even if you are in a call. You can then accept, reject, or ignore the incoming call.

To make this function available, please contact local network provider.

- **Call divert**
Call diverting is a network services, it tells your network to divert incoming calls to another number to avoid missing a call.

The following is available: divert all voice calls, divert if unreachable, divert if no answer, divert if busy, divert all data calls, and cancel all divert.

- **Call barring**
If it is supported by your service provider, this function will enable you to restrict the incoming or outgoing calls.
- **Line switching**
Enter this menu user can switch to line1 or line2.

4.2.2 Advance settings

➢ **Blacklist**
There will block the call or message which contact is existed in filtered contact list to keep in touch with this phone user when this function is turned on.

➢ **Auto redials**
It can dial the same phone number automatically after a falling dial with this function.

➢ **IP dial**
You can set the prefix IP number with this function.

➢ **Call time display:** Set it to "on" or "off" state.

➢ **Call time reminder:** There will be a hint sound when the setting time passed during a call.

➢ **Auto quick end:** turn on or off this function. It can dial the same phone number automatically after a falling dial with this function.

➢ **Reject by SMS:** When incoming a call, press left soft key and select this function, then the phone will send message "call you later" to the caller.

5. Messaging
5.1 Writing message
Access this menu to edit and send message, press "option" to do as following: Send to, Input method, Add picture, Add sound, Add video, Add subject, Slide options, Switch to MMS. Advanced, Save, Details. Advanced including insert text template, insert attachment, insert contact Number, Insert contact Name, insert bookmark. After finished edit, user can choose send or save message.

5.2 Inbox
Access this menu to view the received messages/MMS. When has the new message, the phone will ring, the unread message icon also to be able to appear on top of the screen. Press left soft key in view message screen to do the following functions: view, call sender, forward, delete, delete all, save to phonebook, move to archive, filter by.

5.3 Drafts