

LELO

INSIGNIA™ USER MANUAL



SenseMotion™
TECHNOLOGY

INSIGNIA™ USER MANUAL

EXQUISITE DESIGN / INTIMATE LUXURY

 
OVERVIEW

Congratulations on purchasing one of the most advanced personal massagers ever made. As part of LELO's landmark Insignia™ line, **Lyla™**, **Oden™** and **Tiani™**, come with the same gorgeous, waterproof, and body-safe design aesthetic alongside revolutionary SenseMotion™ Technology never before seen in products of this kind.

SenseMotion™ allows you to control your Pleasure Object with a wireless controller that responds to yours or your partner's movements. More than this it can also act as an independent personal massager by delivering sensations of its own from the motor housed within, while allowing you to feel what a partner is experiencing in the palm of your hand.

Note: Your Insignia™ Pleasure Object may require charging upon purchase. To charge your Pleasure Object, please refer to the Charging section of this manual (pg. 16). You will also need to insert AAA batteries in your controller and establish the wireless connection with the massager before use.

INSERTING BATTERY IN CONTROLLER

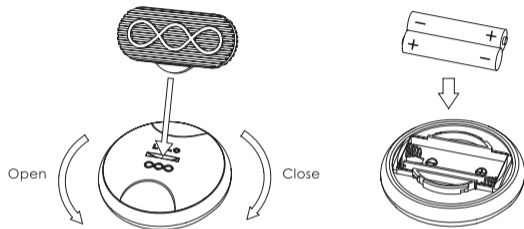

The shiny ABS face of your Insignia™ wireless controller can be removed to expose the battery compartment. With the plastic key included with your Insignia™ inserted into the slot on the battery compartment cover, do a ¼ twist counterclockwise and remove it from the controller.

After the batteries are inserted put the cover back in place and use the key to do another ¼ twist clockwise. Always ensure the controller is fastened shut before using in water.

 
ESTABLISHING WIRELESS CONNECTION

To establish wireless connection, you must first turn on your wireless controller by pressing the **+** button once. Your wireless controller is now active and sending a signal.


Your Lyla™, Oden™ or Tiani™ also features an activation button, marked with a wireless symbol (📶). Once your Pleasure Object is fully charged, press and hold this button for 1 second to activate your Pleasure Object and initiate its 'seek' mode, allowing it to connect with your wireless controller.

It may take up to 10 seconds for your product to detect the controller, so please be patient. The white LED indicator on your Pleasure Object will flash every 2 seconds to indicate that it is functioning and receiving a signal from the wireless controller.


ODEN™

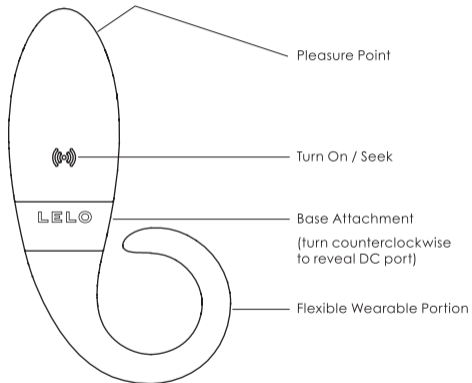

LYLA™

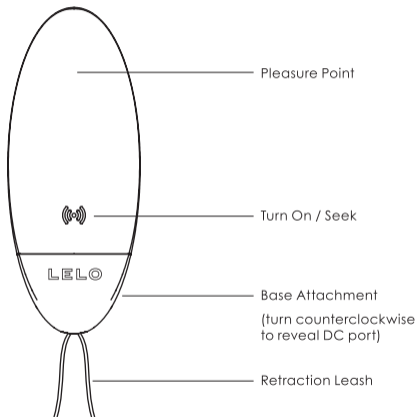 

TIANI™

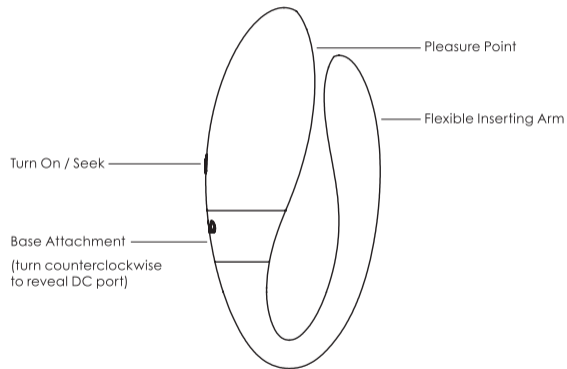 

USING SENSEMOTION™ MODES

Your Insignia™ Pleasure Object features 2 SenseMotion™ modes which respond to different movements.

MODE 1

 
When your Pleasure Object and wireless controller are connected, hold the controller flat in the palm of your hand. A low vibration will come from your Lyla™, Oden™ or Tiani™. This is on a low vibration setting.

By tilting the controller at an angle, you will feel the vibration intensity increase in both the massager and controller. Moving the controller from a horizontal position to a vertical position will increase vibration strength up to 100%.

You can then tilt the controller back and forth as you please to change the vibration settings, creating your own patterns and finding the level that is right for yourself and/or your partner.

When you wish to use the second SenseMotion™ mode press the center button () once.

USING SENSEMOTION™ MODE 1

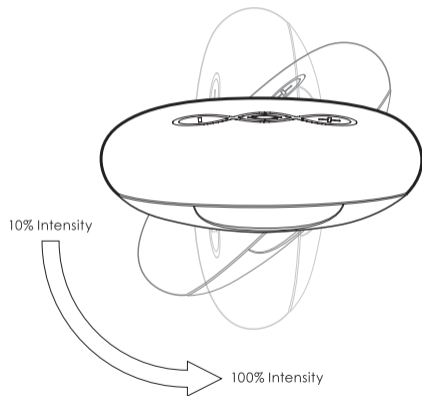

MODE 2

This mode gives you more freedom to explore – try moving the controller in circular motions or any way you choose. The faster you move the controller, the stronger the vibration intensity. Explore your options as the controller and Pleasure Object respond to your movements. To exit the SenseMotion™ modes press the center button (O) once more.

NOTE: When using SenseMotion™ (modes 1-2), the LED on your wireless controller will be illuminated.

USING CONTROL INTERFACE (MODES 3-8)

After activating and connecting your Pleasure Object to its wireless controller, you can proceed to standard remote control by pressing the center button (O) twice.

When not in SenseMotion™ modes, using the control interface is as follows:



- Pressing the + button will increase the vibration intensity of your Pleasure Object.
- While your control interface is active, press the center button (O) to cycle through the 8 stimulation modes, including both SenseMotion™ control modes.
- Pressing the - button will decrease vibration intensity. Continue holding the - button to turn off your wireless controller. You can then turn off your Pleasure Object by holding the (O) button for 1 second. When not receiving a signal from an active wireless controller, your Pleasure Object will go into standby for 1 hour before deactivating.

NOTE: When in use, the motor inside your wireless controller can be turned off by pressing and holding the (O) button for 3 seconds. Repeat this process to reactivate the motor in the controller. When using standard controls (modes 3-8), the LED on your wireless controller will not be illuminated.

USING YOUR ODEN™

Oden™ is like no other couples' ring in the world today, with a unique form that is easier to put on and remove compared to standard ring designs. While worn, Oden™ transfers vibrations to both partners.

HOW TO WEAR: With penis already erect, hold Oden™'s curved base attachment between your thumb and forefinger and open the curved base to a suitable width. This can then be slipped around the penis with the flattened side of Oden™'s pleasure point facing your abdomen and pointing upwards towards the navel.

TIPS: We recommend using Oden™ with a small amount of water-based lubricant to avoid pulling hair and skin while being put on, taken off, or adjusted while worn. Oden™ is often most enjoyable with the vibrating pleasure point worn upwards to stimulate the clitoris in the missionary position.

USING YOUR ODEN™



USING YOUR LYLA™

Lyla™ is beyond comparing with massagers of this kind; intended to be enjoyed by a female partner for either external use, or to be worn within as she or a partner interacts via wireless remote. Her small size is ideal for discreet pleasures that can be shared between partners in any place and at any time.

HOW TO WEAR: Lyla™ can be used as an internal massager when worn 2 to 3 inches inside the vagina, taking care to leave a portion of Lyla™'s nylon retraction leash protruding from the vaginal opening to allow for easy removal.

TIPS: Apply a chosen amount of water-based lubricant to the leading edge of Lyla™ for easier and more comfortable insertion into the vagina.

USING YOUR TIANI™

Tiani™ is the ultimate couples' massager that can be worn by a female partner during intercourse, or enjoyed individually to provide external stimulation with vibrations controlled in the palm of your hand.

HOW TO WEAR: Bend the apex of Tiani™'s unique U-shape to a 70 to 90 degree angle, and insert the non-vibrating bendable arm into the vagina. When it is comfortably in place, gently lay Tiani™'s vibrating pleasure point over the clitoris. During intercourse, the man may find it more comfortable to also apply a small amount of water-based lubricant to allow for easy entry.

TIPS: Apply a chosen amount of water-based lubricant to the leading edge of Tiani™'s internal arm to facilitate easy insertion.

 
CHARGING YOUR INSIGNIA™

Your new Insignia™ features a DC port concealed by a detachable base attachment that can be simply removed by twisting it off counter-clockwise.

- Unscrew the base attachment at the bottom of your Insignia™ and insert the DC plug, taking care to put the attachment in an easy-to-find place so as not to lose it.
- When the mains plug is inserted into the wall socket, the LED on your Insignia™ will pulse to indicate that it is charging. When it is fully charged (after ca. 2 hours) the LED will emit a steady white glow.
- Take care to screw base attachment back on tightly, especially if you are planning to use your Insignia™ in water. Only use original chargers provided by LELO.

If the power in your Insignia™ Pleasure Object is running low, the LED indicator will prompt you to charge by flashing rapidly during operation.

CHARGING

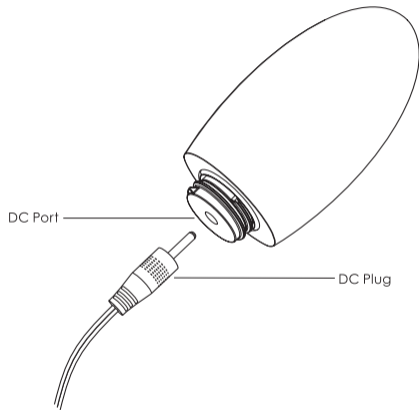

CLEANING, STORAGE AND SAFETY

Your Insignia™ Pleasure Object's lifespan will be greatly increased with proper maintenance and care.

LELO recommends that you use a water-based lubricant such as LELO's Personal Moisturizer or another respected brand with your Pleasure Object. Avoid using a silicone-based lubricant as this could make the silicone permanently tacky. If you wish to use a silicone-based lubricant, perform a patch-test first.

Never use massage oil or hand cream as lubricants with your Insignia™. Always clean your Insignia™ thoroughly before and after each use. The most effective way of doing this is to use a purpose-made cleaning solution such as LELO's Antibacterial Cleaning Spray. Alternatively, you can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Avoid getting water into the DC socket. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your Insignia™ in direct sunlight and NEVER expose it to extreme heat. Store your Insignia™ in a dust-free place and keep it away from toys of other materials.

TROUBLESHOOTING

Your Pleasure Object's LED does not pulse when charger is connected?

- Battery is fully charged.
- Battery is drained and will require several minutes to acknowledge that it is being charged.
- Charger is not properly connected. Check wall and DC sockets.

Your wireless controller does not activate when the + button is pressed?

- Batteries are depleted. Replace or recharge your batteries.
- Your wireless controller is locked. Hold down the + and - buttons for 3 seconds to unlock it.

There is no connectivity between your Pleasure Object and wireless controller?

- You have exceeded the 10 seconds required for your Pleasure Object to 'seek' an active wireless controller. First power off both your Insignia™ and wireless controller. Now try again by first activating your wireless remote by pressing the + button, and then pressing and holding the activation (⏻) button on your Pleasure Object for 1 second.
- Your Pleasure Object or wireless controller is out of power; recharge your Pleasure Object and replace or recharge your wireless controller's batteries.

If you experience any other problems with your Insignia™ or if you have any questions regarding operation, please contact: **CUSTOMERCARE@LELO.COM**

SPECIFICATIONS

SIZE:	<ul style="list-style-type: none">• Oden™ 94 X 45 X 26mm• Tiani™ 84 X 42 X 28mm• Lyla™ 80 X 33 X 32mm• Wireless controller 64 X 64 X 26mm
WEIGHT:	<ul style="list-style-type: none">• Oden™ 28g• Tiani™ 31g• Lyla™ 36g• Wireless controller 30g
MATERIALS:	<p>Lyla™, Oden™, Tiani™: PC-ABS / body-safe silicone / nylon (retraction leash: Lyla™) Finish: matte silicone with glossy ABS</p> <p>Wireless Controller: PC-ABS / body-safe silicone Finish: matte silicone with glossy ABS</p>
BATTERY:	Li-Ion 500 mAh 3.7 V (Pleasure Object) / 2xAAA battery (wireless controller)
CHARGING:	2 h at 5.0 V 500 mA
USER TIME:	up to 2 hours (Pleasure Object) up to 10 hours (wireless controller)
STANDBY:	up to 90 days (Pleasure Object)
FREQUENCY:	120 Hz
MAX NOISE LEVEL:	<50dB
INTERFACE:	3-button interface, 8 modes, 2-axis motion control function
CARRIER FREQUENCY:	2.4GHz
TRANSMITTING POWER:	1mW

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication



DISCLAIMER: Users of this Pleasure Object do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this Pleasure Object. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

© 2011 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN.

ASSEMBLED BY LELO IN PRC.

WEBSITE WWW.LELO.COM

SUPPORT CUSTOMERCARE@LELO.COM

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



www.lelo.com