

# LELO

## TOR™ 3



USER MANUAL

1

Embrace the hands-free  
approach to satisfaction  
and discover more intense  
and longer-lasting pleasures.

**Enjoy it often, wisely and with care.**

Congratulations on acquiring TOR™ 3. Before getting more closely acquainted with it, please take a moment to look through this user manual.

**IMPORTANT:** Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

## **SAFETY**

This device should be used by people aged 18 years and over. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Minors should not use the device and should not clean and/or use the device unsupervised.

## **COMPLIANCE STATEMENT**

**a. WARNING:** Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

### **b. FCC and IC statements:**

This device complies with Part 15 of the FCC Rules and Industry.

Canada license-exempt RSS Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

### **b. Déclarations de la FCC et de l'IC :**

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et de l'industrie. RSS exempt de licence au Canada – Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.

**3** Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller of the device or an experienced radio/TV technician for help.

The device must not be co-located or operate in conjunction with any other antenna or transmitter.

The device has been evaluated to comply with general RF exposure requirements.

The device can be used in portable exposure conditions without restriction.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. Users can obtain Canadian information on RF exposure and compliance as described below.

Cet appareil ne doit pas être placé près d'une autre antenne ou d'un autre émetteur ou fonctionner conjointement avec ceux-ci.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux fréquences radio. Il peut être utilisé dans des conditions d'exposition portable sans restriction.

Cet équipement est conforme aux limites d'exposition stipulées par IC RSS-102 pour un environnement non contrôlé. Les utilisateurs peuvent obtenir des renseignements canadiens sur l'exposition aux fréquences radio et sur la conformité.

## HOW TO FIND FCC ID AND IC INFORMATION IN THE USER APP

Open the "LELO APP"

Click "Menu"

Click "Legal & Regulatory"

Click "PRODUCT NAME"


FCC ID: "ZT5-TOR"

IC: "9798A-TOR"

HVIN: "XXX"

PMN: "XXX"

## GETTING TO KNOW YOUR TOR™ 3

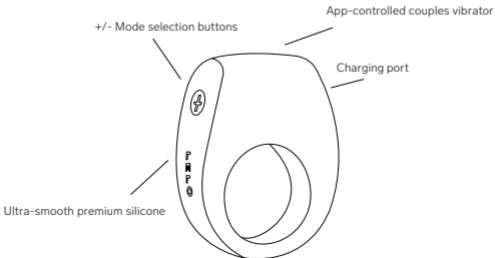

## USING YOUR TOR™ 3

### HOW TO USE YOUR PRODUCT WITHOUT THE LELO™ APP

- Before the first use, charge your TOR™ 3 for 2 hours.
- Press the + button to turn it on.
- The LED lights will blink, showing the battery level.
- The LED lights will go steady, showing the vibration level.
- Press the + button to switch between 16 modes.
- Press and hold the - button to turn off.

### HOW TO USE YOUR PRODUCT WITH THE LELO™ APP

- Before the first use, charge your TOR™ 3 for 2 hours.
- [DOWNLOAD THE IOS / ANDROID version.](#)
- Press the + button to turn it on while activating the Bluetooth.
- All the LED lights will blink simultaneously, showing the Bluetooth pairing.
- Open the LELO™ APP and locate the toy icon on the bottom of the screen. Find your TOR™ 3 and select "Connect". Press and hold the + button on your device. Confirm the connection by pressing the + button on your product again. For more information, use the detailed APP manual.
- Go to "MY LELO TOYS" and select "PLAY".
- Choose between three different control modes: boring, shaking, screwing
- Select "SETTINGS" to configure additional modes
- To save your settings for offline use, select "SAVE" at the bottom of your screen.
- Use the drop-down menu to set the default auto power off from 10-20 minutes. You can check the battery level in the upper left corner.

## USING TOR™ 3

- How to hold



- Where to place on the body




**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to TOR™ 3 before and during use.



## CHARGING YOUR TOR™ 3

- Insert the DC plug into the DC port at the base of your TOR™ 3.
- Insert the mains plug into a USB Port. The LED on the interface of your TOR™ 3 will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your TOR™ 3 will emit a blinking white light.

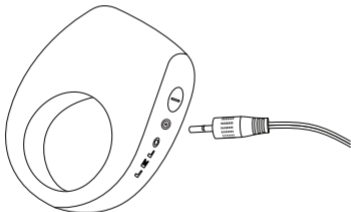

Only use original chargers provided by LELO with your TOR™ 3.



## **CLEANING, STORAGE, AND SAFETY**

Using TOR™ 3 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

TOR™ 3 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your TOR™ 3 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your TOR™ 3 in direct sunlight and NEVER expose it to extreme heat. Store your TOR™ 3 in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at Safety Extra Low Voltage (SELV).

## **TROUBLESHOOTING**

### **The LED on your TOR™ 3 does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

### **Your TOR™ 3 does not activate when the + button is pressed:**

- The battery is empty. Recharge your TOR™ 3.
- The interface of your TOR™ 3 is locked. Hold down + and – for 3 seconds.

If you experience any other problems with your TOR™ 3 or if you have any questions regarding the operation, please contact: [\*\*customercare@lelo.com\*\*](mailto:customercare@lelo.com)

## SPECIFICATIONS

<b>MATERIALS</b>	Body-safe silicone, ABS plastic
<b>FINISH</b>	Smooth
<b>SIZE</b>	60 x 46.7 x 22.2 mm / 2.4 x 1.84 x 0.87 in
<b>DIAMETER</b>	29 mm / 1.1 in
<b>BATTERY</b>	Lithium 70 mAh 3.7 V
<b>CHARGING</b>	Up to 2 h at 5.0 V 70 mA
<b>USER TIME</b>	Up to 1.5 h
<b>STANDBY TIME</b>	Up to 90 days
<b>FREQUENCY</b>	130 Hz
<b>MAX. NOISE LEVEL</b>	60 dB
<b>INTERFACE</b>	2 buttons

## **REGISTER WARRANTY**

To activate your 1-year limited warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at [LELO.COM](https://LELO.COM) and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



**DISCLAIMER:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2022 LELo AB. All rights reserved.

LELo AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by: LELo Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product:

visit [www.lelo.com/ip](http://www.lelo.com/ip)

**[www.lelo.com](http://www.lelo.com)**