

USER MANUAL

CONTENTS

- WELCOME2
- FOR YOUR SAFETY3
- KNOW YOUR PHONE.....9
- INSTRUCTIONS.....11
- GETTING STARTED.....13
- BASIC OPERATIONS27
- MESSAGING.....39
- WRITE MESSAGE.....39

PHONEBOOK	47
CALL LOG	50
SETTINGS	57
MULTIMEDIA	66
GALLERY	74
ORGANIZER	75
APPLICATIONS	78
WEB	80
CARE AND MAINTENANCE	83

Welcome

Congratulations on your purchase of the mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, HD camera, MP3 player, video player, and more.

You can read the manual for complete knowing the use of the M228E mobile phone and experiencing the well-established functions and

simple operation method. Please use the original accessory in order to achieve the best use of effects, such as the use of non-original components of the damage caused by machinery, the phone shall not be responsible.

For Your Safety

Please read the instructions given below carefully. It may be dangerous or illegal if you do not follow these instructions. This user manual includes detailed information about safety instructions.

Switch on Phone Safely

Please do not switch on your phone when it might have interference or danger by using phone or phone is forbidden in this area.

Pay attention to the traffic safety

According to the recent research, it may have danger to use phone when you are driving even though you are using the hands-free device (such as hands-free device in auto, earphone, etc.). The driver is required not to use phone when they are driving. When phone is switched on, the electromagnetic wave from phone will interference the electronic system of auto, such as ABS anti-explosion brake system or SRS (supplemental restraint system). For safety, please follow below:

Do not put the phone on car control panel or ballonet area in car.

Confirm with the auto distributor or manufacturer to make sure that electronic system of automatics have good isolation.

Interference

All kinds of phones may be interfered by environment, and then the performance of phones might be influenced. Phone may interfere with some electric appliance such as electronic TV, radiogram and so on.

Turn off your cell phone in the site of medical and health care

Please switch off your phone in the site of medical and health care except some designated area where phone can be used. Phone will interfere with the running of electronic equipment, electron device or radio frequency device near around, just like the other usual equipment.

Switch off on airplane

Please follow the related regulations. Please switch your phone before boarding.

Switch off in gas station

Please switch off your phone when you are in gas station or any place where fuel and chemical have been placed.

Using phone correctly

Please use phone in normal position. Please do not touch antenna area if not necessary. SIM card can be taken out from phone. Please pay

attention to prevent children from swallow the small component like this.

Do not let pregnant woman use phone for long time.

Accessories and batteries

Use only the approved accessories and batteries. Please do not connect with any product which doesn't match with this phone. Please be sure the phone has been switched off before taking out battery. Please deal with the scrap batteries properly according to the local law.

Waterproof

The phone doesn't have performance of waterproof. Please do not expose your phone in inclement weather or environment (such as wet, raining, liquid leakage, seawater, mirage, and so on).

Emergency calling

Please be sure your phone is power on and in the service available area. According to demands, press Call end key repeatedly to clear the content in screen and go back to standby mode, or press number key directly, and then input emergency phone number. And then press answer key to describe where you are.

Know Your Phone



Positions of phone keys

- | | |
|-----------------|-------------------|
| 1, Torch | 10, Call End Key |
| 2, Receiver | 11, # key |
| 3, Display | 12, Earphone jack |
| 4, SIM2 key | 13, Camera |
| 5, SIM1 key | 14, Speaker |
| 6, Number key | 15, Battery Cover |
| 7, * key | |
| 8, Charger jack | |
| 9, RSK | |

Instructions

keypad function

Keypad	Function
Left Keypad	To run the function which prompt in left corner of the display.
Right Keypad	To run the function which prompt in right corner of the display.
navigation key	At the state of standby, enter the corresponding shortcut function.(There is default factory setting, users can change from "settings" according to their owe needs).

Calling key ½	Start calling and answer a call. At the state of standby, display the dialed number record of SIM card 1/2.
Call End Key	Hang up a call. Press this key to return to the standby mode from options mode.
On/off key	Hang up a call. Power on/off the phone.
OK key	confirm or play.
Number Key	Character input keys(including 0-9).
# Key	In input mode, input numbers, words and symbols etc.
* Key	In options mode, number key stands for the options(1-9).

Getting Started

Installing SIM Card and Memory Card


SIM Card

Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by network supplier.

All the information related to network connection is recorded in the chip of SIM card, also the names, telephone numbers and SMS that storing in the Name of SIM card. You can take out SIM card from your phone, and use it in any GSM mobile phone (new mobile phone can read SIM

card automatically).

In order to avoid losing or damaging the information saved in SIM card, please don't touch the metal contact surface, and place SIM card at the place that away from electricity and magnetic force. Once SIM card is damaged, you can't use the phone normally.

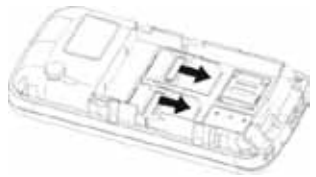

Prompt: Please make sure to power off the phone before taking out SIM card. It is absolutely forbidden to insert or take out SIM card with external power supply; otherwise it may damage SIM card and the phone.

Inserting and Taking out SIM Card

Metal contact surface of SIM card is easily scratched. You must take out SIM card carefully before the assembly.

Power off the phone, remove the rear cover, battery or other external power supply.


Make the end of SIM card with cutting angle inside and aim at the card slot of the phone and metal surface of SIM card face downward, then insert SIM card to the card slot of the phone, the other SIM card is also inserted in this way.

When taking out SIM card, directly pull it outward and then can take out SIM card.

Prompt: Without special explanation inserting two SIM cards are defaulted in the manual. If you just insert one SIM card, maybe some options of the menu will not be shown.

Memory Card

Aim at the memory card slot and push the memory card gently, and the card should be inserted correctly.

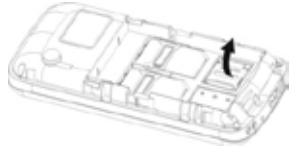


Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

Battery

Install the Battery

Take off the back cover of the mobile.

Make one end of battery with metal surface aim at the battery connector.

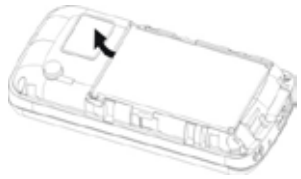

Then gently press the battery downward using the finger, and then press the other end to install the battery.

Prompt: Please operate correctly to avoid damaging the battery connector.

Note

- ❖ Please switch off your phone before you remove or insert SIM card
- ❖ The plug-in SIM card and its contacts can be easily damaged by scratching or bending.
- ❖ Keep your phone and its accessories away from children.

Security Password

PIN

PIN (Personal Identification Number) is used to prevent your SIM card

from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operator for more details.

PIN 2

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operator for more details.

PUK

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

PUK2

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't the functions that need PIN2. Please contact with your service provider to buy new card. You

can't change PUK 2. If you lose the code, please contact with your service provider.

Insert T flash card

Slip the cover according to the "Open " arrow to open the cover, and then put into the card. Slip the cover according to the "Close" arrow to lock the cover.

Charging the battery

Battery level indicator

❖ Your mobile phone can monitor and display information about the battery.

❖ In the normal circumstances, you can know the battery capacity from the battery icon displayed on the upper right corner of the screen.

❖ When the battery is too low, "low battery" will show on the screen, also issued a warning alert tone if you choose alert tone in any mode- a warning tone by profile setup.

❖ When you charging, the battery icon will change until the battery is full.

Use the travel charger

- ❖ Insert the battery to the phone before you charging the battery.
- ❖ connect the travel charger adapter and handset charge slot;

Certainly must guarantee inserts well.

- ❖ Connect the travel charger to the plug.
- ❖ It is normal phenomenon that the battery getting a little heat when you charging.
- ❖ When finish charging, the icon of battery will stop change.

Note:

- ❖ Please ensure the charge plug, USB plug is in right plugging directions, otherwise it can't be charged or cause some other troubles.

❖ Must ensure the voltage and power of your charger match the local standard frequency and voltage.

In order to enable the battery to achieve the optimum performance, please observe following rule:

❖ Only use the approved batteries and charger.

❖ Please switch off the phone before you remove the battery.

❖ Charging the battery until full if it is new battery or not use for long time. If the battery is too low and can't switch on the phone, the battery icon only will be able to change after charging a long time.

❖ Keep the battery at room temperature or near room temperature

when charging.

❖ Do not use the battery if there's any smell or overheating during charging, using or storing, or the batteries is discolored or deformed.

Basic Operations

Make a call

Enter area code and phone number in standby mode, then press the calling key.

press * until it shows + on the screen, then enter the country code, area code and phone number when making an international call.

When dialing an extension No., press *until it shows on the screen P or W after you dialed the switchboard.

Press the calling key after you entered the number to start the call. It will display the corresponding name on the screen if the numbers have

been stored in the phone book. After that, you will hear the ringtone.

Adjust the volume

Press up or down key to adjust the volume during your call.

End a call

Press the Call End Key to end a call. Press buttons on the headset to end a call when using a headset.

Incoming call

The phone will remind the user with ring, vibration and other ways when you have incoming calls. The background light will be lighted.

Incoming call information will also be shown on the screen.

- ❖ Press Calling key to answer the call.
- ❖ Press Call End Key to reject the call.

Note: You can also press buttons of the headset to answer or hang up a call when using a headset.

Records of outgoing calls

- 1> In standby mode, you can press the Calling Key to view the latest calling records.
- 2> You can dial the phone numbers appears in the list directly with Calling Key. Press OK Key to view the details of those numbers. Press options to save or delete a number.

Options during a call

You can use a lot of control functions during a call. The calling options

are available only during a call, at the same time, call waiting, call holding and other features must be supported by network. Please contact your network operator.

Call waiting

If the network supports "Call Waiting" and you have activated it, you will hear call waiting tone if you have another call when the line is busy.

- 1> Press calling key to answer the call, the first call will be automatically maintained. After connecting, please check the reference "Keep/switch."

2> Press Call End Key to reject the call, and continue the current call.

3> Press Options, select End, so that you can hang up the current call and answer the incoming call.

Switch

Switch between Current call and Maintained call.

Call Hold

If the network supports Call Hold, you can make another call during your current call.

Mode 1:

Enter the phone number or press options to find the number from the phone book, Or press Options to select New Call, then enter the number. Press the Calling Key to dial the second call. The first call will be automatically maintained.

Mode 2:

Press Options, select to keep the current call, then proceed to dial another call.

Mute / Restore

Mute and restore, Mute function can prevent the others from hearing your voice.

Other options

You can enter the phone book, SMS and other functions when you have a call.

Read SMS

When you receive a new message, it appears on the screen with a sign. You can enter the SMS inbox to read (For details, see "SMS" section). After reading all of the new messages, the message sign will disappear.

Missed Calls

If you have missed calls, it will appear on the screen with a sign. You can press Call End Key to exit. You can also view the details and call back by pressing Dialing Key.

Input Methods

Input method is used to input English, Chinese, Arabic and digits to edit SMS, MMS, contacts, Calendar, greeting, memos, etc. There is one input method of keyboard input. You can input English characters,

Chinese, Arabic and digits by keyboard method. keyboard includes capital English keyboard, lowercase English keyboard, symbols keyboard, digital keyboard and password keyboard. English keyboard is used for inputting capital and lowercase English alphabets. Symbols keyboard is used for inputting various symbols. Digital keyboard is used for inputting telephone numbers and other digital characters. The password keyboard is only used for entering password.

Switch input methods

There are the following kinds of input method: <ABC > 、
<abc>and<123>

Use the handwriting pen provided to switch input method by touching Options, or touching the input method button.(You can press # key on the keyboard to switch input method if you are using the keyboard).

ABC (Capital English)

Input capital English.

abc (lowercase English)

Input lowercase English.

123 (digits)

Input digits. Punctuation input.

(press * on the keyboard if you're using the keyboard).

Note: Since we are updating our products all the time, sometimes we change the content of the user's manual. Sorry for any inconvenience because of the changes made without noticing you.

Messaging

Write message

Enter the new message menu, you can edit message. Smart input

function is optional. Option:

- ❖ Send to single: Finish your message, you can send to a receiver.
- ❖ Send to: send to multi-receiver.
- ❖ Input method: Select the method you prefer.
- ❖ Insert template: You can use the phrases saved in phone.
- ❖ Advanced: Insert numbers: Inserting the numbers and names

from your name list is available.

Insert name: insert a contact name from the phone book.

Insert bookmark: Inserting bookmarks from internet is available.

- ❖ Save: save the message.

Inbox

Message including read already and not read be listed by receiving time.

Message options: open, reply, call, forward, delete, etc. Advanced options: message sender's number, website, mail address, USSD, and copy/remove to SIM card.

Outbox

Check the messages you sent. Send, delete, all delete, etc functions are available. You can copy/remove them to your SIM cards.

Templates

There are 10 everyday use sentences saved. You can edit or delete them.

SMS settings(SIM1, SIM2 Set separately)

SIM1/2 message setting:

❖ Profile settings: activate or edit the profiles.

set the profile name, SMSC address, validity period and message type.

❖ Voicemail server: edit the voicemail number, call voicemail.

❖ Common settings: switch on/off delivery report, reply path and save sent message.

❖ Memory status: Check the memory state.

❖ Preferred Storage: where to store the message by default.

❖ Message safeguard: Password shall be input when message

safeguard enabled.

SMS lock

Input a password to lock your SMS. You need to input the password before you can read the SMS if you turn the lock on.

Multimedia message

Write message

Create a new multi-media message.

❖ Receiver: Edit the receiver, add numbers.

❖ Copy: Edit the copy person, add numbers.

❖ Secret Copy: add the secret copy person, numbers.

Inbox

Options: Read, reply, delete, etc.

Outbox

Save the sending message, failed messages can be read, forwarded or deleted.

Draft

Save the unfinished messages. Read, edit, send and delete is available.

MMS settings

❖ Compose: creation mode, pictures resizing, best page time and auto signature.

❖ Send: validity period, delivery report, read report, priority, slide time, delivery time.

❖ Retrieve settings: Network, roaming, reading report, Delivery report.

❖ Filter: Anonymous multi-media messages are acceptable or not.

❖ Memory status: Check the sever storage state.

Remarks: Multi-media message shall be support by the mobile phone. Phones without multi-media message

function cannot display the message correctly.

Broadcast

Text messages sent to the same community by network, such as the local zoom, weather forecast, traffic information. You can receive those messages by setting number, which represent different kind of message.

Phonebook

You can store phone numbers in SIM card or phone.

Quick Search

Enter the first alphabet of the name to find records of phone book. Then you can dial, send SMS, view, edit, delete, copy and move the numbers.

Search Contact

Search the phone number which you need by the name.

Add New Contacts

You can add new Call record to SIM or phone.

Preferred storage

You can select SIM card or phone for preferred memory.

Speed dial

Make a speed dial list.

My Number

This function can edit the handset number, service number and emergency number.

Owner Numbers

Edit and send my SIM card number.

Memory status

Display used and free space of phone and SIM card.

Copy contacts

Copy the contacts from SIM card to phone, or from phone to SIM card.

Move Contacts

Move the contacts from SIM card to phone, or from phone to SIM card.

Delete all contacts

Delete all contacts from phone or SIM card.

Call Log

Call history

Call records of both SIM 1 &SIM 2 can be seen in call logs, including missed calls, dialed numbers, received calls.

Call settings (SIM1, SIM2 separately)

Caller ID

System preinstall, number invisible and sending number services are provided by network operator are optional. System preinstall is set as a

default.

Remarks: Number invisible function depends on network. It may lead to dialing problem. Dialing test shall be done when this function takes effect.

Call waiting

This network service allows you to answer an incoming call while you have a call in progress. This service shall be supported by operator.

Submenu:

- ❖ Enable: Enabling this service (Apply to operator first).
- ❖ Disable: Disable this service (Apply to operator first).

- ❖ Consult: Consult the service supplier to check the service state.

Call divert

Call transferring function can transfer some preset phone numbers to another phone.

1> Call divert options.

- ❖ All voice calls: all incoming calls are transferred directly.
- ❖ No access: transfer incoming calls when out service.
- ❖ No answer: transfer incoming calls when no answering in certain time.
- ❖ Busy: transfer incoming calls when busy.

❖ Data calls: Transfer all data calls shall be supported by network operator.

❖ Cancel: cancel this service.

2> Select the types needing transferring service.

3> Input the number you want to transfer to answer. Press OK to finish setting.

4> When no answer mode is available, waiting time shall be set before inputting the number setting to answer.

Call barring

Call barring is a network service to restrict certain call making and

receiving. To edit the settings for this network service, you need the password that received from your network operator to activate or cancel this service.

Call making restricted

Outgoing calls, international calls, international excluding domestic calls is optional to activate, cancel and consult.

Cancel restrict

Cancel all calling restricts. Password shall be provided by network operator.

Change Password

The original password shall be input to change the barring password.

Line switching

Alternating line 1 and line 2 is available.

Blacklist

Mode: enable/disable blacklist.

Blacklist number: the contacts in the blacklist cannot get through when they call you. And you don't have any record on your phone. Use it with caution.

Advance settings

Advance settings function contains Auto redial, Auto call recording,

call time display, call time reminder, Auto quick end.

Settings

Dual SIM settings

Dual SIM open、 only SIM1 open、 only SIM2 open、 flight mode.

Phone

Time and date

- ❖ Most cities on the world are collected in the phone for you to choose from.
- ❖ Set time/date : Set the time and date.
- ❖ Set format: Time format can be set to 12 or 24 hour clock ; The

date formatting options: YYYY/MM/DD , DD/MM/YYYY , MM/DD/YYYY。 The screen display change with the date format setting.

Schedule power

There are four timings for setting, you can set the phone's automatic startup and shutdown time.

Language

You can set the language in which menu features and options are displayed. Available language: English, Chinese, Arabic and anything you choose.

Preferred input method

Set the default input method.

Dedicated key

Set the up/down/left/right key with your preferred shortcut.

Power Saving:

Activate or deactivate the power saving mode.

Misc. settings

LCD backlight. Set the brightness and timing of backlight.

User profile

Your phone has predefined profiles that are set to suit a certain

environment. You can reset all profile settings to the way were set when you bought your phone. Profiles selection: General, Meeting, Outdoor, Indoor, Headset.

Enter activate to select the profile, enter customize you can set the ring signal, ringing mode, volume extra tone answer mode and etc.

Display:

❖ Wallpaper : Use a picture as wallpaper from RAM or T-FLASH card.

- ❖ Show date and time
- ❖ Show owner number : Select showing SIM owner number on display or files

Network

Search the network Automatic or Manually. You can select appropriate network when your phone is not in the coverage area of local network.

Search network manually near the border helps avoiding your phone log into foreign network.

Preferences

Select your preferred network operator. The default network is your SIM card service provider. Press options to carry out the following actions:

- 1> Add from list: display all the PLMN list.
- 2> new: add Internet use priority.
- 3> change priority network: set network priority.
- 4> delete: delete the current preferred network in use.

Security

Some safety options are provided in this option.

SIM card safety setting.

SIM lock

You need to enter the correct PIN before you can set the SIM lock.

Every time when you switch on the phone, you need to enter the PIN if the SIM lock is on. If you enter a wrong PIN for 3 times, you need to enter the PUK to unlock it. Contact your service provider if you don't have or you've lost your PUK No.

Phone lock

It's used to lock/unlock your phone. You need to enter the password to turn the lock on/off. The password will be requested when you switch on your phone if the SIM card is changed.

Auto Keyboard lock

It's used to lock/unlock the keyboard. You can set the status of the lock: off, 5seconds, 10seconds, 30seconds. The default status is off.

Change password

Input the old password to unlock, then you can input a new one to make the change.

Restore factory setting

You can restore all the settings to factory setting.

The original password is 1234.

Multimedia

Camera

The phones built-in high-pixel CMOS camera, digital zoom varies with the size of image. In the camera feature you can use Option to make the following operation:

- ❖ Photos: you can enter the album folders and operate on the file.
- ❖ Camera settings: set the fill light, shutter sound, exposure compensation, avoid flicker, delay shoots and continuous shots.

- ❖ Image settings: set the image size and quality.
- ❖ White balance: set the white balance.
- ❖ Scene mode: set automatic and night shoot mode.
- ❖ Storage: save the photos to phone or T-FLASH card.
- ❖ Restore default: Select this operation, the various camera setting parameters will restore to the default parameters.

Image viewer

You can view photos captured by you phone camera and pictures

downloaded to T-flash card.

Press Options to:

❖ View: view pictures stored in phone and T-flash card. Press

Left/Right Key to view other pictures.

❖ Select type of view: list mode and grid mode is available.

❖ Send: send pictures to your friends via by MMS.

❖ Rename: rename the pictures.

❖ Delete : delete the selected picture.

❖ Delete all: delete all pictures.

❖ Sort by: sort by name, format, date, size.

- ❖ Store: store pictures in phone or T-flash card.

Video player

The video player shows the current files. It provides you with quick view of video files.

You can enter video player from main menu- multimedia, touch the playlist to play music files. Touch "option" to:

- ❖ Play: Play the selected video files.
- ❖ Send: You can send video files by MMS, e-mail to your family and friends.
- ❖ Rename: To rename the selected video files.

- ❖ Delete: delete the selected video files.
- ❖ Delete all files: delete all video files from the phone / memory card.
- ❖ Sort by: sort the files by name, type, date, size.
- ❖ Storage location: store videos in phone or memory card.

Music Player

The music player is used to play music files in your phone and T-flash card.

Point the Options you can select the following operation:

- ❖ Play: play the music files which be selected.

- ❖ Details: To view the information of the file.
- ❖ Add to ringtones: Add the current music file to ringtones and set it as ring signal for incoming call.
- ❖ Refresh list: Search music files.
- ❖ Settings: set playlist, list auto gen., repeat, shuffle, background music on/off and etc.

Remark: Maybe the sound will be destroyed by the size of the head phones. It's better to use stereo phone to enjoy high quality music. Music copyright be protected by international treaties and national copyright law, you may

need to obtain permission or to obtain a license to copy music.

Sound recorder

Enter recording function, click "options" button can perform the following operations.

- 1> Start recording a new video record.
- 2> enter saved recording lists, you can perform these operations such as playback, rename, delete and send.
- 3> You can set the storage locations and file format.

FM radio

The antenna FM radio use is not the mobile antenna. You need connect the mobile phone with compatible headset or accessories which can let FM radio function operate normally.

Click OK key to listen to radio, press options button to search for channel automatically, manual preservation, format sound effects and recording operation and so on.

Gallery

Review and manage the space (all and free) of Phone and Memory Card.

Organizer

Calendar

This feature allows you to view the specified date. Select the calendar, tap "Options," then you can view.

Gallery

Review and manage the space (all and free) of Phone and Memory Card.

Alarm

Users can set up alarm according to their need. Select edit, enter the set alarm. Select On to activate time setting and ring mode. You can set the alarm to ring once, everyday or several days in a week.

Extra

Calculator

The features of calculator are provided with the phone for users, you can add, subtract, multiply and divide, use the Function keys to complete the calculation.

Currency Converter

Advantage of this feature can be done currency conversion. Inter the exchange rate and press OK, then input the currency conversion figures, you can get the domestic currency value by foreign currency conversion.

Stopwatch

General stopwatch

- 1> Timing separately: make discontinuous timing.
- 2> Check the records: You can view the current historical record.

multiple stopwatch

World clock

By clicking the navigation left or right key,you can use the world map to view the various time zones cities, while the screen displays the date and time of corresponding cities.

Applications

Games

In the "games", you can select the appropriate game. The corresponding game can be set different difficulty levels.

The detailed operation of the game, please check "Help" file. "Game Settings" can help you set sound and background.

Web

This function is provided by the network provider. The options depend on the services provided by SIM card.

Internet service

- ❖ Homepage : Login homepage.
- ❖ Bookmarks : Enter the bookmark, you can select the following operation:

1> Go to : View bookmarks.

- 2> Edit : Edit an existing name and address of bookmark.
- 3> Send : Via SMS or multimedia message to send bookmarks.
- 4> Delete : Delete the selected bookmark.
- 5> Delete all : Delete all bookmarks.
- 6> Add bookmark : Edit the new name and address of bookmark.
- ❖ Recent pages : View the page history directly.
- ❖ Input address : Edit the address then you can connect the address directly.
- ❖ Service inbox : View service information.
- ❖ Setting:

- 1> Select SIM.
- 2> Edit profiles : Set homepage, gateway, port, network account.
- 3> Browser options : Set the waiting time and display pictures.
- 4> Service message set : Set whether you accept message service.
- 5> Clear cache : Use for clear cache.
- 6> Clear cookies : Use for clear cookies.

Date account

Edit the GSM date and GPRS information.

Care and Maintenance

The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

- ❖ Keep the device dry. Rainwater, humidity and all types of liquids or moisture can contain minerals that can corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing the battery in it.
- ❖ Do not use or store the device in dusty, dirty areas. Its parts and

electronic components can be damaged.

- ❖ Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastic parts.

- ❖ Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.

- ❖ Do not disassemble your phone. The phone may get damage if it is dealt with by unprofessional people.

- ❖ Do not drop, beat or shake your phone otherwise it may damage

the circuit board.

- ❖ Do not clean your phone by using irritant chemicals, cleaning agent or strong cleaner. Gently use soft clean and dry cloth to clean the lens (for example, camera, distance sensor and light sensor lens).
- ❖ Do not use artist color to paint your phone because the artist color may block up phone components.
- ❖ Use the supplied antenna with device or approved antenna only. Unapproved antenna or revised antenna or other accessories may damage the device and offend wireless device management methods.
- ❖ Please use charger indoor.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: U-100-2(FCC ID:ZU3UNNECTOECO2) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.472W/kg and when properly worn on the body is 0.385W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.