

USER MANUAL

Thank you very much for your choice of this product designed by our company!

Contents

For your safety	2
About Your Phone	3
Preparing Your Phone	4
Call functions	6
Text entry	7
Menu operation	7
Function Menu	7
1. Messaging	7
2. Phone Book	9
3. Call center	10
4. File manager.....	12
5. User profiles.....	12
6. Facebook	12
7. Services	13
8. Opera mini	13
9. Settings.....	13
10. Twitter	16
11. Multimedia	16
12. Organizer.....	18
Accessories	19
Maintenance and Care.....	20
Safety	20
Technical Specifications	21

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

ROAD SAFETY

Always keep your hands to operate the vehicle while driving. Park the vehicle before using your phone.

SWITCH OFF IN AIRCRAFT

Using of wireless telephones in aircraft may disrupt the operation of the aircraft. It is dangerous and illegal. Ensure switching off the phone before boarding an aircraft.

SWITCH OFF IN HOSPITALS

Follow any restrictions or rules. Switch off the phone near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off the phone at a refueling point or any fuel or chemicals places.

SWITCH OFF NEAR BLASTING POINT

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

INTERFERENCE

All wireless phones may be susceptible to interference, which could affect the performance.

USE NORMALLY

Use in the normal position explained in the product documentation. Don't touch the antenna unnecessarily.

ENHANCEMENTS AND BATTERIES

Use only the approved enhancements and batteries. Do not connect incompatible products.

EMERGENCY CALLS

Ensure the phone is switched on and in service. Enter the emergency number, and then press the talk key. It will give your location. Do not end the call until the permission.

About Your Phone

Glimpse of Your Phone



Preparing Your Phone

1. Installing SIM Card

1. Please keep your SIM card away from reach of children.
2. Scratches and bends can easily damage the SIM card. Please be extra careful when installing, removing, handling or storing your SIM card.
3. Before installing or removing the SIM card, make sure the phone is switched OFF, and then remove the back cover and battery.
 - a. Slide the back covers upward the bottom of the phone until it can be removed.
 - b. Remove the battery (see Removing Battery).
 - c. Place SIM card into the SIM slot.
 - d. Fit the battery with the metallic contacts at the right bottom corner.
 - e. Replace the back cover by fitting it to the back of the phone.

2. Installing Memory Card

1. Take out battery, slide open and lift metal buckle.
2. Put the end of Golden Finger aiming at T card slot with metal face down horizontally.
3. Close the metal buckle and slide lockup.
4. If you want to take it out, do as per the above instructions contrarily.

3. Install Battery

1. Connect the battery's metal touch points separately with the battery compartment metal touch points, and put the battery base to the slot.
2. Put the back cover to its place.

4. Remove Battery

Remove the back cover then lift the bottom of the battery and remove it.

Notes: Settings and data stored in the phone or SIM card may be lost after the battery is removed.

5. Charge Battery

Connect the charger to power supply, and then insert the charger pin into the I/O jack.

Notes:

1. When charging, DO NOT remove or take out the battery to avoid the battery circuit to cause fire.
2. While charging, it is normal that the phone and charger will become hot.
3. If the battery is completely empty, it may take a period of time before the charging icon appears on the display.

6. USB Management

When USB cable plugged in, phone will have the following options:

1. **Mass storage:** the phone can be connected to the PC and used as a USB Flash Disk.
2. **Webcam:** the phone can be connected to the PC and used as a PC camera.
3. **COM port:** the phone can be connected to the PC and you can use web dial-up service.

7. Power on and off

Press and hold Power key to turn on/off the phone.

And if you have set PIN or phone code, input it correctly.

8. Security Code

1. PIN Code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. It is normally supplied with the SIM card package. Be careful while entering PIN code,

3 wrong tries in entering PIN code will block the SIM from use, requiring input of PUK code to unblock. Please contact your operator for further details.

2. PIN2 Code

The PIN2 code is required when activating certain special features (such as call costs and fixed dialing). It is normally supplied with the SIM card package. Be careful while entering PIN2 code, 3 wrong tries in entering PIN2 code will block the SIM from use, requiring input of PUK2 code to unblock. Please contact your operator for further details.

3. PUK Code

The PUK (Personal Unblocking Key) code is required to unblock a blocked PIN code. It is normally supplied with the SIM package; otherwise contact your service provider for the code. Keep your PUK code in a safe place, do not throw it away. Contact your service provider if it is lost.

If your SIM is blocked, your phone will ask you to enter PUK code to unblock. You have 10 tries to enter the right PUK code, after which your SIM might be permanently blocked.

4. Phone Password

The Phone Code is a 4 to 8 digit security code that protects unauthorized use of your phone.

The factory default code is “1122”. Once activated, the phone will ask you to enter Phone code every time when it is turned on. For your security, change the default phone code as soon as possible.

Do not forget your phone password.

Call functions

1. Making a Call

Make a domestic call

Enter the phone number including the area code. Press the talk key to make a call.

Make an extension call

When making an extension call, input “P” that is a prefix of extension numbers. It will dial automatically in several seconds since you dialed the telephone exchange.

viz.: area code—telephone exchange numbers—P—extension numbers, then press talk key.

Make an international call

“+” is needed when input country code. Input “+”, enter the country code, the area code and the phone number, press talk key to dial. Dial to Hong Kong, Macao and Taiwan phone ibid.

Make a call from Phone book

Enter Phone book, select the phone number, and then press talk key to make a call.

Redial a call by recent call lists

In standby mode, press the right selection key to find the recent call lists, scroll to the number or name, then press talk key to dial.

2. Answer a call

An incoming call window will be displayed as the phone receives a call. The number will appear on the window if you have opened this function. If this number is not saved in the phone book, the call's district number will show it on the window. Press talk key to answer it. If an incoming call arrived during your operation in sub window, a new window will be popped to inform you and any of your operation will be paused. If you missed a call, a missed call log will appear after you return to the start screen.

3. Call options

During a call, the options content is changeable according to your call status. The functions of Call Waiting, Call Hold need the support of net work.

Here are some parts of the options, like "Hold single call", "End single call", "New Call", "Phone Book", "Messaging", "Sound Recorder", "Mute " and "DTMF".

Text entry

You may be requested to input text message many times when you using this phone. For example, when you write a message or add a new phone book record, you can select different input methods, such as ABC, abc.....

You can input characters, letters, digitals or special characters including punctuations.

Switch input methods

In a text entry state, you can press the "FM" key to switch from one method to another.

Input method

Switch to uppercase or lowercase mode. Press "alt" there will be an icon of "FN" on the upper left of the screen, you can input one upper character. Press "alt" twice the "FN" will be locked, so all your input character will be upper ones.

For letters you can input them directly.

Input special character

When use any kind of input method, press "sym" key to display the character list.

Menu operation

The phone provides an excellent menu. And you can select each submenu according to your need. Functions exist in these menus and submenus. Enter the menus by pressing left flexible key or center key.

Function Menu

1. Messaging

1.1 Write message

1.1.1 Text message

Access this menu to edit and send message, press "option" to do as following:

1. Sent to: complete the message then enter number or add from phonebook, choose SIM1 or SIM2 to send the message.
2. Input method: switch the input method as you want.
3. Insert template: choose the preset phrases as message.
4. Advanced: Insert object: insert picture/ my picture/predefined animation/my animation/melody/my melody/predefined sound
Insert number: insert the number stored in the phonebook.

Insert name: insert the name stored in the phonebook.

Insert bookmark: insert the bookmarks stored in the phone.

Text format: to adjust text size/test style/alignment/new paragraph

5. Save to Drafts: store this message into draft box, and the message has not been sent.

1.1.2 Multimedia message

- a. Send to: sent the message to a receiver
- b. Input method: to change the input method
- c. Add picture: add a picture into the message
- d. Add sound: add a sound into the message
- e. Add video: add a video into the message
- f. Add subject: edit a subject for the message
- g. Preview MMS: take a preview of the message
- h. Slide options: to adjust slide behind/before and slide timing
- i. Advanced: to insert text template/insert attachment/insert bookmark
- j. Save to Drafts: to save the message as a draft

1.2 Inbox

Access this menu to view the received messages.

When has the new message, the phone will ring, the unread message icon also to be able to appear on top of the screen. Press ok key in view message screen to do the following functions:

1. Reply by SMS: reply the sender via message.
2. Reply by MMS: reply the sender via MMS
3. Call sender: use SIM1/SIM2/SIM3/SIM4 to call the sender.
4. Forward: transmit the original message or modified message to others.
5. Delete: delete the message
6. Advanced: more options such as copy to SIM/ move to SIM/ auto find on

1.3 Drafts

Store the SMS without sending for reading or sending later.

Access this menu, select one SMS from the list and user can view and use functions such as send, edit, delete, delete all and advanced. Please check **Inbox** for reference.

1.4 Outbox

The failed sent messages will be saved in outbox.

Press ok key in viewing message screen to use functions such as resend, edit, delete, delete all and advanced. Please check **Inbox** for reference.

1.5 Sent messages

Access this menu to view the saved messages.(save sent message function should be activated, see **Message settings>Text message>Message settings> common setting**)

Press ok key in viewing message screen to use functions such as forward, delete, delete all and advanced. Please check **Inbox** for reference.

1.6 Delete messages

1. **Inbox:** Delete all messages from Inbox.
2. **Drafts:** Delete all messages from Drafts.
3. **Outbox:** Delete all messages from Outbox.
4. **Sent messages:** Delete all messages from Sent messages.
5. **All messages:** Delete all messages from all folders.

1.7 Email

You can create an Email account to send E-mail via this handset

1.8 Broadcast message

Broadcast public information sent by the network providers. Use Cell Broadcast service, you can receive information on various subjects from network provider. For more available information, please contact your local network providers.

1. **Receive mode:** turn on/off broadcast message.
2. **Read message:** to read the broadcast message.
3. **Languages:** choose the language you want.
4. **Channel settings:** you can receive broadcast messages selectively.

1.9 Templates

There are ten predefined texts. User can use them to edit or delete.

1.10 Message settings

Access this menu to do the following functions:

A. Text message

1. **Profile Settings:** you can edit or modify the SMSC address, or ask your provider for the number.
2. **Voicemail server:** This is a Network Service, and should be supported by the service provider.
3. **Common settings:** you can set Delivery report, Reply path and Save sent message.
4. **Memory Status:** to check how many SMS are stored and the total number which SIM or phone can store.
5. **Preferred Storage:** select SIM or phone for preferred storage.

B. Multimedia message

1. **Data account:** To choose the correct network for your phone.
2. **Common settings,** user can do compose, sending, retrieval, preferred storage, and memory status settings.

C. Service message

1. **Enable push:** you can enable or disable this function
2. **Enable service loading:** you can enable or disable this function

2. Phone Book

Our phone can store 500 phone numbers, the capacity of SIM card decide how many phone numbers can be stores in SIM card. Both phone number in phone and SIM card can be combined

as one phone book for viewing.

Select any call and press “options” to achieve functions as follow:

1. **View:** to view the information of the selected call
2. **Send text message:** to send short message to the call
3. **Send multimedia message:** to send multimedia message to the call
4. **Call:** to use SIM 1/SIM 2/SIM 3/SIM 4 to dial
5. **Edit:** to edit the selected call
6. **Delete:** to edit the selected call from phone book
7. **Copy:** copy the call from phone to phone or from SIM card to SIM card
8. **Move:** move the call from phone to SIM card or from SIM card to phone
9. **Send business card:** send the call information to others as text message/as multimedia/via blue tooth
10. **Add to blacklist:** add the call to blacklist, you cannot receive call or message from the holder.
11. **Mark several:** mark several calls
12. **Caller groups:** add the selected call to user’s group
13. **Phonebook settings:**
 1. **Preferred storage:** select prefer storage SIM 1/SIM 2/Phone/All
 2. **Speed dial:** Switch on/off the mode. Set the numbers from 2-9
 3. **My number:** edit or send my number
 4. **Extra numbers:** you can set owner numbers/fixed dial/SOS numbers
 5. **Memory status:** show the total number and stored number of SIM and phone
 6. **Copy contacts:** copy the contacts from phone to SIM card or from SIM card to phone
 7. **Move contacts:** move the contacts from phone to SIM card or from SIM card to phone
 8. **Delete all contacts:** delete all contacts from SIM card or phone

Notes:

1. Sending VCard can only be supported when the received phone also has this function. Otherwise the VCard cannot be displayed normally on the received phone.
2. One ring tone can only be select as caller ring tone after the file in the file manager send to the ring list.
3. Copy items from phone to SIM card, it can only copy the name and number of a record. Only the record in phonebook can be set as the member in the group, caller picture, caller ring tone and caller video.

3. Call center

3.1 Call history

Select call history from main menu, you can view the information about call history, including missed calls, dialed calls, received calls, delete call logs, call timers, call cost, text msg. counter and GPRS counter.

3.2 Call settings

3.2.1 SIM1 (SIM2/3/4) calls settings:

1. Caller ID

There are these options; "Set by network", "Hide id", and "Send id".

2. Call waiting

If it is supported by your service provider, call waiting will notifies you of an incoming call even if you are in a call. You can then accept, reject, or ignore the incoming call.

To make this function available, please contact local network provider.

3. Call divert

Call diverting is a network services, it tells your network to divert incoming calls to another number to avoid missing a call.

The following is available: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls, and Cancel all diverts.

4. Call barring

If it is supported by your service provider, this function will enable you to restrict the outgoing or incoming calls. You also can select the options: Cancel all, Change barring password.

5. Line switching

Enter this menu user can switch to line1 or line2.

6. Group list

To take a view of group list.

3.2.2 Advance settings

1. Blacklist

You can switch on/off this mode. When add a number in blacklist, you can not receive calls from this number.

2. White list

You can turn on/off this function and add some numbers as whitelist numbers.

3. Auto redial

It can dial the same phone number automatically after a failing dial with this function.

You can set the prefix IP number with this function.

4. Call time display

Switch on/off the mode, when the mode is on it will show you the time you make a call.

5. Call time reminder

There will be a hint sound when the setting time passed during a call.

6. Auto quick end

It will automatically hung up when the preset time is up. You can set the time from 1-9999sec.

7. Reject by SMS

To reject an incoming call and send a message to the caller

8. Connect notice

To turn on or off this function

9. Answer mode

a. Any key: when there is an incoming call, you can answer it by pressing any key

b. Auto answer when headset mode: it will answer the incoming call automatically

4. File manager

Our phone provides you space to store files it also supports T-Flash card. To enter File manager under the main menu, press left soft key for follow options:

4.1 Open: Open one selected file folder

1. Open: open one selected file, press options to achieve functions as follow:

- 1. View/Play:** view or play selected file, there are differences according to different files.
- 2. Send:** send as multimedia message or via Bluetooth.
- 3. Use as:** wallpaper/screen saver/power on/off display
- 4. New folder:** add a new file folder at appointed place.
- 5. Rename:** rename the selected file.
- 6. Delete:** delete the selected file.
- 7. Sort by:** you can sort by name/type/time/size/none
- 8. Mark several:** to copy/move/send marked files via Bluetooth.
- 9. Copy:** copy selected file to your ideal position
- 10. Move:** move selected file to your ideal position
- 11. Delete all files:** delete all the files in the selected file folder.
- 12. Details:** show the date and size of the selected file.

2. New folder: add a new file under the submenu

3. Rename: rename the selected file

4. Delete: delete the selected file

5. Sort by: you can sort by name/type/time/size/none

4.2 Format: to format all the files in the memory card and systematically set up new file folders. Be cautious, all the data cannot be restored.

4.3 Rename: rename the memory card.

4.4 Details: to show the name of the memory card, total size and free size.

5. User profiles

User profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are General, Meeting, Outdoor, Indoor, Headset and Bluetooth.

6 Facebook

Connect internet first, then input ID and Password to operate, detailed information please check Help and Instruction of Facebook.

7. Services

7.1 Opera mini

Connect internet first, then input ID and Password to operate, detailed information please check Help and Instruction of Opera mini.

7.2 Internet service

Your phone support internet function. After the necessary settings, you can use this function normally.

Notes: To open this function, you should apply GPRS service to your SIM card.

In internet service user can visiting homepage, bookmarks, input address, recent pages, service inbox, and settings.

7.3 Data account

To choose a correct network for your handset

7.4 Ebook reader

You can read PDB,TXT format file. While reading, press “Option” to customize your Ebook settings such as Font size, Scroll by, Auto scroll etc.

8. Opera mini

Connect internet first, then input ID and Password to operate, detailed information please check Help and Instruction of Opera mini.

9. Settings

9.1 Quad SIM switch

1. Manually selected by user: selected by the user manually
2. Automatically decided by SIM cards: selected by the SIM itself

9.2 Quad SIM settings

Use this function user can switch between quad cards.

9.3 Phone settings

1. Time and date

Set the home city, time and date, time and date's format, update with the time zone.

Notes: You should reset the time if battery is taken out over 30 seconds, otherwise the time will not be accurate, even the time will be cleaned to zero.

2. Schedule power on/off

You can set 4 power on/off schedule, and the phone will power on or power off according to the settings.

3. Language

Select the operating language.

4. Preferred input methods

You can set the default input methods in text editor.

5. Display

Set Wallpaper, Screen Saver, Power On/Off Display, Show date and time.

6. Auto update time

Set the state to “on” or “off”. If the state is “on”, when connecting to swap network, the date and time will be update.

7. Flight mode

You can choose to use normal mode or flight mode

8. Misc. settings

You can set the LCD backlight duration and brightness.

9.4 Network settings

This feature is available to operate network settings when you are roaming or travel outside.

Access the menu; you can select the network manually or automatically.

Before use the network, you must contact your local service provider or the roaming area before you use this function.

9.4.1 Network settings

9.4.1.1 Network selection

1. **New search:** Add a new network.
2. **Select network:** Choose the provider of the network.
3. **Selection mode:** Manual or Automatic.

9.4.1.2 Preferences

To choose the preferred network provider.

9.4.2 GPRS transfer pref.

User can choose Date prefer of Call prefer

9.5 Security settings

You can set the security settings to protect the phone or SIM card from unauthorized use.

The default phone lock security code is 1122.

9.5.1 SIM Security

1. PIN Lock

Set the phone to ask for your PIN code each time you start your phone (if this function is supported by your SIM card).

Notes: After three consecutive incorrect PIN code entries, the code will be blocked, and you need the PUK code to unblock it.

The PIN code and PUK code are usually supplied by the SIM card. If you don't get them, please contact with the supplier. The default PIN code is 1234 usually.

2. Change PIN

You can change PIN code, PIN2 code here

9.5.2 Phone security

1. Phone lock

Phone lock can be used to lock the device to avoiding unauthorized use.

Set the phone to ask for your security code each time you start your phone. Default is 1122.

2. Change password

You can change password of the phone

9.5.3 Auto Keypad lock

You can set the auto lock time in the submenu of this function(none,5sec,30sec,1min,5min) then the key will automatically be locked if there is no more action of the phone.

9.5.4 Certificate manager

You can take a view of Auth. Certificate and User certificate

9.6 Bluetooth

The phone supports Bluetooth. It can realize the functions such as phone call and data exchange etc while wirelessly connected with headphones, computer or any other handheld devices.

1.Power: Turn on/off this function.

2.Visibility: Active the Bluetooth been searched or not.

3.My Device: Display the current or once connected device, and inquiry the new one.

4.Search audio device: Search for the supported device (for example: Bluetooth headphone).

5. My name: Rename Bluetooth.

6. Advanced:

1. Audio Path: Select the path for Audio.

2. Storage: Phone or memory card.

3. Sharing Permission: you can choose full control/read only.

4: My Address: view my address.

9.7 Java

Display the installed Java application list, select one and enter "options"

1. Launch: Play the application.

2. Settings: You can adjust Network access/Auto invocation/Messaging/Multimedia/Read user data/Write user data/local connectivity.

3. Details: Display the detailed information of the application.

4. Restore default: To get back to default settings.

9.8 Java settings

You can adjust Java audio/Java backlight/Java vibration/Heap size.

9.9 Java default security

Third party: to adjust the settings of the third party applications.

Untrusted domain: to adjust the settings of the untrusted domain.

Restore default: to get back to ex-factory settings.

Domain options: Turn on/off third party or untrusted domain.

9.10 Main menu settings

9.10.1 Main menu style

There are two choices for your selection, Matrix & Circular.

9.11 Restore factory settings

You can reset some of the Phone settings to their original values by input phone lock password.

9.12 Sound effects

You can adjust the audio effect such as bass, dance, classical, treble, party, pop, rock and normal

10. Twitter

Connect internet first, then input ID and Password to operate, detailed information please check Help and Instruction of Twitter.

11. Multimedia

11.1 Camera

Select camera item in main menu to enter preview screen. Then press scroll right or left key to adjust the exposure value and scroll up or down key to zoom in or out.

Enter some numbers to get shortcut.

- 1 to adjust image size
- 2 to adjust image quality
- 4 to adjust white balance
- 6 to adjust delay timer
- 7 to adjust continuous shot

While preview, touch left soft key to do the work: photos, camera settings, image settings, white balance, scene mode, effect settings, storage and restore default to set the parameters.

And press center key to take photo.

11.2 Image viewer

Access this menu; you can view the pictures in the list. If you select one picture, there are several operations for you to choose:

1. View: to view the selected image, use left or right navi key to view next or last images.
2. Image information: to view detailed information of the image.
3. Browse style: you can select list style or matrix style.
4. Send: to send the image as multimedia message or via Bluetooth.
5. Use as: to use the image as wallpaper/screen saver/power on display/power off display.
6. Rename: rename the image.
7. Delete: delete single image.
8. Sort by: you can sort the image by name/type/time/size/none.
9. Delete all files: delete all images.
10. Storage: you can choose store the image into phone or memory card.

Whether the operations can be successful or not is related to some factors such as the size

of the screen.

11.3 Video recorder

Enter video recorder, touch left soft key can enter some options:

1. Camcorder settings: to adjust EV, Night mode, Anti-flicker.
2. Video settings: to adjust the video quality.
3. White balance: to select Auto/Daylight/Tungsten/Fluorescent/Cloudy/Incandescent
4. Effect settings: to select Normal/Grayscale/Sepia/Sepia green/Sepia blue/Color invert.
5. Storage: store the video into phone or memory card.
6. Restore default: to get back to the ex factory settings.

After setting, touch center key to start or Suspend recording. And then, touch right soft key to stop and save. While recording you can press left and right navi key to adjust EV, press up and down navi key to zoom in or out.

11.4 Video player

Access the menu, you can enter film list and touch “option” to choose a movie clip to play, send, rename, delete, delete all files, sort by and storage.

While playing, press up or down navi key to adjust volume, right or left navi key to adjust speed.

Press “*” to get full screen.

11.5 Audio player

Select audio player in the main menu item or keyboard shortcut to enter the audio player interface. Press center key to play/stop the music, press scroll up/down key to adjust the volume, , press the scroll left/right key to switch to the previous/next song, press and hold scroll left/right key to forward or backward.



To pause or play.



Switch the repeat mode.



Switch shuffle on/ off

Notes: If “List Update” is opened, the play list will be created automatically from phone or memory card according to the storage. If closed, the user should create or delete the file in play list manually.

11.6 Sound recorder

The sound recorder supports two formats: WAV and AMR.

A. When there’s no recording file in the current Storage Device, you can touch left soft key to entry the options as following:

1. New Record: Start the recorder.
2. List: no files.
3. Settings: Set the Storage Device of recording file, phone memory or T-flash card. Set recording format, AMR or WAV.

B. When recording files exist in the current Storage Device, you can press left soft key to

enter the following options:

1. Play: Play the selected recording file.
2. Append: Append the recording data to the end of the selected file. (Only AMR format files support this operation.)
3. Rename: Rename the selected file name.
4. Delete: Delete the selected recording file.
5. Delete all files: Delete all the recording files.
6. Use as: use the recording as user profiles.
7. Send: Send recording file to MMS or Bluetooth.

11.7 FM radio

In the FM radio screen, you can touch the scroll left/right key to switch broadcast channels; press scroll up/down key to adjust the volume.

1. Channel list

At most 30 channels could be saved in the list.

2. Manual Input

Directly input the FM frequency of the channel.

3. Auto search

To search all channels and save them in the channel list automatically.

4. Settings

Set the 'back ground play' and 'loudspeaker' state.

Notes: The quality of FM is influenced by the range of broadcasting station.

11.8 Games

Puzzle: to check Help for reference.

UFO: to check Help for reference.

Games settings: to adjust BGM/Sound effect/Vibration/Volume

12. Organizer

12.1 Calendar

Display from January 1970 to December 2030. It also displays events. Options you can select as follow:

1. View: view the event of the selected day.
2. View all: view all events.
3. Add event: add new event.
4. Delete event: delete all/overdue/specific period events.
5. Jump to date: switch to the day you want.
6. Go to today: switch to today.
7. Go to weekly view: switch to weekly view interface

12.2 Tasks

To setup new memo and you can select options as below:

View/Add/Edit/Search/Delete/Delete overdue/Delete all/Jump to date/View

uncompleted/Send vCalendar/Save as file.

If you have set alarm for the memo, when the time is up, the handset will give of tip sound and display the memo information.

12.3 Alarm

When the mobile is off, if the battery has sufficient power, the alarm will continue working. You can set five alarms, you may turn on one or all of them as per request. Each alarm can be set individually.

When the alarm time is up, the handset will give of tip sound. Press key stop then it can stop ringing.

If, say, the time is up but handset is off, it will automatically turn on and ring. If pressing stop, the handset will enquiry you if you want to turn on. Press "No" the handset will stay off, otherwise, by touching "Yes," it will start register for turning on.

12.4 Calculator

This calculator only can be used for simple calculations

M+: Plus displayed number and memorized number, if there is no memorized number, the displayed number will be memorized.

M-: Minus displayed number from memorized number.

MR: Quote the memorized number.

MC: Cancel the memorized number.

12.5 World clock

Under this menu, you can look up current time and time zones of different cities in the world after selecting the time zone. You also can switch on/off the daylight saving time.

12.6 Notes

This function can help to remember some important events.

12.7 Unit converter

Weight: Kg<->Pound Kg<->Ounce

Length: Km<->Mile M<->Yard M<->Foot Cm<->Inch

12.8 Stopwatch

Typical stopwatch: a. Split timing b. Lap timing c. View records

nWay stopwatch: press the navi key to start.

Accessories

Battery

Extra batteries of various capacities are available from our company or through your dealer.

Charger

Light weight, practical quick chargers used for charging on wall outlets. Charging time is

about 1.5 to 4 hours. The charging condition is being displayed on screen. You may use your phone while charging.

Headset

You can accept or reject the coming call by hook key in headset.

Notes: Don't plug out headset when call in or call out process.

Maintenance and Care

Caring for Battery

This phone uses a rechargeable battery as power source, when the battery is weak, recharge immediately to protect the battery life. It is best to drain the battery first.

When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. Not leave the charger connected to the unit or battery for more than one week.

Temperature affects battery capacity. Your battery may need to be warm up or cool down before charging. If the battery temperature is lower than 0 °C or higher than 45 °C, it can not be recharged.

Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.

Do not use a damaged battery

The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.

Do not place the battery in fire; follow local laws and ordinances in disposing used battery.

Maintenance

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10 °C or higher than 55 °C.

Safety

Usage of your phone is subject to safety measures designed to protect users and their environment.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation

Aircraft safety

When travelling by plane, you will need to switch your phone off when instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network. Its use is illegal and you could be

prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Environment safety

1. Your phone is a radio transmitter which may interfere with electronic medical equipment implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area
2. Do not use your phone in damp areas.

Technical Specifications

NOTES: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any or all of the above-written suggestions and instructions, the producer will not take any responsibility in any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without giving any prior notification to others. Trade marks mentioned or used in this material belong to their respective owners.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: U-350-2(FCC ID:ZU3UNNECTOEDGE) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.472W/kg and when properly worn on the body is 0.363W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.