
**U-710-2 Dual SIM Cards on line
3G Mobile Phone
User Guide**

Dear Customer,

Thank you for choosing **U-710-2** smart phone.

This is a smart phone. In addition to common call functions, it also provides you with a variety of practical functions including bluetooth, English input, Contacts, ringing or image alert for incoming calls, camera, MP3 player, Video player, memory card (T-Flash card), recorder, calculator, Schedule power on/off, MMS (Multimedia Message Service). With this manual, you can acquire a full understanding of the usage of this phone. Our company reserves the right to revise contents in this manual without any prior notice.

In order to provide you better service, your mobile

phone will send a message to our after-sale service and have a backup upon you power on. This message will cost you some fee, but we will provide you favorable price for the phone, and the discount has included the message fee. Please note, thanks!
The right of final interpretation of above content is reserved.

Contents

1	Introduction to the Mobile Phone.....	1
2	Insertion and Removal of SIM card.....	2
3	Insertion and Remove of the Memory Card....	3
4	Installation and Removal of the Battery.....	4
5	Battery Charging.....	7
6	Dialing.....	8
7	Guide to Menu Operations.....	12
8	Safety Precautions.....	23
9	Cleaning and Maintenance.....	25

10	Technical Information.....	26
11	Trouble shooting.....	27

 
1 Appearance



2 Insertion and Removal of SIM card

- Turn off the phone; remove the battery and unplug other external power sources.
- Insert the SIM card into the SIM slot.


- When you need to remove the SIM card, please first turn off the phone, remove the battery, then remove the SIM card. Only SIM card 1 slot support WCDMA.

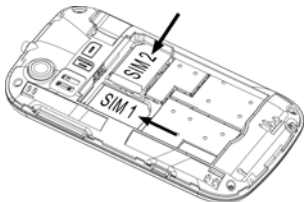

3 Insertion and Remove of the Memory Card


- Put the Memory Card into the Memory Card trough.
- When you need to insert or remove the memory card, it is suggest that first turn off the phone. When you turn on the phone, insert the memory card can lead

 to memory card don't recognize.

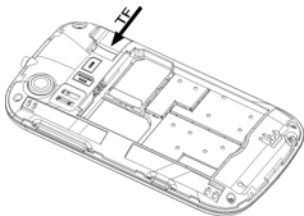


4 Installation and Removal of the Battery

 - When removing the battery follow the following steps:
 - ① Push the battery cover and remove.
 - ② Break out the battery from the mobile-phone.

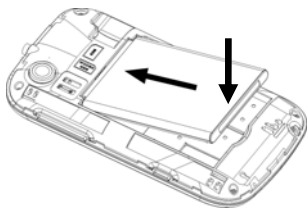

 - When installing the battery follow the following steps:
 - ① Push the battery to inset mobile-phone.
 - ② Cover with the battery cover.

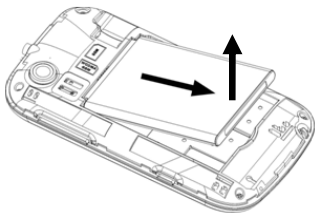

Warning: You must turn off your mobile phone before removing the battery.

- Do not place the battery in fire; follow local laws and ordinances in disposing used battery.
- Check the model number of the charger before using it to charge the mobile.
- Only use approved battery, charger and accessories applicable to the specific mobile model. Using other types of battery, charger and accessories may violate the certification or warranty terms of the equipment and may result in danger.”
- Return waste and used batteries to the supplier or specified recovery site.

5 Battery Charging

- Plug the charger into the electrical outlet.
- Plug the charger connector into the charge interface of the phone.
- The mobile phone and charger will become warm during charging and this is normal.
- When charging is complete, unplug the charge connector from the electrical outlet and the mobile phone.
- Charging must be performed in a well-ventilated area with a temperature between **-10°C and +55°C**.
- If the mobile phone automatically shuts down, or indicates that the Battery is low you should

immediately charge the battery.



6 Dialing

6.1 Making Domestic Calls

Use the **number keys** to input number, then press the **dial key** to dial the call via SIM card 1/2.

You can input domestic calls in this order:

Area code phone number dial key

6.2 Making International calls

For making international calls you should long press the **0 key**, until the international phone prefix “+” appears on the screen. This will allow you to make an international call in any country regardless of what the international call prefix is.

✧ You can input international calls in this order:

+ Country code area code telephone number dial key

After entering the prefix, enter the country code and full number you wish to call.

6.3 Emergency Calls

If you are located within a network area (you can find this out by referring to the network strength indicator

located on the upper left-hand corner of your mobile phone screen), even if you do not have a SIM card, you will be able to transmit emergency calls.

6.4 Key board values

Power key: hold down for power off or power on, press for close or switch on background light.

Volume keys (up/down key): adjust sound volume in stand by interface.

Home key: in function interface, shoft press the key to return to standby interface; long press the key to display

Recent.

Menu key: in standby interface, press the key can display the menu of **Add, Wallpapers, Search, Notifications, Settings, Animation.** And in different

function interface, press the key can display different menus.

Back key: in function interface, press the key to return to the menu.

7 Guide to Menu Operations

All function options about the mobile phone are listed as below with brief descriptions.

Application software
The mobile phone provides you with a lot of application software, While at the same time, customer can installed unlimited application software.
Note: need to insert the memory card, and keep the memory card has enough space.
Phone
Be used to dial the number.
Contacts
It displays the contacts. Long press one contact, it displays

the options in follows: **View contact, Edit contact, Delete contact, Add to speed dial, Share contact.**

Messages

You can compose new message. Press the **Menu key**, you can choose **Compose, Search, Settings** to set. In the menu of **Settings**, you can set it as follows: **Delete old messages, Text message limit, Multimedia message limit, Delivery reports, Manage SIM card messages, Edit quick text, SMS Service Center, SMS storage location, Delivery reports, Read reports, Auto-retrieve, Roaming auto-retrieve, Creation Mode, Size Limit, Priority, Notifications, Select ringtone, Enable Service Message.**

Dialtacts Favorites

<p>In this menu, you can switch Phone, Call log, Contacts, Favorites through the button.</p>	
Phone	Be used to dial the number.
Call log	Enter the menu, it shows the call logs. You can click the button of All calls, Dial calls, Received calls, Missed calls, to respectively show the list of call logs.
Contacts	It displays the contacts. Long press one contact, it displays the options in follows: View contact , Edit contact , Delete contact , Add to speed dial , Share contact .
Favorites	To save the favorites contacts.

Music

To play the music. You can choose the music from the menu of **Artists**, **Albums**, **Songs**, **Playlists** to view or play.

Camera

To take pictures and videos at anytime by a vivid camera and then save them on your memory card.

Gallery

To view the saved pictures and videos.

Email

You can create an account and use the email.

Video Wallpaper

You can play video wallpaper from the menu of **Default**, **SD Card**, **Camera**. If you like the video wallpaper, you can

click the button of “**Set Wallpaper**” to set as Wallpaper

File Manager

You can use **File Manager** to organize your files in folders in the Memory card.

Settings

SIM management

You can choose SIM card 1/2 in **SIM Information**. And you can perform the settings such as **Voice call, Video call, Measging, Data connection, Roaming, Contacts & SIM**.

Wireless& networks

To perform the settings as follows: **Airplane mode, WLAN, WLAN settings, Bluetooth, Bluetooth**

	settings, Tethering & Portable hotspot, VPN settings, Mobile networks, GPRS transfer prefer.
Call settings	To perform the call settings including Voice Call, Video Call, IP Call settings, Other settings.
Audio profiles	To activate and customize the desired profile as General, Silent, Meeting, Outdoor.
Display	To perform the settings including Brightness, Auto-rotate screen, Animation, Screen timeout, Proximity.
Location	To perform the settings including

	<p>Use wireless networks, Use GPS satellites, GPS EPO assistance, EPO settings, A-GPS, A-GPS settings.</p>
Security	<p>To perform the security settings including Set up screen lock, Set up SIM card lock, Visible passwords, Select device administrators, Use secure credentials, Install from SD card, Set password, Clear storage.</p>
Applications	<p>To perform the settings including Unknown sources, Preferred install location, Manage</p>

	applications, Running services, Storage use, Deleopment.
Accounts & sync	To perform the settings including Background data, Auto-sync.
Privacy	To perform the settings including Back up my data, Automatic restore, Factory data reset.
Storage	You can view the information form the SD card or phone storage.
Language& keyboard	Enter the menu, you can set the function of Select language, User dictionary, Android keyboard, Select input method.
Accessibility	You can download a screen reader

	for your device form Android Market through the function. DURING the call, When you turn on the function of Power button ends call , press Power key will end the call instead of turning off screen.
Date & time	This menu to change the time and date displayed on your phone.
Schedule power on/off	You can edit four times to turn on/off the mobile-phone.
About phone	It displays the information of your phone.
Browser	
You can visit the website through this function. But this	

function need network support.

Search

To access to search page, you can search the content through the virtual keyboard input.

Calendar

To view and arrange your journey according to calendar.

Calculator

To provide a calculator with 4 basic functions to facilitate simple calculations.

Clock

Entet the menu, you can view the date and time set weather location. Click the button of Alarm, Gallery or Music, you can enter corresponding function.

Sound recoder

To record the sound.

Downloads

To display a downloadable content.

SIM management







You can choose SIM card 1/2 in **SIM Information**. And you can perform the settings such as **Voice call, Video call, Meaasging, Data connection, Roaming, Contacts & SIM**.






SIM Toolkit

Your phone supports STK (SIM TOOL KIT) function for SIM1/2.

8 Safety Precautions

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

	Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
	Do not use your phone while driving.
	Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to

	service or repair the phone.
	Do not place your phone or its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Use approved batteries and chargers only to avoid explosion.

9 Cleaning and Maintenance

- The mobile phone, battery and charger are not water resistant. Please do not use them in the bathroom or other excessively moist areas and likewise avoid allowing them to get wet in the rain.
- Use a soft, dry cloth to clean the mobile phone, battery and charger.
- Please do not use alcohol, thinner, benzene or other solvents to wipe the mobile phone. A dirty outlet will cause poor electrical contact, lose of power and even inability to recharge. Please clean regularly.

10 Technical Information

Phone

Model	V900
-------	------

Lithium Battery

Model	V900
-------	------

Nominal voltage	3.7v
-----------------	------

Nominal	4.2v
---------	------

Capacity rating	1350mAh
-----------------	---------

Continuous standby time *	400-500hrs
---------------------------	------------

Continuous calling time	4-5hrs
-------------------------	--------

* Depending on the

network

Operation Temperature	-10~+55 °C
------------------------------	------------

11 Trouble shooting

If anything unusual occurs while using your mobile phone, please refer to the following table.

Frequently Occurring Problems	Cause	How to Fix
Poor reception	Using the mobile phone in an area with poor reception such as near tall buildings or in a basement where radio waves cannot be transmitted.	Try to avoid.

	<p>Using the mobile phone when the network is busy, such as during rush hour, when the lines are full making it impossible to get through.</p>	<p>Try to avoid.</p>
	<p>Related to the distance from the base station built by the network.</p>	<p>You can request that the network service provider provide a service area plan.</p>

Echo or noise	Caused by poor network relay, a regional problem.	Hang up and redial, if the relay is changed then the line may be better.
	Some calling regions have poor lines.	
Shortening of the standby time	Standby time is related to the network system.	Please temporarily turn off your mobile phone, as you are located in an area with poor reception.
	Batteries need to be replaced	Replace the batteries

	<p>When you cannot get a signal, the phone will continue to transmit in order to find a base station, thereby expending large amounts of electricity will cause the standby time to decrease.</p>	<p>Please move to an area with a strong signal or temporarily turn off your mobile phone.</p>
<p>Unable to turn on the phone</p>	<p>The battery is empty.</p>	<p>Look at the remaining electricity or recharge.</p>

SIM card malfunction	SIM card is damaged.	Contact your network service provider.
	SIM card is not properly inserted.	Confirm SIM card is properly inserted.
	There is a foreign substance on the metal surface of the SIM card.	Use a clean cloth to wipe off the metal contact point of the SIM card.
Unable to connect with	Expired SIM card	Contact your network provider.

the network	Outside the GSM service area	Consult your network provider on the service area.
	Poor signal.	Please move to a place with a better signal and try again.
Unable to make a call	Using the call bar function	Cancel the call bar function.
	Using the fixed dialling function.	Cancel the fixed call setting.
Incorrect PIN number	Consecutively enter the wrong password three	Contact your network provider.

	times.	
Unable to charge	Battery or charger is damaged	Replace the battery or charger.
	Recharging in the environment of less than -10°C or higher than 45°C .	Change the charging environment.
	Poor contact	Check if the plug is properly connected
Unable to add new phone book	The storage space of the phone book is full	Delete a portion of the phone number entries

entries		
Unable to set certain functions	Your network provider does not support this function or you have not applied for it.	Contact your network provider.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: U-710-2(FCC ID:ZU3UNNECTOQUA) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.671W/kg and when properly worn on the body is 0.754W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.