 


Battery change

To change the battery in your remote, simply pull off the bottom cap and lift the battery out. Replace it with a non-rechargeable CR2032 button cell battery.

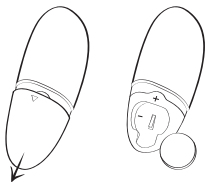

Cleaning

Do not submerge in water.
Please use a damp cloth
and gentle soap for cleaning.


splashproof
(IPX4)



Customer Care

+1 613 828 6678
1855 258 6678
(U.S. & Canada)
care@we-vibe.com
we-vibe.com

Technical Specifications

Model: We-Vibe remote
Model No.: R-WVG3A
Battery: CR2032

Manufactured and distributed by
WOW Tech Canada Ltd.
1545 Carling Avenue, Suite 401,
Ottawa ON, Canada K1Z 8P9
www.wowtech.com

WOW Tech Canada Ltd. reserves
the right to make technical changes
and changes to the design that
serve to improve the device.

For information regarding patents
see we-vibe.com/patents.

Designed in Canada. Made in China.

Date of issue: 08/2021.
MA-00087_rev-A



We-Vibe remote

Pleasure to
meet you

we VIBE

Quick start guide

Getting to know your remote

+ On/Increase

Press the + button to power on. Press again to increase the intensity.

- Decrease

Switch back to a lower intensity level by pressing the - button.

Next


Press the Next button to cycle through different vibration patterns.

Previous

Switch back to your previous pattern by pressing the Previous button.

Pairing mode

Hold the We-Vibe button to connect your toy with the remote.

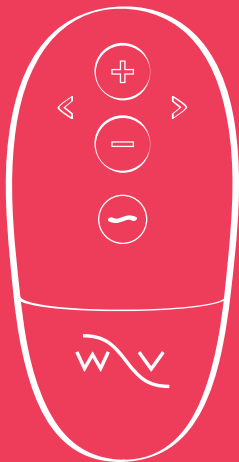


Pairing

Hold the control button on your toy for 5 seconds until the LED starts flashing.

Now hold the We-Vibe button on your remote for 5 seconds.

Once paired, your toy will vibrate 3 times and LED will stop flashing.

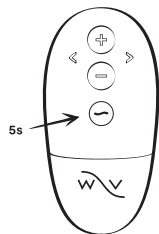

your
toy