 
 





Open the battery compartment  
 Insert the batteries as shown inside the battery compartment  
 Replace the cover

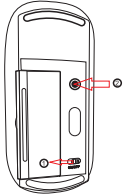

2. Turn on the switch toward "on" direction and press the key of "Ⓞ" till you see the blue light shining

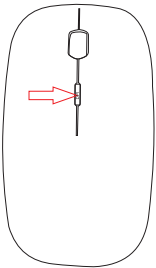

   3. Click here change CPI:800/1000/1600(default state is 1000)

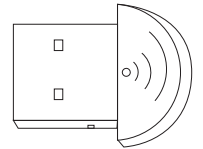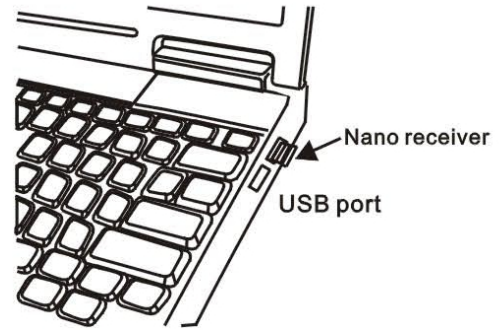

**USB**(just for the computer without bluetooth device, portable PC do not need this USB)

**Noted:**

when your blue LED is shining , double click your desktop ,you can see an icon of bluetooth following the prosecure done up. At last ,press "ok" The next time to use the bluetooth ,your computer systems will working for you auctomatacally

**FCC Noted:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Product Introduction**

- A.compatible with 2.0 standard USB and various systems and brands
- B.Support AV A GO , PI XART and many other optical sensor
- C.Range up to 8m
- D. Several wireless channels and fast frequency hopping avoids interference

*Rock soul*

MS102BT

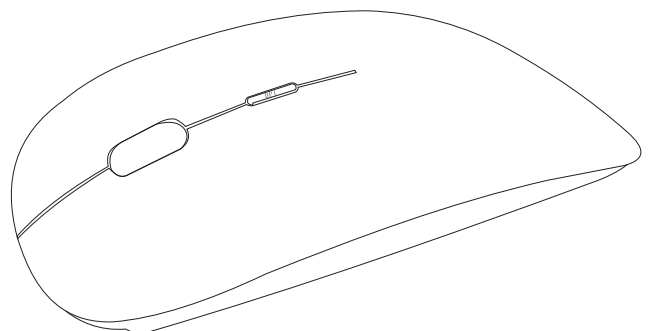

Bluetooth Laser Mouse