



Fig. 1: Remove battery cover (as shown).
Fig. 2: Slide SIM card in with the gold contact facing down.



- Fig. 3. Insert batterly (god conseas on night from side).

  Fig. 3. Insert batterly (god conseas on night from side).

  Fig. 4. Close bettery doors alde cover to obsed position with a 'blick'.

  Fig. 5. Plag charging cable into the socket on the side of the phone.

  Charging: Battery indication bate in upper right coart of the display are moving and the LED on the upper side of the closed phone is on.

  Full battery: Bast in upper right closely comer are sold.

  Note: Chargin battery for at least 2. Dours before first use!

### 4 DISPLAY SYMBOLS (SCREEN)

| in a battery strength | Yall signal strength | Training mode | Training mod profile "maximum" ON (ringtone volume very loud)

6 FIRST STEPS
Switch. On, the phone: press power on/off-key □ for 2 sec.
Switch. On the phone: press power on/off-key □ for 2 sec.
Switch. On the pressing power on/off □ for 2 sec.
When using a new SMI card, enter the -digal\* PIN Code (Personal
PIN-Code: The PIN-Code is a -digit number combination
preventing others from switching on your mobile phone
- switch off your PIN-Code in nemu. Settings → Security
Settings → PIN → PIN off.

profile 'Meeting' ON Active data transfer

Standby mode:
In standby mode the phone is turned on, but no active applications (calling, messaging, etc.) are running. To get into standby mode, when you are e.g. in the settings menu, press — repeatedly.

# Entering Menu: • Press - key.

- Scroll through menu points: with 
   and △
   Confirm: with
- Note: due to imativity phone lights and screen turn off after a while. To turn on again, press any key.

  Pick up call:, Press 🖹 key.

  End call or Reject call: Press = key.

Dial: Enter the telephone number via the keypad (including area code with 0) - start call with

Redial list: press - key, scroll through call list with 

□ (all dialled, missed and received calls), select a number and start

Handsfree Speaking: To talk without holding the phone to your ear, switch on/off the handsfree function during a call: press

ear, switch on/off the handsfree function during a call: press \( \sigma\) **Handsfree.**Note: if you stay at a menu point without confirming ( [4]), a help text with explanations pops up. To leave this, press \( \sigma\).

6 PHONE BUON.

Save names and numbers (start with international prebx, e.g. 
444 for UK) by entering menu in standby mode (Standby-Mode, 
hotapter 5) with ∃then Div Div → Menup-Dins's Search 
name, Add contact, Own Number, Emergency numbers 
(add, change, detelle, status cnioff), Quick dial keys, Copy 
All, Edit Contact, Delete, Send contact by SMS, SMS in 
PhoneBK, Settlings;

riunesh, settings;
Storing phone book entries (Name & Number): Entermenu
with □→ continue to Phone book: △△△□→ continue
to Add contact: ☑ ← →Enter name via the keypad (See
chapter 8 Wife 5 MS for text entry) ☑, →Enter number, ☑
and □ to Save.

### Searching phone book entries:

content. #name#number# e.g.: #Tom#+491098976543# **Buttons M.H. A2. M3:**Store or change your favorite numbers: Enter menu. → **Phone book** → **Quick Dial keys** → select. M1, M2 or M3 → [M] (Qk).

To add: enter new name and number or press: [M] (Saarch) to access the contact list and store an existing contact. To edit. Delete and enter new name and number.

7 EMERCENCY FUNCTION
You can store a total of 5 emergency numbers (family, neighbours, firends, emergency services). In case of emergency these preselected numbers will be dialled automatically in a sequence, if the emergency key on the back of the phone gets pressed and held. A continuous warming tone then starts in "loudspeaker mode" during emergency, so you and people nearby are warned of the emergency (if the first number cannot be reached, the second number will be called automatically if the second number in row cannot be reached, the third will be called. (max. 3 rotations of the 5 numbers). Note: To avoid getting caught no a mailbox, the reached person has to confirm your emergency by calling back. If no emergency number is saved or if your calling back.

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 112 will be dialled.

reaming not permitted), 112 will be dialled.

Saving emergency numbers: Enter Menu → Phone book
→ Emergency numbers → Add Emerg. No. → choose
Emergency number (1-5) → set if it's a private number or a
help organisation → pick contact from phone book → done
Notes select emergency number private number if as to
confirm as explained above) or official service number (as a
mitulatione, police, etc. (no confirmation call required).

Switch emergency function On / Offi Enter menu: Settings →
Emergency numbers → OnLOff.
Note: If you want to save numbers from cifficial services
police, fire department, etc. as emergency numbers, you
have to clarify this with these institutions. No liability will be
assumed for possible costs incurred if you dial socidentally.

8 SMS MESSAGES SMS (Short Message Service) are written messages.

Receive SMS: A short signal and a written information on the display inform you about a new, incoming SMS message. Read the message immediately by pressing lied or see a list of messages which have already been received in the menu → Messages → SMS → Received SMS.

Write SMS: With Im Enter menu: → Messages → SMS
→ Write new SMS: The text entry is done by the keypad.

Send SMS: Select Send with 2x and enter number or select from phone book (2x select contact with lb). Press to send SMS.

## 9 MMS MESSAGES

Create new MMS:

1. □ (Edit) → □ Add number: Enter number/ select phone book entry □ → □.

2. ⑦ to Subject (this will be the headline of the message) → □ (Edit) → Insert message text → □ (Done).

3. Edit content: 1x ②→□ (Edit) → Insert text or picture: □.

(Options) → ② (To Add picture: □ → scroll to picture with ☑ □ □ (done).

4. ∀ you have problems at the first time sending MMS, contact your operator to check MMS settings.

10 CAMERA:

Take picture: ☐ press camera-button to start camera → press ☐ to take picture, store with ☐

Camera settings: ☐, ☑ shutter sounds, image size, white

Dalance

Picture adlery: menu → select Pictures, scroll to next picture with ☑ and view with ⊅ i ☐ and view with ⊅ i ☐ and view with ⊅ i ☐ and select pictures: → Option: View. Send as MMS, Use as background, Use for contact, (choose the phone book entry, [note only contacts from phone memory, not from SIM-card]. Calls toffrom that contact will then show the linked picture on the display). Rename, Delete, Delete all pictures.

### 11 UTILITIES:

 $\begin{array}{lll} \textbf{Bluetooth:} \\ \cdot \ \, \textbf{Switch on: In menu} \to & \ \, \textbf{Settings} & & \rightarrow & \textbf{Bluetooth} & & \rightarrow \\ \textbf{Bluetooth on/off} & & & & & \\ \end{array}$ Pairing menu Settings → Bluetooth → Connections → Search for new device → Search the device you want to pair. ∰ Next time you turn on Bluetooth, connection will start automatically.

Alarm: Standby mode 1x  $\triangle \rightarrow$  Status On/Off. to switch Alarm clock on or off  $\rightarrow$ ,  $\bigcirc$  Time: set the time,  $\bigcirc$ , Repeat: set repetition

(once, daily, customised).

If the alarm rings, end with . Use mute function with . to reactivate the alarm after 1 minute.

12 OTHER FUNCTIONS IN SETTINGS
Enter menu with → continue to Settings: △, ♠ →
• Sound & Alert: To choose a phone profile (e.g. sile: configure your personal settings.

Call walling: You can activate/deactivate and check status to get a notification about an incoming call while having a phone talk.
Network settings: Choose admonatic (automatic boot in a network) or manual selection (select a network manually).
Favorites III your favorite functions pressing 1 button. Auto power orthur power or occernal number.
Auto power outflution power or occernal number.
Security settings: Activate, deactivate or change PIN and phonescode (default phone code 1234).
Residence Facciony: Reset the phone to factory settings.

Resdore Factory: Reset the phone to factory setting 13 DISPOSA.
 Disposal of packaging. Packaging materials are recyclable and shall enter the recycling process.
 Disposal of battery. Do not insert battery into household waste for disposal "You are obligated to return used batteries. These can be handed into local collection areas or to speciality shops.
 Disposal of Davice. Take care of the environment. When this product is taken out of service, do not throw it into the household waste, but dispose of it, where old devices are accepted and brought into an acc-friendly disposal increasing procedure.

acc-friently disposal/recycling procedure.

14 FREQUENTLY ASKED QUESTIONS

5 Green shows "Insert SIM card! Only emergency call 112": Check the direction of the SIM card 112": Check the direction of the SIM card A call failed: Check the selected telephone number and area code a gain for accuracy (area code entered?).

17 he mobile telephone despired is blankfalsack. Telephone is in energy saving mode (press any key) or it is switched. The mobile phone does not read: Remove battley, reinset and switch on the device. If there is still no reaction, refer to the service centre.

17 he charging procedure does not begin: This can take several minutes; if there is no reaction after 10 minutes, refer phone to service centre.

refer priors to service certifies.

3 FCC INFO

13 FCC INFO

14 FCC INFO

15 FCC INFO

15 FCC INFO

15 FCC INFO

15 FCC INFO

16 FCC INFO

17 FCC INFO

17 FCC INFO

18 FCC IN

model the Display Cent section on representations of the Countries of the

When using any body worn accessory, please help to m clearance between phone and human body. The body worn accessory should not contain any metal.