

Dear Customer!

Congratulations on buying this emporia mobile telephone! You have made the right decision.

Included: Mobile telephone, charging device, battery, instructions.

1 Controls

Speaker

Display (= Screen)

Arrow Keys

- On standby:
 - ▲: Favourites (pre-set: Alarm Settings)
 - ▼: Enter phone book contact list
- In menu and phonebook: scrolling

OK Pick-up/OK/Call list-Key

- Calling: Enter the number, then press **OK**
- Answering an incoming call: Press **OK**
- In menu: Confirm selection
- On standby: Enter call list (dialled, received, missed)

***** - Key

- In standby:
- Press twice: + (for international prefix, e.g. +44 for UK)
- For SMS: Special characters: (, . ' ? ; : ! " ' @ _ ~ & + - () < > { } [] % = / \ # * \$ % ...)

0 - Key

- Press and hold to connect with voicemail (= answering machine)
- For SMS: Space

- Key

- SMS: Switch between capital, small letters & numbers



14 SAFETY INSTRUCTIONS

- Switch off mobile telephone in **hospitals** or near medical devices. There should be a minimum distance between pacemakers and switched-on telephones.
 - Do not drive a **vehicle** while holding a mobile phone in your hand. Follow the laws and traffic rules of the country you are in.
 - The mobile phone must be switched off while you are in an **airplane**.
 - The telephone must be switched off near **petrol stations** or other areas with explosive materials.
 - Never direct **LED flashlight** into the eyes of humans or animals! (Protection class 3)
- SAR-value: The maximum weight determined by the EU is 1.6 W/kg. This model has a maximum of 0.710 W/kg.

15 BESTIMMUNGSGEMÄSSE VERWENDUNG INTENDED USE

This mobile telephone is **robust and intended for mobile use. It is to be protected from moisture (rain, bathroom...) and impacts. Do not expose to prolonged direct sunlight.** Misuse as described above can lead to damage of product and is associated with further hazards such as electrical shock and fire. The entire product should not be altered, rebuilt, nor should the housing be opened.

The power adaptor is designed for use in household wall outlets to public electricity grids with 230 volts / 50 Hz (10/16A) voltage.

16 TECHNISCHE DATEN:

Dual band GSM 850/1900MHz
size: 119 x 60 x 18 mm
weight: 142 g

battery: Li-Ion 3.7V / 1450mAh
standby: bis zu 25 Tage
talktime: bis zu 240 Min.

End/Back/Delete/Menu/ On/Off-Key

- In standby: Enter the menu
- In menu: One step back
- Writing numbers or text: Delete
- During a call: Terminate
- On/ Off: Press for 2 sec.

Volume Control + & -

Control the handset volume
incoming call: turn ringer off

handsfree-key

press while calling to activate handsfree-function. Press again to deactivate handsfree.

Tastensperre:

press 2 sec to lock all phone keys and avoid accidentally usage of phone (f.i. in the bag). Press 2 sec again to unlock.



Torchlight

turn on/ off the torch

SMS-key


press to enter SMS function directly

menu-key:

press to enter phone menu

alarm-key

press to enter alarm function directly

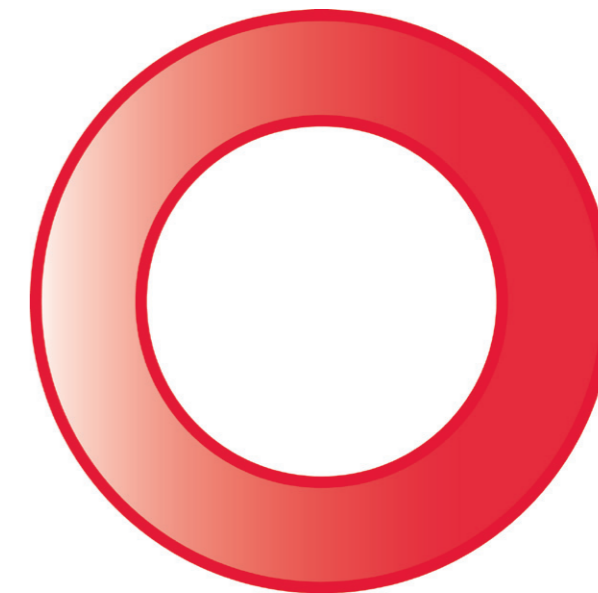

emporia**SOLIDplus**

Emergency button



Battery cover
Li-Ion battery

Hotline: Deutschland: 0 180 - 59 13 181 Österreich: 0 732 - 77 17 - 446 Schweiz: 0 8484 - 50 0 04
emporia Service Center Industriezeile 36 4020 Linz Österreich www.emporia.at Par No.: 54175-GER;GERMAN;V33IM_GER-V1_GZ-201103

2 INSERT SIM CARD



Fig. 1

Fig. 2

Fig. 1: Remove battery cover (as shown).

Fig. 2: Slide SIM card in with the gold contact facing down.

3 INSERT BATTERY AND CHARGING



Fig. 3


Fig. 4

Fig. 5

- Fig. 3: Insert battery (gold contacts on right front side).
- Fig. 4: Close battery door: slide cover to closed position with a 'click'.
- Fig 5: open rubber-cover on the bottom of the phone and connect charging cable into the jack on the lower narrow side of the phone.
- Charging: Battery indication bars in upper right corner of the display are moving and the LED on the upper side of the closed phone is on.
- Full battery: Bars in upper right display corner are solid.

Note: Charge battery for at least 2 hours before first use!

4 DISPLAY SYMBOLS (SCREEN)

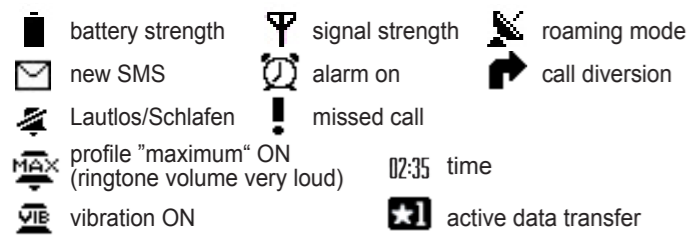

5 FIRST STEPS

Switch on the phone: press power on/off-key for 2 sec. **Switch off** by pressing power on/off for 2 seconds again. When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with .

PIN-Code: The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.

- Switch off your PIN-Code: In menu: **Settings** → **Security Settings** → **PIN** → **PIN off**.

Entering Menu:

- Press - key on the side of the phone. Scroll through menu points: with and .
- chose/ confirm with ; back with .

Note: due to inactivity phone lights and screen turn off after a while. To turn on again, press any key. press -key to chose/ enter the option shown in the low part of the display (left and right)

Standby mode:

In standby mode the phone is turned on, but no active applications (calling, messaging, etc.) are running. To get into standby mode, when you are e.g. in the settings menu, press repeatedly.

Entering Menu:

- Press - key.
- Scroll through menu points: with and .
- Confirm: with .

Pick up call: Press - key.

End call or **Reject call:** Press - key.

Dial: Enter the telephone number via the keypad (including area code with 0) - start call with .

Redial list: press - key, scroll through call list with (all dialled, missed and received calls), select a number and start call with .

Handsfree Speaking: To talk without holding the phone to your ear, switch on/off the handsfree function during a call: press **Handsfree**.

Note: if you stay at a menu point without confirming (), a help text with explanations pops up. To leave this, press .

6 PHONE BOOK

Save names and numbers (start with international prefix, e.g. +44 for UK) by entering menu in standby mode (Standby-Mode: chapter 5) with Menu-Points: **Search name**, **Add contact**, **Own Number**, **Emergency numbers** (add, change, delete, status on/off), **Quick dial keys**, **Copy All**, **Edit Contact**, **Delete**, **Send contact by SMS**, **SMS in PhoneBK**, **Settings**;

Storing phone book entries (Name & Number): Enter menu with → continue to **Phone book**: continue to **Add contact**: →Enter number →Enter name via the keypad (See chapter 8 *Write SMS* for text entry) →Enter number, and to **Save**.

Searching phone book entries:

In standby mode: open the phone book with .

- Scroll through the entries with and or:
- Search names: enter the initial letters of the searched name via the keypad (scroll through with). When the requested name is shown, press to start a call.

Add phone book entry via SMS:

In menu **phonebook** → **SMS in PhoneBK** to turn function to receive phonebook entries via SMS message **on/off**, or specify that only contacts already **stored in the phone** can send phone book entries. The phone number will be saved automatically in your phone book when you receive a SMS with the following content: #name#number# e.g.: #Tom#+491509876543#

7 EMERGENCY FUNCTION

You can store a total of 5 emergency numbers (family, neighbours, friends, emergency services). In case of emergency these preselected numbers will be dialled automatically in a sequence, if the emergency key on the back of the phone gets pressed and held.

A continuous warning tone then starts in "loudspeaker mode" during emergency, so you and people nearby are warned of the emergency! If the first number cannot be reached, the second number will be called automatically.

If the second number in row cannot be reached, the third will be called. (max. 3 rotations of the 5 numbers).

Note: To avoid getting caught on a mailbox, the reached person has to confirm your emergency by calling back. Additionally your phone will send a message with the position in your current emergency case to your emergency contacts

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 112 will be dialled.

Saving emergency numbers: Enter Menu → **Phone book** → **Emergency numbers** → **Add Emerg. No.** → choose Emergency number (1-5) → set if it's a private number or a help organisation → pick contact from phone book → done
Note: select emergency number: private number (has to confirm as explained above) or official service number, e.g.: ambulance, police, etc. (no confirmation call required).

Switch emergency function On / Off: Enter menu: **Settings** → **Emergency numbers** → **On/Off**.

Note: If you want to save numbers from official services, police, fire department, etc. as emergency numbers, you have to clarify this with these institutions. No liability will be assumed for possible costs incurred if you dial accidentally.

8 SMS MESSAGES

SMS (Short Message Service) are written messages.

Receive SMS: A short signal and a written information on the display inform you about a new, incoming SMS message. Read the message immediately by pressing or see a list of messages which have already been received in the menu → **SMS** → **Received SMS**.

Write SMS: With Enter menu: → **Messages** → **SMS** → **Write new SMS**: The text entry is done by the keypad.

1 . , ! ? ' " @ : 1	5 j k l 5 £	9 w x y z 9 ý þ
2 a b c 2 ä æ å à	6 m n o 6 ö ø ó	0 space; 0
3 d e f 3 è ê ë	7 p q r s 7 ß \$	* special character: . , ? ; !
4 g h i 4 í î ï	8 t u v 8 ü ú û	" ' @ _ ~ & + - () < > { } [] ...

Switch between different entry methods by pressing

abc: only small; **Abc:** first letter capitalised; **ABC:** all CAPITAL; **123:** Numbers

Send SMS: Select **Send** with 2x and enter number or select from phone book (2x , select contact with). Press . to send SMS.

Alarm:

in standby mode: press to activate/ deactivate (ON/OFF) alarm clock → **Time**: set the time, , **Repeat**: set repetition (once, daily, customised).
If the alarm rings, end with . Use mute function with to reactivate the alarm after 1 minute.

9 UTILITIES:

Bluetooth:

- Switch on: In menu → **Tools** → **Bluetooth** → **Bluetooth on/off**
- Pairing: menu **Tools** → **Bluetooth** → **Connections** → **Search for new device** → select the device you want to pair, . Next time you turn on Bluetooth, connection will start automatically.

12 OTHER FUNCTIONS IN SETTINGS

Enter menu with → continue to **Settings**: , →

- **Sound & Alert:** To choose a phone profile (e.g. silent) and configure your personal settings.
- **Call waiting:** You can activate/deactivate and check status to get a notification about an incoming call while having a phone talk.
- **Network settings:** Choose **automatic** (automatic boot in a network) or **manual** selection (select a network manually).
- **Favorites** : your favorite functions pressing 1 button
- **Auto power on/Auto power off.**
- **Voicemail number:** Change the voicemail number.
- **Security settings:** Activate, deactivate or change PIN and phonecode (default phone code: 1234).
- **Restore Factory:** Reset the phone to factory settings.

11 DISPOSAL

• **Disposal of packaging:** Packaging materials are recyclable and shall enter the recycling process.

• **Disposal of battery:** Do not insert battery into household waste for disposal! You are obligated to return used batteries. These can be handed into local collection areas or to speciality shops.

• **Disposal of Device:** Take care of the environment: When this product is taken out of service, do not throw it into the household waste, but dispose of it, where old devices are accepted and brought into an eco-friendly disposal/recycling procedure.



12 FREQUENTLY ASKED QUESTIONS

- **Screen shows "Insert SIM card! Only emergency call 112":** Check the direction of the SIM card
- **A call failed:** Check the selected telephone number and area code again for accuracy (area code entered?).
- **The mobile telephone display is blank/black: Telephone is in energy saving mode (press any key) or it is switched off** (press for 2 seconds to switch on).
- **The mobile phone does not react:** Remove battery, re-insert and switch on the device. If there is still no reaction, refer to the service centre.
- **The charging procedure does not begin:** This can take several minutes. If there is no reaction after 10 minutes, refer phone to service centre.

13 WARNING

FCC Warning:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output.
Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.