




Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326
Monday – Friday 9:00 a.m. – 5:00 p.m. CST

PACKAGE CONTENTS

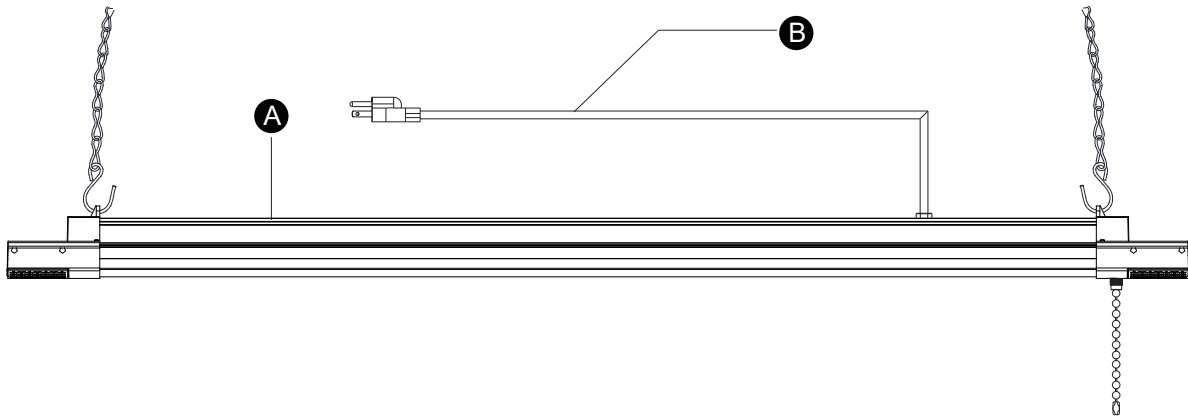

 
HARDWARE CONTENTS Note: Hardware not shown actual size.

AA



Chain
X2

BB



Pull Chain
X1

⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- LED electronics can be damaged by electro static discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not touch the LED module.

CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.

PREPARATION


Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Tools Required for Assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses, Ladder, Wire Stripper.

ASSEMBLY INSTRUCTIONS

Important to know


1. Read all instructions carefully before installation and operation.
2. If you are not familiar with state and local electrical codes, it is recommended that you consult with a qualified electrician.
3. Do not use in wet locations, use indoors only.
4. Non-replaceable LEDs.
5. Caution: LEDs emit bright light. Avoid looking directly into the light source for prolonged periods to avoid eye damage.
6. Not to be used with a dimming circuit or any other electronically controlled switch.
7. Specification:

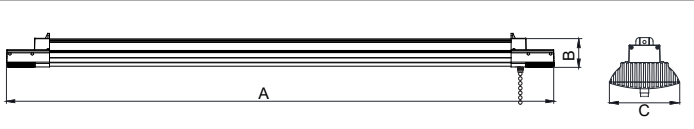NO.	Item #.	Dimension(inch)			Watts	
		A	B	C		
1	348-1442	46.25	3.375	3.875	50	


Installation Steps

Turn off the power at fuse or circuit box.

1. Select suitable location that can support the weight of the fixture and has an outlet on the ceiling to insure that the fixture hangs properly. Determine method of mounting before drilling. Make two spots on the ceiling 39 in. apart for the mounting hardware(not included).

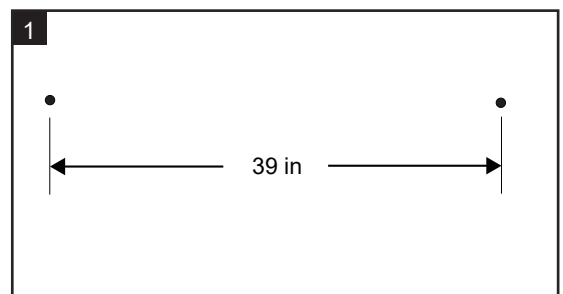


ASSEMBLY INSTRUCTIONS (continued)

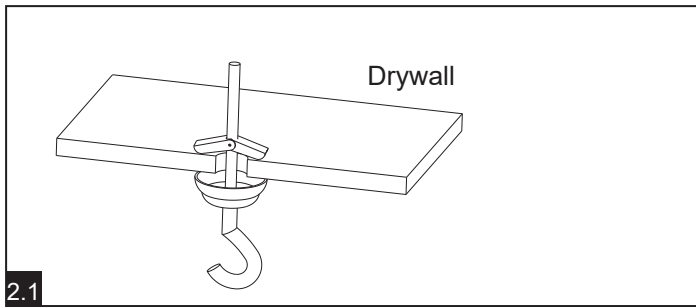


2. For Mounting to Drywall:

Drill 1/4 in. holes to the ceiling to clear the closed flaps of the toggle bolt. Make sure to fasten the toggle bolt into the butterfly nut before inserting the flaps into the ceiling with the toggle bolt protruding through the ceiling. Lock the assembly by screwing the hook into the ceiling.

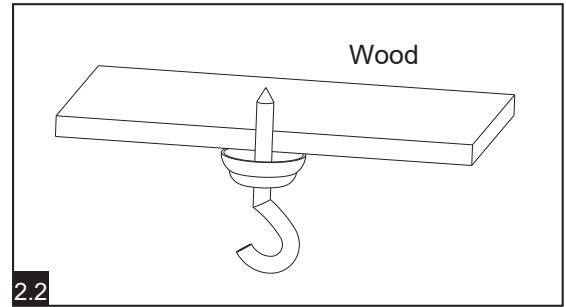


For Mounting to Wood:


Drill 1/16 in. diameter pilot hole in the ceiling. Make sure to fasten the combo wood-machine end into the metal hook screwing into ceiling to lock and tighten.

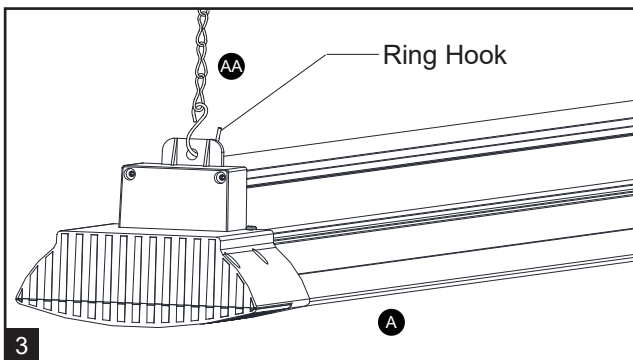

3. Attach one hang chain (AA) to the fixture using one hook provided. Repeat with second hang chain and second hook at other end of fixture (A).

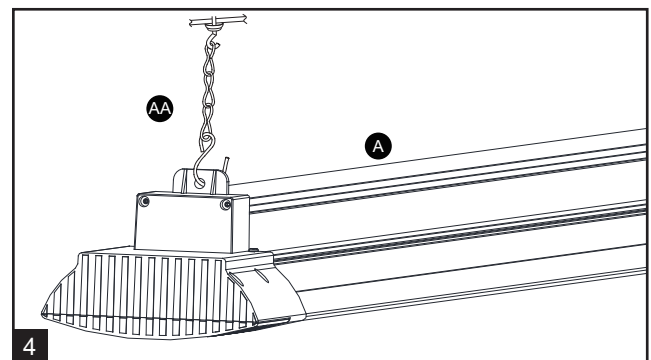

4. Hang fixture body (A) by placing one chain (AA) over each hook that has been installed in the ceiling. You may need to adjust the chains (AA) slightly on the hooks for fixture (A) to hang level. Fixture must hang at least 3 in. from ceiling.

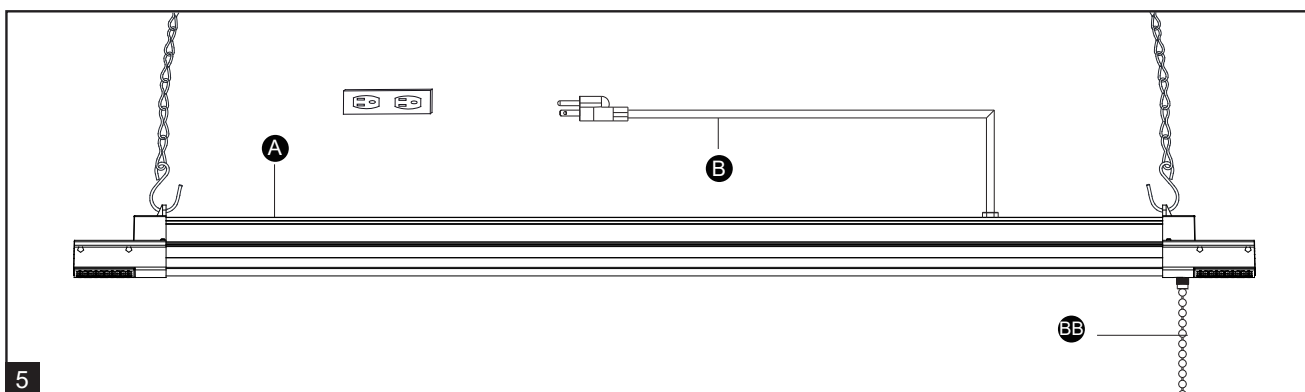

5. Plug power cord (B) into ceiling outlet. Lengthen the pull chain (BB) with provided if necessary.


Operating the Shop Light and Bluetooth Speakers:

1. Once plug in power supply, the Bluetooth Speakers are now enabled and ready to connect. The speakers can continue working with the light off.
2. The light will turn on when you pull the fixture chain. Pull the chain again to turn to turn the light off.
3. While standing within 4' of the Shop Light, pair a Bluetooth enabled device such a you smart phone or tablet to the speakers by selecting the "shop light 1." You will hear a confirmation chime once paired. Please find the operation processes base on Android and iphone.

Operating the Shop Light and BT Speakers:

- A: For Android; Pull down the suspension window, press the Bluetooth icon will enter the Bluetooth panel. Turn on the Bluetooth switch and find the name of Bluetooth speaker,"shop light 1," then click it to connect.
- B: For iPhone; Click the setting icon, enter the settings panel, click the Bluetooth option, and turn on the Bluetooth switch. Find the name of Bluetooth speaker, "shop light 1," then click it to connect.
4. Enjoy listening to music or other media (books, podcasts, etc.). The paired device must remain within 32' of the shop light to stay connected. When not in use, it can be turned off by clicking the Bluetooth switch again.
5. Once you have turned off the speakers, step 3 may be repeated to re-connect.

The following parts are available for re-order if damaged or missing. Call our toll free at 1-800-887-6326.

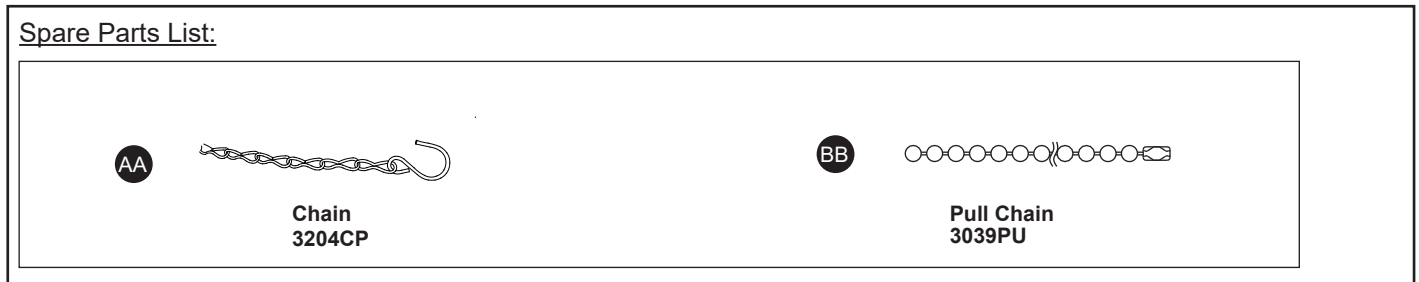

CARE AND MAINTENANCE

Caution: Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fixture will not light	Pull chain is in "OFF" position	Pull chain switch so that it is in the "ON" position

If unable to fix any of the above issues, please consult a certified electrician.

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the use's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

FIVE-YEAR LIMITED WARRANTY: If, during normal use, this SMART ELECTRICIAN® lighting fixture breaks or fails due to a defect in material workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, SMART ELECTRICIAN® agrees to have the product or any defective part(s) repaired or replaced with the same or similar SMART ELECTRICIAN® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326
Monday – Friday 9:00 a.m. – 5:00 p.m. CST