



PORTABLE ALL DIGITAL MOBILE DEVICE User Manual

Please read this manual before operating your device, and keep it for future reference.

IMPORTANT CUSTOMER INFORMATION PLEASE BE ADVISED THAT MANY SERVICES AND APPLICATIONS OFFERED THROUGH THIS UNIQUE DEVICE ARE PROVIDED BY VARIOUS DEVICE, OPERATING SYSTEM, SOFTWARE AND APPLICATION DEVELOPERS (E.G. GOOGLE, MOTOROLA, MICROSOFT, PALM, RESEARCH IN MOTION). IF YOU USE, LINK TO OR DOWNLOAD SUCH A SERVICE, OR AN APPLICATION SUCH AS A NON WIRELESS LOCATION BASED WIFI-TYPE SERVICE, CHAT ROOM, MARKETPLACE OR SOCIAL NETWORK FROM THIS DEVICE, YOU SHOULD CAREFULLY REVIEW THE TERMS OF SUCH SERVICE OR APPLICATION. IF YOU USE ANY OF THESE NON-WIFI WIRELESS SERVICES OR APPLICATIONS, PERSONAL INFORMATION YOU SUBMIT MAY BE READ, COLLECTED, OR USED BY THE SERVICE OR APPLICATION PROVIDER AND/OR OTHER USERS OF THOSE FORUMS. SHENZHEN GAEA ELECTRONICS CO.,LTD. WIRELESS IS NOT RESPONSIBLE FOR YOUR USE OF THOSE APPLICATIONS OR INFORMATION YOU CHOOSE TO SUBMIT OR SHARE WITH OTHERS. SPECIFIC TERMS AND CONDITIONS, TERMS OF USE, AND PRIVACY POLICES APPLY TO THOSE APPLICATIONS AND SERVICES. PLEASE REVIEW CAREFULLY ANY AND ALL TERMS AND CONDITIONS APPLICABLE TO THOSE APPLICATIONS AND SERVICES INCLUDING THOSE RELATED TO ANY LOCATION-BASED SERVICES FOR ANY PARTICULAR PRIVACY POLICIES, RISKS OR WAIVERS. YOUR CUSTOMER AGREEMENT TERMS AND CONDITIONS AND CERTAIN OTHER SPECIFICALLY IDENTIFIED TERMS GOVERN YOUR USE OF ANY VERIZON WIRELESS PRODUCTS AND SERVICES.

Disclaimer of Warranties;

Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Section 1: Getting Started	5		
Understanding this User Manual	5		
Special Text	5		
Activating your device	6		
Battery	6		
Battery Indicator	7		
Charging the Battery	7		
Turning Your Device On and Off	8		
Set-up Wizard	8		
Your Google Account	9		
Memory Card	9		
Securing Your Device	10		
Section 2: Understanding Your Device	11		
Features	11		
Front /Side/Top/Back View	11		
Home Screen	13		
Navigating Your Device	14		
Notification Panel	16		
Status Bar	17		
Section 3: Setting Accounts	18		
Accounts	18		
Section 4: Entering Text	19		
Virtual QWERTY Keyboard	19		
Changing the Input Method	19		
Email	20		
Account Settings	22		
Section 5: Web and Social Networking	23		
		Browser	23
		Navigating the Web	23
		Entering text in a field	24
		Using Browser Windows	24
		Entering a URL	25
		Copying a hyperlink or URL	25
		Using Bookmarks	26
		Browser Menu	28
		Browser Settings	28
		Section 6: Pictures and Video	30
		Camera	30
		Taking Pictures	30
		Gallery	31
		Viewing Videos	31
		Viewing Pictures	31
		Section 7: Connections	33
		Wi-Fi	33
		Configuring Wi-Fi Settings	33
		Turning Wi-Fi On/Off	33
		Scanning and Connecting to a Wi-Fi Network	34
		Adding a Wi-Fi Network Manually	34
		Bluetooth	34
		Configuring Bluetooth Settings	34
		Pairing with a Bluetooth Device	35
		Tethering	36
		Section 8: Applications and Widgets	39
		Camera	39
		Email	39
		Gallery	39
		Market	40
		Music Player	40

Section 9: Settings	41
Accessing Settings	41
Wireless and network	41
Wi-Fi settings	41
Network notification	41
Advanced settings	42
Sound settings	42
Display settings	43
Brightness	44
White color density	44
Black color density	44
Saturation	44
Animation	44
Screen timeout	45
Power saving mode	45
Screen unlock settings	45
Passwords	45
Device administration	46
Applications	46
Unknown sources	46
Manage applications	47
Running services	47
Development	47
USB debugging	47
Stay awake	47
Allow mock locations	48
Accounts and sync	48
General sync settings	48
Manage accounts	48
Removing an account	49
SD card and device storage	50
Web	50
Google search	51
Select locale	51
About pad	51
Set-up Wizard	51

Section 10: Health and Safety Information	53
--	----

Section 1: Getting Started

This section helps you to quickly start using your device.

Understanding this User Manual

The sections of this manual generally follow the features of your device. This manual gives navigation instructions according to the default display settings. If you select other settings, navigation steps may be different. Unless otherwise specified, all instructions in this manual assume that you are starting from a Home screen.

Note: Instructions in this manual are based on default settings, and may vary from your device, depending on the software version on your device, and any changes to the device's Settings. Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen. All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your device and any changes to the device's Settings.

Special Text

In this manual, you'll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods, or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.

damage to your device. Text Conventions This manual provides condensed information about how to use your device. To make this possible, the following text conventions are used to represent often-used steps:

→ Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures. For example: “From a Home screen, press the Menu Key → Settings → Wireless and network → Wi-Fi settings.”

Activating your device

If you purchased your device from the local dealer, it is activated and ready to use. If you received a new device by mail, it may need to be activated before you can use it.

To activate your device, please contact the local dealer for more information.


Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Charger are included with the device, for charging the battery.

Note: The battery comes partially charged. You must fully charge the battery before using your device for the first time. After the first charge, you can use the device while charging.

Warning!: Use only approved charging devices. Approved accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Battery Indicator

The Battery icon  in the Status Bar shows battery power level. When battery power is 15% or less, your device will prompt you to charge the battery. If you continue to operate the device without charging, the device will power off.

Tip: Task Manager provides helpful information about extending battery life.

Charging the Battery

Your device comes with a Charger (Outlet Connector, Charging Head) to charge your device from any standard AC power outlet.

Note: The battery comes partially charged. You must fully charge the battery before using your device for the first time. After the first charge, you can use the device while charging.

1. Plug the Charging Head into a standard AC power outlet.
2. When charging is complete, unplug the Charging Head from the power outlet and remove the cable from the device.

Turning Your Device On and Off

Turning Your Device On.

 
Press and hold the Power/Lock Key .




Note: Your device's internal antenna is located along the bottom back of the device. Do not block the antenna; doing so may affect signal quality and may cause the device to operate at a higher power level than is necessary.

Turning Your Device Off

1. Press and hold the Power/Lock Key .

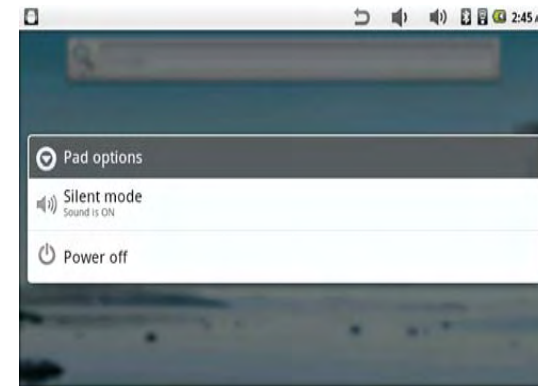

 2. At the prompt, touch Power off.

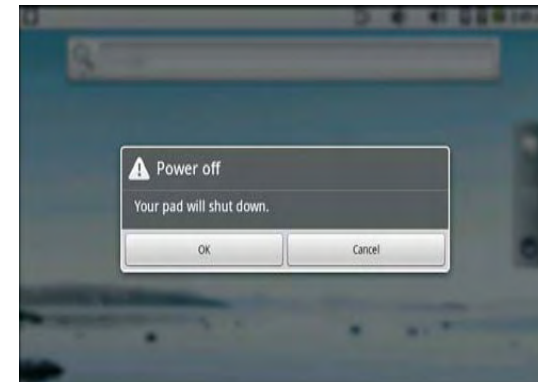

Set-up Wizard

The first time you turn on your device, the Set-up Wizard will prompt you to customize your device. Follow the prompts to set:

1. Language&Keyboard: Choose English or中文 for example.
2. Account & sync Setup: Configure access to your online accounts.
3. Date & time: Configure the right Date&time .

Tip: After the initial set-up, you can always access the Set-Up Wizard from Settings.

Your Google Account

Your new device uses your Google account to fully utilize its Android features, including Gmail, Maps, and the Android Market. When you turn on your device for the first time, set up a connection with your existing Google account, or create a new Google account.To create a Google account, or set up your Google account on your device:

- Use the Set-up Wizard the first time you turn on your device.
- Use Accounts and sync settings.

Memory Card

Your device supports removable microSD™ or microSDHC™ memory cards, for storage of music, pictures, videos, and other files.

Note: You can only store music files that you own (from a CD or purchased with the device) on a memory card.

Installing a Memory CardNote:

1. Open the Memory Card Slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.

3. Replace the Memory Card Slot cover.

Removing a Memory Card

Important!: To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, press the Menu Key → Settings → SD card and device storage → Unmount SD card.
2. Open the Memory Card Slot cover and turn to expose the slot.
3. Gently press down on the memory card, so that it pops out from the slot, and carefully pull the card out.
4. Replace the Memory Slot cover.

Securing Your Device

By default, the device locks automatically when the screen times out, or you can lock it manually. You can unlock the device using one of the default Unlock screens, or for increased security, use a personal screen unlock pattern.

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

Locking the device manually Press the Power/Lock Key .

Unlocking the device

1. Press the Power/Lock Key .
2. Touch and drag Unlock from bottom to top.

Note: You can choose the type of Screen Unlock you want to use, from Pattern, PIN or Password.

Section 2: Understanding Your Device

 
 
Features

This section outlines key features of your device. Features:

- 7-inch 1024x600 WVGA TFT LCD touch screen
- Android OS 2.2
- Android Market, plus pre-loaded applications
- Messaging Features:–Text Messaging–Picture Messaging–Video Messaging–Audio Messaging–Email–Instant Messaging
- Connections:–Wi-Fi 802.11 b/g/n–Bluetooth 2.0–VPN–Dial Up Networking–Tethering
- 1.3 Megapixel forward-facing Camera
- Picture Gallery, supporting JPEG, PNG, GIF, A-GIF, WBMP and BMP formats
- HD Video Player (720p), supporting H.263, H.264, MPEG4, 3GP, 3G2, WMV (v9), Xvid and DivX® formats
- DivX Certified® to play DivX® video up to HD 720p, including premium content
- Music Player, supporting WAV, MP3, AAC, AAC+, eAAC+, AMR-NB, AMR-WB, WMA (v9/10), EVRC, QCELP, MIDI, and SP-MIDI formats
- Support for microSD™ and microSDHC™ Memory Cards.


Front/Side/Top/Back View

1. 3.5mm Headset Jack: Plug in an optional headset or TTY equipment.
2. Menu Key: Press to display options for the current screen.
3. Home Key: Press to display the Home screen. Press and hold to display recent applications or to launch Task Manager.
4. Back Key: Press to return to the previous screen or option.
5. Microphone: Used to pick up your voice, or audio during recording.
6. Memory Card Slot: Install a memory card for storage of files.
7. Power/Lock Key: Press and hold to turn the device on or off. Press to lock the device, or to wake the screen for unlocking.
8. Camera: 1.3MP Camera
9. DC-IN: DC-IN Port, 5A 3A
10. MINI-USB PORT: MINI USB PORT
11. EXTERNAL SPEAKER: Used in music or video playback

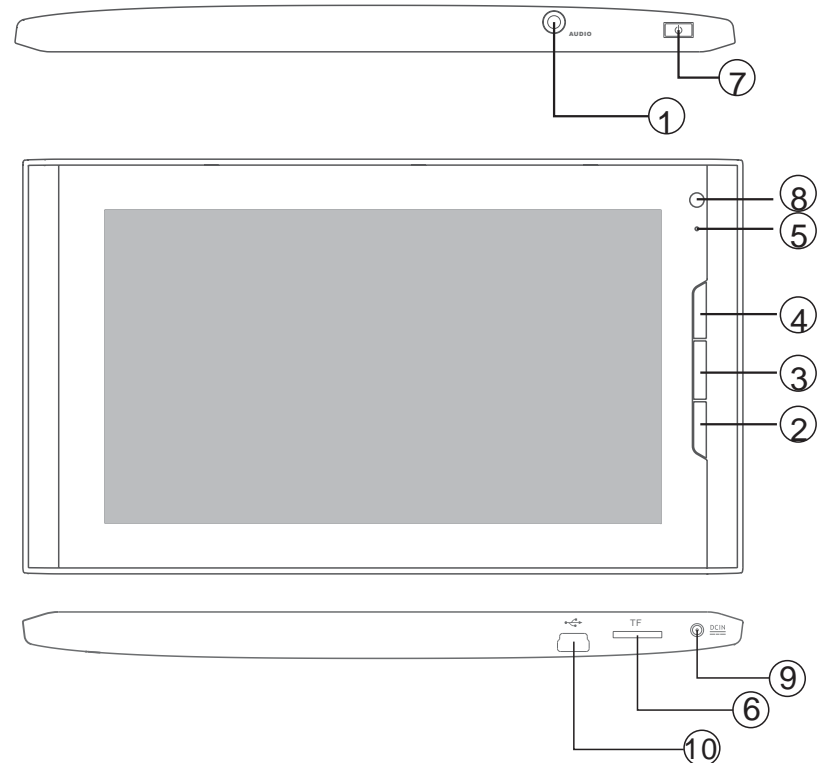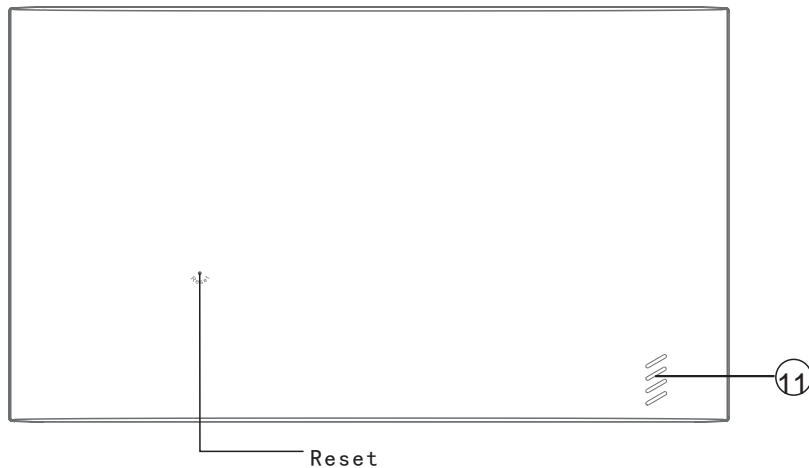

Home Screen

 The Home screen is the starting point for using your device.

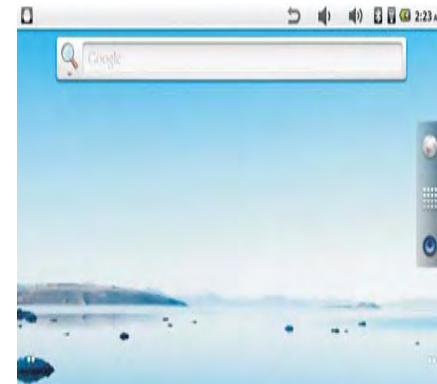

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

1. Home screen: The starting point for using your device. Place shortcuts, widgets and other items to customize your device to your needs.
2. Widgets: Applications that run on the Home screen. These widgets are found on the Home screen by default.
3. Shortcuts: Shortcuts to common applications. These shortcuts are found on the Home screen by default.
4. Primary Shortcuts: Shortcuts to common features.

Warning!: If your device has a touch screen display, note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Adding and removing Home screen panels

Your device comes with some Home screen panels. You can customize the Home screen to include additional panels, and set one panel as Home.

1. From a Home screen, press the Menu Key → Edit.
2. Use these controls to configure panels:

Tip: You can also display Edit options by pinching the Home screen.

Remove: Touch and drag a panel to the Trash Can to remove the panel from the Home screen.

Add: Touch to add a new panel, up to a total of 9. To rearrange the order of panels, touch and drag a panel to a new location.

Set as home: Touch to assign a panel as the main Home screen. The panel set as Home will display

Navigating Your Device

Use command keys and the touch screen to navigate.

Command Keys

Menu Key

Press the Menu Key to display options for the current screen or feature.

Home Key

Press the Home Key to display the Home screen.

Press and hold the Home Key to launch a menu of recent applications, or to launch Task Manager.

Back Key

Press the Back Key  to return to the previous screen, option or step.

Finger Gestures

Touch items to select or launch them. For example:

- Touch the on screen keyboard to enter characters or text.
- Touch a menu item to select it.
- Touch an application's icon to launch the application.

Touch and Hold

Activate onscreen items. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Notification Panel

The Notification Panel shows information about connections, messages and other items. Sweep your finger downward from the top of the screen.

Icons

Icons at the top of the Notification Panel show status for:

 
- Wi-Fi: Touch to enable or disable Wi-Fi.
- Bluetooth: Touch to enable or disable Bluetooth.
- Sound mode: Touch to toggle Silent mode On or Off.

Brightness

Touch and drag the slider to set the brightness, or touch Auto to allow the device to set brightness automatically based on available light and battery charge status.

Notification Panel

The Notification Panel shows information about connections, messages and other items. Sweep your finger downward from the top of the screen.

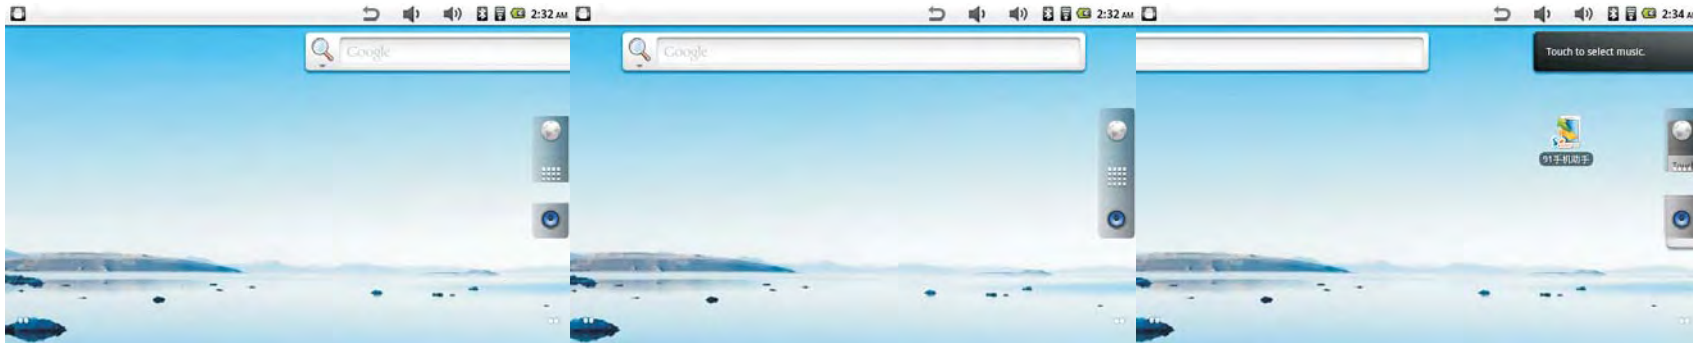

Icons

Icons at the top of the Notification Panel show status for:

- Wi-Fi: Touch to enable or disable Wi-Fi.
- Bluetooth: Touch to enable or disable Bluetooth.
- Sound mode: Touch to toggle Silent mode On or Off.

Brightness












Touch and drag the slider to set the brightness, or touch Auto to allow the device to set brightness automatically based on available light and battery charge status.

Clearing Notifications

1. Sweep your finger downward from the top of the screen to display the Notifications Panel.
2. Touch a notification to clear it.– or –Touch Clear to clear all notifications.

Status Bar

The Status Bar displays icons to show network status, battery power, and other details.

-  **Signal Strength:** Current signal strength. The greater the number of bars, the stronger the signal.
-  **Battery Level:** Shown fully charged.
-  **Charging Indicator:** Battery is charging.
-  **Device Power Critical:** Battery has only three percent power remaining, Charge immediately.
-  **USB Connected:** Device is connected to a computer using a USB cable.
-  **Alarm Set:** An alarm is active.
-  **Preparing SD Card:** A memory card is installed.
-  **SD Card Removed:** Memory card was uninstalled.
-  **Bluetooth Active:** Bluetooth is turned on.
-  **Wi-Fi Active:** Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).
-  **Wi-Fi Action Needed:** Action needed to connect to Wireless Access Point (WAP).

Section 3: Setting Accounts

This section explains how to manage contacts and accounts.

Accounts

Your device can synchronize with a variety of accounts. With synchronization, information on your device is updated with any information that changes in your accounts.

Note: You must register your device with your social networking site before using the device to access the network.

Setting Up Your Accounts

Set up and manage your synchronized accounts with the Accounts and sync setting.


1. From a Home screen, press the Menu Key → Settings → Accounts and sync.
2. Touch Add account, then select the account type.
3. Follow the prompts to enter your account credentials to complete the set-up process.
4. The device communicates with account servers to set up your account. When complete, your account appears in the Manage accounts area of the Accounts and sync screen.

Section 4: Entering Text

This section describes how to enter words, letters, punctuation and numbers when you need to enter text.


Virtual QWERTY Keyboard

 Your device uses a virtual QWERTY keyboard for text entry. Use the keyboard to enter letters, punctuation, numbers, and other characters into text entry fields or applications. Access the keyboard by touching any text entry field. The virtual QWERTY keyboard displays at the bottom of the screen.

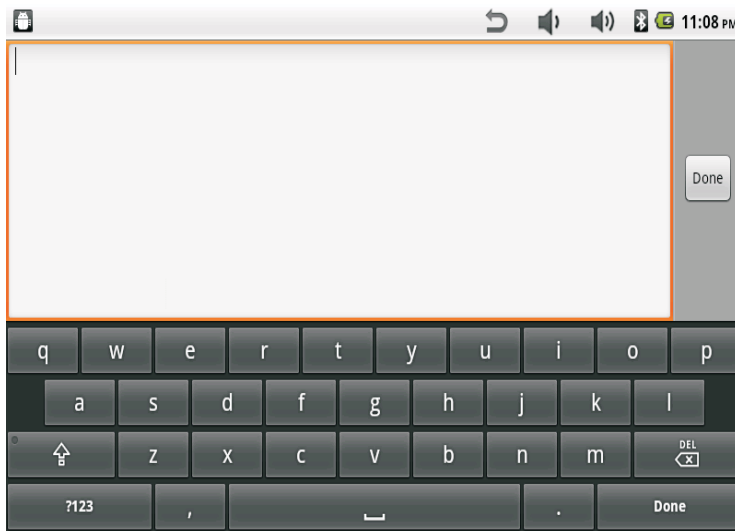

Changing the Input Method

 When entering text, you can select the text input method. Touch and hold on a text input field, then select an input

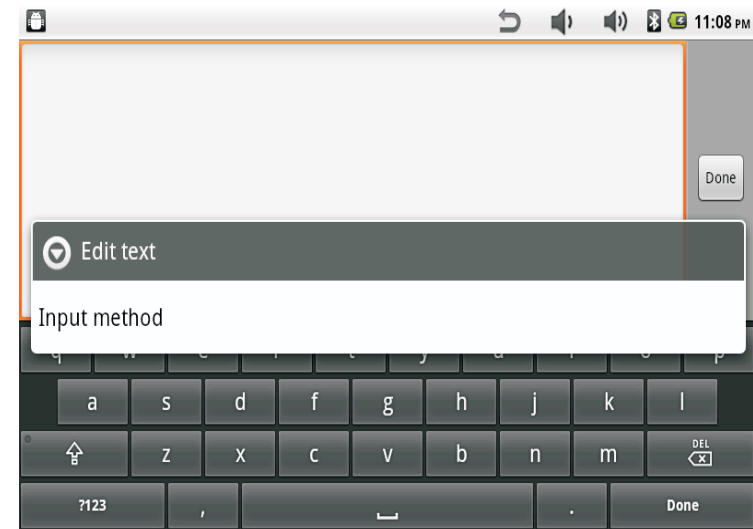


By default, when you rotate the device, the screen orientation updates to display the keyboard at the bottom of the screen.

Email


Use Email to view and manage all your email accounts in one application.

 Configuring Email Accounts

1. From application screen, touch Email. 
2. Touch Add Account, then choose a provider, or touch Others to set up another account.
3. Enter account credentials, then complete set-up by following the prompts to configure account options. Available options vary, depending on the provider. If the account includes synchronization of contacts and calendars, you can choose whether to synchronize these features with your device.

Note: To configure email account settings at any time, touch the account to display Account Settings.

Composing and Sending Email

1. From a Home screen, touch Email. 
2. Touch an account, if you have more than one account set up, then touch New message.
3. Touch the To field to enter recipients. As you enter names or numbers, matching contacts display. Touch a contact to add it to the field.
4. Touch Cc/Bcc to enter recipients in the Cc or Bcc fields.
5. Touch the Subject field to enter a subject.
6. Touch the text field to enter the email text.
7. Touch Attach to add an attachment:
 - My files: Choose a file to attach.
 - Contacts: Attach contact name card(s).

- Location: Attach your current location, or find a location on a map.
8. While composing a message, press the Menu Key for these options:
 - Save as draft: Save the message in Drafts.
 - Discard: Delete the message without sending.
 9. Touch Send to send the message.

Managing Emails

Combined Inbox

You can view emails you receive to all accounts in the All inboxes screen, or you can view email accounts individually.

1. From a Home screen, touch Email .
2. Touch the pop-up menu at the top left of the screen to select:
 - All inboxes: View all emails in a combined inbox.
 - <Account Name> View emails for the account.

Wi-Fi-enabled printer.1.From a Home screen, touch Email



 
3. Open an email to view it.
4. While viewing the email, press the Menu Key → Print.
5. If you are already connected to Wi-Fi, your device displays available printers. Touch a printer to proceed.– or –At the prompt, touch OK, then connect to a Wi-Fi network. After connecting, your device displays available printers. Touch a printer to proceed.
6. Follow the prompts to print the email.

Account Settings

Use settings to configure handling of email on your device.

Note: Available settings may depend on the email account, and include setting how much email to synchronize, creating signatures for emails you send, and other handling options.



1. From application screen, touch Email 
2. Press the Menu Key → Account manager, then touch an account for options:
 - General settings:**
 - Account name: Enter a name to identify this account.
 - Your name: Enter your name, to appear on emails from this account.
 - Signature–: Enter a signature to add to emails from this account.
 - Default account*: When enabled, email from your device is automatically sent from this account.
 - Always Cc/Bcc myself: When enabled, your email address is copied on all emails you send.
 - Exchange Sync settings (Exchange accounts only):**
 - Days to sync Email: Choose how much email you want to see on your device.
 - Empty Server Trash: Touch to delete emails from the Trash or Deleted folder on the Email server.
 - Sync schedule: Set the schedule for synchronizing email from the server.
 - Out-of-office Settings: (not supported).
 - Size to retrieve emails: Set a maximum size for retrieving emails.
 - Notification settings:**
 - Email notifications: When enabled, the New Email icon appears in the Status Bar when a new email arrives.
 - Server settings:**

- Incoming settings: Configure server settings.
- Outgoing settings: Configure outgoing settings.
- Sync contacts: When enabled, contacts from your account are synchronized with your device's Contacts.
- Sync calendar: When enabled, events from your account are synchronized with your device's Calendar.
- Common Settings:**
 - Forward with files: Enable or disable forwarding of file attachments.

Section 5: Web and Social Networking

Browser



Your device is equipped with a full HTML Browser, which allows you to access the internet.

From a Home screen, touch Browser .

Tip: Browser appears by default as a Primary shortcut on the Home screen.

Navigating the Web

Command Keys

- Press the Back Key  to return to the previous page.
- Press and hold the Back Key  to display a list of bookmarks.
- Touch and hold menu to display a list of recent pages.
- Touch to go forward to a recent page.



- Touch and drag your finger on the screen to navigate pages, and to reposition pages within the screen.

Entering text in a field

- While browsing, touch a text field to display the virtual QWERTY keyboard to enter text.

Zoom

- Tap the screen twice to zoom in or out.

Tip: For convenient browsing, you can rotate the device to landscape mode. While browsing, use gestures and menus to navigate:

- Touch an item to select it.
- Touch a hyperlink to follow the link.
- Touch and hold on a hyperlink for these options:
 - Open in new window: Open a new window to display the linked page.
 - Copy link URL: Save the link's URL to the clipboard.
 - Add link to Bookmarks: Create a bookmark to the page (without loading it).
 - Save link: Save the linked page to Download history.
 - Share link: Send the link via Bluetooth, Email, or Message.

Using Browser Windows

You can have multiple windows open at one time to easily switch between windows.


1. From a Home screen, touch Browser .

2. To open a new window, touch Windows  → .

3. To switch to another open window, touch , then touch another open window to display it.

Entering a URL


Access a website quickly by entering the URL.

1. From a Home screen, touch Browser .
2. Touch the URL field at the top of the screen, then enter the URL using the virtual QWERTY keyboard.
3. As you enter characters, potential matches display. Continue entering characters, or touch a match to complete the URL.
4. Touch Go to load the page.


Copying Fields or Text

Copy information from a web page to the clipboard for pasting.

Copying text

1. From a Home screen, touch Browser .
2. Browse to a web page.
3. On the web page, touch and hold on the text, then touch Copy on the pop-up menu.
4. To paste the copied text, navigate to the desired field (or to another application), then touch and hold in a text field and touch Paste.

Copying a hyperlink or URL



1. From a Home screen, touch Browser .
2. Browse to a web page.

3. Touch and hold on the link or URL, then touch Copy on the pop-up menu.
4. To paste the copied link or URL, navigate to the desired field (or to another application), then touch and hold in a text field and touch Paste.

Using Bookmarks



While browsing, bookmark a site to quickly access it later.

Creating a bookmark

1. From a Home screen, touch Browser .
2. Browse to a website, then touch Bookmarks .
3. Touch Add bookmark.
4. At the Add bookmark prompt, confirm the Name and URL for the bookmark, then touch OK to save the bookmark.

Accessing bookmarks and history

Launch a bookmarked page, or reload recent pages.

1. From a Home screen, touch Browser .
2. Touch Bookmarks .
3. On the Bookmarks tab, use these options:
 - Touch a bookmark to load the page.
 - Touch and hold on a bookmark for these options:
 - Open: Launch the bookmarked page.
 - Open in new window: Open the linked page in a new window.

- Add shortcut to Home: Create a bookmark on the Home screen.
- Share link: Send the link via Bluetooth, Email, Gmail, or Messaging.
- Copy link URL: Save the link’s URL to the clipboard.
- Set as homepage: Assign the bookmarked link as the home page.
- Delete bookmark: Remove the bookmark.

4. On the Most visited tab, use these options:

- Touch a page to reload it.
- Touch the star next to a page to bookmark it.
- Touch and hold on a page for these options:
 - Open: Launch the web page.
 - Open in new window: Launch the web page in a new window.
 - Add bookmark/Remove from bookmarks: Bookmark the page, or remove the bookmark for this page.
 - Remove from history: Remove the record of this page.

5. On the History tab, use these options:

- Touch a page to load it.
- Touch Today, Yesterday, or Last 7 days for lists of recent pages.
- Touch the star next to a page to bookmark it.
- To clear the history, touch Clear.
- Touch and hold on a page for these options:
 - Open: Launch the web page.
 - Open in new window: Launch the web page in a new window.
 - Add bookmark/Remove from bookmarks: Bookmark the page, or remove the bookmark for this page.
 - Remove from history: Remove the record of this page.

Browser Menu

While viewing a web page, press the Menu Key for options:

- Add Bookmark: Create a bookmark for the current page.
- Find on page: Search for content on the current page.
- Download manager: View and manage recent downloads.
- Brightness setting: Set the display's brightness.
- Settings: Customize the Browser (see Browser Settings).
- More:
 - Share page: Send the page's URL via Bluetooth, Email, Gmail, or Messaging.
 - Page info: View information about the current page, including the URL.

Browser Settings

1. From a Home screen, touch Browser .

2. Press the Menu Key → Settings:

- Page content settings
 - Default zoom: Choose a default zoom level for web pages.
 - Open pages in overview: When enabled, displays an overview of newly-opened pages.
 - Text encoding: Choose a default character set for web pages.
 - Block pop-up windows: When enabled, blocks pop-up windows.
 - Load images: When enabled, images are automatically loaded when you visit a page. When disabled, images are indicated by a link, which you can touch to download the picture.
 - Auto-fit pages: When enabled, the browser automatically sizes web pages to fit your device's display.
 - Landscape view only: When enabled, Browser displays all pages in the wider landscape orientation (rotate your device to view pages in landscape mode).

- Enable JavaScript: When enabled, Browser will automatically run JavaScript scripts on pages you visit.
- Enable plug-ins: When enabled, Browser will automatically load and run plug-ins on pages you visit.
- Open in background: When enabled, new windows open behind the current window.
- Set home page: View and set the default first page that displays when you launch the Browser.
- Default storage: The default location for downloads (not configurable).
- Privacy settings
 - Clear cache: Delete content and databases stored on the device.
 - Clear history: Delete the list of previously-visited pages.
 - Accept cookies: When enabled, allows Browser to save and read cookie information used by web pages.
 - Clear all cookie data: Delete cookie information saved to the device.
 - Remember form data: When enabled, stores information you enter into forms to make future forms easier.
 - Clear form data: Deletes saved form information.
 - Enable location: When enabled, sites you visit can request access to your location.
 - Clear location access: Clear location access for all web sites.
- Security settings
 - Remember passwords: When enabled, saves usernames and passwords for sites you visit, to make future visits easier.
 - Clear passwords: Clear all saved usernames and passwords.
 - Show security warnings: When enabled, Browser will warn you if there is a problem with a site's security.
- Advanced settings
 - Website settings: View and manage settings for individual websites.
 - Reset to default: Clear all browser data and reset all settings to the factory defaults.

Section 6: Pictures and Video

Camera

Use your device's built-in Camera to take pictures and record video.

Tip: A shortcut to Camera appears on a Home screen by default.





From a application screen, touch Camera .

Important!: Do not take photos of people without their permission. Do not take photos in places where cameras are not allowed. Do not take photos in places where you may interfere with another person's privacy.

Taking Pictures



1. From a application screen, touch Camera .
2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
3. To take the picture, touch the Camera button.
4. After taking a picture, touch Image Viewer to view the picture. While viewing the picture, use these options:
 - Touch the zoom icons to zoom incrementally, or double-tap on the picture to zoom all the way in or out.
 - Touch Delete to erase the picture.
 - Touch Share to send the picture via AllShare, Bluetooth, Email, Messagin.
 - Touch Set as to assign the picture as Contact icon or Wallpaper.
 - Press the Back Key  to return to the Camera to take more pictures.

Tip: Touch the picture to show or hide Image Viewer options.

Gallery


Your device's 7-inch 800x480 LCD screen provides high-resolution display of pictures and videos. Use Gallery to view, capture, and manage pictures and videos.

Note: Your device comes with a 4GB memory card pre-installed.

Tip: A shortcut to Gallery appears by default on the Main Home screen.


Viewing Videos



1. From a Home screen, touch Gallery .
2. Touch a category, then touch a video to play it.
3. While viewing a video, press the Menu Key for these options:
 - Scene selection: Touch to view a frame from the video.
 - Share via: Send the video via AllShare, Bluetooth, Messaging, YouTube, Email or Gmail.
 - Shop: Not available.
 - Details: View information about the video.

Viewing Pictures



1. From a Home screen, touch Gallery .
2. Touch a category, then touch a picture to view it.
3. While viewing a picture, touch the screen for these options:
 - Touch Slideshow to view a slideshow of pictures.
 - Touch Menu for options:
 - Share: Share the selected picture via AllShare, Picasa, Bluetooth, Messaging, Email or Gmail.
 - Delete: Erase the picture.

–More: Display Details about the picture, Set as a Contact icon or as Wallpaper, Crop the picture, Print, Rotate left, or Rotate right.

Setting a Picture as a Contact Icon



1. From a Home screen, touch Gallery
2. Touch a category, then touch a picture to select it.
3. Press the Menu Key → More → Set as → Contact icon.
4. Select a contact, or create a new contact, with the selected picture as the contact's icon.

Setting a Picture as Wallpaper

1. From a Home screen, touch Gallery .
2. Touch a category, then touch a picture to select it.
3. Press the Menu Key → More → Set as → Wallpaper.
4. Use the crop tool to edit the picture, then touch Save to set the edited picture as the Home screen wallpaper. Sharing pictures and video Share pictures and videos with your friends.



1. From a Home screen, touch Gallery
2. Touch a category to display thumbnails, then select items for sharing:
 - To select an entire category, press the Menu Key while viewing categories, then touch Select all → Share.
 - To select multiple pictures or videos from a category, press the Menu Key while viewing the thumbnails. Touch thumbnails to mark them for sharing, then touch Share.
3. Touch AllShare, Bluetooth, Messaging, Picasa (pictures only), Email, Gmail, or YouTube (videos only), then follow the prompts.

Section 7: Connections

Your device includes features to connect to the internet and to other devices, via Wi-Fi, Bluetooth, VPN and Dial Up Networking.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your device's Wi-Fi **feature to:**

- Access the internet for browsing, or to send or receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling. Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be Open (unsecured, as with most hotspots), or Secured (requiring you to provide login credentials). Your device supports the 802.11 b/g/n Wi-Fi protocol.

Configuring Wi-Fi Settings

Finding Wi-Fi Networks You can have your device automatically notify you of available networks. Turning Wi-Fi On or Off Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range WAPs (Wireless Access Points).

Turning Wi-Fi On

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch Wi-Fi to turn Wi-Fi Off.

Scanning and Connecting to a Wi-Fi Network

When you turn on Wi-Fi, your device searches for available Wi-Fi connections, then displays them on screen.

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch Wi-Fi to turn Wi-Fi On. Your device automatically scans for available Wireless Access Points.
3. When the scan is complete, touch a Wi-Fi network to connect. If the Wi-Fi network is open, your device will automatically connect. If the Wi-Fi network is secured, enter the password at the prompt to connect.

Adding a Wi-Fi Network Manually

1. From a Home screen, press the Menu Key → Settings → Wireless and network → Wi-Fi settings.
2. Touch Wi-Fi to turn Wi-Fi On.
3. Touch Add Wi-Fi network, then enter information about the network:
 - Network SSID: Enter the name of the Wi-Fi Wireless Access Point.
 - Security: Select the type of security used by the WAP.
 - Password: If the WAP is secured, enter the password or hex key.

Note: Depending on the Security protocol used by the WAP, additional network information may be required.

4. Touch Save to save the settings.

Bluetooth

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You don't need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

Configuring Bluetooth Settings

Configure your device's Bluetooth settings. Turning Bluetooth On or Off

Turning Bluetooth On

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch Bluetooth to turn Bluetooth on.

Note: When Bluetooth is on, the Bluetooth icon  displays in the Status Bar.

Turning Bluetooth Off

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch Bluetooth to turn Bluetooth off.

Pairing with a Bluetooth Device

Search for a Bluetooth device and pair with it, to exchange information between your device and the target device.

Tip: After pairing, your device and the target device will recognize each other and exchange information without having to enter a passcode or PIN.

1. From a Home screen, press the Menu Key → Settings → Wireless and network → Bluetooth settings.
2. Touch Bluetooth to turn on Bluetooth.
3. Enable the target device's discoverable, or visible mode.
4. Touch Scan devices.
5. From the list of scanned devices, touch the target device, then follow the prompts to complete the pairing:
 - If the target device requires a PIN, enter a PIN for the target device and touch OK. When prompted, enter the PIN on the target device.

- If the device allows automatic or smart pairing, your device will attempt to pair with the device automatically. Follow the prompts on your device and the target device to complete the pairing.

Tethering

Use Tethering to share your device's mobile data connection via USB.

Tip: Tethering works with Windows Vista, Windows 7, and Linux. Touch Help for information about using USB tethering.

1. Attach the target device to your device via USB cable.
2. From a Home screen, press the Menu Key → Settings → Wireless and network → Tethering.

VPN

Use your device's VPN feature to set up and connect to VPNs (Virtual Private Networks).

Configuring VPN Settings

Configure your device's VPN settings.

Adding a VPN

1. From a Home screen, press the Menu Key → Settings → Wireless and network → VPN settings.
2. Touch Add VPN to set up a connection to a VPN, using the following settings:
 - Add PPTP VPN: Set up a connection to a VPN with Point-to-Point tunneling protocol.
 - Add L2TP VPN: Set up a connection to a VPN with Layer 2 tunneling protocol.
 - Add L2TP/IPSec PSK VPN: Set up a connection to a VPN with pre-shared key-based Layer 2/IPsec tunneling protocol.
 - Add L2TP/IPSec CRT VPN: Set up a connection to a VPN with Certificate-based Layer 2/IPsec tunneling protocol.

Mobile NetworksUse

Mobile Networks settings to control how your device uses network services.

USB Settings

Configure USB Settings to automatically identify your device when you attach it to a computer with a USB cable.

Memory Card

Your device supports removable microSD™ or microSDHC™ memory cards for storage of music, pictures, videos, and files.

Note: Your device comes with a USB cable, and includes a 4GB memory card pre-installed.

Installing and Removing a Memory Card

Important!: To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Formatting a Memory Card

Formatting erases all content from the memory card and prepares it for use with your device.

Formatting a memory card using your device

1. From a Home screen, press the Menu Key → Settings → SD card and device storage
2. Touch Unmount SD card. At the prompt, touch OK to continue.
3. After unmounting the SD card, touch Format SD card.
4. Follow the prompts to confirm the formatting of the card.

Formatting a memory card using your computer

Consult your computer and/or memory card reader documentation for information about formatting memory cards.

Transferring Files to a Memory Card

Transferring files using the Media player USB setting

1. From a Home screen, press the Menu Key → Settings → Wireless and network → USB Settings, then select Media player.
2. Attach your device to the computer with the USB cable. Your computer recognizes the connection and launches the default media player.
3. Use the media player software to transfer files to the memory card.
4. When finished, display the Notifications Panel to disconnect media sync mode. Touch Media Sync: Connected, then touch Yes to disconnect. Disconnect the USB cable.

Transferring files using the Mass Storage USB setting

Note: Your device comes with a USB cable.

1. From a Home screen, press the Menu Key → Settings → Wireless and network → USB Settings, then select Mass storage.
2. Attach your device to the computer with a USB cable. Your device recognizes the connection and displays USB connected in the Status Bar and Notifications Panel.
3. Display the Notifications Panel, then touch USB connected. At the USB Mass Storage prompt, touch Mount to enable copying of files between your computer and the memory card.
4. At the prompt on the computer, select a transfer method:
 - Open device to view files using Windows Explorer. Drag and drop files from the PC to the memory card installed in your device.



5. Transfer files to the memory card. When finished, touch Turn Off on the USB Mass Storage prompt, and disconnect the USB cable.

Section 8: Applications and Widgets

Camera

Take pictures and record video with your device's built in Camera.



Tip: A shortcut to Camera appears on a Home screen by default.

From application screen, touch Camera  .
– or – From a Home screen, touch Applications → Camera .

Email

Send and receive email using popular email services.

Tip: Email appears as a Primary Shortcut on a Home screen by default.

From application screen, touch Email  .
– or – From a Home screen, touch Applications → Email .

Gallery

Use Gallery to view, capture, and manage pictures and videos.


Tip: A shortcut to Gallery appears on the Main Home screen by default.

From application screen, touch Gallery .

– or –From a Home screen, touch Applications  → Gallery .

Market


Browse for new Android applications, games or downloads for your device. You'll need to have a Google account set up on your device to download a new application.

1. From a Home screen, touch Applications  → Market .
2. The first time you open Market, read the Terms of Service, then touch Accept to continue.
3. Browse for items to install:
 - Apps: New applications.
 - Games: New games.
4. While browsing, press the Menu Key for these options:
 - Search: Enter criteria to find applications.
 - Downloads: Display requested downloads, plus available updates to applications installed on your device.
 - Help: Get help for using Android Market.

Music Player

Play music files from an installed memory card.

Tip: A shortcut to Music Player appears on a Home screen by default.

From application screen, Music Player .

– or –From a Home screen, touch Applications  → Music Player

Section 9: Settings

This section explains Settings for customizing your device.

Accessing Settings

From a Home screen, press the Menu Key → Settings.– or –From a Home screen, touch Applications  → Settings

Wireless and network

Control your device's wireless connections.

Wi-Fi settings

Your device supports Wi-Fi b/g/n. Use Wi-Fi settings to manage your device's Wi-Fi connections.

Turning Wi-Fi On or Off

Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range Wireless Access Points (WAPs).

1. From a Home screen, press the Menu Key → Settings → Wireless and network.
2. Touch Wi-Fi settings, then touch Wi-Fi to turn Wi-Fi On or Off. When on, a check appears in the checkbox.

Network notification

Have your device alert you to new Wireless Access Points (WAPs).

1. From a Home screen, press the Menu Key → Settings → Wireless and network.
2. Touch Wi-Fi settings, then touch Network notification to turn notifications On or Off. When on, a check appears in the checkbox.

Advanced settings

Set up and manage wireless access points.

1. From a Home screen, press the Menu Key → Settings → Wireless and network → Wi-Fi settings.
2. Press the Menu Key → Advanced for these settings:

•Advanced:

- Wi-Fi sleep policy: By default, Wi-Fi turns off when the screen times out, and data connections switch to mobile data. Use Wi-Fi sleep policy settings to specify when to switch from Wi-Fi to mobile data for data communications. Touch to choose from When screen turns off, Never when plugged in, or Never.
- MAC address: View your device's MAC address, required when connecting to some secured networks (not configurable)
- Proxy: Touch to enter a proxy number.
- Port: Touch to enter a port number.

•IP Settings:

Enter IP settings for configuring a connection to a network using a static IP, including:

- Use static IP: Touch to turn static IP On or Off.
- IP address: Enter the IP address.
- Gateway: Enter the gateway.
- Netmask: Enter the netmask.
- DNS 1: Enter the DNS1.–DNS 2: Enter the DNS2.

Sound settings

General

Volume

Set the volume level for all types of sounds.

Note: You can only set volume when Silent Mode is disabled.

1. From a Home screen, press the Menu Key → Settings → Sound settings → Volume.
2. Touch and drag the sliders to set:
 - Media volume: Playback of music, videos and other multimedia content.
 - Alarm volume: Notifications for alarms set in Clock.
 - System volume: Application sounds, and other sounds made by your device.
 - Notification volume: Sounds for alerts to new messages and other events.
3. Touch OK to save your setting.

Tip: You can also set Device Volume from the Home screen by pressing the Volume Key.

Notifications

Screen lock sounds

When enabled, tones play when unlocking and locking the screen.

1. From a Home screen, press the Menu Key → Settings → Sound settings.
2. Touch Screen lock sounds to enable or disable tones. When enabled, a check mark appears in the check box.

Display settings

Font style

Set the font for screen displays.

1. From a Home screen, press the Menu Key → Settings → Display settings.
2. Touch Font style to choose a font style, or touch Get fonts online to browse and download a new font.

Brightness

Set the default screen brightness.

1. From a Home screen, press the Menu Key → Settings → Display settings → Brightness.
2. Touch and drag the slider to set the brightness, or touch Automatic brightness.
3. Touch OK to save the setting.

White color density

Set the density for display of the color white.

1. From a Home screen, press the Menu Key → Settings → Display settings → White color density.
2. Touch and drag the slider to set the density, then touch OK to save the setting.

Black color density

Set the density for display of the color black. Black color density can be used to enhance picture depth.

1. From a Home screen, press the Menu Key → Settings → Display settings → Black color density.
2. Touch and drag the slider to set the density, then touch OK to save the setting.

Saturation

Adjust the color saturation for the display.

1. From a Home screen, press the Menu Key → Settings → Display settings → Saturation.
2. Touch and drag the slider to set the saturation, then touch OK to save the setting.

Animation

Set the level of animations for transitions between screens.

1. From a Home screen, press the Menu Key → Settings → Display settings → Animation.
2. Touch No animation, Some animations, or All animations.

Screen timeout

Set the length of delay between the last key press or screen touch and the automatic screen timeout (dim and lock).

1. From a Home screen, press the Menu Key → Settings → Display settings → Screen timeout.
2. Touch a setting to select it.

Power saving mode

When enabled, your device will automatically analyze the screen and adjust the brightness to conserve battery power.

1. From a Home screen, press the Menu Key → Settings → Display settings.
2. Touch Power saving mode to enable or disable the mode. When enabled, a check appears in the check box.

Screen unlock settings

Set screen lock

Choose settings for unlocking your screen.

1. From a Home screen, press the Menu Key → Settings → Location and security.
2. Touch Set screen lock/Change screen lock for these settings:
 - None: Touch to disable all screen lock settings.
 - Pattern: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
 - PIN: Touch to select a PIN to use for unlocking the screen.
 - Password: Touch to create a password for unlocking the screen.

Passwords

Visible passwords

When enabled, password characters will display briefly as you touch them while entering passwords.

1. From a Home screen, press the Menu Key → Settings → Location and security.
2. Touch Visible passwords to enable or disable brief displays of password characters. When enabled, a check mark appears in the check box.

Device administration

Add or remove device administrators.

1. From a Home screen, press the Menu Key → Settings → Location and security.
2. Touch Select device administrators.

Applications

You can download and install applications from Android Market, or create applications using the Android SDK and install them on your device. Use Applications settings to manage applications.

Warning!: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Unknown sources

When enabled, you can install of application from sources other than the Android Market.

1. From a Home screen, press the Menu Key → Settings → Applications.
2. Touch Unknown sources to enable or disable the setting. When enabled, a check mark appears in the check box.

Manage applications

Manage and remove applications from your device.

1. From a Home screen, press the Menu Key → Settings → Applications → Manage applications.
2. Touch an application to view and update information about the application, including memory usage, default settings and permissions.

Running services

View and control services running on your device.

Warning!: Not all services can be stopped, and stopping services may have undesirable consequences on the application or Android System.

1. From a Home screen, press the Menu Key → Settings → Applications → Running services.
2. To stop a service, touch the service, then touch Stop at the confirmation prompt.

Development

Set options for application development.

USB debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

Note: This setting is used for development purposes.

1. From a Home screen, press the Menu Key → Settings → Applications → Development.
2. Touch USB debugging to enable or disable the setting. When enabled, a check mark appears in the check box.

Stay awake

When enabled, the screen will not go to sleep (lock) while connected to a PC via USB cable. This can be useful when using some applications, because the device will disconnect a Wi-Fi connection when the screen locks.

Note: This setting is used for development purposes.

1. From a Home screen, press the Menu Key → Settings → Applications → Development.
2. Touch Stay awake to enable or disable the setting. When enabled, a check mark appears in the check box.

Allow mock locations

This setting is used by developers when developing location-based applications.

Note: This setting is used for development purposes.

1. From a Home screen, press the Menu Key → Settings → Applications → Development.
2. Touch Allow mock locations to enable or disable the setting. When enabled, a check mark appears in the box.

Accounts and sync

Set up and manage accounts, including your Google and Backup Assistant accounts.

General sync settings

Background data

When enabled, all accounts can sync, send, and receive data at any time, in the background.

Important!: Disabling background data can extend battery life and lower data use. Some applications may still use the background data connection, even if this setting is disabled.

1. From a Home screen, press the Menu Key → Settings → Accounts and sync.
2. Touch Background data to enable or disable the setting. When enabled, a check mark appears in the check box.

Auto-sync

When enabled, all accounts sync data at any time, automatically.

1. From a Home screen, press the Menu Key → Settings → Accounts and sync.
2. Touch Auto-sync to enable or disable the setting. When enabled, a check mark appears in the check box.

Manage accounts

Use Manage accounts to set up and configure your accounts.

Note: Available settings depend on the type of account. Not all settings are available for all accounts.

1. From a Home screen, press the Menu Key → Settings → Accounts and sync.
2. Under Manage accounts, touch the account to modify its settings.

Adding an account

1. From a Home screen, press the Menu Key Settings → Accounts and sync
2. Under Manage accounts, touch Add account and follow the prompts to enter your credentials and set up the account

Removing an account

Important!: Removing an account also deletes all of its messages, contacts and other data from the device.

1. From a Home screen, press the Menu Key Settings → Accounts and sync.
2. Touch an account to display its settings.
3. Touch Remove account, then touch Remove account at the prompt to remove the account and delete all its messages, contacts and other data.

SD card and device storage

Manage the use of memory resources in your device's internal memory, and on an installed memory card.

External SD card

1. From a Home screen, press the Menu Key → Settings → SD card and device storage.
2. View Total space and Available space memory usage on an installed memory card (not user-configurable).
3. Touch Unmount SD card to prepare the memory card for safe removal or formatting. For more information, see "Removing a Memory Card" on page10.
4. Touch Format SD card to erase the memory card and prepare it for use with your device.

Internal device storage

View usage for your device's 4GB internal memory.

Note: This setting cannot be configured.

From a Home screen, press the Menu Key → Settings → SD card and device storage → Available space.

Web

Configure settings for web searches.

Google search

1. From a Home screen, press the Menu Key → Settings → Search → Google search.
2. Touch Show web suggestions to enable or disable display of suggestions from Google as you type search criteria.
3. Touch Use My Location to enable or disable to customized Google search results and other Google services based on your location information.
4. Touch Search history to enable or disable saving of search criteria and results.
5. Touch Manage search history to configure settings for search history.

Language and keyboard

Select locale

Set the language used by your device.

1. From a Home screen, press the Menu Key → Settings → Language and keyboard → Select locale.
2. Touch a language/locale from the list.

Text settings

Configure text entry options to your preferences.

Select input method

Choose the default text entry method.

From a Home screen, press the Menu Key → Settings → Language and keyboard → Select input method.

About pad

View information about your pad, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, press the Menu Key → Settings → About pad.
2. Touch items to view details:
 - System updates: Check for available updates for your pad.
 - Status: View Battery status, Battery level, Pad number, MIN, PRL version, ERI version, MEID, Network, Signal strength, Mobile network type, Service state, Roaming, Mobile network state, Wi-Fi MAC address, Bluetooth address, and Up time.
 - Battery use: Display processes and applications that are running. Touch and hold on an item to view details.
 - Legal information: Display open source licenses, License settings, and Google legal information.
 - Android version: Display the Android version of your pad.
 - Model number: Display your pad's model number.
 - Baseband version: Display the baseband version of your pad.
 - Kernel version: Display the kernel version of your pad.
 - Build number: Display your pad's build number.

Set-up Wizard

Use the Set-up Wizard to customize your pad.

1. From a Home screen, press the Menu Key → Settings → Set-up Wizard.
2. Follow the prompts to configure these settings:
 - Account Setup: Configure access to your accounts.
 - My Location: Configure your pad's use of location services.

Section 10: Health and Safety Information

This section outlines the safety precautions associated with using your m01f.

Battery Use & Safety

The battery in M01F TABLET is not intended to be replaced by the consumer. If you believe the battery is damaged or needs to be replaced, take the M01F TABLET to a service center for inspection and replacement.

- Do not let the M01F TABLET or battery come in contact with liquids. Liquids can get into the M01F TABLET's circuits, leading to corrosion. Even when the M01F TABLET appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the M01F TABLET and/or battery get wet, have them checked by your service provider or contact Gaea, even if they appear to be working properly.
- Do not place your battery in or near a heat source. Excessive heating can damage the M01F TABLET or the battery and could cause the M01F TABLET or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your M01F TABLET in your car in high temperatures.
- Do not dispose of the M01F TABLET or the battery in a fire. The M01F TABLET or the battery may explode when overheated.
- Avoid dropping the cell M01F TABLET. Dropping the M01F TABLET, especially on a hard surface, can potentially cause damage to the M01F TABLET. If you suspect damage to the M01F TABLET or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way. Important!: Use only Gaea-approved batteries, and recharge your battery only with Gaea-approved chargers which are specifically designed for your M01F TABLET. **WARNING!** Use of a non-Gaea-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Gaea's warranty does not cover damage to the M01F TABLET caused by non-Gaea-approved batteries and/or chargers.

- Do not use incompatible batteries and chargers. Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible batteries and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.

Display/Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAYThe display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICEIf your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment. You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

FCC NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:-- Reorient or relocate the receiving antenna-- Increase the separation between the equipment and receiver.-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.