

# **Instruction Manual**

**MODEL: VJB-105**

**Bluetooth Jukebox with Turntable and CD Player**



**CAUTION:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**WARNING:** To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure



**WARNING:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



## Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



15.



 
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
  - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
  - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
16.  Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.
17. The main plug is used as disconnect device, the disconnect device shall remain readily operable.
18. **WARNING**
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases, shall not be placed on apparatus.
19. The equipment should always be used in a moderate climate.
20. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. The symbol with  Indicates AC voltage.
23. **CAUTION**, The servicing instructions are for qualified service personnel only. To reduce the risk of electric shock, do not perform any services other than that stated in the operation manual unless you are qualified to do so.
24. Cells or batteries should not be disassembled, crushed, punctured, opened, or otherwise mutilated.
25. Always take care to correctly insert cells and batteries observing the positive (+) and negative (-) polarity marks on the product and the device for which it is intended.
26. Do not short circuit the cells or batteries. Store cells and batteries in their original packaging and away from metal objects which may short-circuit them.
27. Batteries should not be heated or exposed to temperatures exceeding the manufacturer's recommended maximum temperature. Such thermal exposure may lead to leakage, fire, or explosion/disassembly.
28. Do not drop or subject the cell or battery to strong mechanical shock.
29. Use the cell or battery with equipment that specifies its use.
30. Keep cells and batteries out of reach of children.
31. Seek medical advice immediately if a cell or battery has been swallowed.

32. In the event that the electrolyte comes into contact with the skin or eyes, immediately flush with fresh water for at least 15 minutes and seek medical advice.
33. Do not mix cells or batteries of different sizes, brands, capacities, or chemistries.
34. Consult the cell manufacturer for the maximum number of cells to be assembled in a battery.
35. Batteries should not be placed into a fire except under conditions of controlled incineration.
36. Failure to observe this precaution may result in an explosion/disassembly.

#### ACCESSORIES INCLUDED

- DESKTOP BLUETOOTH JUKEBOX
- INSTRUCTION MANUAL
- WARRANTY (BACK OF MANUAL)
- Remote Control
- Plastic Cradle
- RCA Line Out Cable
- 45 RPM adaptor
- Counter weight

## Product Overview

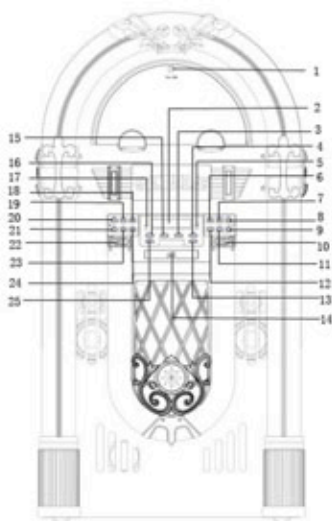


#### Front View

1. PHONO door
2. LCD DISPLAY
3. REP: In CD/MP3 play mode, press to repeat/random songs.
4. PROG: In CD stop mode/ In Radio mode, Press to set the program playback / In Standby mode,

press and hold this button to into time set mode.

 5. **RM:REMOTE SENSOR**
6. **F-10:** Press to skip to 10 previous tracks.
7. **ST/MONO:** Stereo / Mono Selection in Radio Mode
8. **PRE+:** Press to listen preset station, In program mode, press to select preset station number.
9. **PRE-:** Press to listen preset station, In program mode, press to select preset station number.
10. **LIGHT:** Press to turn on/off the light.
11. **SCAN:** Press to automatically search and save radio stations.
12. **F+10:** Press to skip to 10 next tracks
13. **(▲)EN/CLOSE:** In CD mode, use to open and close the disc tray.
14. **DISC TRAY**
15. **EQ:** Press to change the Equalizer setting. Equalizer settings preloaded on to the Unit are Pop (POP), Rock (ROC), Classical (CLA), Jazz (JAZ), and Flat (FLA)
16. **ON/OFF(small):** Press to enter Standby Mode.
17. **LED**
18. **VOL+:** Increase Volume, press the button repeatedly or press once and hold down until you reach the desired volume level.
19. **▶▶NEXT TRACK:** In CD Mode press to skip to the next track. Press and hold to fast forward/ In Standby mode, press to set the time./In BLUETOOTH Mode, press to skip to the next track./ In Radio Mode, press to manually tune to a desired station or press and hold this button to auto search a station.
20. **▶||PLAY/PAUSE:** In CD/ BLUETOOTH mode, press to play or pause playback.
21. **■STOP:** Press to stop playback or cancel the program setting.
22. **ON/OFF(big):** Turn on the unit. (▲)
23. **◀◀PREVIOUS TRACK:** In CD Mode, press once to skip to the previous track. Press and hold to fast rewind/In Standby mode, press to set the time/In BLUETOOTH Mode, press to skip to the previous track. / In Radio Mode, press to manually tune to a desired station or press and hold this button to auto search a station.
24. **VOL-:**Reduce Volume, press the button repeatedly or press once and hold down until you reach the desired volume level.
25. **MODE:** Press to select between the different functions such as the FM Tuner, AUX, CD player, Bluetooth and Phonograph.

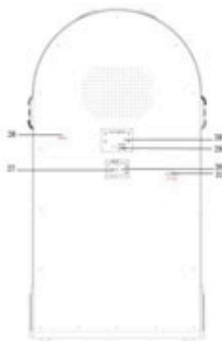

## Rear View

### 26. FM Wire Antenna

While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.

### 27. Line out Socket

Connect external speakers

### 28. AUX IN Cord

Connect an external source

### 29. LIGHT Mode Switch

Single light mode or mixed light mode for LED Tube.

### 30. Line out ON/OFF Switch

Select ON position, to use external or built-in speakers, select OFF position, to use the unit's built-in speakers.

Note: The unit of the volume button can't control the Line out volume

### 31. AC Power Cord

Plugs into a wall outlet.

## Parts of the Turntable

### A. Turntable.

 
### B. Counter weight

C. **Safety Screw (for transport)** Before using the unit, turn the screw **clockwise** using a coin or screwdriver. **Important:** When you transport the unit, turn the screw **counterclockwise** to secure the turntable.

The silver screw on the back of the turntable is a balancer for both the turntable as well as for the tone arm.

Please turn this screw with a coin to either left or right and test by moving your tone arm to the

middle of the spindle. Please note that this screw is a balancer and will have to be adjusted until the tone arm moves freely to the end of the record (middle of the spindle) without any resistance

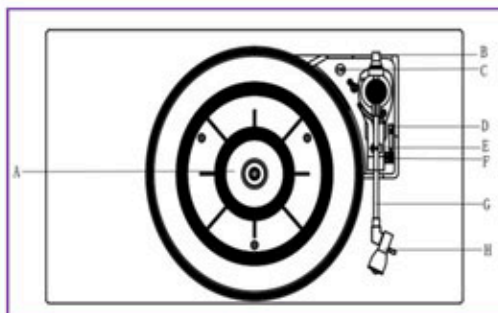

- before using the turntable phonograph.
- D. **Cue-lever.** Use this lever to lift the tone arm.
- E. **Tone Arm holder.**
- F. **Speed Selector.**
- G. **Tone Arm.** Before use, completely loosen the fixed rope on the tone arm and lift the tone arm up.
- H. **STYLUS**

## REMOTE CONTROL



1. **MODE:** Press to select between the different functions such as the FM Tuner, AUX, CD player, Bluetooth and Phonograph.
2. **POWER:** Push to turn the unit on or off.
3. **STOP:** Press to stop playback or cancel the program setting.
4. **PREVIOUS TRACK:** In CD Mode, press once to skip to the previous track. Press and hold to fast rewind/In Standby mode, press to set the time/In BLUETOOTH Mode, press to skip to the previous track. / In Radio Mode, press to manually tune to a desired station or press and hold this button to auto search a station.
5. **PROG:** In CD stop mode, Press to set the program playback / In Standby mode, press and hold this button to into time set mode.
6. **REPEAT:** In CD/MP3 play mode, press to repeat/random songs.
7. **SCAN:** Press to automatically search and save radio stations.
8. **ST/MONO:** Stereo / Mono Selection in Radio Mode
9. **OP-CL/MEM:** Press to Open/Close CD Tray and to use the Memory Function while using the Radio.
10. **PLAY/PAUSE:** In CD/ BLUETOOTH mode, press to play or pause playback
11. **VOL-:** Reduce Volume, press the button repeatedly or press once and hold down until you reach the desired volume level.
12. **VOL+:** Increase Volume, press the button repeatedly or press once and hold down until you reach the desired volume level.
13. **NEXT TRACK:** In CD Mode press to skip to the next track. Press and hold to fast forward/ In Standby mode, press to set the time./In BLUETOOTH Mode, press to skip to the next track./ In Radio Mode, press to manually tune to a desired station or press and hold this button to auto search a station.
14. **FOLDER-:** Press to select previous Folder
15. **FOLDER+:** Press to select next Folder
16. **EQ:** Press to change the Equalizer setting. Equalizer settings preloaded on to the Unit are Pop (POP), Rock (ROC), Classical (CLA), Jazz (JAZ), and Flat (FLA)
17. **PRE-:** Press to listen preset station, In program mode, press to select preset station number.
18. **PRE+:** Press to listen preset station, In program mode, press to select preset station number.

The Remote Control Unit can operate the unit from a distance. When operating the remote control unit, point it towards the front panel of the unit.

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

#### TO ACTIVATE THE REMOTE CONTROL:

The remote control is built with cell battery before shipment. To activate the battery, remove the transparent plate at the bottom of the remote control.

 


Now the remote control is ready to use.

**BATTERY REPLACEMENT:** If the distance required between the remote control unit and main unit decreases, the battery is exhausted. In this case, please replace the battery with new one.

#### TO REPLACE WITH A NEW BATTERY:

1. Remove the battery compartment cover as per illustration on the right.
2. Observing the correct polarity and put a 3Vdc lithium battery (CR2025).



3. Close the cover.

#### Battery Precautions:

- Be sure to insert the battery with correct positive + and negative - polarities.
- Refer to the precautions on the battery labels.
- When the remote control unit is not to be used for a long time (more than a month), remove the battery from the remote control unit to prevent it from leaking. If it leaks, wipe away the liquid inside the battery compartment and replace the battery with new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.
- Purchase the correct size and grade of cell or battery most suitable for the intended use.



- Keep cells or batteries clean and dry both during use and storage. Wipe metal terminals with a soft, dry cloth if they become dirty.
- Retain original product literature for future reference.
- Only use the cell or battery in the application for which it was intended.

## General Operation

### GETTING STARTED

1. Plug unit's AC cord to AC Wall Outlet.
2. Push the large, red "ON/OFF" Main Power Button to turn on the unit.
3. Press the small, red ON/OFF button to use the unit.



### LED LIGHTING EFFECTS

1. To turn on/off the LED lighting effects simply press the LIGHT button located on the front of the unit.
2. Switch Light Mode located on the back of the unit to PLAY to have the colors gradually change or to HOLD to have one steady color.

NOTE: The lighting effects operate independently of the ON/OFF button.



### SETTING THE TIME

1. Press and hold (3-5 Seconds) the PROG button on the front of the unit, the "12-H" on the LCD Display will blink, then press the ◀◀ or ▶▶ button to Switch from "12-H" to "24-H".
2. Press the PROG button to confirm and the Hour Time will blink, press the ◀◀ or ▶▶ button until you get to the correct hour.
3. Press the PROG button to confirm and the Minute Time will blink, press the ◀◀ or ▶▶ button until you get to the correct Minute, press the PROG button to confirm.

NOTE: The time will only be saved when the unit is ON or in Standby Mode, if you want the time to be saved do not turn off the main power button.

### LINE OUT OPERATION (FOR EXTERNAL SPEAKERS ONLY)

NOTE: LINE OUT ON THE BACK OF THE UNIT SHOULD BE SWITCHED TO THE "OFF" POSITION TO USE THE UNIT'S BUILT-IN STEREO SPEAKERS.

- 1 Switch Line Out to "ON" position.
2. Use the left/right channel to connect your external, more powerful speakers.

NOTE: 1. When Line Out is ON, no sound will play from the unit's speakers.

## Listening to a CD/MP3

1. Press the "MODE" button to select CD mode. The unit will display the "CD"
2. **Note:** When no disc is set, "no disc" will appear on the display.
3. Push the CD door to open the tray.
4. Place a disc on the tray with the printed label facing outward, then close the tray.
5. The unit will automatically start playing from the first track.
6. To temporarily pause playback, press the **▶||** button. Press again to resume.
7. To skip tracks backward or forward, press the corresponding skip button **◀◀** or **▶▶**. Pressing **◀◀** will return to the beginning of the previous track. Pressing **▶▶** button to skip to the next track.
8. To fast forward / rewind within a track, press and hold down the corresponding skip button until the desired position is reached.
9. Press F-10 button to skip to 10 previous tracks
10. Press F+10 button skip to 10 next tracks
11. To stop playback, press the STOP **■** button

### **Important:**

- Never place more than one disc on the tray.
- The disc must be placed in the center of the disc tray. An incorrectly loaded disc can permanently damage the tray door mechanism.
- It takes a moment for the unit to load a disc, during which all buttons will be temporarily deactivated.

### **Repeat/Random Playback**

Each time the REP button is pressed, the repeat / shuffle mode will cycle through the following options:

#### **REPEAT 1(Repeat one track)**

The current track will be played repeatedly. If you select another track, the track you select will be play on repeat.

#### **REPEAT FOLDER (Repeat folder Only in MP3)**

The current folder will be played repeatedly.

#### **REPEAT ALL (Repeat the entire CD)**

The entire CD will be played repeatedly.

#### **SHUFFLE PLAY (Shuffle through the entire CD)**

The entire CD will be played randomly.

### **Notes:**

- Press REP button, the repeat mode will be cancelled.

### **Programmed Playback**

Program play must be set when the CD is stopped. You can program up to 20 tracks on a CD.99 tracks on MP3.

### **Notes:**

- Programmed playback works with finalized disc only.

1. Press MODE button to select CD mode, then load a CD.
2. While the CD is stopped, press the PROG button.
3. PROGRAM indicator will blink, and P01 will appear on the display.

 
4. Press ◀ or ▶ to select a track number.
5. Press the PROG button again to set the current track.
6. P02 will then be displayed. Repeat steps 4 thru 5 to program the additional tracks.
7. When the selection of track numbers has been finished, press the ▶|| button to start program playback.
8. To cancel the program mode, press the STOP ■ button once.  
(Note: when all 20 program tracks are set, press the PROG button and "FULL" will appear on the display as a notification that you've filled all 20 programmable tracks.)

## Listening to a Vinyl Record

### Installation of the Counter weight

As with all quality turntables built to utilize aftermarket cartridges, the weight of the cartridge must be balanced with a counter weight to allow accurate setting of the cartridge's downward force.

1. The first step is to insure a level, stable surface for your new turntable and move the tone arm gently to the record.
2. While carefully securing the tone arm from movement and protecting the stylus from damage; gently glide the counter weight with the numerals facing forward onto the rear of the tone arm.
3. Rotate the weight in a clockwise fashion from the perspective of the end of the arm opposite of the cartridge until the threads are just engaged.
4. With the tone arm lift lowered and the stylus protector removed, seek to instill a state of equilibrium in the arm by rotating the counterweight so that balance will be achieved in the form of a tone arm that is level and free from interference.
5. The next step is to create a reference to this position by rotating the numerically enhanced ring at the front of the counterweight to indicate "0" at the top position in alignment with the mark on the tone arm while holding the rear portion of the counterweight to prohibit its movement.
6. Finally, from this "0" reference place, grasp both the front and back of these two parts of the counterweight and set the weight to indicate "3.5" on the dial to align with the marking on the top of the tone arm. This will indicate 3.5 grams of downward force, the recommended tracking weight for this cartridge.

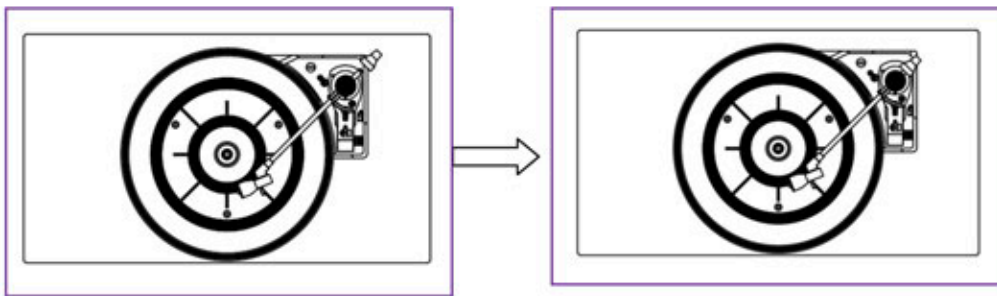


**NOTE:** The balance weight is to adjust the pressure of the needle. If the pressure is too much, the sound will become distorted; if the pressure is too little, track skipping will easily happen. Please adjust the balance weight by turning the balance weight clockwise or counter-clockwise.

#### LISTENING TO RECORDS

 1. Press MODE button to select PHONO Function.
2. Gently open the top cover.

**Note:** Be carefully not to pinch your finger when opening/closing the top cover.

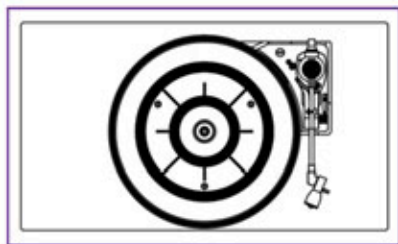

3. Place a vinyl record on the turntable. When playing a 45 RPM record, use the included adaptor.
4. Select the appropriate speed.



5. Gently push tone arm clip to the right to release the tone arm.
  6. Raise the cue lever to lift the tone arm off the tone arm support.
  7. Move the tone arm gently to the edge of the record (or the starting point of a track). The turntable will begin to turn.
  8. Gently lower the tone arm by slowly releasing the cue lever.
  9. When the record reaches to its end, tone arm and rotation stop. Lift the tone arm and place it to tone arm rest manually.
- Note:** It will take approximately 20 seconds for tone arm to return to its holder when playing a 78 rpm record.

**Important:**

- Closing the top cover will help prevent dust from settling on the turntable.

- Always relock the tone arm clip before transporting the unit.
- Do not place anything on top of the turntable cover, especially while playing a record.
- Remove the needle cover before you balance the tone arm
- Hold tone arm whenever you make any adjustment or action so as to protect the tone arm.
- Do not try to adjust the balance weight while playing a record as this could break the needle and scratch the record.
- Remove the balance weight before transportation to prevent damage or breakage to the unit..

## Listening to FM Radio

1. Press the MODE button to select the FM tuning function.
2. Press the  $\leftarrow$  or  $\rightarrow$  button to manually tune to a desired station
3. You may also press and hold the  $\leftarrow$  or  $\rightarrow$  button to auto scan for a station.
4. Press the SCAN button to auto scan and save the stations, it can save 20 FM stations.
5. Press the ST/MONO button to select stereo or mono mode, when you select mono mode, the display show "ONO".
6. Using the PRE+ or PRE - button you can scan through your preset stations. (See how to preset a station in the section below.)

### Adjusting for Best Reception

*FM broadcast: Extend and reposition the FM antenna located on the back of the unit.*

### **Preset Tuning**

You can preset and store up to 20 FM radio stations.

1. Select your desired FM station.
2. Press the PROG button or press the OP-CL/MEM button on remote control and the display show P01.
3. Press "PRE+" button or "PRE -" button to select the preset station from P01 to P20, using the "PRE+" or "PRE -" button to choose through the range.
4. Press the PROG button or press the OP-CL/MEM button on remote control to confirm.
5. According to the above way, you can store 20 stations in FM.

## Listening to an External Audio Device (Auxiliary Mode)

*In AUX (auxiliary) mode, this unit can play audio from an external audio device (iPod, MP3 Player, Portable CD Player, etc.)*

### CONNECTING VIA AUXILIARY

1. Press the MODE button to select the AUX-IN function.
2. Plug the AUX Cord located on back of the unit into your iPhone/iPod or other MP3 device.

*NOTE: Playback functions and operations are only available on your external device.*

## Listening to an External Audio Device (Bluetooth Mode)

*In BT (Bluetooth) mode, this unit can play audio from external devices that have a built-in Bluetooth function.*

### CONNECTING VIA BLUETOOTH

1. Press MODE button to select the Bluetooth mode.
2. Turn ON the Bluetooth function on your external device.

**NOTE:** *The effective distance between your external device and this apparatus is 10 meters.*

3. Wait a moment until "Voctrola Jukebox" appears on the paired devices list, then select "Voctrola Jukebox" and allow it to connect. *If a window appears and asks for a password, simply type "0000", then press ok on your external device.*
4. *Once the pairing is completed, an audible beep will sound.*
5. Control playback from the unit/remote control or Bluetooth device.
6. To disconnect, press "MODE" button to other functions or turn off the Bluetooth connection from the Bluetooth device.

## Maintenance / Proper Handling

### Compact Disc Handling

- Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recorded only on one side)
- To remove a disc from its storage case, press down on the center of the case and lift the disc upward, holding it carefully by its edges.
- To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
- Never use such chemicals as record spray, antistatic sprays or fluid, benzine or thinner to clean discs; they will irreparably damage the disc's plastic surface.
- Discs should be returned to their cases after use to protect from dust and scratches.
- Do not expose discs to direct sunlight, high humidity, or high temperature for extend periods of time.
- Printable CD-R and CD-RW discs are not recommended, as the label side may become sticky and damage the unit.
- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as doing so may damage the recorded side.
- Do not use irregularly-shaped CDs (octagonal, heart shaped, business card size, etc), as they will damage the unit.
- Read all precautions supplied with any CD-R or CD-RW disc
- Never handle a disc with dirty fingers.
- Never insert a disc that has a crack on the surface.

## Specifications

### GENERAL

Power Requirements .....	AC 120 V~ 60 Hz
Power Consumption .....	150W
Dimensions (W x H x D) .....	640mm x1260mm x320mm(approx.)
Weight .....	7 kgs (approx.) ? lbs

### AMPLIFIER

Output Power .....	25W+25W+50W(subwoofer)
Frequency Response .....	60 to 20, 000 Hz

### SPEAKER SYSTEM

Type .....	1-way
Impedance .....	8 ohms(tweeter), 4 ohms (L&R) 4ohms(subwoofer)

### FM Radio

Range .....	88 to 108 MHz
-------------	---------------

### CD PLAYER

Frequency Response .....	60 to 20, 000 Hz +/-4 dB
Signal-to-Noise Ratio .....	55 dB (IEC-A)

### BLUETOOTH

Bluetooth Version .....	Bluetooth V2.1+EDR
Bluetooth Profiles .....	A2DP, AVRCP
Bluetooth Frequency range .....	2.402GHz-2.480GHz
Operating Distance .....	10 meters (33 ft.)

## Troubleshooting Guide

	Symptom	Possible Cause	Solution
<b>GENERAL</b>	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
<b>FM RADIO</b>	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.

	<ul style="list-style-type: none"> <li>The sound is distorted.</li> </ul>	<ul style="list-style-type: none"> <li>The antenna is not oriented properly.</li> </ul>	<ul style="list-style-type: none"> <li>Re-orient the antenna until reception improves.</li> </ul>
<b>CD PLAYER</b>	<ul style="list-style-type: none"> <li>CD stops immediately after starting, or unit pauses or stops during play.</li> </ul>	<ul style="list-style-type: none"> <li>The CD is inserted upside down.</li> <li>The CD is dusty or dirty or there is condensation on the CD.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the CD with the printed side right-side up.</li> <li>Carefully clean and dry the CD.</li> </ul>
	<ul style="list-style-type: none"> <li>No sound.</li> </ul>	<ul style="list-style-type: none"> <li>The CD player is paused.</li> </ul>	<ul style="list-style-type: none"> <li>Press the PLAY/PAUSE button.</li> </ul>
	<ul style="list-style-type: none"> <li>CD playback is noisy, or playback stops or skips.</li> </ul>	<ul style="list-style-type: none"> <li>The CD is scratched, damaged or warped.</li> <li>The disc is very dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Replace CD with an undamaged one.</li> <li>Carefully clean the CD.</li> </ul>
	<ul style="list-style-type: none"> <li>Buttons are not functioning correctly.</li> </ul>	<ul style="list-style-type: none"> <li>The unit is processing information</li> <li>The unit needs to be restarted</li> </ul>	<ul style="list-style-type: none"> <li>Wait until the unit finishes processing.</li> <li>Turn the unit off, then on again.</li> </ul>
<b>AUX</b>	<ul style="list-style-type: none"> <li>No sound output with external audio device plugged into rear AUX in jack.</li> </ul>	<ul style="list-style-type: none"> <li>AUX in jack is unplugged.</li> <li>Unit is not in proper Mode</li> </ul>	<ul style="list-style-type: none"> <li>Make sure the Auxiliary Cable is plugged into your sources.</li> <li>Select proper AUX mode</li> </ul>
<b>BLUETOOTH</b>	<ul style="list-style-type: none"> <li>No sound</li> </ul>	<ul style="list-style-type: none"> <li>The unit is not switched to Bluetooth mode</li> <li>Your device's and/or the unit's volume is not turned up.</li> <li>Your device is too far from the unit or there're some obstacle between your device and the unit</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the unit is switched to BT mode.</li> <li>Move your Bluetooth device closer to unit</li> <li>Turn up the volume on your portable device and/or the unit.</li> <li>Turn OFF your Bluetooth device and unit. Then power them both back ON</li> </ul>
	<ul style="list-style-type: none"> <li>Sound has a lot of static</li> </ul>	<ul style="list-style-type: none"> <li>Your device is too far away</li> </ul>	<ul style="list-style-type: none"> <li>Bring your device closer to the Jukebox</li> </ul>
	<ul style="list-style-type: none"> <li>Unable to pair with a Bluetooth device</li> </ul>	<ul style="list-style-type: none"> <li>Your device doesn't have Bluetooth connectivity.</li> <li>The Bluetooth pairing is not successful</li> </ul>	<ul style="list-style-type: none"> <li>Confirm that your device is Bluetooth compatible.</li> <li>Re-pair the unit and device again.</li> </ul>
<b>PHONO</b>	<ul style="list-style-type: none"> <li>Decline in turntable audio performance</li> </ul>	<ul style="list-style-type: none"> <li>The turntable stylus is worn out</li> </ul>	<ul style="list-style-type: none"> <li>Replace the stylus.</li> </ul>



## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

## IC Statement

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the

radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

### California PROP 65 Warning

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address:

<http://www.oehha.ca.gov/prop65.html>