

Safety Instructions


Please store this instruction manual for future reference.

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- **Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take his product for environmental safe recycling.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- In the rare event you experience an error, unplug the power cord for 60 seconds and then plug it back in firmly.

Top view

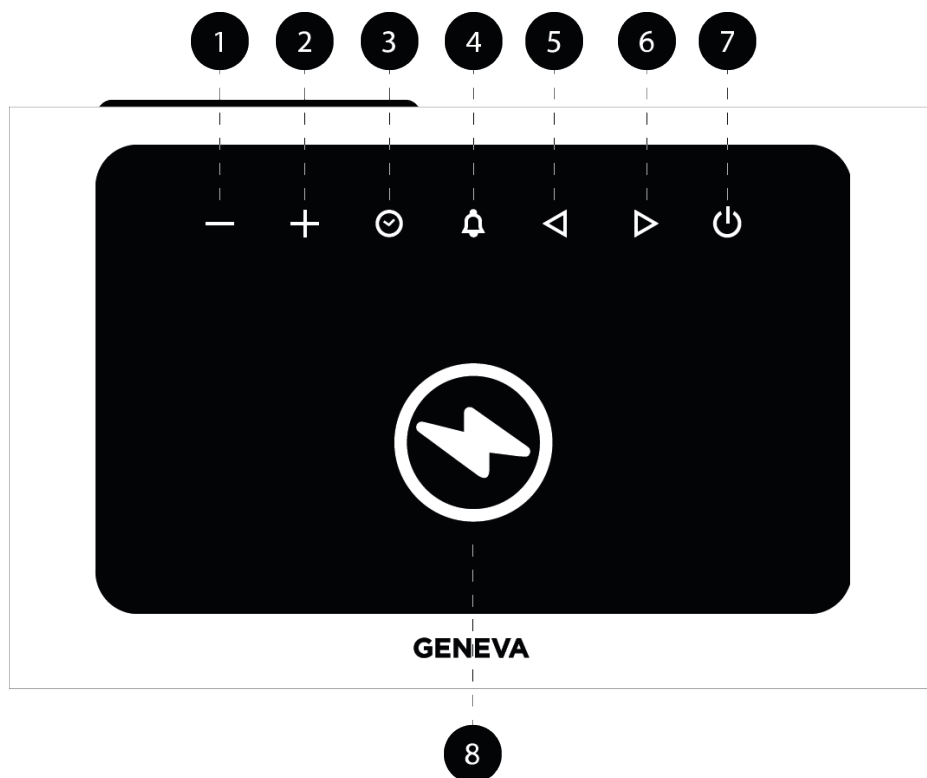

1. Volume down
 - Adjust time (clock mode, alarm mode).
2. Volume up
 - Adjust time (clock mode, alarm mode).
3. Set Clock.
4. Set Alarm Time
5. Previous track
 - Set minutes / set hours (clock mode, alarm mode)
6. Next track
 - Set minutes / set hours (clock mode, alarm mode).
7. On/Off/Bluetooth Mode/Line-In Mode/Clock Mode toggle.
8. Wireless charging zone.

Front view



1. Status LED:


Blue color in Bluetooth Mode.

Red color in Line-In Mode.

OFF in Clock Mode.

2. LED display.

Back panel

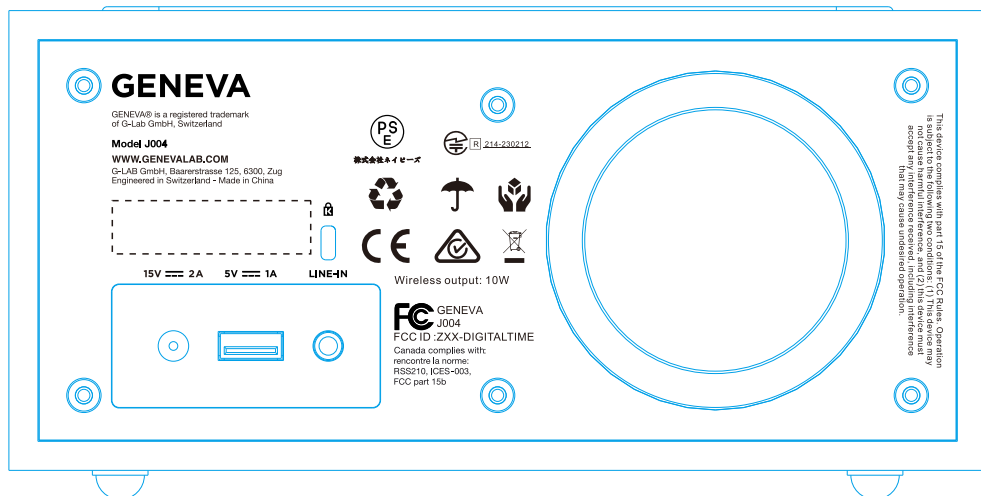

1. Kensington® lock.
2. AC-DC adapter connection.

NOTE: Use only the supplied AC-Adapter.

3. USB charger port. Max output is 5V - 1A.

NOTE: This connector supports charging only. Max. output is 5V - 1A.

4. Line-In connector, 3.5 mm.

Getting started

Geneva Time/Digital is a digital alarm clock with Bluetooth speaker, Line-IN/AUX capabilities, wired and wireless charging.

IMPORTANT NOTES:

1. The alarm clock has its own ringtone. The Bluetooth and Line-In/AUX inputs cannot be used as alarm signals.
2. The speaker works only when the AC adapter is connected.
3. Wireless charging and wired charging only work when the AC adapter is connected.
4. Wireless charging will only work with devices that are compliant with wireless charging.
5. Wireless charging speed may be reduced by smartphone covers: the greater the distance between the Geneva Time/Digital charging cells and the smartphone, the slower the charging speed.

On/Off/Modes




Press  3 seconds to switch on Geneva Time/Digital.

Geneva Time/Digital has 3 operation modes:

CLOCK MODE:

The current time is shown on the display, the alarm can be set ON and OFF, LED is off.

To set clock time:

- Press  3 seconds to enter clock mode.
- use - and + to set minutes.
- press  to toggle between hours and minutes.
- use - and + to set hours.
- press  3 second to store the clock.

LINE-IN MODE:

The current time is shown on the display, the alarm can be set ON and OFF,

the LED colour is RED.


The message “Line-In mode” is played from the speaker.

NOTE: Adjust the volume on your device and on Geneva Time/Digital using the - and + buttons. This will give you the best possible listening experience.

BLUETOOTH MODE:

Before pairing, make sure your device supports Bluetooth and that your device is not connected to another Bluetooth product.

Some devices may pair differently. Below is a general guide.

1. Press  until “Bluetooth mode” message is played from the speaker:
 - LED flashes in blue color.
 - Display displays “b” and 4 digits referring to the unique name of the Geneva Time/Digital, e.g: “GenevaTime/Digital1234”.
2. Select “GenevaTime/Digital1234” when it appears on your device screen to initiate pairing.

Some devices may ask you to enter a PIN. If so, enter “0000”. The message “Connected” is played from the speaker.
3. You can start listening to your music wirelessly.

Adjust the volume level on your device or on Geneva Time/Digital using the - and + buttons. The volume level is automatically synchronised.


IMPORTANT NOTE: Geneva Time/Digital will switch off after approximately 15 minutes if no music is played.

Once your device is paired with Geneva Time/Digital, you can skip tracks using the ◀ and ▶ buttons. Geneva Time/Digital will pair automatically each time your device is available.

In order to connect a new device, you must first disconnect the device you are playing. The message “Disconnected” is played from the speaker.

Set Alarm

Geneva Time / Digital has a proprietary ringtone.

To set alarm clock , long press  . “A” flashes on display.

- use - and + to set minutes.
- press ▶ to toggle between hours and minutes.
- use - and + to set hours.

- long press 🔔 to store alarm clock time.
Alarm is now ON. The display shows “A”

Press 🔔 to set alarm on and off

SLEEP MODE

Geneva Time/Digital does not have a sleep mode, but it will automatically switch to stand-by mode after 15 minutes if no sound is being played.

SNOOZE

When the alarm rings, you can either:

- press 🔔 to set a snooze time of 5, 10, 15 or 30 minutes. Each press increases the snooze time.

The display shows: “t 05, t 10, t 15, t 30”.

The snooze time can be increased/decreased by pressing 🔔 during the snooze interval.

- Long-press for 1 second to cancel the alarm.
“A” disappears from the display.

Wireless Charge

The Geneva Time/Digital is equipped with a wireless charging zone .

Display dimming

Geneva Time/Digital’s light sensor automatically dims the LED intensity.

To manually adjust the brightness of the LED display:

- press ▶ 5 seconds: LED displays “Auto” for automatic dimming.

- Use ◀ and ▶ to adjust the LED brightness.

LED shows 1,2,3 dots each time the button is pressed.

- Press ▶ 5 seconds to save the setting.

NOTE: The brightness setting will revert to automatic when:

- the power supply is disconnected.

- Geneva Time/Digital is turned

Technical Information

Model: J004 - Geneva Time/Digital

Type: Digital alarm clock with Bluetooth speaker

Power Supply: 15V/2A

Dimension (mm): 195W x 95H x 138D

Weight: 1.25 KG

Specifications are subject to change without notice

AUTION: Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Product disposal instructions (weee directive)



The symbol shown here and on the product means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life. The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill. For more information please contact your local authority or the retailer where the product was purchased.

