

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this device near water.
6. Only clean with a dry cloth.
7. Do not block any vents. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and the point where they exit from the device.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.
13. Unplug this device during lightning storms or during long periods of disuse.
14. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug damages, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and maintain well-ventilated conditions. The ventilation should not be impeded by covering the vents with items such as newspaper, table-cloths, curtains etc.
16. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the device.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on the apparatus.
18. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Only replace with the same or equivalent type.
19. **WARNING:** The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunshine, fire or the like.
20. **WARNING:** The mains plug/appliance coupler is used as a cut-off device, the cut-off device should remain readily operable.
21. **Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**Batteries in the remote control:** Keep the remote control battery away from children. It may cause a fire or chemical burn if mis-handled. Do not recharge, disassemble, heat above 212°F (100°C). Replace only with a battery of the correct type and model number (CR2025 lithium coin cell battery, 3 V).

**⚠ WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD**  
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**Operating Temperatures:** 5 – 40 deg °C / 41 – 104 deg °F



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: RISK OF ELECTRIC SHOCK, DO NOT OPEN**  
**ATTENTION: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR**

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

⚠ This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

⚠ The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

⚡ Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.

**FCC Regulations Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules. FCC ID: ZXX-MODELMBT (ZXX: Grantee Code, assigned by the FCC.)

**Canada** This device complies with Industry Canada licence - exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Industrie Canada (IC): Nr. 10107A-MODELMBT

## CE Conformity

G-Lab GmbH declares that this device complies with the essential requirements and other relevant provisions of European Directive 1999/5/EC. The declaration of conformity may be consulted upon request to G-Lab GmbH, Zurich, Switzerland or on <http://genevalab.com>.

# CE 0979

**This product can be recycled.** Products bearing this symbol must NOT be discarded with normal household waste. At the end of the product's life, take it to a collection point designated for recycling of electrical and electronic devices. Find out more about return and collection points through your local authority.

## The European Directive on Waste Electrical and Electronic Equipment (WEEE)

was implemented to dramatically reduce the amount of waste going to landfills, thereby reducing the environmental impact on the planet and human health. Please act responsibly by recycling used products. If this product is still usable, consider giving it away or selling it.

**Used batteries:** Please dispose of used batteries properly, following the local regulations. Do not place the battery in fire.

Geneva® is a registered trademark of G-Lab GmbH.

Apple®, iPod®, iPhone® and iPad® are trademarks of Apple Computer, Inc. registered in the U.S. and other countries.

The EmbracingSound® trademark is owned by Embracing Sound Experience AB.

The Bluetooth® word mark and logos are registered Trademarks owned by Bluetooth SIG, Inc.

© 2013 G-Lab GmbH. Manual for Geneva Sound System, Model M (with Bluetooth) & Model M DAB+ (with Bluetooth), Version v0.1.

 


# OVERVIEW

## AUDIO SOURCES


You can play music from the following audio sources:

- FM Radio
- DAB Radio (available only for Model M DAB+)
- Mobile phone or computer via Bluetooth
- Other devices with a Line-In cable

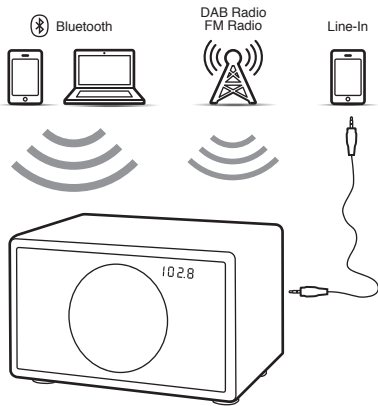

## GETTING STARTED

 1. Remove the protection paper from the remote control battery compartment.

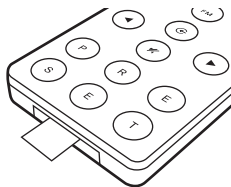

2. Connect the enclosed external telescopic antenna. Connect the AC power cable to the AC power plug on the back panel.

## REMOTE CONTROL



	Power On / Off
	Volume control
	Bass control
	Treble control
	Bluetooth
	FM
	DAB
	Set time
	Set alarm time
	Alarm On / Off
	Line - In
	DAB & FM frequency, alarm
	Mute, Mono / Stereo (FM)
	P R E S E T DAB / FM presets

## TOUCH PANEL

### Model M

	Power On / Off					
	Volume +					
	Volume -					
	Eject					
	Mode: Select FM, DAB, Bluetooth, Line-In					
	Forward					
	Reverse					

## USING THE Model M

### SELECTING THE AUDIO SOURCE

The audio source can either be selected with the **touch panel key M** or the **remote control keys FM, DAB, (line-in icon) and (bluetooth icon)**.

#### FM RADIO

1. Touch **MODE** on the remote control until the display shows an FM frequency or touch **FM** on the device.
2. Select a FM station with ◀ and ▶:
  - Use a single touch: change frequency by 0.1 MHz.
  - Hold down for a short time: automatically search for another station.

#### Storing a radio station with the presets

1. Select your favorite radio station using the ◀ or ▶ key on the remote control or on the touch panel.
2. Select one of the 6 preset keys on the remote control, and keep pressing it until the corresponding letter on the display starts blinking. The station has now been stored.

#### Using the presets

Press one of the preset keys to recall a radio station.

### DAB / DAB+ (MODEL M DAB+ ONLY)

1. Touch **MODE** on the remote control until the display shows DAB or touch **DAB** on the device.
2. Select a DAB station with ◀ and ▶.

Model M DAB+ is compatible with **DAB, DAB+, DMR and DMB**.

#### Scan function

When using your Model M for the first time, the radio needs to find available radio stations in your region (done by using the "Scan" function). After a scan, the stations will be automatically stored.

- Within 5 seconds of entering DAB mode, hold down the ▶ button until "Scan" displays.

"Scan" is also needed after traveling to a new location with different radio stations, or when you move the radio to a different room where there is different radio reception.

### BLUETOOTH

Mobile phones and computers with Bluetooth can connect to the Model M and play music. The mobile phone or computer must support Bluetooth A2DP.

#### Initial Setup ("Pairing") With iPhone®

1. Press the ✱ key on the remote control.
2. Select "Settings" on your iPhone®. Select "General / Bluetooth". Turn on Bluetooth. New Bluetooth devices are detected automatically. After a few seconds "GENEVA M (Not Paired)" will appear.
3. Select "GENEVA M". The phone is now connecting ("P" or "Pairing") to the Model M.
4. If the phone asks for a PIN: enter "0000" (four zeros).
5. Now you can play music on an iPhone® and listen to it on the Model M.

### Playing Music

Most phones connect automatically to the Model M after the initial setup ("Pairing").

1. Press the ✱ key on the remote control.
2. Play music on the mobile phone, music will start playing on Model M automatically.

#### Pairing guides for other devices and mobile phones

Go to [www.genevalab.com](http://www.genevalab.com) and select "Support."

#### Status information on the display

**S/Search:** Searching previously paired devices.

**C/Connect:** Connection successful.

**P/Pairing:** If Model M did not make a successful connection within 20 seconds, Model M will go into the pairing mode for 2 minutes.

### LINE-IN

1. Connect one end of a Line-In cable to the Line-In plug on the back of Model M. Then connect the other end to the audio device (headphone or Line-Out plug).
2. Press **C**, the display shows "Line".

### ALARM

#### Setting the alarm

1. Touch **⌚**, "A" starts blinking on the display.
2. Set the desired alarm time using ◀ and ▶.
3. Touch **⌚** again to save the alarm time. "A" indicates alarm is now on.
4. Touch **⏻** to turn Model M off.

#### Turning the alarm On and Off

1. Turn on Model M, then touch **▲** to toggle the alarm. "A" (Model M) or "ON" (Model M DAB+) indicates that the alarm is on.
2. If the device is off, the alarm can also be toggled by touching any key on the touch panel.

#### Muting the alarm

Touch any key on the touch panel to mute the alarm. The alarm will automatically turn off after 2 minutes if no key on the touch panel is touched.

#### Selecting the alarm sound

There are two alarm sounds: radio and a beeping sound. If you set the alarm and the current mode is FM or DAB, the FM or DAB radio will play when the alarm goes off. Otherwise the beeping sound is used.

#### Setting the clock manually

1. Touch **⌚**: "C" starts blinking on the display.
2. Use ◀ and ▶ to set the time.
3. Touch **⌚** to complete the procedure.

#### Model M DAB+ sets the time automatically.


Every time Model M DAB+ gets a valid time signal from a DAB station, it will set the time automatically. If there are no DAB stations, the time has to be set manually.

#### Model M (US Version): AM/PM Display

 
The dot to the right of the minute digits indicates AM or PM: Off=AM, On=PM.

## TROUBLESHOOTING

### The Model M does not turn on when I touch the button.

Touch  with one finger only. Don't touch the rest of the touch panel with other fingers. The touch panel works properly when used with one finger only.

### What do the Bluetooth settings look like on the iPhone®?

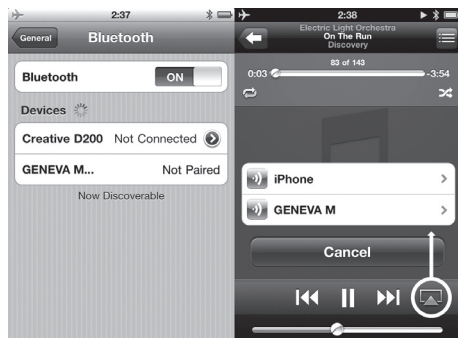

Settings on iPhone®

Playing


### Why is my mobile phone not connecting?

Please check the Support pages at [genevalab.com](http://genevalab.com).

### How do I reset Bluetooth?

Up to eight paired Bluetooth devices can be stored.

To clear the memory, perform the following steps:

1. Select Bluetooth on Model M.
2. Within 5 seconds of entering Bluetooth mode, hold down the  button until "RESET" displays.
3. Pair your mobile phone again.

### What is the PIN for a Bluetooth connection?

 
The PIN is: 0000 (4 zeros). Not all computers or mobile phones require a pin code during initial setup (Pairing).

### I have an unreliable connection with dropouts when listening via Bluetooth.

- Move the mobile phone closer to the Model M.
- Move away or turn off other wireless devices that can disturb a Bluetooth connection (for example WLAN/Wifi, other mobile phones etc.).

### How can I change the remote control battery?

1. Push the small lever in the direction of the arrow with your finger or a small screwdriver.
2. While holding the small lever, slide out the battery compartment
3. Replace the battery (3V lithium cell, 3V CR2025). Verify that the battery is inserted with the right polarity (+ side is facing down).

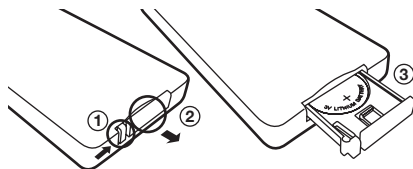

### How can I erase or overwrite a preset?

Stored presets do not need to be erased — just use the steps to store a new station in a preset.

### Which DAB standards are supported?

DAB, DAB+, DMR and DMB.

- Band 3: 5A...12D (174.928 MHz...229.072 MHz).
- Kanal 13: 13A...13F (230.784 MHz...239.200 MHz).

### How can I verify that the remote control works?

Every time a key is pressed on the remote control, a small red light on the display lights up quickly.

### How is it possible to hear the stereo from only one speaker?

EmbracingSound® is the stereo sound technology that makes you hear more dimensions of your media library than ever before. The core of the EmbracingSound® technology is to integrate all speakers in a tailored single box and by using a unique High Definition Up-Mix engine, all dimensions in your content is enabled.

Find out more at [www.embracingsound.com](http://www.embracingsound.com).

### How do I clean the device?

Use a soft, dry cloth to avoid scratching the surface. Do not use cleaning alcohol, or other solvents to clean the Cabinet surface as this can both damage the lacquer and cause electrical failures. Before cleaning, unplug the device from the AC power outlet.

## SUPPORT

### More information and additional troubleshooting

Check the "Support" pages at [genevalab.com](http://genevalab.com).

### Service and repair

If the product is damaged and needs repair, please contact your dealer. Visit [genevalab.com](http://genevalab.com) to find a dealer in your area.

### Warranty

See the specific terms for your country at [genevalab.com](http://genevalab.com).