


MOTION

MANUAL CM-13

Hand-held remote 15 channel

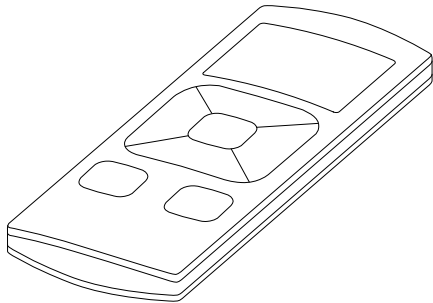

CM-13 is a hand-held remote with 15 channels for operating and programming blinds at the push of a button. Blinds can be moved to any desired position or to a preset favourite position. The wall mounting clip for this remote control is included by default.



For the latest information and updated manuals, visit rtube.nl/cm-13

Channels	Max. blinds	Frequency	Range	Frequency emission power	Power supply	Length	Width	Height	Working temperature	Certificates
15	unlimited	433.925 MHz	30 m with 1 concrete wall	≤2.32dBm	CR2430 3.0V	120 mm	45 mm	14 mm	-10°C~50°C	CE

Safety

WARNING: Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.

- Do not let children play with the blind and/or remote control.
- Take care that the blind can move freely and is not blocked by any objects.
- Do not paint the device.
- Keep the device dry.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards.
- Do not ingest battery, "Chemical Burn Hazard" or equivalent wording
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Cleaning

Follow these general rules when cleaning the outside of the device and its components:

- Use a damp, soft, lint-free cloth. Avoid getting moisture in openings.
- Do not use aerosol sprays, solvents, alcohol, or abrasives.

Service & Support

Do not perform repairs yourself. Do not attempt to open the device or disassemble it. You run the risk of electric shock and voiding the limited warranty. No user-serviceable parts are inside.

Warranty Service

First follow the advice in this manual. If the product appears to be damaged or does not function properly, go to your local dealer for instructions on how to obtain warranty service.



Recycle

This marking indicates that this product should not be disposed with other household wastes throughout the EU.

■ To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

EU Declaration

Hereby, Coulisse declares that the radio equipment type CM-13 is in compliance with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.my.coulisse.com

FCC Manual | FCC ID ZY4CM13

Regulatory Information

1 FCC Information for User

This product does not contain any user-serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals.

2 FCC Electronic Emission Notices

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

3 FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference at their own expense.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the distance separating the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help




1 Buttons/control

i The center button has two functions: press to stop the blind, hold to move the blind to its favorite position.

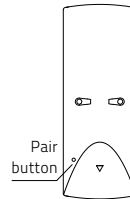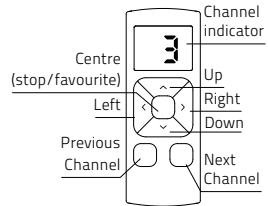

2 Changing the battery

 

i The battery indicator will show when the battery needs to be replaced.

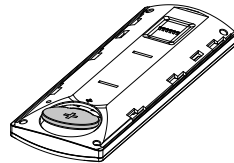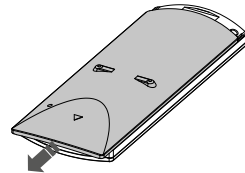

2. CHANGING THE BATTERY


3 Remote holder

 i Different materials require different types of fittings. Always choose screws and plugs that are specially suited to the material.

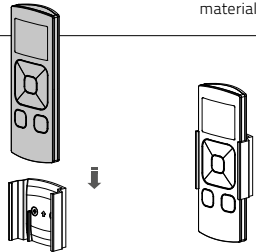

3. REMOTE HOLDER

4 Pair a remote

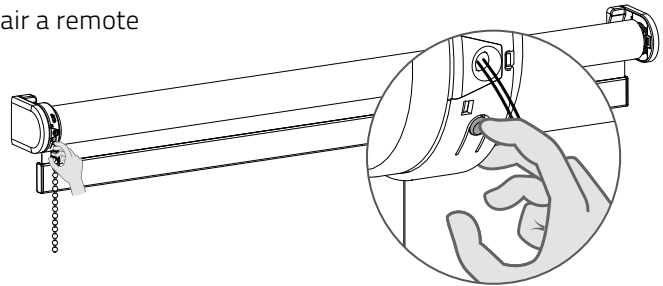


4. PAIR A REMOTE

4.1 Shortly press the **program** button on the motor. The blind will start stepping, indicating that program mode has been activated. (The blind keeps stepping until the program mode is deactivated)

4.2 Select a desired channel for the blind using the **previous channel** or **next channel** button on the remote control.

4.3 Press the **pair** button on the back of the remote control to pair the blind with the selected channel. The blind will shortly stop stepping, indicating that the remote has been paired to the blind.

i Repeat steps 4.1 - 4.3 to remove a blind from a channel.

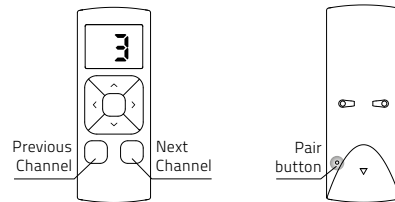


4. PAIR A REMOTE


5 Single select 15 channel remote

i Single select makes it possible to activate program mode on a single blind through a remote control, without having to physically press the program button on the blind.


5.1 To activate Single select, simultaneously hold the **center** button and press the **pair** button.

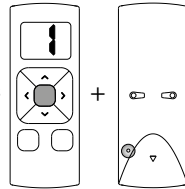

 
5.2 The remote starts searching for blinds (search mode). This is indicated by the horizontal bars on the remote.



 
5.3 Once a blind is found, the channel number will flash and the blind starts stepping, indicating that program mode has been activated. The blind can now be (un)paired with the remote and/or programmed.



 5.4 To search for the next blind, press the **right** button. Search mode will be activated. To find the previous blind, press the **left** button.



 5.5 To exit Single select, press the **right** button during search mode. The display shows the letter **0**.




6 Channel select 15 channel remote

i Channel select makes it possible to copy blinds in between channels/remotes without having to physically press the program button on the motors.


- 6.1** Select the channel you would like to copy.



- 6.2** To activate channel select, simultaneously hold the **channel selection** button and press the **pair** button.

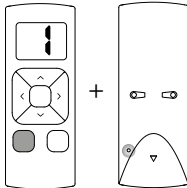

 - 6.3** All blinds in the selected channel will start stepping, indicating program mode has been activated. All blinds can be copied to a new channel on the same remote or to other remotes. Select a channel on a (new) remote.



- 6.4** Press program button on the (new) remote to pair the blinds with the (new) remote.




- 6.5** To exit channel select, choose the channel you selected at step 6.1 and repeat step 6.2


7 Hide channels

i Limit the number of accessible channels on the remote. Channels that are not used will be displayed.


- 7.1** To hide channels, simultaneously hold the **previous channel** and **next channel** button. The screen will first display a **C**. Hold until the screen displays **15**.

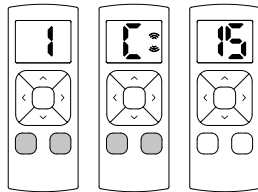

- 7.2** Press the **previous channel** button until the display shows the desired amount of channels.

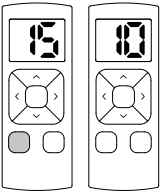

- 7.3** Press the center button until the screen displays **0**.

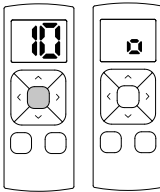

- 7.4** To restore 15 channels, go back to step 7.1 and choose 15 channels at step 7.2. Save the amount of channels by pressing the centre button.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, by any means, electronic, mechanical, photocopying, recording, digital or otherwise without the written permission of the publisher.

Although this manual has been composed with the utmost care, Coulisse b.v. does not accept any responsibility for damage due to mistakes and/or faults in this manual. Coulisse b.v. reserves the right to revise the manual and to revise and/or change its content at any time, without obligation to notify any person or entity of such revisions or changes.

motion-blinds.com