 



## Moon Mountain Sound Machine User Manual

Model : GP-A269

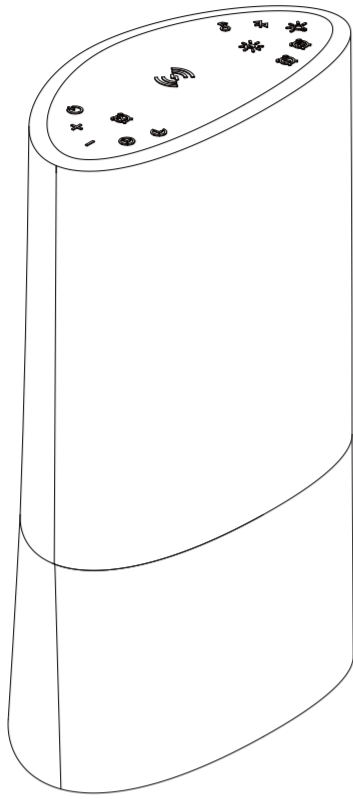


### What's in the box

 1. Main unit
2. Power Adaptor
3. User Manual

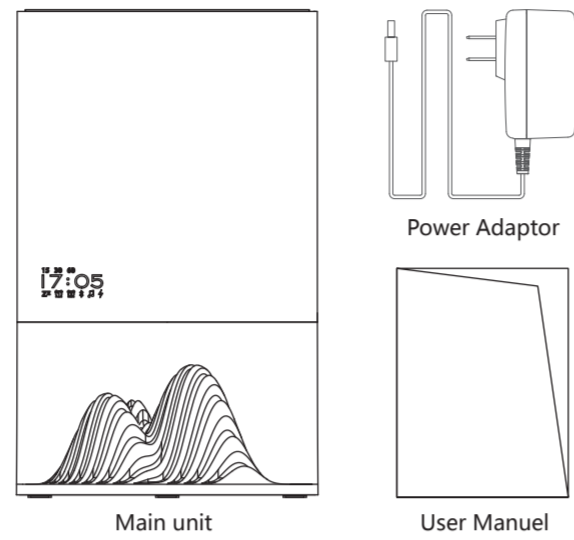


### Connect Power

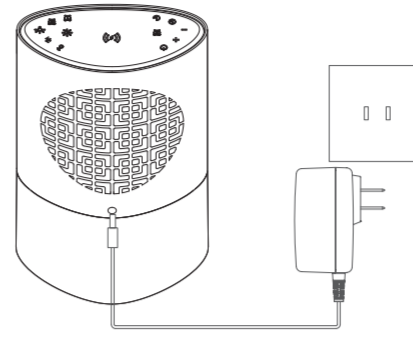 


1. Connect the DC power jack on the back of the machine and plug the power adaptor into AC (mains) in the power outlet, the display starts flashing and the power is on.
2. Press any button, the OLED display shows 00:00.

### Power ON the unit

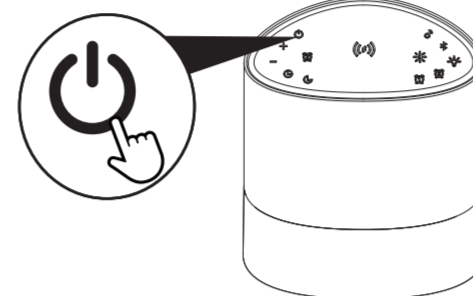 


1. Press the power button to turn the unit ON, the OLED display shows ON.
2. Press the power button again to turn the unit OFF, the OLED display shows OFF.
3. Turn on Bluetooth by default, and the screen Bluetooth indicator flashes into pairing mode.

### Year/Month/Date/Time setting

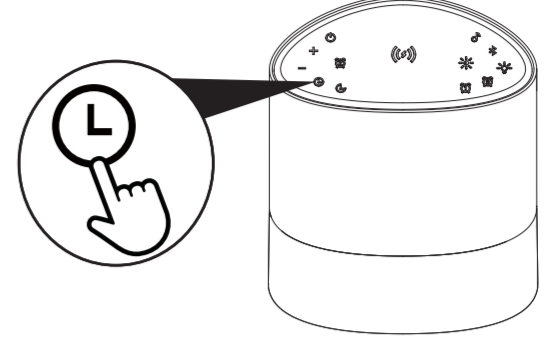 

1. In any mode, press and hold the 'L' button for 2 seconds to enter the time setting, the hour digit flashes, use the volume button to the correct hour.
2. After the hour is set, press the 'L' button again. The minute digit will flash, use the volume button to the correct minute.
3. Continue to press 'L' into the year setting mode, the year flashes, press the volume button to the correct year.
4. Continue to press 'L' into the month setting mode, the month flashes, press the volume button to the correct month.
5. Continue to press 'L' into the minute setting mode, the minute flashes, press the volume button to the correct minute.

### Sleep Timer Function

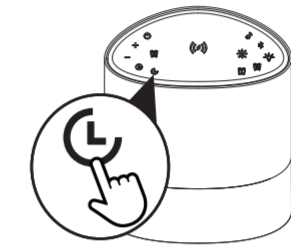 

When playing a SPA sound or using Bluetooth, press the 'L' button for 15/30/60 minutes sleep time.

### Moon display mode

- Nine mode changes, such as monthly deficiency, month and a half, full moon, are synchronized with the perennial calendar
- The lunar calendar date changes, for example :  
Figure 1 (1-4 days) Figure 2 (5-8 days)  
Figure 3 (9-11) Figure 4 (12-14 days)  
Figure 7 (19-22 days)
- There are nine different modes, the moon change reference chart:  
Figure 5 (15-16) Figure 6 (17-18)  
Figure 7 (19-22 days)
- There are nine different modes, the moon change reference chart:  
Figure 5 (15-16) Figure 6 (17-18)  
Figure 8 (23-26) Figure 9 (27-30)
- There are nine different modes, the moon change reference chart:



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7

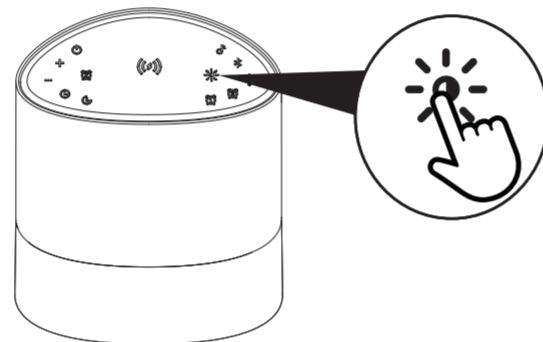 


Figure 8




Figure 9

### Clock dimmer setting



 - When the clock displayed, press to adjust the brightness of the clock : high->mid->low-> off.
- Default is high brightness.

### Alarm

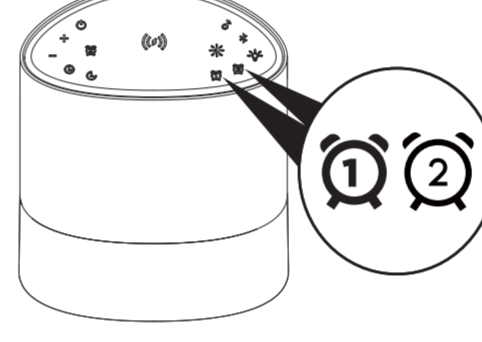


#### Setting the Alarm

1. Press and hold the alarm button for 2 seconds to activate alarm setting, the hour digit will flash, use volume button to the correct hour.
2. After the hour is set, press the alarm button again, the minute digit will flash, use volume button to the correct minute.
3. After the minute is set, press the alarm button again, the display will show "Buzz", press the alarm button again will show Spa 01..., press the volume button to the alarm sound you want. Press again the alarm button for the volume level.
4. When the alarm 1 or alarm 2 set, the icon will show on the OLED display, press any key (except the sleeping key) to stop the alarm for the day.

#### Using the Alarm


- Press the Alarm button, the Alarm icon will light on the display and will sound at the preset time.
- Press the Alarm button, the Alarm icon will no longer be visible and the alarm will remain OFF.
 
### Playing Sleep Sounds

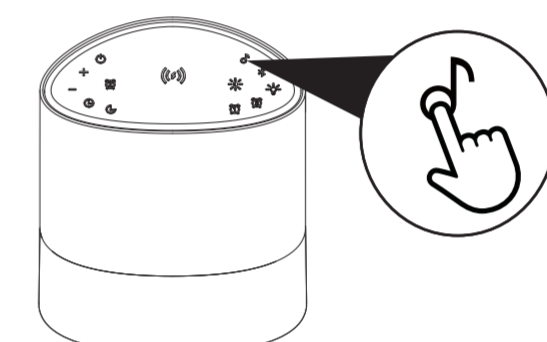


1. In the power-on state, press to turn on built-in Sleep sounds, screen music symbol lit, (Spa 01-18)  
The order of selection is:  
Summer night— Brook— Wind— Ocean— Rain—  
RainForest— Campfire— Thunderstorm— Old clock—  
Whitenoise— Brahms Lullaby— Twinkle Twinkle Little Star—  
Moonlight Sonata— Schubert serenade— Edelwiss—  
Red River Valley— Meditation from Thais—Mozart's Lullaby
2. Cycle to select 18 built-in music;
3. Press Power ON/OFF button to turn off Sleep sounds.

### Snooze mode

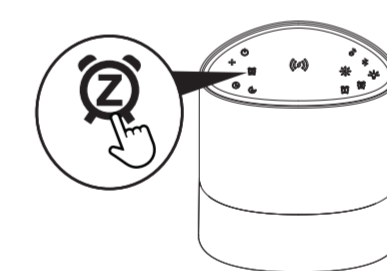 


When the wake-up alarm is sounding press the SNOOZE button to activate the SNOOZE, this will cause the alarm to pause and the alarm will sound again in 9 minutes. This will happen each time when the SNOOZE button is pressed (max 7 times)

### Bluetooth mode

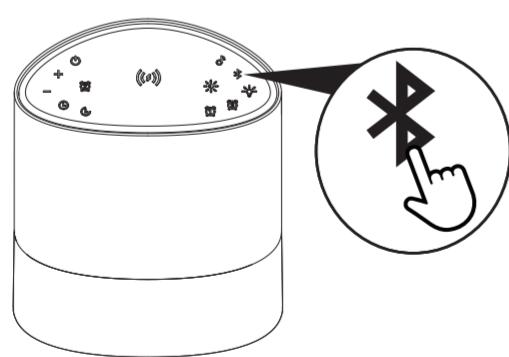 

1. In the power-on mode, Bluetooth function is turned on by default, Bluetooth icon flashing and enter the pairing mode.
2. Select "GP-A269" from the pairing options on your phone/tablet/computer that turns on Bluetooth to make a connection, after a successful pairing connection, the product will sound "Bluetooth connected" and the icon of Bluetooth becomes solid on;
3. When Bluetooth connection mode, press and hold for 2 seconds to manually disconnect .
4. When the Bluetooth icon on the screen flash, the connection can be reconnected according to step 2.


### Wireless Quick charging function

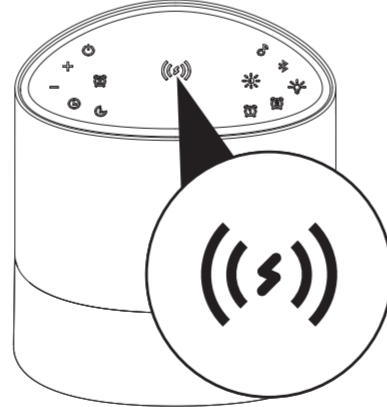 

1. When powered on, place the wireless charging device in this area, the charging icon on the OLED display will slow and flash.
2. After full charge, the charging icon will change to solid on;

This product granted qi certified.

### Lighting mode of the mountain

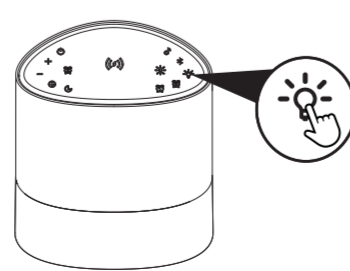 

1. In the power-on mode, the light of the mountain is ON by default.
2. Short press to adjust the brightness of the light: high, medium,

### Product specification

- With calendar function (show year, month, day, time)
- Time: 24 hours display
- The moon mode is displayed
- Moon Mountain background light display: four level of light brightness
- Quick wireless charging support 10W output.
- Bluetooth 5.0
- Sleep sounds (14 natural sounds/4 music sources)
- x2 Alarm (AL1 / AL2) with snooze feature
- 15/30/60 minutes of sleep time
- OLED clock display with four level of light brightness
- 2x5W loudspeaker
- Power adaptor AC input 110V-240V, DC output 9V/2.5A

### FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.  
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**Servico**  
• To reduce the risk of electric shock, do not remove covers. The unit does not contain any user-serviceable parts.  
• Please leave all maintenance work to qualified personnel.  
• Do not open any fixed covers as this may expose dangerous voltages.

### Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

**Damage**  
• Please inspect the unit for damage after unpacking.  
• Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

**Temperature**  
• Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas electric fires.  
• Avoid exposure to direct sunlight and other sources of heat.

**Moisture**  
• To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.  
• If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

**Safety**  
• Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.

**Batteries**  
• Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.  
• Please dispose of batteries correctly by following the guidance in this manual.

**Supervision**  
• Children should be supervised to ensure that they do not play with the unit and the remote control.  
• Never let anyone especially children push anything into the holes, slots or any other openings in the apparatus has been damaged in any way, such as power-cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

### Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Aucune source de flamme nue, telle que des bougies allumées, ne doit être placée sur l'appareil.

### Important Safety Instructions:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use the apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they meet from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**CAUTION**  
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

IC Caution:

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

L' émetteur/r écepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes :

L' appareil ne doit pas produire de brouillage;

L' appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

To maintain compliance with ISED's RF Exposure guidelines, This equipment should be installed

and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Manufacturer's Name: Shenzhen Great Power Innovation And Technology Enterprise Co., Ltd. Model number: GP-A289

Operating Temperature: -20° C to 40° C

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 20cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

This device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out.

1. Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

2. CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

3. The product shall only be connected to a USB interface of version USB 2.0

Function	Operation Frequency	Max RF outputpower:	Limit
BT	2402~2480 MHz	3.66dBm	10dBm
WPT	110kHz~205kHz	-18.01dBuA/10m	65.91 dBuA/10m

