

User Manual for SCM-RF/CI

SCM Reader, RFID/Contact IC For Mi3c

3M Cogent SCM-RF/CI Module is made for MI3C and so on. It consists of 2 different modules. The user can use it to read contact card, RF card. RF part works at 13,56MHz. All the function can read out card number, time info and character info, Barcode and so on. It is convenient for you to get all the data you want. It communicates with cogent device MI3C. It is applicable in many areas. For Example: gate forbidden, checking on work attendance, charging and patrolling.



BACK



Front

Contact Card RF Card



Please follow the steps below to use this module. Here to take Mi3c
for example.

Before using SCM-RF/CI, please install it to Mi3c. Start up Mi3c

n Contactless/contact Card.

- 1) Choose 'File Explorer' under the Start menu.
- 2) Start 'Manual Check' in the Cogent category.
- 3) Enter into 'SmarCard pcsc(MobileID3)' and install the driver.
- 4) Press 'OK'.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific



operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.