

## **ATTACHMENT G – OPERATIONAL DESCRIPTION**

---



Printed in Korea  
AC68-01270A  
SV-C35M/TRC/GTC





# Contents

Specifications	2
Safety Precautions	2
Optimal Viewing Angle	3
Names and Functions of Components	3
Remote Control	4
Operation	5
Screen Inverter	5
Mirror Image	5
FM Radio Transmitter	5
Turning on the FM Transmitter	5
Adjusting the FM Frequency	5
Picture Preset	6
Picture Control	6
Brightness	6
Sharpness	6
Color	6
Tint	6
Language Select	6
External Devices	6
Trouble Shooting	7
Audio	7
Video	7



# Specifications

- Power: DC 12V/8W (Supplied from VCR)
- Remote Control: Controls both the monitor and VCR
- Language Select: English/Korean
- FM Transmitter: 10CH, Stereo
- Speaker: 1W, 8W
- FM Transmitter: 10-Channel Stereo
- Headphone Output: 2-Channel, 20mW
- Liquid Crystal Display Useful Life: 10,000 hours\*
- Operating Temperature: 0° C ~ +45° C
- Visible Angle Range: Up 10°, Down 30°, Left/Right 45°



# Safety Precautions



## Attention

### Consult a Professional Installer For Installation/Connection

- For your safety, it is strongly recommended that a professional handle the installation of this product. Consult your dealer for more information.

### Do Not Disassemble or Modify

- Do not disassemble, modify or attempt to repair the product on your own. This can cause a fire or electrical shock.

### Discontinue the Use In the Following Cases

- If you smell or see smoke, discontinue using the monitor immediately and consult your nearest dealer.

### Do Not Operate While Driving

- Using the monitor while driving may cause driver distraction and accident which could injure or kill you.
- Find a safe place to park your vehicle and engage the parking brake before using the monitor.



 
- To avoid the risk of electrical shock or injury from high voltage electric current, do not open the rear panel of the monitor on your own.





## Optimal Viewing Angle


- 1) Left/Right: 45°, 45°
- 2) Top/Bottom: 10°, 30°

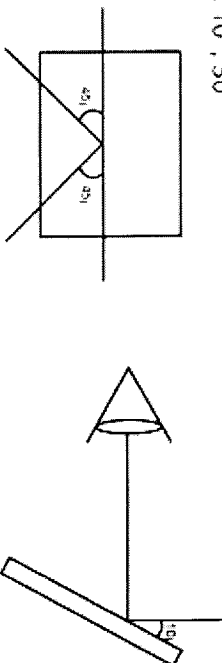

- It is recommended that you set the top angle of the monitor 10 degrees toward the rear for the best viewing experience. The picture's visibility may not be optimal if you set the left/right angle of the monitor more than 45 degrees from the center.




## Names and Functions of Components

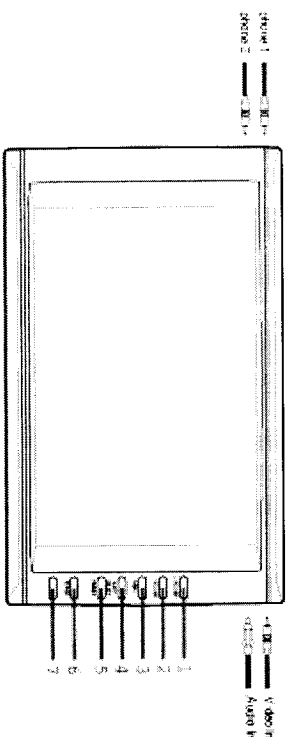 

1. Volume Increases Volume. Selects A Function in the On-Screen Menu.
2. - Volume Decreases Volume. Moves the Cursor in the On-Screen Menu.
3. Menu Calls Up On-Screen Displays to Adjust Current Settings.
4. Input Select. Selects An External Input.
5. Dimmer. Adjusts the Brightness to the Surrounding.
6. Power. Turns the Unit's Power On/Off.
7. Remote Control Sensor. Detects Remote Control Signal.



## Operation

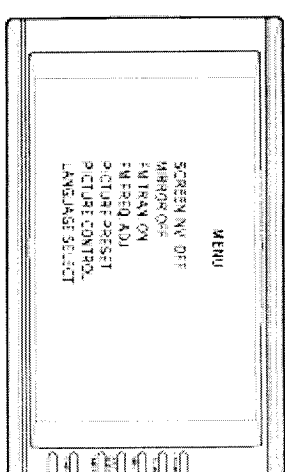 

### Screen Inverter

Inverts the picture on the monitor vertically.

### Mirror Image

Reverses the picture on the monitor horizontally.

### FM Transmitter

You can listen to the FM band through the connected car audio system.

- Frequency Range: 90.7 MHz - 92.5 MHz

### Turning on the FM Transmitter

In the screen adjustment mode, selecting the FM TRAN ON by pressing the Volume button turns on the FM transmitter.

- If the FM Transmitter On is selected, you can listen to the audio from TV or Video through car audio.
- If the FM Transmitter Off is selected, you can listen to the audio from TV or Video through the monitor speaker.



The FM Transmitter On must be selected and the following steps must be followed to listen to the audio through car audio.

 
### Adjusting the FM Frequency

1. Call up on-screen displays by pressing the Menu button.
2. Move to and select the FM FREQ ADJ.
3. Select a frequency between the frequency range (90.7 MHz - 92.5 MHz).
4. Set the car stereo's FM radio channel to the frequency selected in the step 3.



A local FM radio may be broadcasted over the selected frequency. In this case, follow the above instruction and choose another frequency.



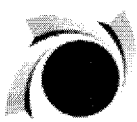

# Trouble shooting

## Picture Preset

 
Sets the picture quality to a preset value.

## Picture Control

- ▶ **Bright**  
The screen gets brighter or darker.
- ▶ **Contrast**  
The screen gets sharper or duller.
- ▶ **Tint**  
The red or green color is intensified.
- ▶ **Color**  
The screen color gets deeper or paler.

## Language Select

Change the on-screen display's language between English and Korean.

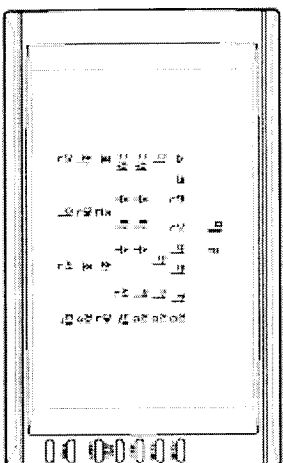

## External Devices

- **Video in** : Used to connect the monitor to a camcorder and view the pictures recorded in the camcorder. Select the Aux mode by pressing the Input Select button.
- **Audio in** : Used to connect an external audio through the monitor.
- **Phone 1** : Used to listen to the audio through headphone only.
- **Phone 2** : Used to listen to the audio through both headphone and speakers.

## Audio

	Cause	Treatment
Audio is not audible	<ul style="list-style-type: none"> <li>● The volume is set too low</li> <li>● The unit is not properly connected</li> <li>● Dew drops have formed on the unit's surface</li> </ul>	<ul style="list-style-type: none"> <li>● Increase the volume</li> <li>● Make sure the unit is connected properly</li> <li>● Wait until dew drops have dried completely before using the unit</li> </ul>
FM transmitter does not appear to be working	<ul style="list-style-type: none"> <li>● The FM transmitter is turned off</li> <li>● The FM transmitter's frequency does not coincide with the FM frequency of the car audio</li> </ul>	<ul style="list-style-type: none"> <li>● From the on-screen menu, select the FM transmitter on.</li> <li>● Set the FM frequency of the transmitter to the FM frequency of the car audio</li> </ul>

## Video

	Cause	Treatment
Video is not visible The screen is dark The screen is washed out The color is poor	<ul style="list-style-type: none"> <li>● The screen brightness, contrast, tint, or color is not set properly</li> </ul>	<ul style="list-style-type: none"> <li>● From the on-screen menu, adjust each using the picture control</li> </ul>
No television video image appears	<ul style="list-style-type: none"> <li>● The unit is not set in the TV mode</li> </ul>	<ul style="list-style-type: none"> <li>● Press the input select button to switch to the TV mode</li> </ul>

## Warning

Television reception may be poor if you are in a location where reception is poor.