


Label and Location Diagram

A3LSMV101M

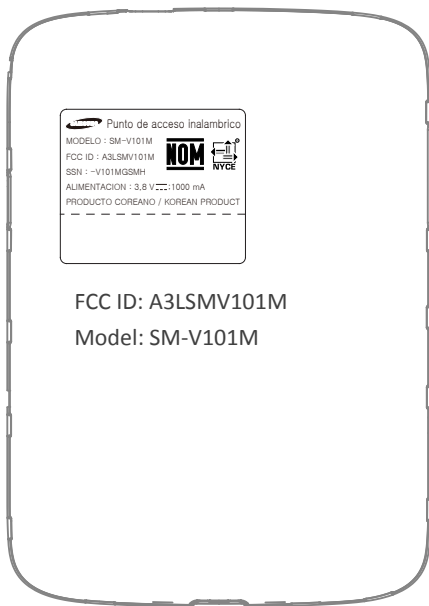

The label is placed inside the battery compartment