

- Remove the plug from the outlet before cleaning the product.
  - Otherwise, this may result in electric shock.

## Others

### WARNING

- When you go out, place the projector out of reach of animals, and remove the power plug from the wall outlet.
  - Using a damaged power cord may result in short circuit or fire.
- Do not use the projector near high-precision electronic devices or those that transmit weak radio signal.
  - This may affect the operation of the product, causing an accident.
- Only a qualified technician can disassemble or modify the projector. For diagnosis, adjustment, or repair, contact your seller or our service center.
  - This may result in fire or electric shock.
- Do not stare directly into lens when in operation, eye damage can occur.
- No user serviceable parts inside unit. High voltage parts can cause shock and even electrocution.
- Proper ventilation required, do not block airflow around unit. Doing so can cause injury and internal overheating.
- To prevent damage to lamp, unit must remain plugged in for approximately 3 minutes after power down to allow for proper cool down (not applicable on LED models).

- Do not touch the lens; doing so can result in burns or damage to lens. Lens and unit may be HOT during and immediately after use. Use caution when handling unit, allowing for proper cool down.
- Only use a grounded electrical outlet.
- Do not insert anything into or cover up the exhaust vents.
  - This may result in fire or electric shock.
- Follow all maintenance guidelines for optimal use; service only at an authorized service center.
- Lamp contains mercury and as such must be disposed of according to local, state and federal laws (not applicable on LED models).

### CAUTION

- Do not mix new batteries with old ones.
  - Burst or leaking batteries may result in damage or injury.
- Be sure to unplug if the projector is not to be used for a long period.
  - Accumulated dust may result in fire or electric shock due to overheating, ignition, or poor insulation.
- Only use the specified type of battery.
  - Burst or leaking batteries may result in damage or injury.
- Do not charge the battery using any devices other than the one provided with the product.
  - This may result in damage to the battery or fire.

- Dispose of used batteries properly.
  - This may result in explosion or fire. The correct method of disposal may vary depending on your country or region. Dispose of the battery pack as instructed.
- Do not throw or disassemble the battery.
  - This may result in fire or explosion due to damage to the battery.
- Store batteries away from metallic objects, such as keys and paper clips.
  - Excess current may cause a rapid increase in temperature, resulting in fire or burns.
- Do not store the batteries near any heat source, such as a heater.
  - This may result in fire or damage to the product.
- Do not store batteries at temperatures higher than 60 °C or in high humidity.
  - This may result in explosion or fire.
- Keep the batteries and remote out of reach of children.
  - This will prevent personal injury or damage to the product.
- Make sure that the battery is installed correctly.
  - This prevent explosion or fire.
- The battery contains lithium-ion, so it must be handled with care.
  - This may result in explosion or fire.
- Make sure you use the same type of batteries for replacement.
- Incorrect battery replacement may cause fire.

### Risk Group 2

**CAUTION: Hazardous optical radiation may be emitted from this product. Do not stare into the lens at the operating lamp. It may be harmful to your eyes.**

**FCC NOTICE****Federal Communications Commission (FCC) Statement**

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/projector technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation of the device of the device.

**FCC Caution**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment and for indoor use only, use outdoors or in other modes not covered by this manual may violate the FCC regulation and violate the user authority to use the product. Specially, within the 5.15-5.25 GHz band, U-NII device is restricted to indoor operations to reduce any potential for harmful interference to co-channel MSS operations.

**FCC RF Radiation Exposure****Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm (7.8 inches) between the radiator and your body. End users must follow the specific operating instructions for satisfying RF exposure compliance.

**IC (CANADA)****Industry Canada Statement:**

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

**Avis d'Industrie Canada :**

Cet appareil est conforme à la norme CNR-210 des règlements d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes :

- 1) Cet appareil ne doit pas provoquer d'interférences et
- 2) Cet appareil doit accepter toutes les interférences, y compris celles pouvant entraîner son dysfonctionnement.

**IC Radiation Exposure Statement:**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR Projector INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**Avis d'Industrie Canada sur l'exposition aux rayonnements**

Cet appareil est conforme aux limites d'exposition aux rayonnements d'Industrie Canada pour un environnement non contrôlé.

REMARQUE : LE FABRICANT N'EST PAS RESPONSABLE DES INTERFÉRENCES RADIOÉLECTRIQUES CAUSÉES PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET APPAREIL. DE TELLES MODIFICATIONS POURRAIT ANNULER L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE FAIRE FONCTIONNER L'APPAREIL.

# CONTENTS

<b>LICENSE</b>	<b>2</b>	<b>ENTERTAINMENT</b>	<b>32</b>
<b>SAFETY INSTRUCTIONS</b>	<b>3</b>	<b>To connect network</b>	<b>32</b>
<b>PREPARATION</b>	<b>14</b>	- One-click network connection	32
<b>Accessories</b>	<b>14</b>	- To connect to a network through Set Expert	32
<b>Optional Extras</b>	<b>15</b>	- To use the Wi-Fi Direct function	33
<b>Parts and Components</b>	<b>16</b>	- To use the Miracast™/Intel's WiDi function	33
- Front	16	- Tips for Network Settings	34
- Back	17	<b>SMARTSHARE</b>	<b>35</b>
<b>Installation</b>	<b>18</b>	<b>Before Using</b>	<b>35</b>
- Installation Precautions	18	- Connecting a USB Device	35
- Projection Distance per Screen Size	19	- Removing a USB Device	35
- How to Install the Projector On a Tripod	20	<b>To use SmartShare™</b>	<b>37</b>
- Kensington Security System	20	- Watching the Videos	38
<b>REMOTE CONTROL</b>	<b>21</b>	- Viewing the Photos	40
<b>USING THE PROJECTOR</b>	<b>23</b>	- Listening to Music	41
<b>Watching Projector</b>	<b>23</b>	- Viewing Files	42
- Initial Setup	23	- To set SmartShare™ related functions	43
- Focus and Position of the Screen Image	24	<b>To connect DLNA</b>	<b>47</b>
<b>Additional Options</b>	<b>25</b>	- To connect a DLNA-authenticated Smartphone	47
- Adjusting Aspect Ratio	25	- To connect DLNA DMR (Digital Media Renderer)	47
- Using the Keystone Function	25	- To connect DLNA DMP (Digital Media Player)	48
- Changing input device	26	- SmartShare™ PC SW Installing & Setting	49
- To use SIMPLINK	26	- In case of a DLNA malfunction	50
<b>Using the Quick Menu</b>	<b>28</b>	<b>CUSTOMIZING SETTINGS</b>	<b>51</b>
<b>To set Sound</b>	<b>29</b>	<b>SETTINGS</b>	<b>51</b>
- To set sound output	29	<b>PICTURE Settings</b>	<b>52</b>
- To Connect and Use a Bluetooth headset	31		

<b>SOUND Settings</b>	<b>57</b>
<b>TIME Settings</b>	<b>60</b>
<b>OPTION Settings</b>	<b>61</b>
<b>NETWORK Settings</b>	<b>63</b>
<b>SUPPORT</b>	<b>64</b>

## **CONNECTING DEVICES 65**

<b>Connecting to HD Receiver, DVD, or VCR Player, External Devices</b>	<b>66</b>
- HDMI Connection	66
- AV Connection	67
- Component Connection	67
<b>Connecting to Headphones</b>	<b>68</b>
<b>Connecting a digital amp</b>	<b>69</b>
<b>Connecting to PC and Laptop</b>	<b>70</b>
- HDMI Connection	70
<b>Using the mirroring function of a mobile phone</b>	<b>71</b>
- MHL Connection	71

## **MAINTENANCE 72**

<b>Cleaning</b>	<b>72</b>
- Cleaning the Lens	72
- Cleaning the projector case	72

## **INFORMATION 73**

 
<b>To update projector software</b>	<b>73</b>
-------------------------------------	-----------

## **SPECIFICATIONS 74**


# PREPARATION

## Accessories

Accessories included with the project are show below. The pictures may differ slightly from the actual product. Accessories are subject to change without prior notice. New accessories may be added or old ones removed.

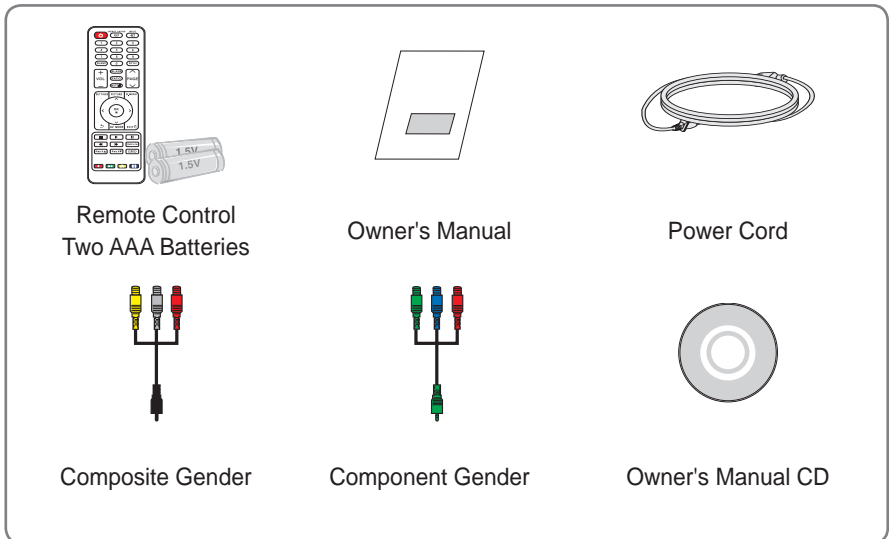


 - When connecting an HDMI or USB cable, or connecting a USB flash drive to the HDMI or USB port, use a product that has a width of 18 mm or less and a height of 10 mm or less. If the USB cable or USB flash drive does not fit the USB ports of the projector, use an extension cable that supports USB 2.0.

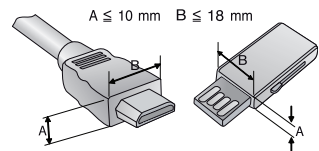

## Optional Extras

 To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store where you purchased the product. Optional accessories are subject to change without prior notice.

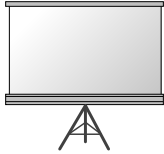

Projection Screen



Tripod



HDMI Cable



Video Cable



 
Audio Cable



MHL Cable



Optical Cable









LG Audio Device

## Parts and Components

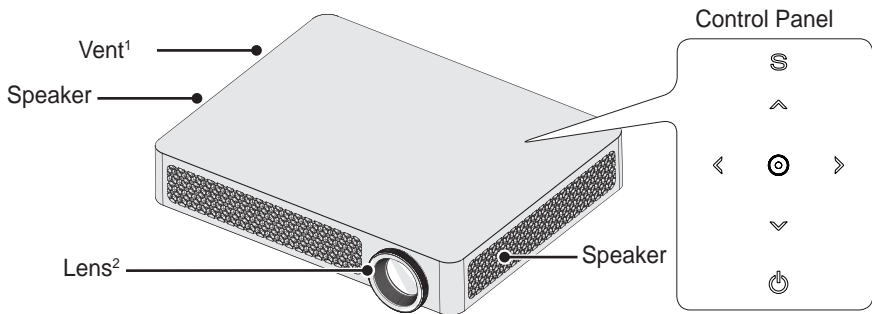 The projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.

### Front

 
 


Button	Description
 (POWER)	Turns the projector on or off.
 (MENU)	Displays or closes the Settings menu.
 (Volume)	Adjusts the volume level.
	Moves between menus and changes the settings.
 (OK)	Shows the current mode and saves changes to the settings.

**1** Due to the high temperature of vent area, do not get close to the vent area.

**2** Do not touch the lens while using the projector. The lens may be damaged.

## Back

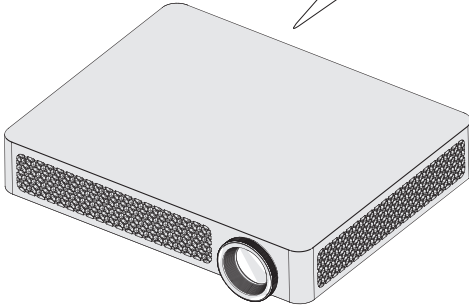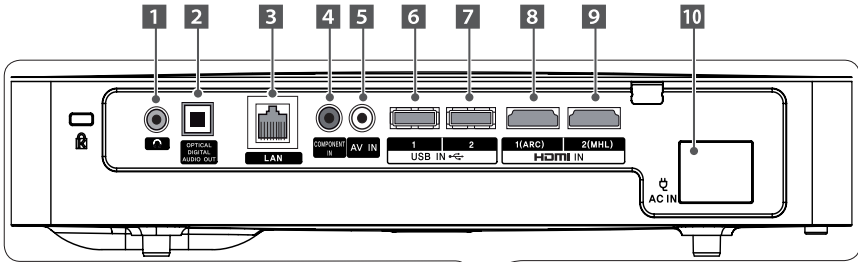

- 1** 🎧 (Headphone Port)
- 2** OPTICAL DIGITAL AUDIO OUT Port
- 3** LAN Port
- 4** COMPONENT IN Port
- 5** AV IN Port

- 6** USB IN 1 Port
- 7** USB IN 2 Port
- 8** HDMI IN 1(ARC) Port
- 9** HDMI IN 2(MHL) Port
- 10** AC IN Port

# Installation

## Installation Precautions

- Place the projector in a well-ventilated environment.
- To prevent internal heat build-up, install the projector in a well-ventilated place.  
Do not place anything near the projector as this may block its air vents. If the air vents are blocked, the internal temperature will increase.



- Do not place the projector on a carpet or rug. If the vent is on the bottom, use the projector on a solid level surface and ensure the vent is not blocked.



- Be sure to prevent foreign objects such as paper debris from entering the projector.



- Leave enough distance (30 cm or more) around the projector.

 


- Do not place the projector in a hot or humid environment.
  - Do not place the projector in a hot, cold, or humid environment.
- Do not place the projector in a place where it will easily attract dust.
  - This may result in fire.
- Never open any cover on the projector. There is a high risk of electric shock.
- The projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.
- The remote control may not work in an environment where a lamp equipped with electronic ballasts or a three-wavelength fluorescent lamp is installed. Replace the lamp with an international standard lamp for the remote control to work normally.
- To adjust the angle of the projector, turn the adjustment legs to the left or right while pressing on the rubber part at the same time.

## Projection Distance per Screen Size

- 1 Place the projector on a sturdy, level surface, together with the PC or audio/video source.
- 2 Place the projector an appropriate distance away from the screen. The distance between the projector and the screen determines the actual size of the image.
- 3 Position the projector so that the lens is at a right angle to the screen. If the projector is not at a right angle, the projected image will look distorted. To correct the distortion, use the Keystone function. (see page 25)
- 4 Connect the power cord of the projector and the connected device to the wall outlet.

Ratio of upward projection: 100 %

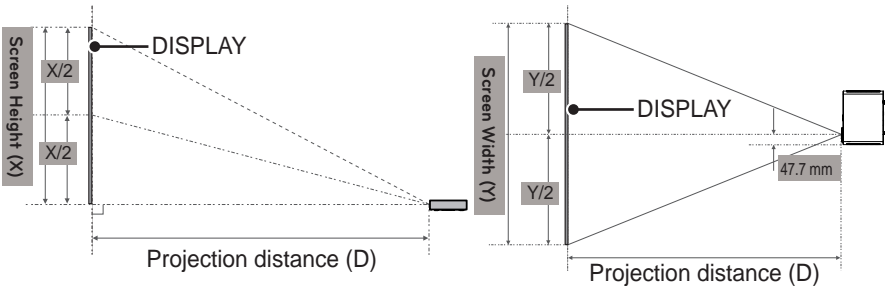

16:9 Ratio			
Screen Size (mm)	Screen Width (Y) (mm)	Screen Height (X) (mm)	Projection Distance (D) (mm)
508	443	249	621
635	553	311	776
762	664	374	932
889	775	436	1087
1016	886	498	1242
1143	996	560	1397
1270	1107	623	1553
1397	1218	685	1708
1524	1328	747	1863
1651	1439	809	2018
1778	1550	872	2174
1905	1660	934	2329
2032	1771	996	2484
2159	1882	1058	2639
2286	1992	1121	2795
2413	2103	1183	2950
2540	2214	1245	3105
2667	2324	1308	3260
2794	2435	1370	3416
2921	2546	1432	3571
3048	2657	1494	3726