 


How to Install the Projector On a Tripod

- You can install this projector using a camera tripod.
As shown below, you can mount the projector instead of a camera on the tripod.
- When stabilizing the tripod, we recommend using a locking bolt of standard size 4.5 mm or less. The maximum size allowed for the locking bolt is 5.5 mm. (If it is longer than the maximum allowed size, it may damage the projector.)

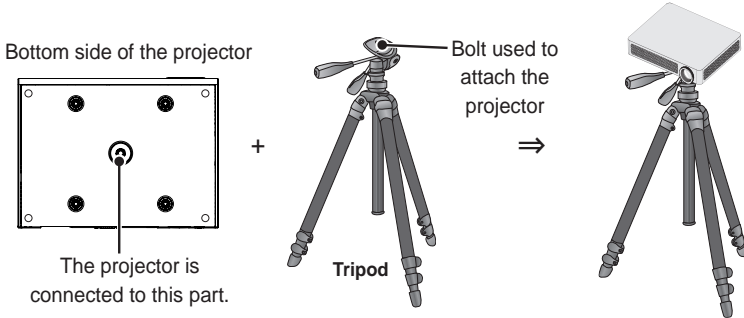 


CAUTION

- If you are using a tripod, be careful not to apply external force to the tripod. Doing so may damage the projector.
- Do not place the tripod on an unstable surface.
- Be sure to use a tripod with a maximum load capacity of 3 kg or more.
- To use the projector safely, position the tripod legs so that they are as wide and stable as possible and be sure to securely attach the projector to the tripod.


Kensington Security System

- This projector has a Kensington Security Standard connector. Connect a Kensington Security System cable as shown below.
- For more information on installation and use of the Kensington Security System, refer to the user's guide provided with the Kensington Security System.
- The Kensington Security System is an optional accessory.
- What is Kensington? Kensington is a company that provides security systems for laptops and other electronic devices. Website: <http://www.kensington.com>

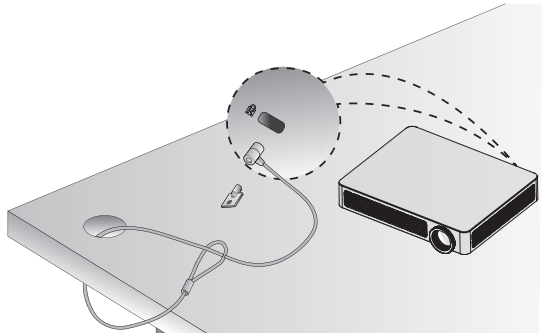


REMOTE CONTROL

 Open the lid at the back of the remote control and insert the batteries as described in the ⊕⊖ instructions. Use new batteries and do not mix regular or rechargeable batteries. (1.5 V AAA)



CAUTION

 - Do not mix new batteries with old ones.

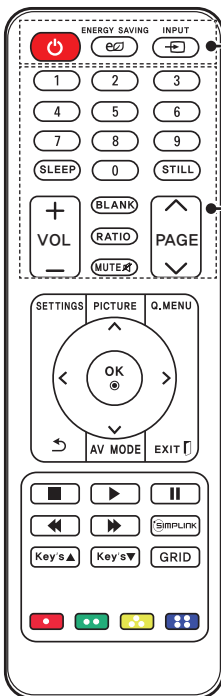

POWER

Turns the projector on or off.

ENERGY SAVING

Adjusts the screen brightness.

INPUT

Changes the input source.

Number buttons

Enters a number.

SLEEP

Sets the sleep timer.

STILL

Stops the video being played.

VOL +, -

Adjusts the volume level.

BLANK

Blanks the screen.

RATIO

 
Changes the aspect ratio of the screen per pressing of the button.

MUTE

Mutes the sound of the projector.

PAGE ,

Moves to the previous/next page.

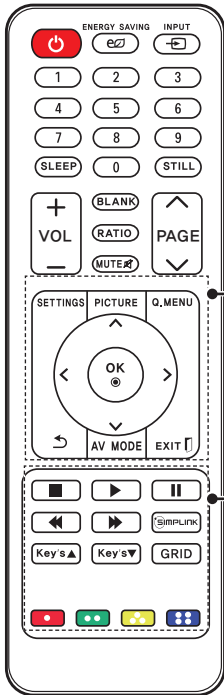

SETTINGS

Displays or closes the Settings menu.

PICTURE

Changes the picture mode per press of the button.

Q.MENU

Allows you to change the settings easily.

Up/Down/Left/Right buttons

Switches between menu functions.

OK

Shows the current mode and saves changes to the settings.



Returns to the previous screen.

AV MODE

Selects AV mode for the genre of the program being watched.

EXIT

Exits the menu.

Playback control buttons

Controls the playback of multimedia content on the SmartShare.

SIMPLINK

Allows you to use the SIMPLINK function.

Key's ▲, ▼

Adjusts the Keystone function.

GRID

 
Shows 20 grids built into projector to align and compose images and designs.

Color buttons

Sets detailed settings or gesture for each menu.

NOTE

- When using the remote control, the optimal operation range is 6 meters or less (left/right) and within a 30 degree arc of the remote control IR receiver.
- If a cable is connected to the back port, the optimal operating range is 3 meters or less (left/right) and within a 30 degree arc of the remote control IR receiver.
- For seamless operation, do not block the IR receiver.
- When you carry the remote control in the portable bag, make sure that the buttons on the remote control are not pressed by the projector, cables, documents or any other accessories in the bag. Otherwise, it may significantly reduce the battery life.

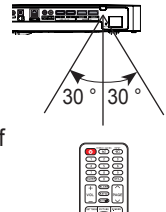

Using the PROJECTOR

Watching Projector

Initial Setup

The menu screen display in this owner's manual is an example to help users understand how to operate the product and may look different from the actual screen.

- 1 Connect the power cord correctly.
- 2 After waiting for a moment, press the **POWER** button on the remote control or the control panel.
- 3 When you turn on the Projector for the first time, a setting screen appears as shown below. Here, you can specify the items required for watching the Projector more easily.

