


Google Fiber
Wi-Fi 6E Extender
(AP5692W)
Quick User Guide


1. Extender Setup

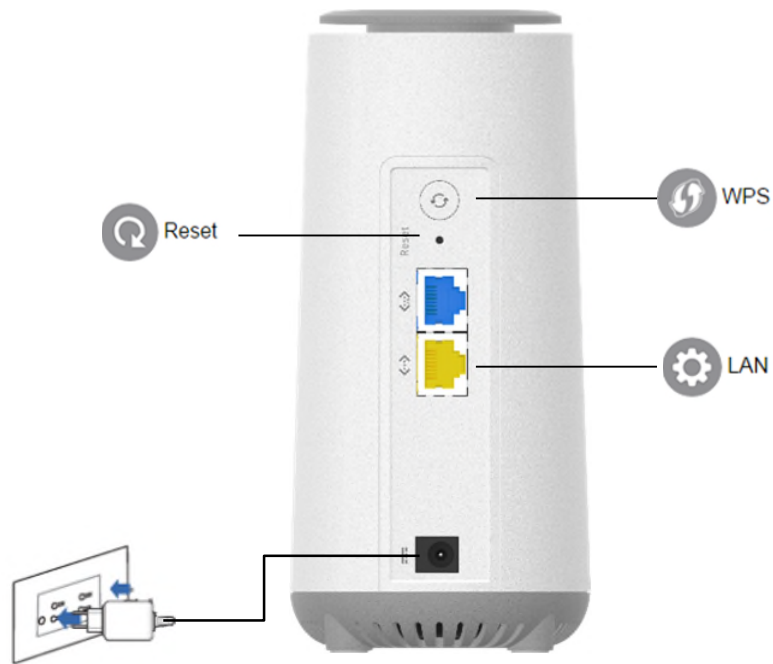

1. Insert your AP5692W's AC adapter to the DC-IN port and plug it to a power outlet.
2. Using a network cable to connect your computer with the AP5692W's LAN port.
3. Configure AP5692W to access the Internet via Web GUI.


2. Quick Internet and WiFi Setup

1. On your web browser, manually key in the RT5035W's IP address: https://192.168.1.1. from Router.
2. Enter the default username (admin) and password (admin@123).

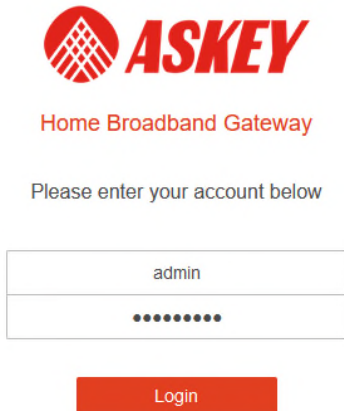

The image shows the login page for the ASKEY Home Broadband Gateway. At the top is the ASKEY logo, which consists of a red circle with a white grid pattern and the word "ASKEY" in red. Below the logo is the text "Home Broadband Gateway" in red. Underneath that is the instruction "Please enter your account below" in black. There are two input fields: the first contains the text "admin" and the second contains ten black dots representing a password. Below the input fields is a red button with the text "Login" in white.

3. Change password . change New Password then click save .

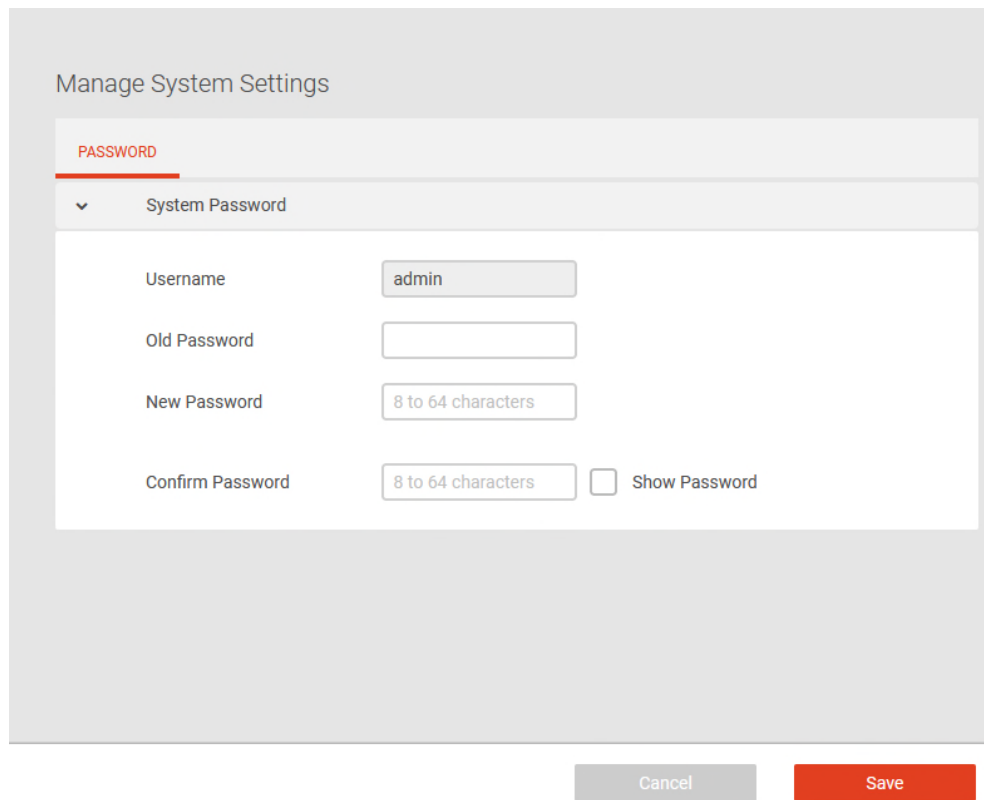

The image shows the "Manage System Settings" interface for changing the system password. The title "Manage System Settings" is at the top left. Below it is a red header with the word "PASSWORD" in white. Underneath is a dropdown menu labeled "System Password" with a downward arrow. The form contains four input fields: "Username" with the value "admin", "Old Password" (empty), "New Password" with the placeholder "8 to 64 characters", and "Confirm Password" with the placeholder "8 to 64 characters". To the right of the "Confirm Password" field is a checkbox labeled "Show Password". At the bottom of the form are two buttons: a grey "Cancel" button and a red "Save" button.

4. Enable wifi network . Enable Wi-Fi Network ON .

Network

The screenshot shows a web interface for network configuration. At the top, there are tabs: BASIC (selected), WPS, ACL, RADIO, DFS SWITCH, and NETWORK GRAPH. Below the tabs, there are several settings:

- Enable EasyMesh: Yes No
- EasyMesh Status: STARTED
- Frequency: 2.4 GHz (dropdown menu)
- Setting (expanded):
 - Network: Private Network (dropdown menu)
 - Wi-Fi Network ON: (highlighted with a red box)
 - Wi-Fi Network Name (SSID): Askey-2983C-2G
 - Broadcast SSID ON:
 - Security Setting: WPA2 Personal (dropdown menu)
 - WPA Encryption: AES-128 (dropdown menu)

At the bottom of the form, there are two buttons: Cancel (grey) and Save (red).

5. WPS pairing , By click RT5035W's and AP5692W's WPS button . Waiting for 2 minutes .
Wait AP5692W connected to RT5035W by Mesh .

6. Login AP5692W WEB GUI , Enter default admin and admin@1234



GE6E210A

Login

The login page has a title 'Login'. It contains two input fields:

- Username: admin
- Password: masked with dots

Below the password field is a red button with a right-pointing arrow and the text 'Login'.

7. Check RE wifi information .

3. Firmware upgrade

1. Click on “Advanced settings / Administration / Firmware Upgrade “. Click Select File then select firmware file from your PC or NB then click Apply .

4. Regulatory Compliance Notices

Class B Equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

☐ Reorient or relocate the receiving antenna.

☐ Increase the separation between the equipment and receiver.

☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

☐ Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet.

Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems. This device is restricted for indoor use.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This product is intended to be supplied by a UL Listed Power Adapter or DC power source marked 'L.P.S' or 'Limited Power Source', rated 12Vdc, 2.5 A and Tma 40°C (min.). If you require further assistance, please contact your Askey Computer Corp representative.