Front of sound bar

6. LED Line In indicator light (ORANGE)

7. LED FM Radio indicator light (GREEN)

8. LED Bluetooth indicator light (BLUE)

9. LED Standby inidcator light (RED)

10. Remote control sensor

RESET E

5

1. [STANDBY] key: Standby power

3. [FM] key: Press to select FM Radio

5. [VOL-] key: Decrease volume

6. [MUTE] key: Mute volume

8. **[EQ] key:** Equalizer

(in FM Radio mode)

Setup

sound bar.

down (in FM Radio mode)

13. [VOL+] key: Increase volume

4. [RESET] key: Restore factory settings

7. [BT] key: Press to select Bluetooth mode

previous FM station (in FM Radio mode)

9. [BT/FM] key: Unpair Bluetooth (in Bluetooth mode);

FM station (in FM Radio station mode); press and

11. [▶▶I] key: Next track (in Bluetooth mode); tuning up

12. [I◄◄] key: Previous track (in Bluetooth mode); tuning

each bracket, making sure that the holes line up

3. Drill the 4 holes according to step 2.

Ensure that they are inserted securely.

groove located on the back of the unit.

horizonally and are within the length range of the

4. Push the plastic anchor bolts into the holes in the wall.

5. Affix the wall mounting brackets to the wall with the

6. Hang the sound bar on the mounting brackets by the


HOLD for automatic scan (in FM Radio mode)

10. [►II] key: Play/pause (in Bluetooth mode); scan to next

2. [LINE IN] key: Press to select Line In mode

Remote control

6789

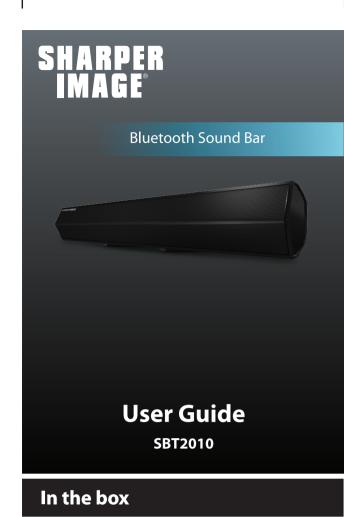



User Guide

Remote Control

2 AAA

Batteries




4 Screws

The Later Spills 4 Plastic





Location of controls

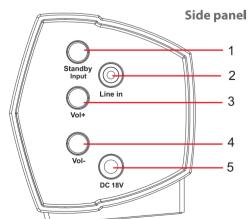

- 1. [STANDBY] button: Power/standby
- 2. Line In: 3.5mm auxiliary jack
- 3. [Vol+] button: Increase volume
- 4. [Vol-] button: Decrease volume
- 5. DC In: Power adapter jack


Pairing the sound bar with a Bluetooth

1. Connect the AC adapter to the DC input jack on the side

- 2. Turn ON the sound bar by pressing the [STANDBY]
- 3. Press the [STANDBY] button on the sound bar or the [BT] key on the remote control until the LED Bluetooth indicator light turns BLUE. A tone will sound, signaling
- within 3 feet of each other during the pairing process. 5. Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices.






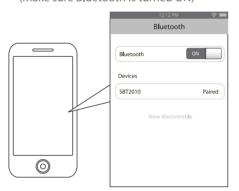


On a Blackberry



Search for devices (Make sure Bluetooth is turned ON)

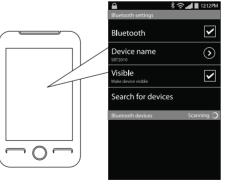



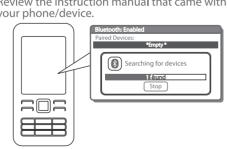

- 6. When the Bluetooth enabled device finds the sound bar, select "SBT2010" from the list of found devices. of the sound bar and plug it into a power source 7. If required, enter the password 0000. Select OK or Yes
- button on the unit or on the remote control.
- that the speaker is in pairing mode. 4. Keep the sound bar and Bluetooth enabled device

mode again

Using your Bluetooth sound bar

8. After a successful pairing, another tone will sound.

NOTE: If you would like to connect the sound bar to

another device, you must unpair the sound bar from the

currently paired device first. On your device's Bluetooth

settings, select "SBT2010", then select "unpair"; or press

the [BT/FM] key on the remote control. When the sound

bar has been unpaired, it automatically goes into pairing

to pair the two units.

- 1. Connect the AC adapter to the DC input jack on the side of the sound bar and plug it into a power source.
- 2. Press the [STANDBY] button on the unit or on the remote control until the LED indicator light is RED to keep power in Standby mode.

Repeatedly press the [STANDBY] button on the sound bar or the respective keys (see "Location of controls") on the remote control to switch to different modes:

- Standby RED
- Bluetooth BLUE
- FM Radio GREEN
- Line In ORANGE

NOTE: Please wait 1-2 seconds between pressing remote control keys to ensure functionality.

Adjusting the volume

- Quickpress the **[VOL+]** button on the soundbar or the remote control to gradually increase the volume; press and HOLD to continually increase the volume to maximum level.
- Quickpress the [VOL-] button on the soundbar or the remote control to gradually decrease the volume; press and HOLD it to continually decrease the volume to minimum level.




Press the [RESET] key on the remote control to restore all settings to factory default settings.

Press the [EQ] key on the remote control to adust equalizer

Playing Music

To enjoy wireless music on your Bluetooth sound bar, make sure you are connected to a Bluetooth enabled device. Once connected you can press PLAY on your Bluetooth device or you can press the [▶||] key on the remote control. Once playback has begun, you can control the music with your Bluetooth device or the remote (with devices that have the AVRCP Bluetooth profile)

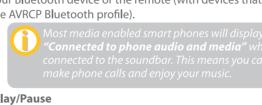

Press the [▶||] key on the remote control to pause music. To resume music playback, press the [▶II] key again.

 Press the [I◄◄] key to skip to previous song. Press the [►►I] key to skip to next song.

Adjusting the volume

- Quickpress the [VOL+] button on the speaker or the remote control to gradually increase the volume; press and HOLD to continually increase the volume to maximum level.
- Quickpress the [VOL-] button on the speaker or the remote control to gradually decrease the volume; press and HOLD to continually decrease the volume to minimum level.



FM Radio mode

- I. Press the [FM] key on the remote control or the [STANDBY] button on the sound bar until the LED FM Radio indicator light turns GREEN.
- 2. Press the [►►I] or [I◄] keys on the remote control to manually tune up/down through radio stations.
- 3. Press and HOLD the [►II] key to automatically scan through all available stations. Press the [▶II] key again to
- select a radio station while scanning. 5. Press the [BT/FM] key to select the previous station.



Using as a wired speaker

Using the 3.5 mm auxiliary cable

- [STANDBY] button on the sound bar until the LED Line In indicator light turns ORANGE.
- Plug one end of the included 3.5 mm auxiliary cord into

Using the 3.5mm RCA cable

- 1. Press the [LINE IN] key on the remote control or the [STANDBY] button on the sound bar until the LED Line In
- 2. Connect the red and white plugs of the included 3.5 mm RCA cable into the audio output jacks on your TV.
- 3. Connect the other end of the 3.5 mm RCA cable into the





8. You may have to unpair the sound bar by pressing the [BT/FM] key on the remote control, then re-pair to your

- beginning the pairing process.
- button on the soundbar until the LED Bluetooth indicator
- 3. The sound bar is now in pairing mode.



- . Make sure the Bluetooth Sound Bar is turned ON before beginning the pairing process.
- 3. Press the [BT] key on the remote control or the [STANDBY]
- button on the sound bar until the LED Bluetooth indicator liaht turns BLUE 4. Check that YOUR device's Bluetooth feature is turned ON.
- bar with a Bluetooth enabled device".

Safety instructions

- 1. Read these instructions
- 2. Keep these instructions
- Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
- A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- the apparatus.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use storms or when unused for long periods of time.



- 13. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as powersupply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. WARNING: The mains plug is used as a disconnect device: the disconnect device shall remain readily operable.
- 16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.
- 7. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



xclamation point within an equilateral triangle is intended to alert the user to the presertant operating and maintenance (servicing) instructions in the literature accompanying

Additional warnings and precautions

Battery shall not be exposed to excessive heat such as sunshing ire or the like. Danger of explosion if battery is incorrectly eplaced. Replace only with the same or equivalent type Batterie (batterie ou piles installées) ne doit pas être exposée à une chaleur excessive comme le soleil, le feu, etc. Danger d'explosion si la pile n'est pas remplacée correctem remplacer que par le même type ou un type équivalent.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

procedures other than those specified may result in hazardous radiation exposure. WARNING: Changes or modifications to this unit not expressly

CAUTION: Use of controls or adjustments or performance of

approved by the party responsible for compliance could void the user's authority to operate the equipment. WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet of this unit may cause

marks or staining where they reside. We recommended using a

protective barrier such as a cloth or a piece of glass between th

unit and the surface to reduce the risk of damage and/or staining WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it

WARNING: Shock hazard - Do Not Open.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the ederal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection uipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

Do not attempt to repair or modify this equipment Warning: Changes or modifications to this equipment not caution when moving the cart/apparatus combination during lightning expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

> (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale). Prepay all shipping costs to the authorized service center,
- and remember to insure your return. • Include a return shipping address (no P.O. Boxes), a
- telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

our product will be repaired or replaced, at our option, for the same similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc. **Attention: Customer Service (2nd Floor)** 14-C 53rd Street Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

- **Customer Support:**
- Phone: 1-877-768-8481 Monday-Friday 8AM-10PM(EST)
- Click on "Product Support

Warranty service not provided

his warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.


Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN NFORMATION GIVEN BY AIT, INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

SHARPER IMAGE

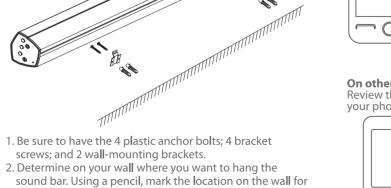



On an iPhone • Go to SETTINGS > BLUETOOTH




• Go to SETTINGS/OPTIONS > BLUETOOTH



On an Android Phone • Go to SETTINGS > BLUETOOTH > MENU >



On other Cell Phones/Devices

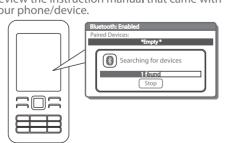

- 1. Press the [LINE IN] key on the remote control or the
- the headphone jack on your device.
- Plug the other end of the 3.5 mm auxiliary cable into the Line In jack on the side of the sound bar.
- indicator light turns ORANGE.
- Line In jack on the side of the sound bar.

Troubleshooting tips

- 1. Make sure your Bluetooth device supports A2DP profile. Turn up the volume on your Bluetooth device.
- 1. Make sure the Bluetooth Sound Bar is turned ON before 2. Press the [BT] key on the remote control or the [STANDBY]
- light turns BLUE.
- 2. Keep your Bluetooth Sound Bar and Bluetooth enabled device within 3 feet of each other during the pairing
- 5. Try repeating the pairing process, see "Pairing the sound

- 3. Heed all warnings.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from
- 11. Only use attachments/accessories specified by the manufacturer.