

EXHIBIT C
User Manual

 
Operating Manual

A wireless keyboard is different from keyboard with wire connection. Please read the installation instructions carefully, to get acquainted with wireless devices.

Hardware Installation:


1. Switch the computer OFF and connect the receiver unit to PS/2 ports on computer. Connect Touch Pad connector (green color) first, then Keyboard connector (purple color).

● **Note :** Do not connect or disconnect the receiver unit while the computer is in operation. It may damage the computer and/or communication ports.

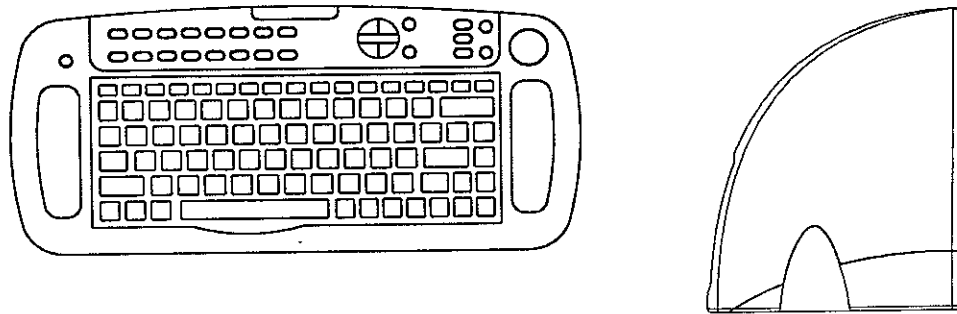


2. Insert Batteries

The wireless "Freeboard 2F" uses two alkaline AAA batteries. Insert the batteries with the poles in the correct direction.

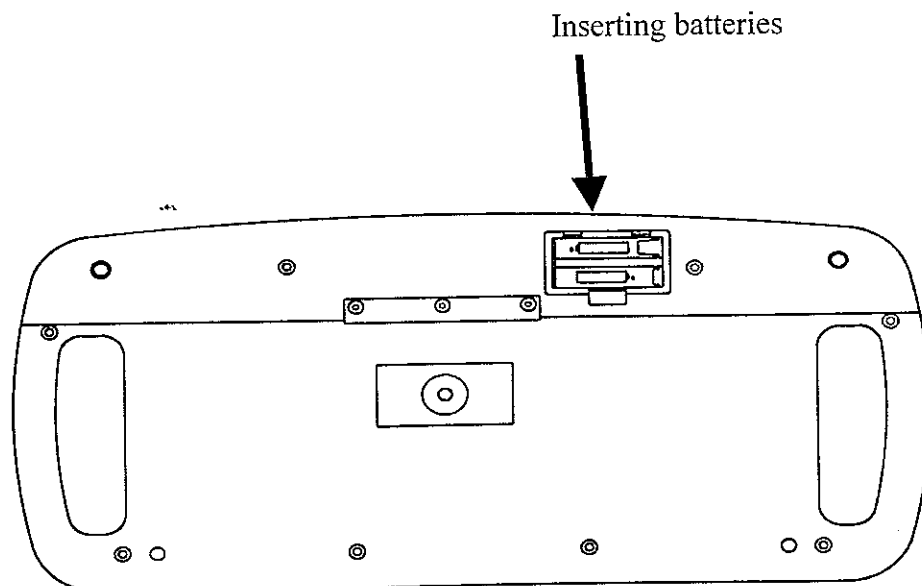

3. Point the keyboard to the receiver within a distance of 1 feet and press any of following keys simultaneously. The “**data status**” LED will blink once. Now, the operation channel is set up. You can use the wireless keyboard now !

CH + Ch1	= CHANNEL 1
CH + Ch2	= CHANNEL 2
CH + Ch3	= CHANNEL 3
CH + Ch4	= CHANNEL 4
CH + Ch5	= CHANNEL 5
CH + Ch6	= CHANNEL 6

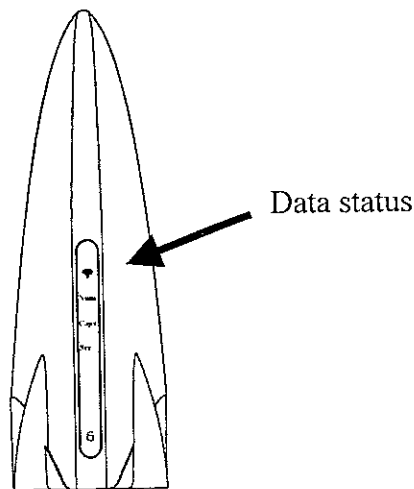


4. Point the keyboard to the receiver within a distance of 1 feet and press any of following keys simultaneously. The “**data status**” LED will blink once. Now, the operation channel is no change, and, one ID code is change. You can use the wireless keyboard now!


ID + F1	= ID 1
ID + F2	= ID 2
ID + F3	= ID 3
ID + F4	= ID 4
ID + F5	= ID 5
ID + F6	= ID 6
ID + F7	= ID 7
ID + F8	= ID 8
ID + F9	= ID 9
ID + F10	= ID 10
ID + 1 !	= ID 11
ID + 2 @	= ID 12
ID + 3 #	= ID 13
ID + 4 \$	= ID 14
ID + 5 %	= ID 15
ID + 6 ^	= ID 16

Key definition:

 1. Internet key

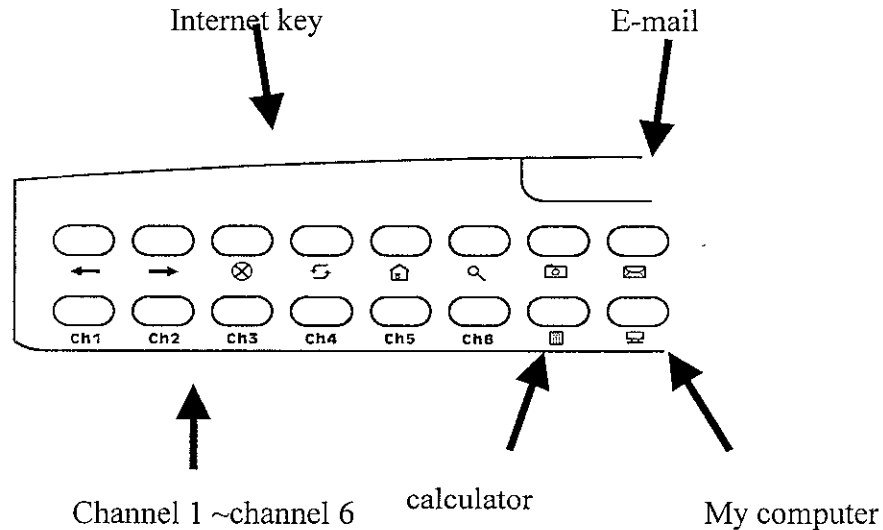

 
2. Multimedia key

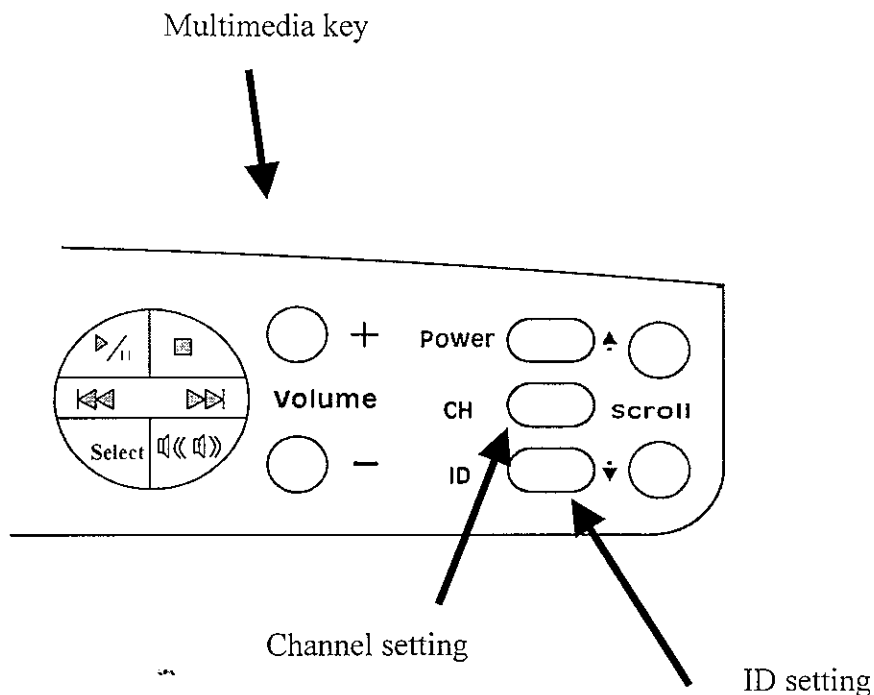


Operation and trouble shooting:

1. If during normal operation the keyboard is subjected to interference, the channel should be changed. To do this, just press the "CH" and "Ch1" to "Ch6" keys simultaneously (please refer to above Hardware Installation 4.). If normal operation still is impossible, repeat this procedure until the keyboard operates in a normal way. A total of 6 channels are available for setting.

 2. The “**lock**” key of the back of the receiver need to be pressed only, when you don’t want to change channel and ID. The “**lock LED**” will light on any time.

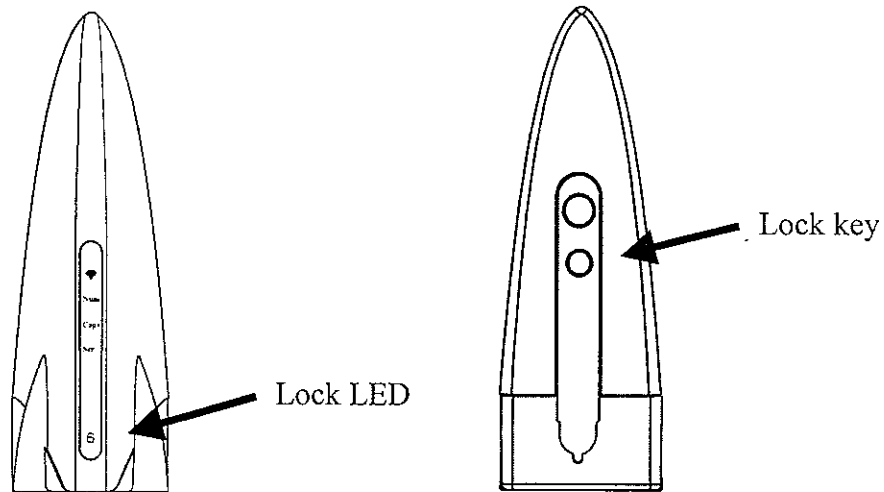

 3. How to do the initial setting. Release the “**lock**” key, the “**lock LED**” will light off. Press the “**CH**”, “**ID**” and “**r**” simultaneously. The keyboard will be on default setting or factory setting(channel 1 and ID 1).

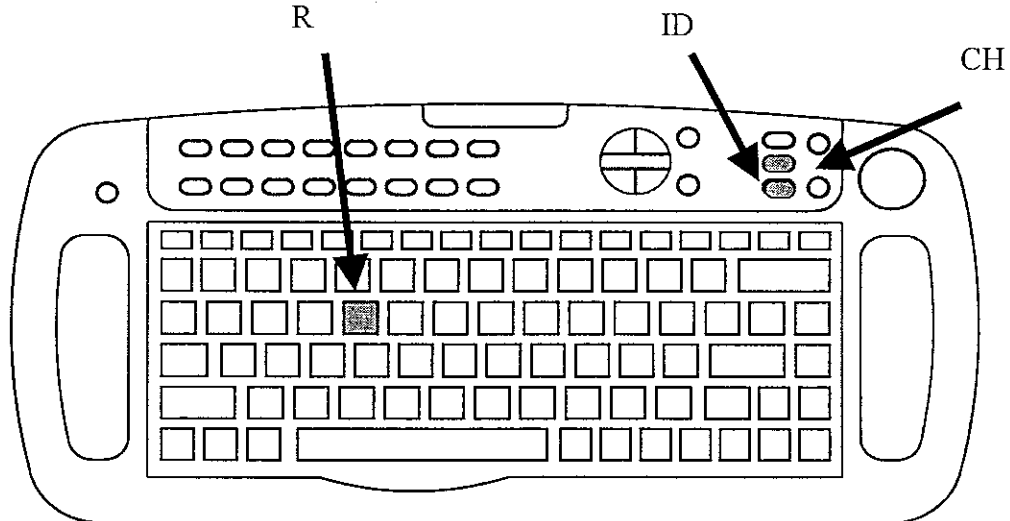

Operating environment:

The Freeboard 2F wireless keyboard has a functional operating distance up to 6 feet. Positions of keyboard and receiver may affect the RF transmission performance.

1. Avoid putting keyboard and/or receiver on a steel desk. This may shorten transmission distance.
2. Avoid putting keyboard and/or receiver within 15 cm from computer or bottom part of monitor which may transmit noise interfering RF transmission.