

User Guide



SP-115C

Table Of Contents

FOR SAFE OPERATION.....	6
INFORMATION FOR SAFE OPERATION	6
ABOUT STORAGE AND MAINTENANCE	6
MENU	7
MEASUREMENT OF RADIO FREQUENCY EXPOSED (ABSORBED SPECIAL RATE INFORMATION SAR).....	8
COMMUNICATION NETWORK SERVICE.....	9
SAFETY ON THE ROAD	9
SAFETY IN HOSPITAL	10
SAFETY IN FLIGHT	10
SAFETY IN PLACES WHERE EXPLOSION IS PREDICTABLE	10
INFRARED EQUIPMENT AND SAFETY	11
ELECTRICAL EQUIPMENT	11
BATTERY AND PARTS.....	12
INSIDE THE PACKAGE	13
HANDSET DESCRIPTION	14
CELLULAR PHONE	15
IN THE BEGINNING	15
INSTALIMENT OF SIM CARD	15
BATTERY CHARGE.....	17
PHONE ON/OFF	18
START	18
STAND-BY SCREEN	20
CALLS.....	25
MAKING A CALL	25
ANSWERING THE PHONE.....	25
WHOLE MENUS	26
COMMON SCREENS AND SYSTEM IN VARIOUS MENUS	27
INPUT PHONE NUMBER	27
WRITER.....	27
WRITER OF PHONE NUMBER	28
WRITER OF NUMBER	28
WRITER OF TEXT.....	29
MULTI INPUT	31
SMART INPUT	31
TEXT SELECTOR	32

Table Of Contents

1.CALLS	33
MISSED CALLS	34
RECEIVED CALLS	35
DIALED CALLS	36
ALL	37
CLEAR CALL LOG	38
CALL TIMER	39
2. STK	40
3. ORGANIZER	41
CALENDAR	41
EVENTS	41
VIEW CALENDAR	44
OTHER EVENT OPTIONS	44
ALARM CLOCK	46
CALCULATOR	47
WORLD CLOCK	48
SETTING WORLD CLOCK	48
GAME	49
4. CAMERA	50
TAKE PICTURE	51
OTHER OPTIONS	52
FIND PHOTO	52
RESOLUTION	52
PHOTO ALBUM	53
IMAGE MANAGEMENT	53
MEMORY	54
5.PHONEBOOK	55
HOW TO ENTER PHONEBOOK	56
FIND ENTRY	57
ADD ENTRY	58
GROUP SEARCH	59
SPEED DIAL	60
MEMORY	61
COPY TO PHONE ALL	62
DELETE ALL	63
OWN NUMBER	64
SERVICE NUMBER	65

Table Of Contents

6. MESSAGES	66
NEW MESSAGE	67
RECEIVED MESSAGES	68
SENT MESSAGES	70
UNSENT MESSAGES	71
ERASE MESSAGES	72
VOICEMAIL	73
SETTINGS	74
CB MESSAGE	75
ADD NEW WORD	76
7. GAMES	77
8.DISPLAY	78
WALLPAPER	79
IDLE SCREEN	80
GREETINGS	81
BACKLIGHT	82
CONTRAST	83
9. SETTINGS	84
SECURITY	85
HOW TO APPLY OR CANCEL PASSWORD	85
3 TIMES OF WRONG PASSWORD INPUT	86
CHANGE PIN 1 & 2	87
SETTING FDN ENVIRONMENT	88
SIM LOCK	89
NETWORK	90
CALL WAITING	91
CALL FORWARDING	91
CALL RESTRICTION	92
CALLER ID	93
SELECT MODE	93
PREFEERED	94
SOUND	95
VOLUME	96
RINGER	96
ALERT MODE	96
KEY TONE	97
ERROR TONE	97
CONNECT TONE	97

Table Of Contents

POWER ON SOUND	97
POWER OFF SOUND	97
LANGUAGES	98
TIME & DATE	99
ANY KEY ANSWER	101
MINUTE MIND	102
KEYPAD LOCK	103
RESET SETTINGS	104
DIRECTIVES OF EUROPEAN UNION	105
DECLARATION OF CONFORMITY	106
WARRANTY	107

● Information For Safe Operation

Please read the following user manual carefully to keep from injuries.

● About Storage And Maintenance

Do not try to disassemble or repair the phone.

Avoid wet and damp places.

Do not use harmful detergent or harmful chemical materials to wash the phone. Instead, use soft cloth to rub its appearance.

Do not inflict strong shock on the appliance.

The appliance shall be situated near the electronic switch for hands to reach easily when the battery is charged. Do not put the phone in high temperature environment, which may cause defects on the phone. The warranty on this phone will be invalid if it is repaired by an unauthorized person. And its maker does not take responsibility for the breakdown caused afterward.

Never extract the battery from the phone while turned on, which will cause defects on the phone. For normal operation of the phone, atmospheric temperature shall be about 25 degrees.

Contact the agency you joined if the phone or its parts (charger, battery, and so on) malfunction.

Menu

1. Calls
2. STK
3. Organizer
4. Camera
5. Phonebook
6. Messages
7. Games
8. Display
9. Settings

● Measurement Of Radio Frequency Exposed (Absorbed Special Rate Information SAR)

This phone is a communication appliance with low-output electric wave. Complying with EU standard requirements related with radio wavelength exposure, the phone has been designed and made not exceeding the energy exposure limit of the radio frequency as recommended by European Union board of directors. The limit specified above is a frequency allowable in general as a world standard.

World standard value was developed, based on thorough and regular scientific researches and estimation (examination) by an independence research institution. The limit is a standard to search for safety of all, regardless of age or present state of health.

Standard value of the phone exposure is displayed in unit of Specific absorption index (SAR).

● Communication Network Service

DIGITAL mobile conforms to the communication standard laws of GSM900, GSM1800, GSM1900 .

Read this user manual thoroughly to understand and learn the functions of this appliance. Customers should know that the trio function (900-1800-1900) is a feature coming from the communication network.

Make sure that this feature is available via the RED exchange service personnel. Additional RED services are available for this phone.

For these services, however, customers are required to join the exchange service.

For further information on How To Join, see below.

● Safety On The Road

Please remember that using a mobile phone during driving is prohibited. Follow the rules as applicable in each country.

Stop the car in a safe place if you need to answer or use the phone.

Please always remember the following before using the phone in emergencies.

Focus on driving only.

Remember the most considerable thing is nothing but your safety.

If you want a Hands-Free device on vehicles, let it installed by an authorized engineer.

● Safety In Hospital

The mobile phone since designed to transmit electric waves can disturb functions of electric or medical appliances.

Remember to turn the phone off always in hospital.

● Safety In Flight

Remember the phone if used in the airplane can disturb functions of electric wave equipment of the airplane.

Therefore, the use of the phone is illegal in the airplane.

Remember to turn the phone off always during flight.

● Safety In Places Where Explosion Is Predictable

In such places as gas stations or chemical factories where explosion is predictable, the use of any electric wave equipment is illegal and prohibited.

Turn off the phone and avoid the use near any gas station.

● Infrared Equipment And Safety

This phone includes infrared transmission equipment.

Do not let infrared rays come in contact with eyes of others nor use together with other infrared equipment.

● Electrical Equipment

Most electric appliances are secured and protected against the effect of the phone radio frequency.

Nevertheless, there are some products that are not protected against.

A person who works in a manufacturing company of those products, wearing heart pulsimeter is desired to keep at least 15cm away from the phone to avoid the electric wave.

If applicable problems still occur as before to the person with heart pulsimeter, then the phone shall be turned off.

The phone can disturb functions of some kind of microphones.

In this case, please contact the manufacturing factory of such microphones for further information.

Since the radio frequency signal generated from this phone may have an influence on electric equipment of a car (air bag, brake, and so on), please be well informed thereof via its maker.

● Battery And Parts

This phone uses a rechargeable battery of Li-Polymer Technology.

The battery if completely recharged is usable to call for a duration of 230 minutes and available for standing-by for a duration of 180 minutes.

Do not use any charger or battery if damaged or worn out.

Do not touch any circuit of the battery. It will cause damage thereon.

If the battery is kept in hot temperature, its function and duration may be deteriorated.

Keep temperature always as similar as possible.

The phone if kept in too high or too low temperature may not operate from time to time even if the battery completely recharged.

Time required to recharge the battery may be different according to several factors such as capacity left, type of battery and charger, and so on. For the better performance of recharge, keep suitable temperature.

The battery although completely recharged can be discharged of itself as the time elapses.

Unplug the switch of the charger if not used.

For effective operation of the phone, please stand the phone always lengthwise.

Do not throw the battery in a ditch or a fire.

The battery shall be recycled according to its related laws.

Use only the battery, charger and parts attached to the phone just as provided from the factory.

Parts shall be compatible to be used.

If not, its warranty will be invalid.

 
If some parts need replacement, contact the agency you joined to order.

Fill up the battery to the maximum prior to its first operation.

Inside The Package




Handset



Battery




 User Manual

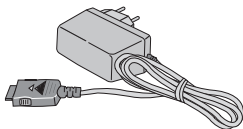

User Manual Charger

 Handset Description

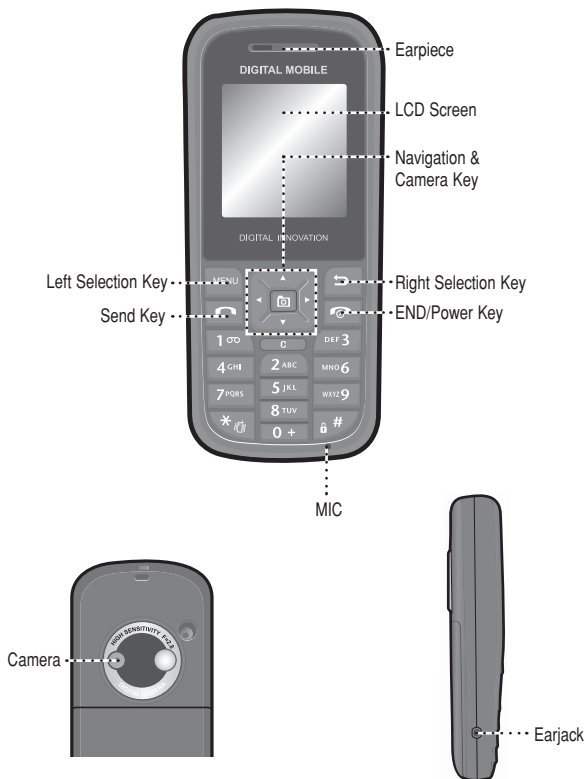


● In The Beginning

Instalment Of SIM Card

To answer the phone or to call, DIGITAL mobile needs a available SIM card, which the communication company may have installed already.

Note If DIGITAL mobile is used, installation state of the SIM card will be displayed. If the SIM card is not installed, a confirmation paragraph will be displayed.

 
1. Remove the battery after pulling the hook outward with DIGITAL mobile turned off. The battery since adhered to the cover will come out as one component.

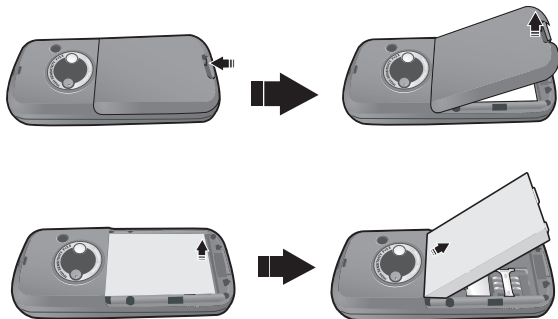

2. After the battery is removed, insert the SIM card to the hole. At this moment, make sure the corner of card fits well on the rim of the hole so to insert the card, checking the remaining aspect. Insert SIM card as shown in the following figure.



 3. As for the two holes, make sure the cover on the rear fits well to insert the battery. Finally, keep pressing the lower of the cover till it sounds Tic.

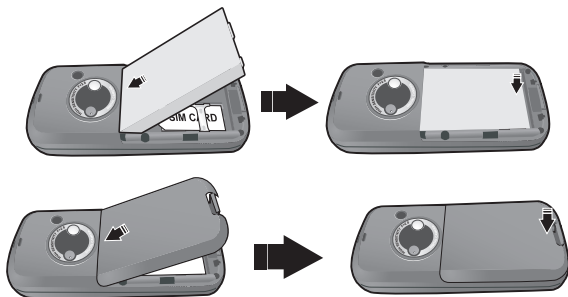

4. Pull the hook and insert the cover and the battery.


Note: Follow these procedures or some defects may occur on the support parts of the entrance, which will not be guaranteed.

Battery Charge

1. Insert the charger as shown in the figure. The screen will display the Battery is being charged while the phone is turned on for several seconds before returning to the previous step. (your phone is available even during the battery is charged). If the phone is turned off, display of Battery is being charged will be continuously displayed.
2. If the charge is completed, the screen will be as shown in the figure. To remove the charger hold and press the both ends to extract.



● Phone ON/OFF

Keep on pressing the End Key  for 5 seconds to turn on the phone. This function is designed to avoid unintentional ON or OFF of the phone when kept in a pocket or luggage.

Start

If PIN enable setting on after the phone is turned on, you will be required to input 4-digit password. Input correct password and press Select Key.



Note: If password is not input, only emergency call will be available with SOS Key.

In case the phone has been off for long, you may be asked to make sure if date and time are correct.

If they are not correct, press edit Key.

 
If the date is correct, press Select Key.

If the date is not correct, input new date using the number on the Key pad and then if the time is not correct, input new time and then press OK Key.



Stand-by Screen

Note For about 1 minute and 30 seconds after the phone is on, its image and menu may be displayed a little slower than usual. This delayed time is for environmental setting of the menu. And the menu will not be displayed during this duration. After this duration, the speed will be back to normal. Stand-by screen is displayed when the phone is available to answer or use to call.

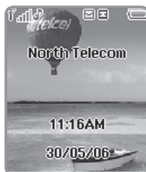

- **Central Part:** If the phone is not available yet for services, bumpy paper type of background is displayed, where main menus are displayed here too.
- **Lower Part:** On the top, time . On the bottom, day, month, year.



- Press the left selection Key located below the menu in stand-by screen state so to display the main menu.
- Press the right selection Key located below the Call Logs menu in stand-by screen state so to display the Call menu.
- Press the upper of the direction Key in stand-by screen state so to display the Messages menu.
- Press the lower of the direction Key in stand-by screen state so to display the Special menu.
- Press the left of the direction Key in stand-by screen state so to display the Phonebook menu.
- Press the right of the direction Key in stand-by screen state so to display the Game menu.
- Press the OK Key in stand-by screen state so to display the Camera menu.












The direction Key will be used mainly to appropriate functions of the phone.

- Keep on pressing End Key in stand-by screen state to turn off the phone.
- When the screen is in a normal state, press Send Key to display the call record.
- In order to make a call, press number first in stand-by screen state and the call Key next. Keep on pressing one number among 2 and 9 and a call to the number as input will be made. In the following table, various functions are described as applicable when number keys are pressed for short or long in stand-by screen state.

They are company mode and individual mode, where a relevant SIM card mode will appear if any password is input in stand-by screen state. Company mode and individual mode have their own numbering system respectively.


	Short	Long
1	No.1	Call connected to voicemail box
2	No.2	speed dial
3	No.3	speed dial
4	No.4	speed dial
5	No.5	speed dial
6	No.6	speed dial
7	No.7	speed dial
8	No.8	speed dial
9	No.9	speed dial
0	No.1	Symbol +
*	Symbol*	Manner Mode
#	Symbol#	lock keypad


Dual SIM card: Dual SIM card has 2 passwords and 2 relevant modes respectively.

Icon	Name	Description
	Antenna	Always displayed to show service area if reached.
	Service Available Level	Always displayed to show service available level (0 to 5) in a bar graph.
	Service Available Level A	The greatest service available level with the maximum bars.
	Bell Mode	There are 5 modes available (sound only, vibrate only, sound after vibrate, sound with vibrate, silence).
	Roaming State	Displayed while user is in other service area or receiving a call abroad.
	New Message	This will be displayed when a new message is received.
	New Multimedia Message	Displayed when a multimedia message received.
	New Voice Message	Displayed when a new voice message is received.
	Battery	Battery charging level - the more blocks, the stronger the charge.
	Alarm	Displayed if alarm is set via the calendar.
	Battery Charging	

● Calls

Making A Call

To make a call, press desired phone number in stand-by screen state and then Call Key .

If you input wrong number, Clear Key  to delete the last number input. In order to delete a specific number, move the cursor right behind the number to delete (press the left of OK Key) and then press End Key.

Press End Key  to finish the call.

In the stand-by state of the phone, input number to display the following screen.




If the inputted phone number is displayed, just press Save Key and specify a save folder.

If SIM card or the memory of the phone is displayed automatically, specify a related type of the phone too. (Refer to the user manual for more detailed procedures)










Answering The Phone

Press Call (receive) Key  to answer the phone call.

Press End Key  not to answer the phone call.

● Whole Menus

In the stand-by state, press the menu Key to go back to standard menu. Press the direction Key (up/down/left/right) to get into menu desired. While pressing the menu Key, press relevant number to get into the category applicable. Figures of the icons, names of the categories, brief description of each menu and short-cut keys are as in the following table;

Icon	Menu	Description
	Calls	To look through call record and voice messages sent and received.
	Special	To use the Function in the SIM card.
	Organizer	To use calendar, calculator, downloading program, information on various events meeting, birthday), etc.
	Camera	To deal with camera and image album.
	Phonebook	To save phone numbers.
	Messages	To read and write text messages.
	Games	To select new video games.
	Display	To specify display.
	Settings	To specify volume, calling melody, background image and other environment of the phone.

● Common Screens And System In Various Menus

 
Input Phone Number

When you start inputting number in stand-by state, the number will be displayed, moving from right to left as it is inputted. If the number input reaches the end of the right, the number will move to the upper line to prepare a space for the next numbers to input.

During inputting number, the screen will be as shown below.

In order to insert a number between numbers just entered, use the direction Key (up/down/left/right) to move the cursor.

Press Clear Key to delete the number on the left of the cursor.

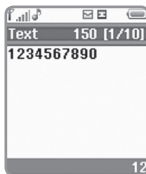

Writer

Writer is used to input phone number, text or number.

All kinds of writers (phone number, number, text) have their own functions respectively.

Writer Of Phone Number

It is used to input phone number from the phonebook. Above all, press number in stand-by screen state to get into the screen of writer function. 0 ~ 9 are available to enter, which has the following features.

- Keep pressing 0 to display + character.
- Press <*> and <#> to input characters of <*> and <#> respectively.
- Press CLR Key to delete the last number input. Keep on pressing End Key to delete the whole number input (whole number) and to return to stand-by screen state.
- Press OK/Save/Enter Key (menu displayed on the left of the screen) to go to next step. Press Previous Key to go back to the previous step of the screen.
- Press direction Key (up/down/left/right) to move the cursor to the direction as designated.

Writer Of Number

It is used to input password 1, password 2 and call-restricted password. Press the following keys to make use of its functions specified.

- Use the keys 0 to 9 to press such number 0 to 9 as applicable.
- <*> Key has no function.
- # Key is used to display the decimal point, excepting in the screen of password 1 and 2.
- Press CLR Key to delete the last number input. Keep on pressing END Key to delete the whole number input.
- Press select Key to go to next screen. Press Previous Key (CLR) to go back to the previous screen.
- Press the direction Key left or right to make the cursor move to the direction as indicated.

Writer Of Text

It is used to input text of names or messages. There are 4 input methods for text writer.

 
- Capital letter input: displays all the input text in capital letters. This can be used together with Multi Input and Smart Input which will be later described.
- Small letter input: displays all the input text in small letters. This can be used together with Multi Input and Smart Input.
- Capital & Small letter input: In case with Multi Input accompanied, this will change the text if once input by user, to small letters automatically. In case with Smart Input accompanied, this will make the first letter be a capital letter, and the rest be small letters automatically.

In case with Number Input (1), number input is available fast. (Press number 0 to 9 to display 0 to 9 as applicable, and press # Key to display the decimal point.)

Note: Press <*> shortly to change input sequence as follows;
AB, ab, Ab, 1.

Input method is displayed between the two menus in the center of the bottom line of the screen.

(See below):

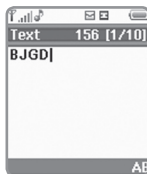

As described above, there are two input methods.

- Multi Input (Multiple Input)
- Expected Input (Smart Input)

Note: Keep on pressing <*> Key in text writer to change to other input method.(Multi Input - Expected Input and Numeric mode)`

Note: Keep on pressing <#> Key in text writer to change to symbol input mode.

In the Expected Input method, the method is underlined.

In case with the two accompanied, it will be displayed as below.

Multi Input

This method operates differently according to the language specified. If Spanish has been specified, following text will be displayed when you press one numeric Key repeatedly.

Key Press	1a Press	2a Press	3a Press	4a Press	5a Press	6a Press	7a Press
1	Space	,	.	?	!	1	
2	A/a	B/b	C/c	2	Á/á	À/à	Ç/ç
3	D/d	E/e	F/f	3	É/é	È/è	
4	G/g	H/h	I/i	4	Í/í	Ì/ì	
5	J/j	K/k	L/l	5			
6	M/m	N/n	O/o	6	Ñ/ñ	Ó/ó	Ò/ò
7	P/p	Q/q	R/r	S/s	7		
8	T/t	U/u	V/v	8	Ú/ú	Ü/ü	
9	W/w	X/x	Y/y	Z/z	9		
0	Space	*	#	0			
*							
#							

 
Smart Input

This makes fast text input available. With the improved technology of (Press and Expect), a function to expect is realized, making use of the dictionary prepared in the language specified. In this way the writer provides the serial expected characters of text when the user presses the Key once.

Text Selector

Press # Key shortly in the screen of text mode to display text selector which can display special characters which are not available in general text mode. Move the direction Key (up/down/left/right) on the text desired to select those special characters.

If you select the special character. Press select Key to input applicable character. Characters available are as follows;

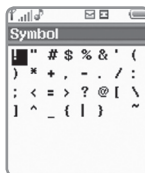


All the input methods and all the languages available in DIGITAL Mobile have been summarized in the following table.

Input Type	Input Method	Mark	Language
Multi Input	Capital	AB	English & Spanish
	Small	ab	
	Capital & Small	Ab	
	Number	1	
Smart Input	Capital	<u>AB</u>	English & Spanish
	Small	<u>ab</u>	
	Capital & Small	<u>Ab</u>	
	Number	1	

1. Calls

 
1. Press menu when the phone is in stand-by state to display options on main menu.
2. Use the direction Key to select a Calls icon.
3. Press select Key. The Calls option in principal menu will be displayed.

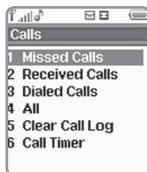

- Missed Calls
- Received Calls
- Dialed Calls
- All
- Clear Call Log
- Call Timer

● Missed Calls

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press Select.
3. On Calls screen, Select Missed Calls and press select to display the following information.

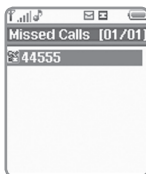


Select a call desired and press option Key to display new menu with the following options;

- **Send Message:** Sends a message (Short or multimedia) to selected number.
- **Save:** Allows you to add new contact to address book conveniently. You should specify where to save information and details of contact name, phone type, etc., as described previously in address book options.
- **Delete:** Deletes selected number from call list, which needs your confirmation. Press Yes Key to confirm Delete Call.

● Received Calls

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press select.
3. On Calls screen, Select Received Calls and press select to display the following information.

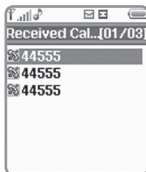


Select a call desired and press option Key to display new menu with the following options;

- **Send Message:** Sends a message (Short or multimedia) to selected number.
- **Save:** Allows you to add new contact to address book conveniently. You should specify where to save information and details of contact name, phone type, etc., as described previously in address book options.
- **Delete:** Deletes selected number from call list, which needs your confirmation. Press Yes Key to confirm Delete Call.

Dialed Calls

On the Call, select Dialed Numbers option and press Select Key to display the list of calls dialed.

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press select.
3. On Calls screen, Select Dialed Calls and press select to display the following information.

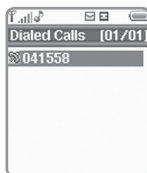


Select a call desired and press option Key to display new menu with the following options;

- **Send Message:** Sends a message (Short or multimedia) to selected number.
- **Save:** Allows you to add new contact to address book conveniently. You should specify where to save information and details of contact name, phone type, etc., as described previously in address book options.
- **Delete:** Deletes selected number from call list, which needs your confirmation. Press Yes Key to confirm Delete Call.

All

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press select.
3. On Calls screen, Select All and press select to display the following information.

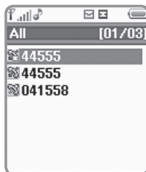

Select a call desired and press option Key to display new menu with the following options;

 
- **Send Message:** Sends a message (Short or multimedia) to selected number.
- **Save:** Allows you to add new contact to address book conveniently. You should specify where to save information and details of contact name, phone type, etc., as described previously in address book options.
- **Delete:** Deletes selected number from call list, which needs your confirmation. Press Yes Key to confirm Delete Call.

● Clear Call Log

This option is used for you to erase all the call lists through call option menu. (Missed, Received, Dialed, All)

It will erase all the record of calls with ease.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press select.
3. On Calls screen, Select Clear Call Log and press select to display the following information.

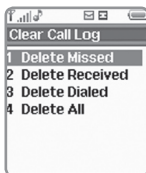


- **Delete Missed:** Deletes all calls in absence saved.
- **Delete Received:** Deletes all received calls saved.
- **Delete Dialed:** Deletes all sent calls saved.
- **Delete All:** Deletes all the lists of calls saved.

● Call Timer

This provides information on calling time used in total (time used for calls dialed and received including the last one). Follow the procedures below to use this option.

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Calls menu then press select.
3. On Calls screen, Select Call Timer and press select to display the following information.

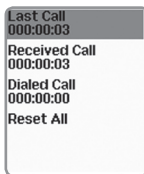

5. Press Back Key to go out of this screen.
6. Press Reset Key and select desired option on the menu below to set the counter to 0 (Zero)
 - **Last Call:** Erases the time used for the last call.
 - **Received Call:** Erases the accumulated time used for calls received.
 - **Dialed Call:** Erases the accumulated time used for calls sent.
 - **Reset All:** Erases all the accumulated time used for calls received and sent.
7. Every option if selected will ask you to confirm.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select STK menu then press select.

Note: It displays the menu that the SIM card could supports.

Calendar

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Organizer menu then press select.
3. Select Calendar on Organizer menu and press select Key.



Main options related with Calendar will be displayed as shown below;

Events

On Calendar screen, select Events option and press OK to display the screen, where you can add, delete or execute an event.

Follow the procedures below to apply this function;

1. On option screen, select Add event and press Select.
2. Go to the screen where you can select the type of event to specify.
 - **Alarm Clock:** Sets an alarm for time Alert.
 - **Meeting:** Sets an alarm for meeting.
 - **Birthday:** Sets an alarm for birthday.
 - **Memo:** Sets an alarm for other types of events.

Note: Definition of each alarm differs a little according to each case as follows;

3. Select an event type among three and press Enter (Up to 20 events can be added. And date and time of the phone are always used when a new event is added).
4. The following describes how to add text for event being specified. A text writing screen will be displayed for you to input 64 characters. After text is written, press Select Key.
5. The next procedure is how to input event date (Default is the present date of the phone). input numbers directly on the key pad so to specify the date.

Note: Setting of starting time only will be enough for an event type of birthdays.

6. Now, Start and End time (when the phone operates the alarm) of desired event shall be set. Use the phone Key directly or Up/ Down Key to input.
7. Now, how many times the event will be repeated shall be specified, where the following options are available. Select a desired option and press Enter.



You don't need to set the period in case of birthday event.

8. Set alarming time to inform you that an applicable event will be open. (Alarming time screen); None, 1 day prior, 30 minutes prior and 15 minutes prior are available, where you can select an exact time option you want. After a time option is selected, press Select. You don't need to specify details as in alarm types or birthday event.
9. Finally, specify the type of alarm to inform you that an applicable event will be open. There are 2 types of alarm available.

a. Visual: Uses blinking light to operate the alarm.

b. Ring & visual: Uses sound and light to operate the alarm.

Select a desired alarm type and press Select to finish all the procedures.

Note: The sound of the time alarm is different from that of the event alarm. When a call is received while an alarm operates, the alarm will stop till the call is finished. In the beginning the alarming bell will go on for 1 minute, and then for 5 minutes if not stopped by user. After the third bell, the alarm will stop then.

The following icons will be displayed on the icon bar of the upper screen when you specify the alarm.

The screen of event alarm is as shown below;

View Calendar

Any event once after specified can be checked everyday through the following options displayed on calendar screen;

- **Events:** Creates or changes events, which is previously described.
- **Scroll All Days:** Checks events displayed on calendar everyday. If this option is selected, the option Key will have names of Next and Previous. Press Next Key to go to next day on calendar, where the day s specified events will be displayed. Press Previous to go to previous day on calendar.
- **Scroll Event Keys:** Shows the event specified date only on calendar. Next and Previous option Keys will be displayed.
- **Today:** Leads you directly to present event. With this option specified, select Option and press Select.

Other Event Options

 
You can execute other operation on calendar menu. Select Event option on the displayed screen and press Select. Then, choose Select and press Select to display the event list arranged, based on specified date and its operation time (See the figure below).

- **Edit:** Edits specific details related with event (Description, Date, start time, end time, frequency, etc.)
- **Delete:** Deletes selected event. You will be asked to press Yes to confirm).

Note: Factors to be written for event are different according to its type. That is to say, all kinds of events do not have the same factors. See below;

- **Alarm:** Description, time and date.
- **Meeting:** Description, date, start time, end time, frequency, alarm type, alarm time.
- **Birthday:** Description, date, time and alarm type.
- **Memo:** Description, date, start time, end time, frequency, alarm type, alarm time.

Return to calendar menu, select Event option and press Option Key to display the list familiar to you, where event options are available, however, some are not mentioned yet.

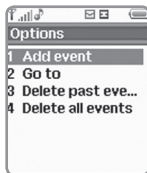


- **Add Event:** You can add a event.
- **Go To:** Goes to the date designated on calendar in order to see the event set on the date described.
- **Delete Past Events:** Deletes all the events which happened before today. Select this option and press OK. Then you will be asked to confirm.
- **Delete All Events:** Deletes all the events specified, which will ask you to confirm.

Press Back Key to return to previous menu (It is the fastest route to get out of the calendar menu).

● Alarm Clock

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Organizer menu then press select.
3. Select Alarm Clock on Organizer menu and press select Key.

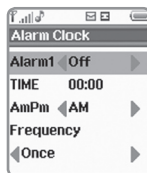


- **Alarm:** Select On or Off.
- **Time:** Setting time with number key.
- **AmPm:** Select Am or Pm.
- **Today:** Select Once, Monthly, Weekly, or Daily.

● Calculator

SITRONICS mobile calculator helps you to perform basic calculation work. Follow the procedures below to use the calculator.

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Organizer menu then press select.
3. Select Calculator on Organizer menu and press select Key.

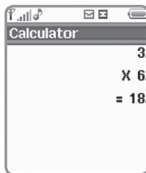

- Use number keys to input numbers desired.
- Use # key to display a decimal point.
- Use * key to make a negative number.
- After desired number is input, press up/down Navigation key to input the signs of +, -, x and ÷.
- Input the first number and then the second number to calculate.
- To get the result of the calculation, press left select Key.
- You can use the acquired result to apply to other calculation with up/down navigation key Keys. This calculator does not support simultaneous multi-calculation. You should divide the object into several in such a case and then perform each calculation in due consideration of calculation priority.

Press right select Key to return to previous screen.

World Clock

The World Clock can be used to check the Time of the Capitals in the world.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Organizer menu then press select.
3. Select World Clock on Organizer menu and press select Key.



Setting World Clock

 


- **Save**
- **Set DST:** Setting DST.
- **Date Format:** Select date format (D/M/Y, M/D/Y, or Y/M/D).
- **Time Format:** Select time format (24Hour or 12Hour).
- **Date:** Setting date.
- **Time:** Setting time.

● Game

Follow the procedures below to go to Games menu.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Organizer menu then press select.
3. Select Games on Organizer menu and press select Key.

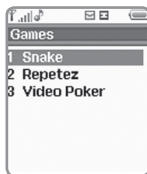


- Snake
- Repetez
- Video Poker

4. Camera

The multimedia menu has a function related with taking pictures with digital camera built-in DIGITAL mobile.

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Camera menu then press select.

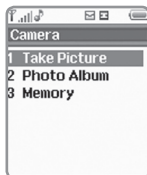

- **Take Picture:** To take a picture with DIGITAL mobile.
- **Photo Album:** Displays list of images taken by the built-in camera.
- **Memory:** Total and Used memory

● Take Picture

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Camera menu then press select.
3. Select Take Picture on Camera menu and press select Key.

There are Two methods to take a picture with DIGITAL mobile.

- **Enter Via Main Menu:** On the menu screen, select camera . Press Enter again. If the camera operates anyway, let the phone stand lengthwise with its number pad downward, then catch hold of an object to take a picture of using the direction Key (ensure that camera controller is located at the rear central upper of the phone) and press OK in the center to take a picture.
- **Hot Key:** In stand-by screen, press camera key on the center of the direction Key to initializ camera mode.

- Note:**
- Wait a few seconds for the digital sensor to adjust to digital tone of color when starting camera operation, which will make the quality of images excellent.
 - Sound similar to the shutter of a camera will be heard for you to feel the same as with the actual camera when the moment a picture is taken. If you want to delete the picture just taken, press Cancel and return to camera mode. On the contrary. if you want to save the picture, press Camera Key to save in the album.

Other Options

The camera built-in DIGITAL mobile includes functions of digital zooming and glossy adjustment. If the camera starts to operate, the following icon will be displayed on the option below the screen (see Take a picture).

- You may enter camera setting option described above.
- If you want to enlarge or reduce image size, select the upper Key (Enlarge image). You can enlarge the image 5 times gradually. Pressing the upper again at the maximum zooming will lead to the minimum zooming function. The maximum zooming is available based on the size-related environment specified. (5 times of zooming will be available as described)
- Brightness can be adjusted higher or lower. If you want to apply this function, select left selection Key.
- Effectiveness can be adjusted to each mode(eg. Normal, Black and White, Sepia, etc). If you want to apply this function, select right selection Key.
- If you press right selection Key and select the icon, the camera mode will be cancelled and multimedia menu will be displayed again.

Find Photo

Find Photo in Photo List

Resolution

Sets the resolution of images (4 levels available):

(VGA(640X480), QVGA(320x240), LARGE(128x112), SMALL(128*96).

● Photo Album

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Camera menu then press select.
3. Select Photo Album on Camera menu and press select Key.

It easily allows you not only to see, save or delete images taken but also to change their names as follows;

Image Management

These images will be arranged in date/time sequence. On the list, select any image you want to work on and press Option to display the following menu;

- **Delete:** Deletes selected images.
- **Delete All:** Deletes all images.
- **Rename:** Writes or edits names of images with name writer.
- **Wallpaper:** Image use to wallpaper.

● Memory

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Camera menu then press select.
3. Select Memory on Camera menu and press select Key.

In address book, phone number, name and other information are saved and displayed.



There are three points of contact in address book.

1. **SIM:** Information related with contact is saved in SIM memory only.
2. **Only The Phone:** Information is saved in phone memory only.
3. **Double (copy):** Name and phone number of these contacts are saved in SIM memory and phone memory.

Besides, there are two address books.

1. **Phone Memory:** Shows all contacts saved in SIM memory and phone memory.
2. **SIM Memory:** Shows double-saved contacts in both sides and information saved in SIM memory only.

A special icon represents each contact.

In this way, SIM contact uses SIM card-shaped icon  , and the next icon  is used for phone contact.

The followings are several rules used in address book.

- As specified, address book displays whole address book on the screen to show all contacts.

● How to enter Phonebook

There are two methods to get into whole address book.

1. Press the left selection Key in background screen.
2. In the basic menu screen, press Select Key while Phonebook icon is selected.



To make a call, select the one desired and press Call Key .
Or find the entry to call directly on the list. Press only the first letter of the contact desired to call to display in alphabetic order all the names which have the letter in front.

Press option Key up/down (any Key if selected and kept on pressing, the selected one keeps on going up or down) to show option list which can be selected.

The options are as follow;

- Find Entry
- Add Entry
- Group Search
- Speed Dial
- Memory
- Copy To Phone All

 
- Delete All
- Own Number
- Service Numner
- Smartcom

The function of each option is as follows;
In order to select one of them, select direction Key first and then press Select Key.

Find Entry

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Find Entry on Phonebook menu and press select Key.


This option is used to search for other contacts on the contact list.
On the screen write more than 1 characters of the contact name to find.
If written, the applicable name with the same characters is displayed.
Now you may search up and down to find the name on the list.
For example, press No.2 Key to fast reach names with the first character of C.
If there is no name with such a character, the Key will show names with the next character (in alphabetical order).

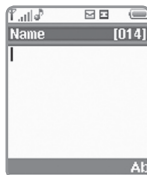

● Add Entry

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Add Entry on Phonebook menu and press select Key.

 This option add entry to phonebook. Select this option to display the following screen

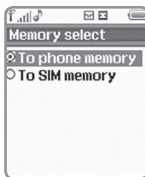

Note: New contact can not be made directly to whole address book. For this operation, you should make it first in SIM or phone address book and then copy the contact to address book next. Select In phone memory to make contact in address book. Select In SIM memory to save contact in card. Select option as desired and press Select Key.

Note: Press * (asterisk) to specify phone using capital or small letters or shortcut Key. (Ab - change capital to small; 1 - number, AB - all capital, ab - all small) Press Previous Key to display option screen again. Use numeric keys to write name and then press OK Key to save it. Press this Key to display address book screen.

Input number with numeric keys and then press OK Key to save this number in memory and to display option screen of type. From here select the type of the phone number (home, mobile, work, fax) and press Enter Key. Press Previous Key to return to address book screen again and the name just input will be displayed.

● Group Search

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Group Search on Phonebook menu and press select Key.

specifies group of contacts. The group of contacts means a meeting for user to send call and message to at once. For example, if one group is classified into family, friends, co-workers, etc., you may use this option conveniently to send the same message to all the members of a specific group as classified.

Specify groups as applicable to receive group messages.

 
Up to 8 groups available.



● Speed Dial

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Speed Dial on Phonebook menu and press select Key.

If this option is applied, you can make a fast call. Select number and then press it to make a fast call thereto in stand-by state.

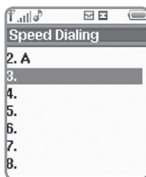


Individual phone number can be set to each number Key of 2 to 9.

● Memory

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Memory on Phonebook menu and press select Key.

 This option is used to confirm the capacity and the condition of SIM card or phone memory.

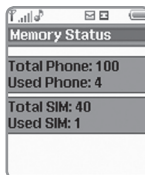

On the state window, the following information is provided.

- Phone Memory (up to 100 available)
- SIM card Memory (up to 40 available)

● Copy To Phone All

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Copy To Phone all on Phonebook menu and press select Key.

 
Used to copy selected contact. You should copy only the name and number of contact as expected.



Delete All

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Delete All on Phonebook menu and press select Key.

Deletes all contacts saved in selected address book (All Phonebook, Phone, SIM, or Group).

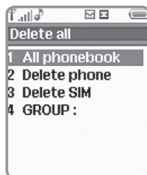


● Own Number

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Own Number on Phonebook menu and press select Key.

My phone number(s) is saved in special address book inside SIM card. Select My Number option on the phone call service menu and press Enter to have access to this function. (If not informed of this route, please ask from the first).

 All the lists of phone numbers belonging to Own Number will be displayed (For example, cell phone number, fax number, etc.).

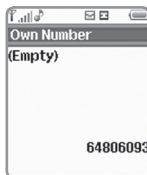

Press Select

- a. Add:** Adds new phone number onto list.
- b. Edit:** Writes or changes name added to the specific number or other number.
- c. Delete:** Deletes selected phone number. Press Enter to finish.

● Service Number

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Phonebook menu then press select.
3. Select Service Number on Phonebook menu and press select Key.

Select service number then press Call Key.

The menu defined as message allows new message, received messages, sent messages, unsent messages, erase messages, voicemail, settings, CB message, and add new word to environmental services for messages.

Follow the procedures below to connect to message menu.

1. Press the left selection Key in background screen.
2. In the basic menu screen, press select Key while Messages icon is selected.



The options on this menu are as follow;

- New Message
- Received Messages
- Sent Messages
- Unsent Messages
- Erase Messages
- Voicemail
- Settings
- CB Message
- Add New Word

The following is about text messages, multimedia messages and options related with environmental settings.

● New Message

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select New Message on Message menu and press select Key.
4. Typing shot Message then press select Key.



5. The options on this menu are as follow;
 - **Send Only:** Send a message to a specific receiver only.
 - **Save Only:** Saves text which is not yet sent in phone memory.
 - **Send+Save:** Send message then save message in phone memory.
 - **Text Template:** Select message.
 - **Add Picture:** Allows user to insert picture in a message.
 - **Add Animation:** Allows user to insert animation in a message.
 - **Add Sound:** Allows user to insert sound in a message.
6. Go to Address writer separately specified and input Number as desired then press select Key.
7. Select Yes or No.

● Received Messages

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select Received Messages on Message menu and press select Key.





Press View Key to confirm the new text message, and press Back Key to return to the previous screen.

Select Open to display the received message including senders received date and time, and its details. (See the figure below)

5. Press option Key to display message option screen.

- **Reply:** Displays Write Text Screen to replay to the message received. Write message as desired. If you want to know how to write and send text message (SMS), refer to <New Message>.
- **Forward:** Delivers the received message to others. Input the phone number directly thereon or select a receiver on address book. Then press Select Key.
- **Delete:** Delete selected.
- **Delete All:** Delete all messages.

- **Cut Address:** Allows you to make use of the phone number saved in the text message received.
- **Save Number:** Save phone number.
- **Call:** Makes a call to message senders number. Press option Key to display the menu where Save address book, Make a call, Send number using MMS or SMS, and Send SMS & MMS message are available.
-  : This icon means that the message in the Inbox is not read yet.
-  : This icon means that the message in the Inbox is read already.

● Sent Messages

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select message menu then press select.
3. Select Sent Messages on message menu and press select Key.



Press View Key to confirm the new text message, and press Back Key to return to the previous screen.

Select Open to display the received message including senders sent date and time, and its details. (See the figure below)

4. Press option Key to display message option screen.

- **Send:** Resend this message.
- **Delete:** Delete selected.
- **Delete All:** Delete all messages.

● Unsent Messages

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select message menu then press select.
3. Select Unsent Messages on message menu and press select Key.



Press View Key to confirm the new text message, and press Back Key to return to the previous screen.

Select Open to display the received message including senders sent date and time, and its details. (See the figure below)

4. Press option Key to display message option screen.

- **Send:** Resend this message.
- **Delete:** Delete selected.
- **Delete All:** Delete all messages.

● Erase Messages

Deletes all messages saved (All, Received Box, Sent Box or Unsent Box).

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select Sent Messages on Message menu and press select Key.

 


- **All:** Delete all messages.
- **Received Box:** Delete messages in received box.
- **Sent Box:** Delete all messages in sent box.
- **Unsent Box:** Delete all messages in unsent box.

VoiceMail


It is an automatic answering machine (run by communication company) saying Please, leave your message for me to call back when the call can not be answered or the phone is out of service area or turned off. Follow the procedures below to enter the voice box.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select VoiceMail on Message menu and press select Key.

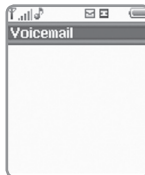


you may hear instructions if connected to the number you joined. And if any of those is unavailable, an error message will be displayed on screen of the phone.

 In case a call is made to voice mailbox, you will see the following display;

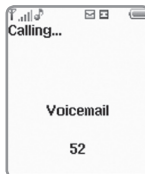

● Settings

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select Settings on Message menu and press select Key.

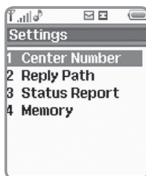

- **Center Number:** Specifies number of message center. It is the phone number of the center for you to call in order to send or receive messages. Its service provider shall specify this number previously.
- **Reply Path:** Makes the application of the center on or off as necessary to send or receive messages.
- **Status Report**
- **Memory**

● CB Message

Group message means a text message which will be sent to all the members who have joined the communication company.

(Messages for common interest, ads, PR, etc., as displayed on the main menu of the phone) These messages will be sent to all the phones located in designated places with the applicable channel setting.

 
1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select message menu then press select.
3. Select CB Message on message menu and press select Key.



- **Reception:** Allows you to receive group messages if this option is selected. (Default is set to off)
- **Channels:** Defines a channel to receive this kind of messages. Select a new channel from the list to display on screen and use option Key to execute. If you want to add a new channel to list, select any channel and press option Key and then Add. Input new channel number to number writer and press OK Key (Up to 3-digit number is available and the number shall be surely input. If not, channel setting will not be available) The Write option of sub-menu edits name and number assigned to the selected channel on the list. Up to 10 channels are available.


● Add New Word

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Message menu then press select.
3. Select Add New Word on Message menu and press select Key.

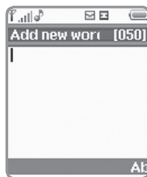

7. Games

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Games menu then press select.

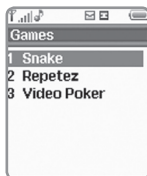

- Snake
- Repetez
- Video Poker

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.

Option list of Settings menu is as shown below;



- Wallpaper
- Idle Screen
- Security
- Greetings
- Backlight
- Contrast

● Wallpaper

On the phone screen, select wallpaper option. On wallpapers screen, select an image.

 
1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.
3. Select Wallpaper on Display menu and press select Key.



● Idle Screen

Select screen mode.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.
3. Select Wallpaper on Display menu and press select Key.

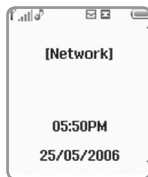

● Greetings

This is used to specify an initial greeting which will be shown on the screen for a few seconds when the phone is turned on (How to set is described as shown below).

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.
3. Select Greetings on Display menu and press select Key.

 


- **Set:** Select on or off.
- **Edit:** This may or may not show text messages. Select a proper option and press OK. Select On and press OK to input a text message you want to display on the screen of the phone when it is turned on (up to 20 characters available). After desired text is input, press OK.

● Backlight

Backlight the display (5 seconds, 10 seconds, 15 seconds, 30 seconds, or Always on).


1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.
3. Select Backlight on Display menu and press select Key.

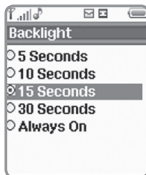

● Contrast

Use the Left / Right direction Key to select contrast.

 1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Display menu then press select.
3. Select Contrast on Display menu and press select Key.

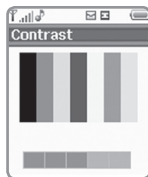

In Settings menu, you can specify all appearances of DIGITAL : (for Security, Network, Sound, Languages, Time & Date, Any Key Answer, Minute Minder, Keypad Lock) Follow the procedures below to get to Setting menu.

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.

 
Option list of Settings menu is as shown below;



- Security
- Network
- Sound
- Languages
- Time & Date
- Any Key Answer
- Minute Minder
- Keypad Lock
- Reset Settings

● security

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Security on Settings menu and press select Key.

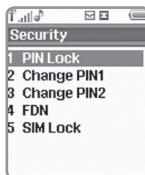

How to apply or cancel password

Password input screen will appear whenever the phone is turned on if password has been specified. Correct password shall be input in order to use the phone (See the figure below).



Note: Correct password of 4 digits shall be input.

3 times of wrong password input

The phone will warn you that it would be the last chance for you to have access, displaying <One more incorrect password will close the password input screen>.)The password while input will be displayed in black dot on the screen to keep from exposed. 3 times of wrong password input will display PUK screen. PUK (personal unlocked password) is of 8 digits necessary to cancel SIM card. If PUK appears, press Confirm. Before the phone confirms PUK just input, you should input a new number. If they are identical, the phone will cancel the lock and you should remember the password just inputted. If PUK number is inputted incorrectly, all the procedures above shall be repeated.

Retrying is available for 10 times. More than 10 times will make your card keep locked till repaired only by the communication company.

While the PIN and PUK is input, press SOS Key to connect to emergent call. In order to make password required whenever the phone is turned on, select PIN lock option and press Select to get to PIN lock screen. Select On and press Select to input password.

If the message <Input password> is displayed, input 4-digit password of the phone (You have 3 chances only as described) and press Select Key. If password is correct, Password executed will be displayed.

If you want to cancel the password which was once set, go to PIN Lock screen and select off. Then press Select Key and input correct password.

Change PIN 1 & 2

1. Select Change PIN 1 or 2 on Security screen and press Select (See <Setting security environment> for the route to this option).
2. A message will be displayed, saying <Input old PIN>. Then input the previous password and press Select (You have 3 chances only. If the third password is incorrect again, the phone will be locked).
3. A message will be displayed, saying <Input new PIN>. Then input new 4-digit password and press Select.
4. A message will be displayed again, saying <Verify new PIN>. Then input new 4-digit password again and press OK. If they are identical, your password has been changed. If they are not identical for 2 times, a message <You must enter same PIN> will be displayed, which means restart of the process from the beginning.

Note: Password 1 and 2 are of the identical system as described above.

Setting FDN Environment

Restricted call list is used to restrict the call only to specific phone number. On Security screen, select FDN option and press OK to display FDN screen with 2 options as follows;

- **FDN Only:** Decides to execute fixed phone as necessary. However, its default is Inactive. In order to execute this function, select On and press OK, where you will be asked to input correct PIN 2 (You have 3 chances only. If the third password is incorrect again, the phone will be locked). Now, press OK Key. If PIN 2 is correct, FDN call mode will operate and allows the call to be connected only to the number in FDN address. If you want to cancel this mode, follow the same procedures as above.
- **Numbers:** Specifies the number allowed to call when Only FDN mode is set active (which will be saved in FDN address book). Select Numbers option and press OK to display the list of existing phone numbers. If you want to add other number or cancel, press Option to display the following list for your easy access.

SIM Lock

Lock SIM card is used to keep the phone from robbed. If environment of the phone is specified only for a specific SIM card, it will not be compatible with any other SIM card.

The phone will have specific SIM code when SIM code of a specific SIM card is saved in phone memory. When the phone is turned on and when SIM card is inserted in the phone, it will be checked if identical to SIM code saved in the phone. if not identical, 112 emergency call mode only is available. Select Lock SIM option and press Select to specify Lock SIM card.

SIM Lock setting screen has the following options.

 
- On
- Off

Note: 3 chances are allowed for you to input correct PCK code. If all failed, PCK will be locked and you shall turn the phone off and then on.

Note: If you try to turn the phone on with different SIM card while SIM is set locked, the phone will show a message <This is an invalid SIM card>. Emergency call only will be available again.

● Network

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Network on Settings menu and press select Key.

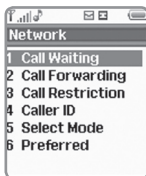

- Call Waiting
- Call Forwarding
- Call Restriction
- Caller ID
- Select Mode
- Preferred

Call Waiting

This service is used to make other call stand by while a precedent call is connected, which can be applied or cancelled as necessary. On Network screen, select call waiting option and press OK to display call waiting screen.

- **Activate:** Activate Call Waiting call option.
- **Cancel:** Cancels Call Waiting call option.
- **Status:** Displays the status of Call Waiting call.

Select state option and press Enter to show the state of stand-by call.

Call Forwarding

On Network screen, select call forwarding option and press OK to display call waiting screen.

- **All Calls:** Receives all types of calls selected.
- **Busy:** Receives all calls selected even during you are connected with other phone.
- **No Answer:** The service provider shall specify the number of bells to make In-absence mode active if call is not answered.
- **Unreachable:** Receives all calls sent even if out of service area.
- **Cancel All:** Cancels all the previous options if all the type of calls received is specified.

Once after the type and the number of calls received are specified, you should execute the applicable option.

First,

1. On the voice menu, select one of the present options (Unconditional, Busy, No answer, Unreachable) and press OK.

2. Select Activate to perform Received Call on the displayed menu. In addition, select Activate to specify calls received, select Cancel to cancel and select State to know the state of call received. And then press Select.
3. Select Activate and press Enter to display the following options;
 - **To Voicemail:** If this option selected, calls will be sent to the voice box number as specified in your phone.
 - **To Phonebook:** If this option selected, calls will be sent to the single phone saved in address book. Select this option and press Enter to display details of address book.
 - **To Other Number:** If this option selected, calls will be sent to designated number (number writer will be displayed where up to 21 digits are available).

Call Restriction

This makes calls be sent and received only under the specified conditions.

- **All Outgoing:** Restricts All outgoing calls, which is controlled by password.
- **Int'l Outgoing:** Restricts All outgoing calls to abroad, which is controlled by password.
- **Int'l Expect Home**
- **All Incoming:** Restricts All incoming calls which is controlled by password.
- **Inc When Roam**
- **Cancel All:** Cancel All the pre-setted restricts at a fine, which is controlled by password.

- **Change Password:** In order to change password for call barring, select change password option and press select. then input the correct existing password first and then new password twice(it is to confirm that the new password is correct).

Caller ID

This will let you know the number and the name from which call is sent.

- **Show Caller:** Shows senders phone number.
- **Hide Own:** Hides my phone number for its receiver not to see.

Select Mode

On Network screen, choose select mode and press OK to display select mode screen with 2 PLMN communication network options.

- **Automatic:** PLMN of desired communication network list can be selected automatically. The highest frequency of PLMN will be always selected.
- **Manual:** While this option is selected, frequency of available PLMN communication network can be selected by hand. If this option is executed, Search screen will appear to search for all available PLMNs.

ROM of the phone if reserving PLMN information will display its name.

Or national codes for communication network will be displayed.

After such a communication network is selected, the phone will try to enter the communication network. The cell phone if registered completely will be in stand- by state. If not, the cell phone will display a list for you to search for other communication network.

Prefeffered

It helps you to define PLMN list in preferred sequence.

Select Preferred on Network screen and press OK (See < Setting communication network environment> for the route to this option>).

Preferred is as shown below;

 
PLMN communication network connected will be displayed on this screen in preferred sequence.

Available option Keys are as follows:

- **Insert:** Allows you to attach communication network code preferred. Input 5 digits of communication network code and press OK Key. The code just specified will be input in front of the communication network code specified prior to this process.
- **Move:** Moves a code onto other list. First, select a desired code and press option Key. Then select Move and press OK. On Table of contents screen, a location desired on the list shall be specified. Press OK Key to finish.
- **Delete:** Deletes desired communication code from communication network list. Select communication network code to delete from the preferred. Choose its option and press Delete and Enter. Then press Yes to confirm.

● Sound

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Sound on Settings menu and press select Key.

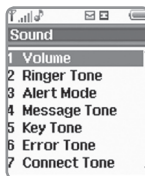

- Volume
- Ringer Tone
- Alert Mode
- Message Tone
- Key Tone
- Error Tone
- Connect Tone
- Power On Sound
- Power Off Sound

Volume

Select Volume on Sound screen and press OK.

Sets volume from Earpiece and Ringer for hearing. Select applicable option and press Select. Press the upper direction Key to turn the volume up, or the lower to turn the volume down. After the volume is set, press Select to return to volume menu.

Ringer

Select Ringer Tone on Sound screen and press OK.

Sets melody for received call. Select this option and press Select to display My melodies (melody 1~10).

Alert Mode

Select Alert Mode on Sound screen and press OK.

Set the sound mode when the phone operates.

- **Ring Only:** Alerts(Ring) only with sound when you have a call or/and operates the phone.
- **Vibrate Only:** Alerts(Ring) only with vibration when you have a call or/and operates the phone.
- **Ring + Vibrator :** Alerts(Ring) sound with vibration when you have a call or / and operates the phone.
- **Silent:** No Alerts(Ring) except LED blinking when you have a call or / and operates the phone [Sound in games, Alarm].

Alert Mode

Select Alert Mode on Sound screen and press OK.

Allows you to apply or cancel the sound function operated whenever the message is received. (On, Off)

Key Tone

Select Alert Mode on Sound screen and press OK.

Allows you to apply or cancel the sound function operated if a Key is pressed. Each Key has an individual tone. Select off option if you want to make no sound when a Key is pressed.

Error Tone

Select Alert Mode on Sound screen and press OK.

Allows you to apply or cancel the sound function operated if an error occurs on the phone (Default is set on).

Connect Tone

Select Alert Mode on Sound screen and press OK.

Allows you to apply or cancel the sound function operated whenever your phone is connected to the other.

Power On Sound

Select Power On Sound on Sound screen and press OK.

Allows you to apply or cancel the sound function operated whenever your phone is power on to the other.

Power Off Sound

Select Power Off Sound on Sound screen and press OK.

Allows you to apply or cancel the sound function operated whenever your phone is power off to the other.

● Languages

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Languages on Settings menu and press select Key.

 


- Auto
- English
- Spanish

● Time & Date

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Time & Date on Settings menu and press select Key.

- **Date:** Select this option and press OK to edit the date on the phone.
Write new date on designated form (DD/MM/YYYY). With number key, write down Day (2 digits), Month (2 digits) and Year (4 digits), and press Select Key to confirm the change and return to previous screen. If you want to cancel the change or return to previous screen, just press back without pressing Select.

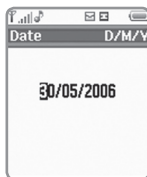


- **Date Format:** Select this option and press Enter to edit Date form displayed on the phone, where 3 options are available.
 - **D-M-Y:** Established form (day-month-year)
 - **M-D-Y:** Form in English (month- day- year)
 - **Y-M-D:** Commonly used form in communication (year- month-day)

Select a desired form and press Confirm to return to previous option screen.

- **Time:** Select this option and press Select to edit Time displayed on the phone. With number key, change Time as desired and press Select Key to confirm the change and return to previous screen. If you want to cancel the change or return to previous screen, just press Back without pressing Select.

 Note: If you try to turn the phone on with different SIM card while SIM is set locked, the phone will show a message <This is an invalid SIM card>. Emergency call only will be available again.

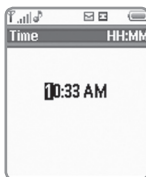


- **Change Time Format:** Select this option and press OK to edit Time form displayed on the phone, where 2 options are available.
 - **24 hours:** It is an established option, where time is displayed 00:00 to 23:59 regardless of AM or PM. If you want this option, select Option and press Confirm to return to previous screen.
 - **12 hours:** This option is based on 12 hours system, where 00:00 to 12:00 of AM and PM (before and after noon) is displayed. If you want this option, select Option and press OK to return to previous screen.

Any Key Answer

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Any Key Answer on Settings menu and press select Key.

 Starts connection if active to any call when any Key on the pad is pressed. This option can be made on or off (Press Select Key to have access to this option).

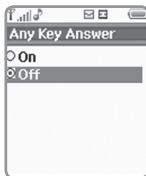

Minute Mind

 
1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Minute Mind on Settings menu and press select Key.

If this is selected, the call received will be automatically answered.



● Keypad Lock

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Keypad Lock on Settings menu and press select Key.

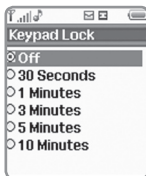

- Select off, 30 seconds, 1 minutes, 3 minutes, 5 minutes, or 10 minutes.

● Reset Settings

1. In stand-by state, press menu Key to display main menu option.
2. Use the direction Key to select Settings menu then press select.
3. Select Reset Settings on Settings menu and press select Key.

If you want to go back to initial environment after some environmental settings have been applied to the phone, simply select reset setting option and press Select to display Reset setting to default?. Select Yes or No as necessary.



Note: If once the initial setting is recovered, all the saved environment information will be deleted.

Directives Of European Union

Your SP115C is authorized to be used in the GSM network. It meets the following directives of the European Union:

- a. The ETS 300-342-1 <Electromagnetic Compatibility> (CEM) for European digital mobile radio-communication system
- b. Meets the basic requirements of European Directive 1999/15/EC.
- c. 73/23/EEC (Directive of low voltage) as amended in 93/68/CEE.
- d. Meets the ETSI version for GPRS
- e. Meets the ETSI version 1996 for GSM
- f. Meets the SMG numbers 30 bis, 31, 31 bis and 32.

Technical Specifications

Physical Parameters

- **Weight:** less than 78 grams including standard battery.
- **Dimension:** 83(118) X36X21mm

Battery

- **Type:** Lithium Polymer
- **Capacity:** 710mAh
- **Load time:** Maximum 4 hours
- **Standby time (DRx=):** Up to 150 hours in standard mode, and up to 330 hours in saving mode.
- **Talk time:** 210 min

CAMERA

- **Resolution:** 1.3 MEGAPIXEL

RF Characteristic

- GSM Triband 900/1800/1900 or 850/1800/1900.

Exception Of Quality Warranty

This warranty will be void in the following cases;

1. In case the product is misused or used for other purposes than specified in the present safety standard of its applicable country, or any instruction described in the manual is violated.
2. This warranty does not include normal defects unavoidable during use.
3. This warranty does not include normal defects unavoidable on plastic, paint, Key pad or antenna.
4. DIGITAL is not liable to any defect caused by repair, change, or technical support provided by unauthorized service center or person, or any defect caused by other accessories than original. The original accessories are to be manufactured by Skyspring&Vitelcom and certified by DIGITAL.
5. This warranty does not include defects on personal paint or parts.
6. Battery and charger will be guaranteed for 6 months only. If the battery is charged through other charger than DIGITAL, this warranty will be void.
7. In case of defects caused by robbery, theft, thunder, fire, moisture, flood, electric waves of other equipment, electro-magnetic variables, electric wire, or natural disasters.
8. If the serial number is removed from the product, or erased, or illegible.

Separately from the legal warranty, those clauses above are the only resource for its maker or dealer to use in case of defects. In addition, this warranty excludes other warranties tacitly related with goods sales. DIGITAL has a right to hand over the freight expense (caused by delivery to service center) to user.

Conditions For Complete Warranty

The quality of the product will be guaranteed by its provider DIGITAL for a period of one year upon purchased against defects or abnormal operation due to faulty materials or workmanship, when authorized engineer can repair or change the defective parts based on his judgment. If the customer is not satisfied with the result or the product falls still short of the optimum performance, the customer has a right to exchange the product for an equivalent one or to ask an equivalent refund to the product only providing that DIGITAL as the subject of quality warranty is informed of such fact within 10 days after the product repaired.

The person in charge of quality warranty shall pay back all the expenses paid first for the product and the phone card to complete the refund of the product.

During the warranty period, all the replaced defective parts will belong to the manufacturer.

Any customer who wants to make a protest against the warranty is to present the followings;

- a) The customer able to read, shall present the original warranty where purchase date, purchase shop, type of product, serial number, IMEI number, accessories manufacturing date and code are described, and the original statement of tax account.

DIGITAL considers that the period of quality warranty on the product is for 12 months after the date of purchase. The agent shall repair all the defective parts or product free of charge (parts, labor).

Safety Information

1 . SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS

.POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

INTERFERENCE TO MEDICAL DEVICES

Certain electronic equipment may be shielded against RF signal from your wireless phone. (pacemakers, Hearing Aids, and so on) Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. RF signals may affect improperly installed or inadequately shielded electronic system in motor vehicles.

.EXPOSURE TO RF ENERGY

Use only the supplied or an approved replacement antenna. Do not touch the antenna unnecessarily when the phone is in use. Do not move the antenna close to, or touching any exposed part of the body when making a call.

SAFETY INFORMATION FOR RF EXPOSURE

Body worn operation

This device was tested for typical body-worn operations with the back of the phone kept 15 mm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 15 mm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.428 W/Kg and when worn on the body, as described in this user guide, is 0.178 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: UDTSP-115C**.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

U.S.A.

U.S.FEDERAL COMMUNICATIONS COMMISSION **RADIO FREQUENCY INTERFERENCE STATEMENT**

INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if Not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- *- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- *- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.