

Smart Lock

User Manual

T1-TTB



Special Attention:

1. Mechanical keys please keep outdoor, just in case keys lock in doors.
2. Please replace for the battery when low wattage alarm.
3. Reading this manual carefully before installation, and keep it for future reference.

1. Introduction

1.1.Lock structure



1.2.Packing List

💡 Check the following drawing to check whether the package contains all the parts

| NO | Name | Qty | NO | Name | Qty |
|----|----------------------------|---------|----|--|-----|
| 1 | Front Pane | 1 | 9 | M4*30mmScrew Stubs: for Front Panel Lower (Need 2) | 3 |
| 2 | Back Panel | 1 | 10 | M4*40mm Screw Stubs: for Front Panel Upper (Need 1) | 3 |
| 3 | Mortise:Latch | 1 | 11 | Mortise Screws:25*4mm (For Wooden Door) | 4 |
| 4 | Card | 3 | 12 | Mortise Screws:10*5 (For Aluminum Door) | 4 |
| 5 | Mechanical Key | 2 | 13 | M4*12mm Screws For Fixing Back Panel | 2 |
| 6 | Waterproof Rubber Plate | 2 | 14 | M4*30mm Screw for Door Thickness 35-50mm | 3 |
| 7 | User Manual | 1 | 15 | M4*50mm Screw for Door Thickness 50-65mm | 2 |
| 8 | Strike&Strike Box | 1+ 1 | | | |

1.3.Specifications

| | | | |
|---------------------|--|-----------------------|--|
| Suitable for Models | T1 | Doors Applicable | Aluminum door Wooden door |
| Materials | Handle: Zinc Alloy | Working Voltage | 6V/4x AA Batteries |
| Lock Weight | 2.0KG | Door Thickness to Fit | 35-60mm |
| Unlocking Way | Bluetooth Fingerprint(option) Password Card Mechanical key | Data Capacity | Fingerprint: 200 Password: 150 Card: 200 |
| Color | Silver Black | Working Temperature | -10℃-55℃ |
| Low Wattage Alarm | Less than 4.8V | Working Humidity | 0-95% |

1.4.Initialization








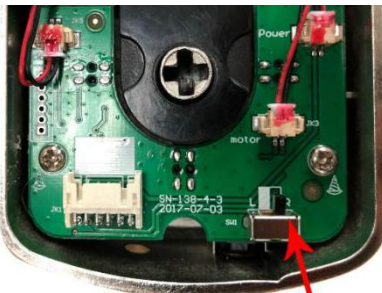


Long press the reset button on the back of the front panel for about 3s,input "000#",the initialization is successful when the buzzer short beep twice.



Reset Button









2.Installation

2.1Confirm opening direction

| | Set The Left Open | Set The Right Open | |
|---|---|--|---|
| 1 |  |  | Spindle always keep horizontal |
| 2 |  |  | Deadbolt always keep pull in |
| 3 |  |  | What is left open? This we called "left open"(show as image) |
| 4 |  |  | Change to "L" or "R" position in the PCB of back panel |
| 5 |  |  | Deadbolt knob |

Attention: Any of above is improper set, will cause problem ! ! !

2.2. Installation Diagram
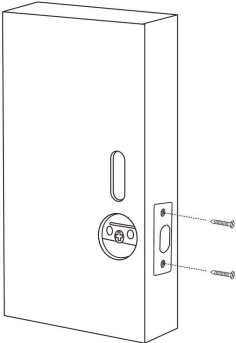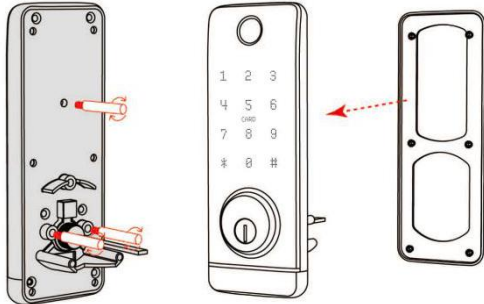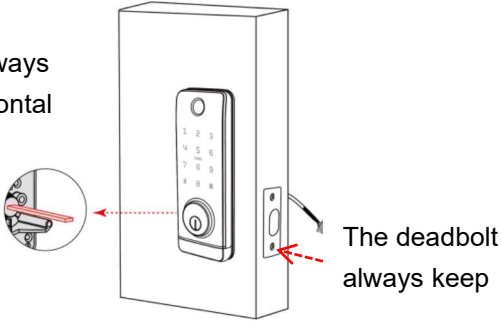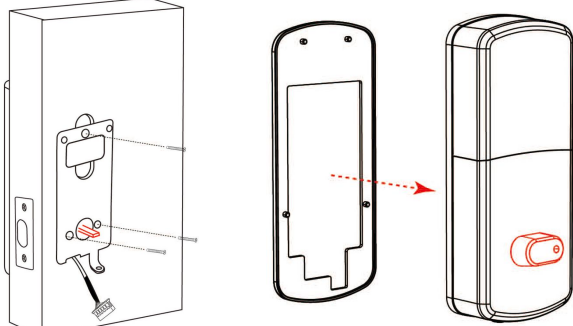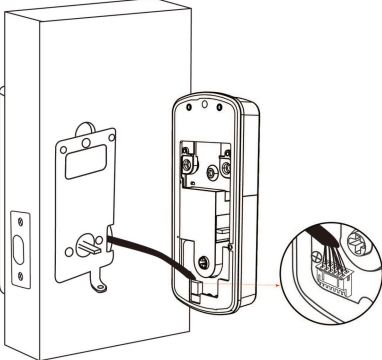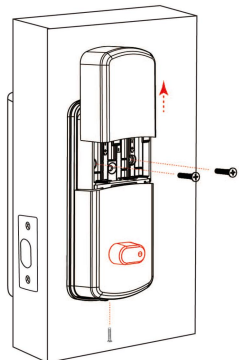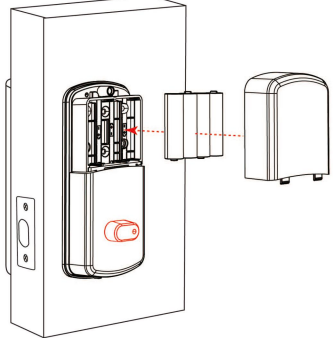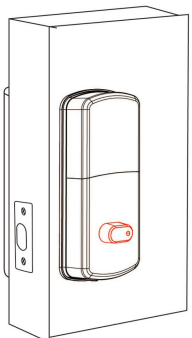
| | |
|--|--|
| <p>Step1 Install Mortise</p> | <p>Step2 Install Screws Casing and Water Rubber Plate</p> |
|  |  |
| <p>Step3 Install Front Panel</p> | <p>Step4 Fixed Front Panel and Water Rubber Plate</p> |
| <p>Spindle always keep horizontal</p>  <p>The deadbolt always keep</p> |  |
| <p>Step5 Connecting Front and Back Panels</p> | <p>Step6 Fixed Back Panel</p> |
|  |  |
| <p>Step7 Install Batteries</p> | <p>Step8 Cover the battery box</p> |
|  |  |

3.Operation

3.1.Registration



The software (iOS version) can be downloaded from the app store, and the Android version can be downloaded from the application store of Google play, Yingyongbao, Baidu, Ali, 360, Huawei, and Xiaomi.

3.2. Connect lock to the phone


- 1) please scan the QR code to download the app
- 2) You can also search for TTLock in the APP store(Google Play)to download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) Touch the lock screen to light, click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re-name the lock
- 8) The lock added successfully

Two side-by-side screenshots of the TTLock app. The left screen is the 'Register' page with fields for 'Phone' or 'Email', 'Country/Region' (set to American Samoa+1684), 'Enter your Phone number', 'Password between 6-20 chars', 'Confirm Password', 'Verification Code', and a 'Get Code' button. The right screen is the 'Login' page with fields for 'Phone number or email' (set to 18520265893) and 'Password', and a 'Login' button. Both screens have a blue header with a back arrow and the app name.

TTlock users can register the account by mobile phone and Email which currently support 200 countries and regions on the world. The verification code will be sent to user's mobile phone or email, and the registration will be successful after the verification.


3.3.Add locks

TTLock supports multiple types of lock devices. The lock needs to be added by the app after entering the add mode. Generally, a lock that has not been added, as long as the lock keyboard is touched, it will enter the add mode. The default password is 123456 if not added by the phone

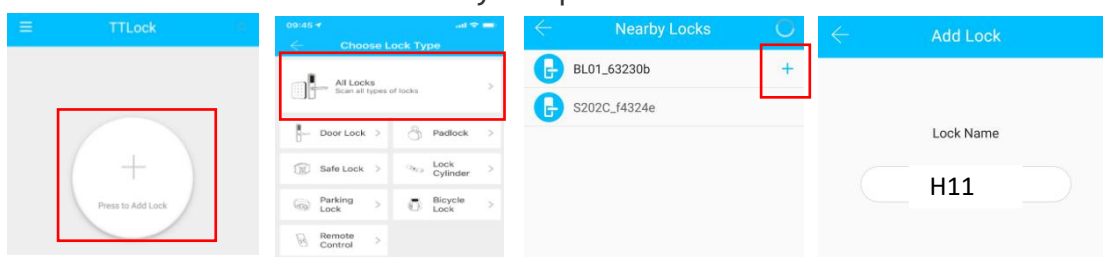


3.4. User Management

3.4.1. Bluetooth management


Make sure there is no problem with Bluetooth communication. After connecting the phone to the door lock as above, Click "  "to unlock.(the phone is within 5meters from the door lock)


3.4.2. Setting Passcode

Passcodes are also a way to unlock. After entering the passcode on the locked keyboard, press the unlock button in the lower right corner to unlock. Passcodes are divided into permanent, time-limited, single, clear, cycle, and custom.(You can share the Passcode to other user via WeChat, SMS, Email, Messenger, WhatsApp)

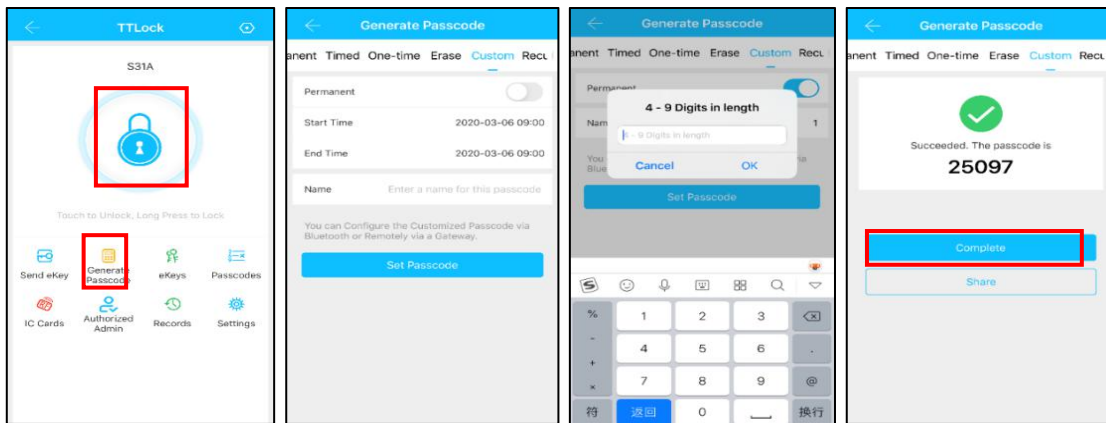


3.4.3. Send e-Key

Click on the "  " as shown in figure, you can send the eKey to other users of TTlock to authorize the unlock(the receiver must be download the APP and set up an account)→ Select e-key format (Timed, permanent, One-time, Recurring) → Enter recipient's account of TTlock,set the name and effective time of the eKey, Can choose to allow remote unlocking or disallowing, authorized administrator or not authorized, as shown in figure →Send→The recipient's account has Bluetooth unlock permission

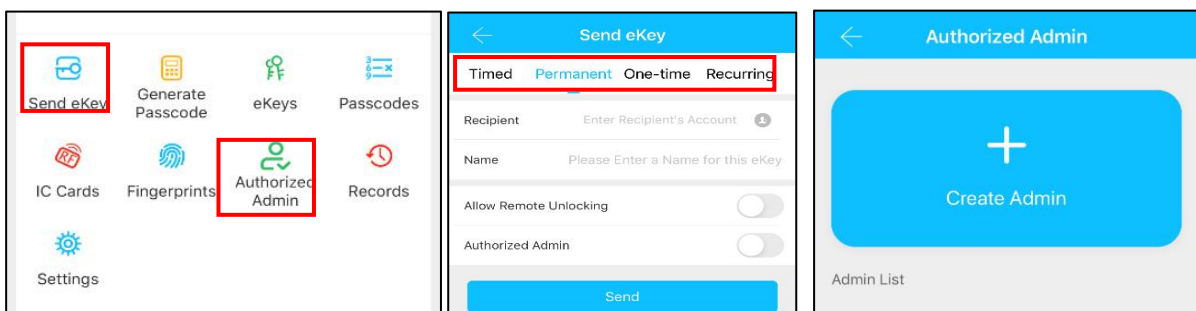


3.4.4. Add card

Supports opening doors through various IC cards. Before an IC card is used to open the door, it needs to be added first. The adding process needs to be performed by the app beside the lock. The validity period of the IC can be set, it can be permanent, or it can be limited in time.

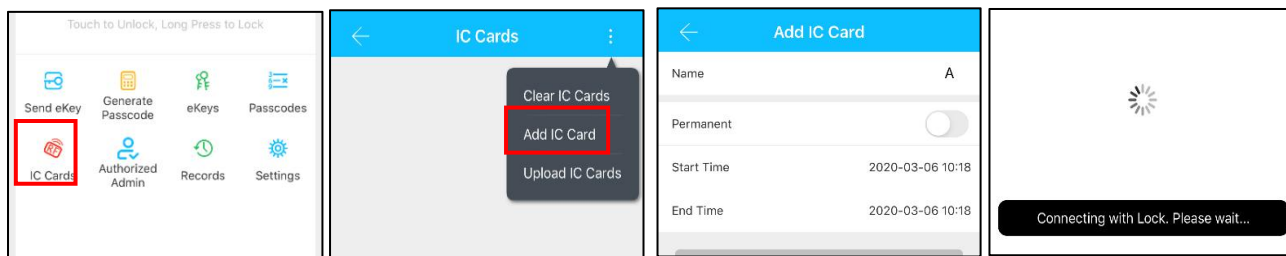


3.4.5. Add fingerprint


The premise that a fingerprint can be used to open a door is that it needs to be added first. The adding process needs to be performed by the APP beside the lock. The fingerprint expiration data can be set, it can be permanent, or it can be limited. After setting, you can modify its validity period.

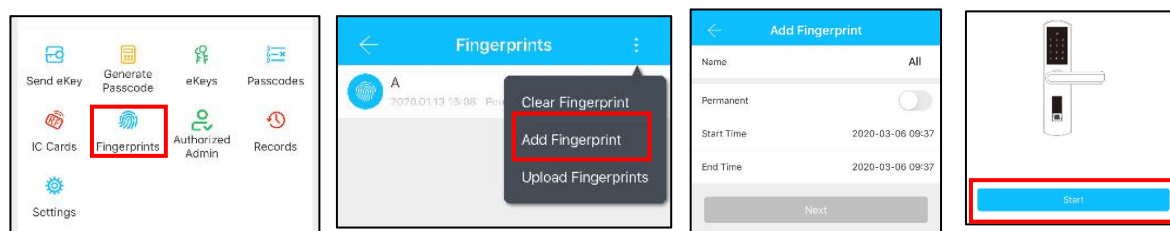


3.4.6. e-Key management


Click "  " The manager can delete ekey, reset ekey, send and adjust the ekey, meanwhile he can search the lock record.

3.4.7. Passcode management

Click "  ". All generated passwords can be viewed and managed in the password management module. This includes a password change, password deletion, password reset, and password unlock record.

3.4.8. Unlock records

Click "  " you can query your unlock record as shown in figure

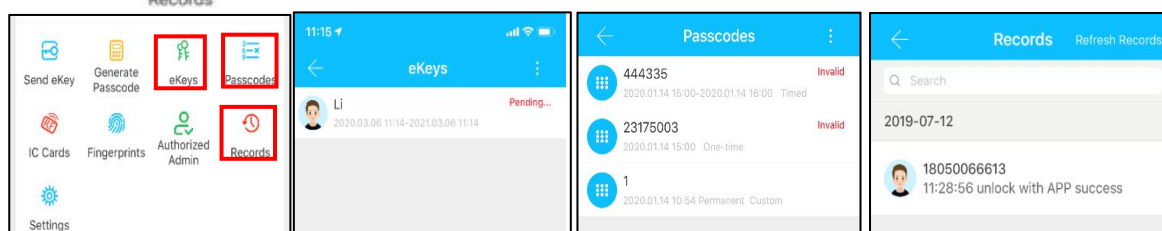

3.5. Gateway management(Optional)

The TT lock is directly connected via Bluetooth, that is why it is not attacked by the network. The gateway is a bridge between smart locks and home WIFI networks. Through the gateway, the user can remotely view and calibrate the lock clock, read the unlock record. Meanwhile, it can remotely delete and modify the password.

3.5.1. Add Gateway

Light Status



When the gateway is powered on:


- Light flashes alternately in red and blue: Stand-by mode, ready for pairing
- Blue light: Working mode
- Red light: Network failure

Pair the Gateway with APP


1 Activate the APP



2 Press "≡"

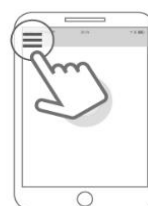


3 Select [Gateway]

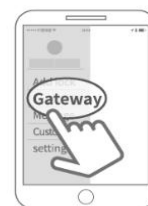

4 Select [G2]



5 Plug in the gateway and power it on, while the light flashes alternately in red and blue

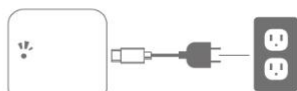

6 Press "+" sign



7 Add Gateway



8 Select the network and fill in the password




9 Add complete

⚠ Notice: If times out, please power off and try it again.

3.6. Electronic Locking Button



Long press the electronic anti-lock button, when it prompts "Operation successful", it means that the door is locked. It can only be unlocked by the administrator app  or by turning the indoor knob. Other unlocking methods are invalid.

4.FAQ

| | | |
|--|---|--|
| Introduction Installation Operation F&Q Appendix | 1) How to read operation records? | In the Records of the main interface. . |
| | 2) Why can't I unlock it after open the passage mode | You need to perform an unlock verification in any method, than the passage mode will take effect. |
| | 3) What is the purpose of Auto Lock | You can set how long to lock after unlocking |
| | 4) After installation, touch sensing keyboard, screen no respond | <p>a) In this case, first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power</p> <p>b) Remove the back panel and see if it's connected.</p> <p>c) To eliminate the above situation, you need to remove the lock ,check whether the wires of the lock body are squeezed, and the re-wire.</p> |
| | 5) Unable to register fingerprint | <p>Check the fingers for dirt or wear, check the fingerprint head on the lock for dirt and oil stains, etc.</p> <p>Check to see if the fingerprint is working properly(Press to see if there is any responds.</p> |
| | 6) What is the reason why the smart lock consumes fast power? | <p>a) Large standby power consumption</p> <p>b) Short circuit</p> |
| | 7) There is no response to pressing the handle on outside the door, and there is unlock normally on inside the door, but the verification is normal, and the motor is normal. | It may be the triangle direction on the clutch was error, please check correction. |
| | 8) How many times will the passcode be locked? How long is it locked? | Enter the wrong password more than 5 times in a row, the keyboard is locked for 5 mins, Other ways to can open the door |

Guarantee

Customer Name: _____

Customer Calls : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- ① Please keep this card so that you can use it when you need warranty service.
- ② We provide you with a one-year warranty from the date of purchase.
- ③ This warranty service is valid for customers in any country in the world.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.