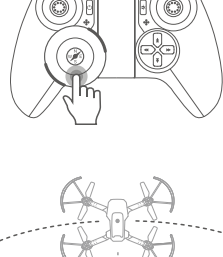
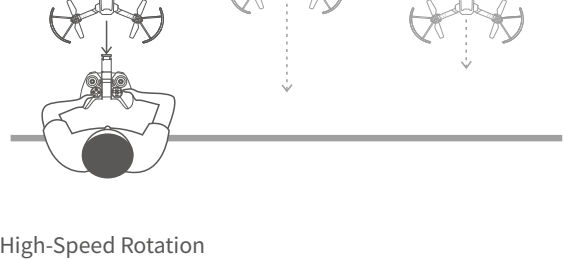


One Key Return

Press and hold the **Q** button, then the drone will return along the parallel direction where the tail of the drone pointed when the drone took off the last time. The LEDs on the drone keep flashing when the drone is returning.

Press and hold the **Q** button again or move the **Right Control Stick** forward to cancel this mode, or the drone will keep flying back.

High-Speed Rotation



Press the **Q** button to make the drone rotate at high speed. Press the button again or move the **Right Control Stick** to any direction to exit this mode.

EN

Circle Fly

In the case of barrier-free within 5m radius around the drone, press the **Q** button to fly the drone in a circle.

Press the button again or move the **Right Control Stick** to any direction to exit this mode.

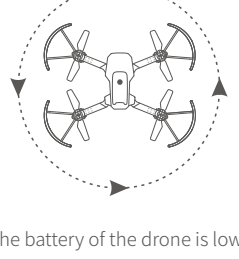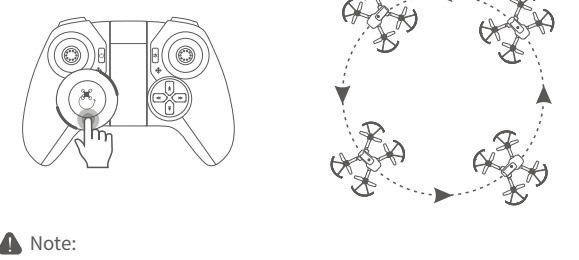Note:


This function can't be activated when the battery of the drone is low.

EN


Photo/Video

Please connect the drone to your mobile device first (refer to Page 19), then go to the App **Dynalog Casper** to check your photos and videos.

Press the **Q** button to take a photo.

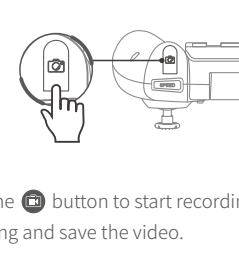

Press the **Q** button to start recording a video; press it again to stop recording and save the video.

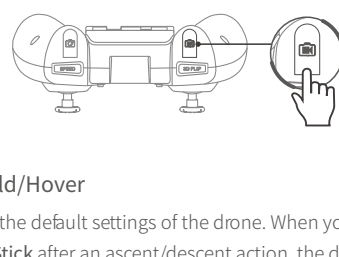

Altitude Hold/Hover

This is one of the default settings of the drone. When you release the **Left Control Stick** after an ascend/descent action, the drone will hover at the current flight height. For a stable flight, press the trim buttons to adjust accordingly.

Emergency Stop

Press and hold the **Q** button, then the drone will stop in the air and fall.



EN

App Operation Guide

1. App Downloading and Installation

Download and install **Dynalog Casper** into your mobile device from **App Store™/Google Play™** or by scanning the QR code below.

App's QR Code

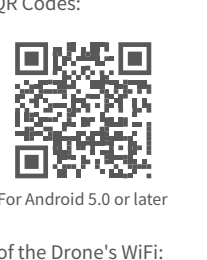For Android 5.0 or Later For iOS 8.0 or Later

Name of the Drone's WiFi: DR-DF1008-B***** or DR-DF1008-W*****

Note:

Google Play™ is a trademark of Google Inc., and App Store™ is a trademark of Apple Inc.

EN

2. Link the App with the Drone

Step 1

Press and hold the **ON/OFF** button till the drone's LEDs start flashing to turn on the drone. Then place the drone on a flat surface with the head forward.

Step 2


Go to the Wi-Fi settings of your mobile device and connect to the drone's Wi-Fi (please refer to the "Name of Drone's WiFi" mentioned above).

Tip:

The drone's Wi-Fi has no internet access. To prevent your mobile device from automatically switching to cellular data, it's recommended that you turn off cellular data when connecting to the drone's Wi-Fi.

Step 3

Open **Dynalog Casper** App and tap **Start** to enter the App. Tap **Q** to turn on the App, and the LEDs on the drone turn to solid on as a successful connection.

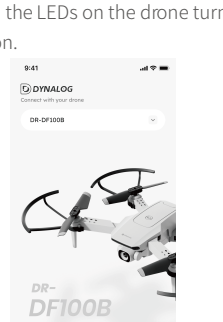

EN

Step 4


Tap **Q** to calibrate the drone.

Note:

- If the drone's Wi-Fi is not listed or the App doesn't show the preview image, please restart the drone and search the Wi-Fi of the drone again.
- Make sure the drone's Wi-Fi is only connected to one device.
- Please allow the App **Dynalog Casper** to access the necessary permissions of your mobile device.
- Tap **Q** to check the recorded videos and captures photos.

EN

3. Function Overview of the App

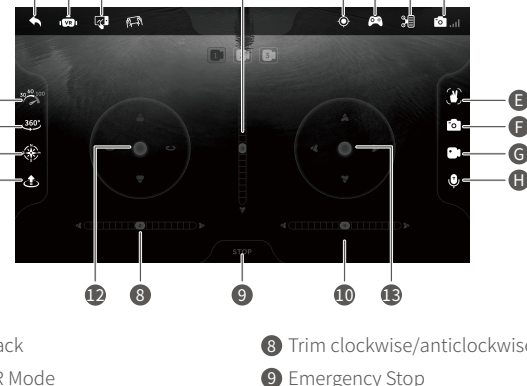


- Back
- VR Mode
- Trajectory Flight
- Calibrate
- Virtual Remote ON/OFF
- Drone Battery Status
- WiFi Signal
- Speed Switch
- 3D FPV
- Headless Mode
- One Key Take-off/Landing
- Trim clockwise/anticlockwise
- Emergency Stop
- Trim forward/backward
- Trim left/turn right/Ascend/Descend
- Forward/Backward/Leftward/Rightward
- Settings for Photo/Video
- Photo
- Video
- Voice Control

EN

VR Mode (not included) is required to activate VR Mode

Trajectory Flight:

Tap **Q** to activate this mode. Draw a path in the frame on the right side of the screen and the drone will fly following the path. Tap **Q** to modify flight distance and time accordingly. Tap **Q** again to exit this mode.

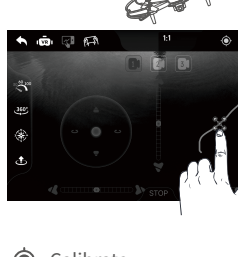

Calibrate:

Tap **Q** to calibrate the drone directly. If the LEDs of the drone flash quickly after a sudden impact, please tap **Q** to calibrate the drone.

Battery Status:

Check the battery status of the drone.

WiFi Signal:

Check the WiFi status of the drone to avoid losing control. When it drops to 2 or 1 bar, please do not fly the drone far away.

EN

Gestures for Photo/Video:

Tap **Q** to activate this function. Stand in front of the camera at a distance of 1.5-3 meters, face the camera and make a **Q** gesture with your right hand to take a photo, a **Q** gesture to start or stop recording a video.

Photo:

Tap **Q** once to take a photo. Please allow **Dynalog Casper** to access the photos on your phone before taking a photo.

Video:

Tap **Q** once to start recording, tap again to end and save the video. The interval time between recording and saving a video should be over 3 seconds.

Voice Control:

Press and hold **Q** to speak the following voice commands. Take off, landing, forward, backward, left, right. Please allow **Dynalog Casper** to access the microphone on your phone before speaking the voice command.

STOP

Tap **STOP** and a pop-up window will show to confirm if you would like to stop the drone.

Note:

It's NOT recommended to use this function during normal flight for landing, which may result in serious damage to your drone.

EN

Camera View:

- View from the drone's camera
- View from your mobile device's rear camera
- View from your mobile device's front camera

Note:

To fly the drone with the remote and see the image through your mobile device in the App operation mode, tap **Q** to OFF, then restart the remote and wait for the automatic pairing.

TROUBLESHOOTING GUIDE

Q1. How to avoid losing my drone?

- Make sure the distance between the drone and the remote/App is effective.
- We recommend flying the drone on windless days. If you insist on flying the drone in the wind, we recommend flying at high speed.
- It's essential to calibrate the drone before flying.

Q2. Drone LEDs do not light up.

- Ensure that you've turned on the drone.
- Replace or charge the drone battery.
- Make sure that you did not press the button **Q** on the remote to turn off the drone's LED indicators.

Q3. Drone LEDs keep flashing, but the drone never responds to any command from the remote.

- Restart the drone and remote.
- Replace or charge the drone battery.
- Make sure the batteries of the remote have enough power.

Q4. The flight is not stable.

- Return the flight to stable.
- Make sure the drone and restart to do a flight calibration as instructed.

EN

- Make the flight trimming accordingly.
- Fly the drone when the weather is good.

Q5. The response from the drone to the control is not sensitive.

- Make sure the distance between the drone and the remote is effective.
- The remote signal may be interfered, please land the drone and go to another place to fly it.

Q6. Connection between the drone and the App is frequently lost.

- Make sure the distance between the drone and the mobile device is effective.
- Make sure your mobile device is not connected to another network.

Q7. The App doesn't respond to voice commands.

- Ensure the drone App has access to the microphone function of your mobile device.

Q8. Some of the functions don't work in the App.

- Make sure the switch for the App **Q** is ON.

Q9. The drone will fly beyond the control range.

- Activate the **Headless Mode**, then move the **Right Control Stick** to fly the drone back.

EN

SPECIFICATIONS

USB Cable	
Input	5V — 2A
Output	5V — 0.5A
Rated Power	2.5W

FCC Caution:

Any change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For service:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. For FCC QUADROPTER.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm.

EN