TOUCHSTONE HOME PRODUCTS WIFI-ENABLED TV LIFT SETUP GUIDE



	Read and understand this entire owner's manual, including all safety information, <u>before</u> plugging in or using this product. Failure to do so could result in electric shock or serious personal injury.
--	--

	Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.
--	---



Table of Contents

TV Lift Wifi Setup Guide	3
Setting Up Tuya Smart App and Account	3
Adding TV Lift To Tuya Smart App – Bluetooth	5
Using the Tuya Smart App and Controlling Your TV Lift	7
TV Lift Controls	8
Alexa and Google Assistant Compatibility	9
Alexa Pairing and Controls	9
Google Assistant Pairing and Controls1	2

TV Lift Models Supported

The following Touchstone Home Products TV Lift models are Wifi-Enabled and powered by the Tuya Smart App

ValueLine TV Lifts: 30003, 30004


SRV TV Lifts: 32800, 33900

SRV 360-degree Swivel TV Lifts: 32820, 33920



2

This Wifi Setup Guide is only for Wifi-Enabled Touchstone Home Products TV Lift. TV Lifts that are Wifi-Enabled will have the following style wired controller.

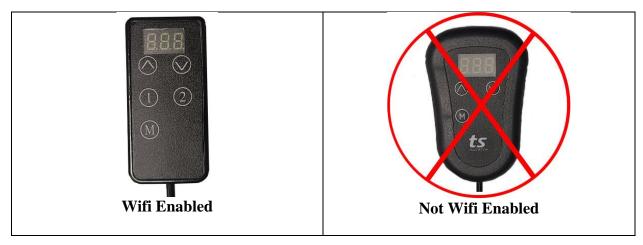

Touchstone Home Products Wifi-Enabled TV Lifts are powered by TuyaSmart. This document is a step-by-step guide for connecting your TV Lift to your home network and operating the TV Lift through the TuyaSmart app.

Setting Up Tuya Smart App and Account

1. On your mobile device, download the Tuya Smart App from the appropriate app store or click the QR Code provided to download the app.	TuyaSmart
2. Once the TuyaSmart App is installed, click on the app icon to open the app and create a new account.	K Register United States of America support@thpus.com Cet Verification Color Cet Verification Color Cet Verification Color Plans Price Plans Price Q V P T Y U I O P a & d f g h j k I Q Z X C V b m m Q 722 , Q V . V



www.touchstonehomeproducts.com

Setting Up Tuya Smart App and Account- cont

3. Once a new user name has been created, you will be sent a Verification Code. Enter the Verification Code.	Enter Verification Code
	A verification code has been sent to your email
	<
	Set Password
	6 to 20 characters, including letters and digits
	Done
4. Setup account password.	
	1 2 3 4 5 6 7 8 9 0
	qwertyuiop
	asdfghjkl
	<pre></pre>
	?123



www.touchstonehomeproducts.com 800.215.1990

rev. 20220927

4

Adding TV Lift To Tuya Smart App – Bluetooth


 Make sure that BLUETOOTH is enabled on your smart device. 	1:51 Mon, August 8 Device control Media output Image: Sound So
 Open the Tuya Smart app. Once in the Tuya Smart app, the TV Lift "Touchstone" device will pop-up under "Devices to be added". Click the ADD button to add the device. 	Image: Constraint of the second s
 On the Add Device screen, the Touchstone TV Lift will appear. Click the + button to start pairing the lift to the Tuya Smart app. 	Add Device Done 1 device(s) being added Image: Touchstone Tap to add this device



www.touchstonehomeproducts.com 800.215.1990

rev. 20220927


Adding TV Lift To Tuya Smart App – Bluetooth – cont

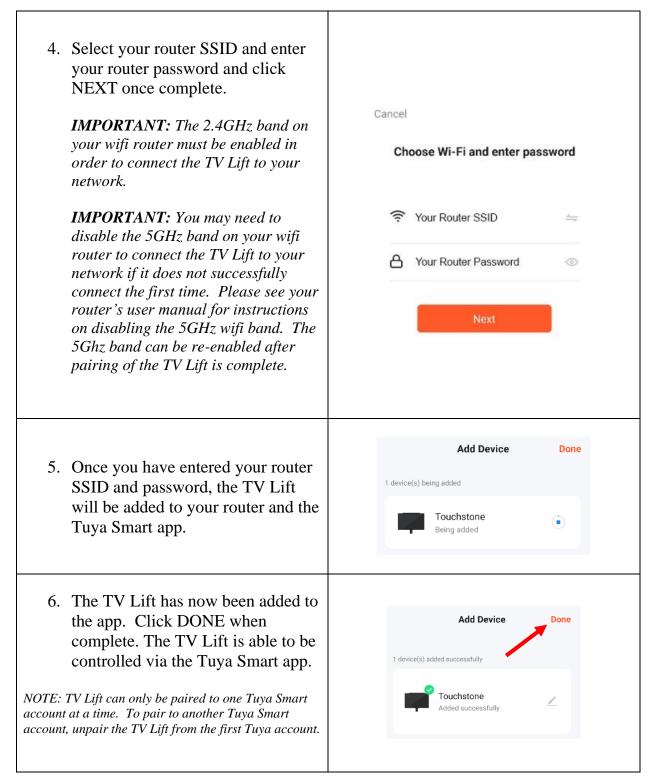



www.touchstonehomeproducts.com

Using the Tuya Smart App and Controlling Your TV Lift

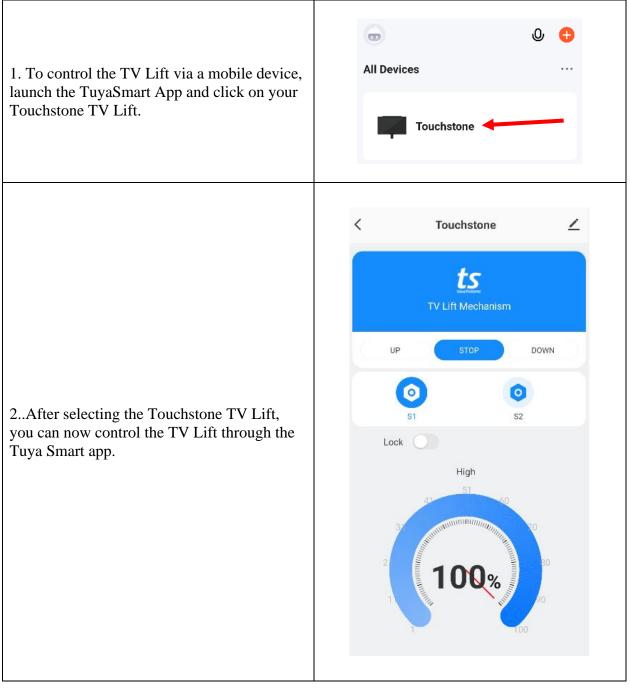



TV Lift Controls

UP	UP: Moves the lift to the highest memory set point (1/S1). If no memory point is set for 1/S1, the lift will move to its highest point (55.1 or 70.8).	
STOP	STOP: Stops the lift motion.	
DOWN	DOWN: Moves the lift to the lowest set point (2/S2). If no memory is set for 2/S2, the lift will move to its lowest position (28.1 or 33.1).	
S1	S1: Highest memory setting. Lift will move to the memory setting that corresponds to 1 on the wired controller.	
S2	S2: Lowest memory setting. Lift will move to the memory setting that corresponds to 2 on the wired controller.	
Lock	Lift Unlocked: Lift is unlocked and can be controlled with the wifi app, wired, or wireless remote. Lift can only be UNLOCKED by the wifi app.	
Lock	Lift Locked: Lift is locked. If selected, lift will be LOCKED and cannot be controlled with the wifi app, wired, or wireless remote. LOC will flash on the wired controller when in LOCKED mode.	
High 51 60 21 13% 00 100	Height %: Percentage that the lift is extended.	



www.touchstonehomeproducts.com 800.215.1990


rev. 20220927

Alexa and Google Assistant Compatibility

The Wifi-Enabled Touchstone TV Lift is compatible with Works With Alexa and Works With Google Assistant.

Alexa Pairing and Controls

To pair the Touchstone TV Lift with Alexa, do the following:

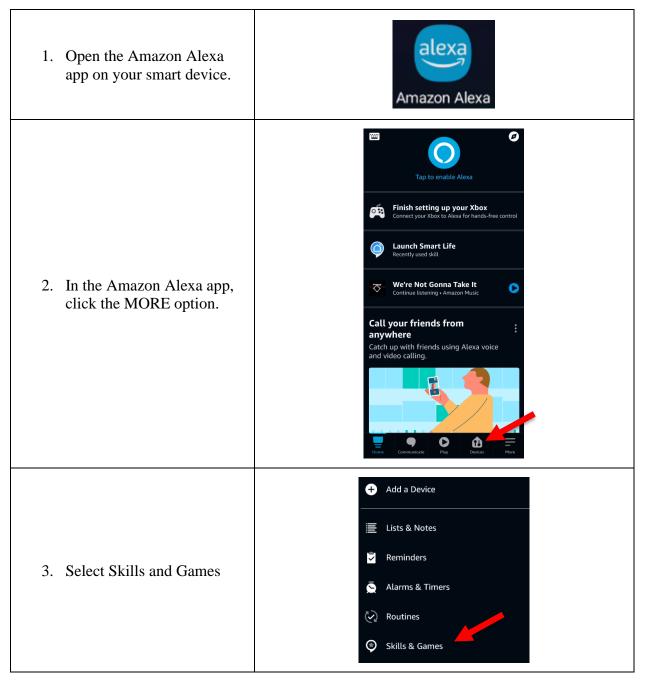




www.touchstonehomeproducts.com

Alexa Pairing and Controls – cont.





Alexa Pairing and Controls – cont.

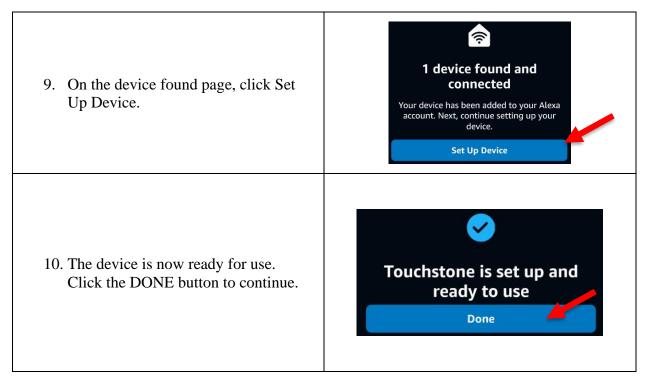


Alexa Controls

Alexa Command	Lift Response
"Alexa, set Touchstone to UP"	Raises TV Lift
"Alexa, set Touchstone to DOWN"	Lowers TV Lift
"Alexa, pause Touchstone"	Stops TV Lift



Google Assistant Pairing and Controls


To pair the Touchstone TV Lift with Google Assistant, do the following:

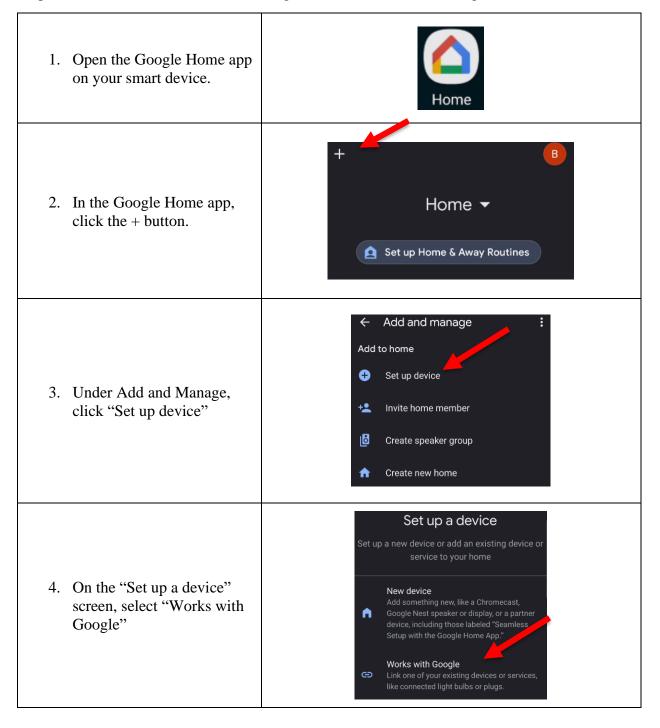



www.touchstonehomeproducts.com 800.21

Google Assistant Pairing and Controls – cont.

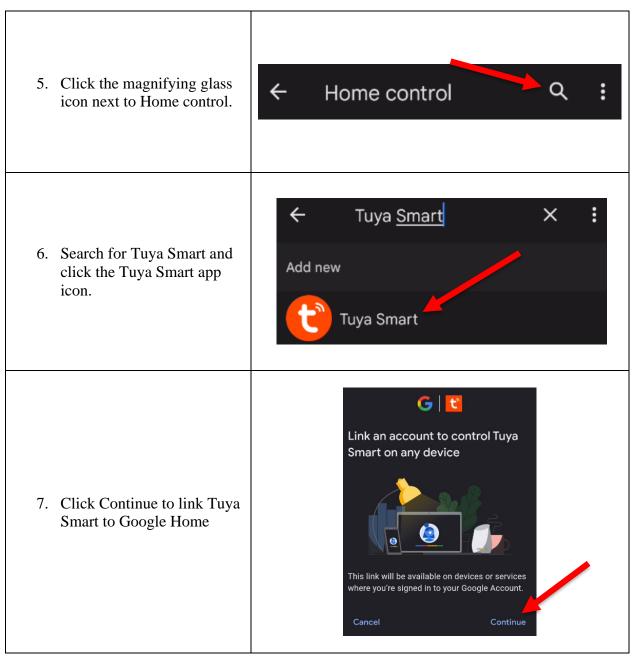



rev. 20220927

Google Assistant Pairing and Controls – cont.

 On the "Link your Tuya Smart account with Google" page, click the Agree and Link button 	Link your Tuya Smart account with Google The App will have the following permissions acted to the runtorization. Devices control permission Agree and link Cancel
 The Touchstone TV Lift will now show up on your devices page. 	章 Touchston , e

Google Assistant Controls

Google Assistant Command	Lift Response
"Hey Google, set Touchstone to UP"	Raises TV Lift
"Hey Google, set Touchstone to DOWN"	Lowers TV Lift
"Hey Google, stop Touchstone"	Stops TV Lift



Operating the Lift

The SRV PRO TV Lift can be controlled through the provided wired handset controller or the wireless remote control.

Wired Handset Control

Willed Halldset Ooliti		
Image: Second	36.0	Lift Height: Shows the height of the lift in inches.
		UP Button: PRESS and HOLD this button to raise the lift. Releasing this button will stop the lift.
		**Note: If a memory height is set, holding the UP button will ignore the memory height and the lift will continue to run past the set memory height.
	V	DOWN: PRESS and HOLD this button to lower the lift. Releasing this button will stop the lift.
	M	MEMORY: The lift can be set to 2 memory positions, an extended memory and retracted memory position. To set the memory position, raise the lift to the desired position. Follow the instructions under 1 and 2 below to set the Extended and Retracted Memory position.
		When the memory position is set, the UP button on the RF Wireless Remote and IR Wireless Remote will go to the memory height that was set.
		EXTENDED MEMORY POSITION : To set a memory position for the extended height of the lift, do the following:
		1. Using the UP button on the wired controller, move the lift to the desired height 2. PRESS and RELEASE the M button once
		 PRESS and RELEASE the 1 button. The extended memory height will now be set.
		RETRACTED MEMORY POSITION : To set a memory position for the lower height of the lift, do the following:
	2	 Using the UP button on the wired controller, move the lift to the desired height DDESS or d DELEASE the M button error
		 PRESS and RELEASE the M button once PRESS and RELEASE the 2 button. The retracted memory height will now be set.
OTE: For applications who		ted above the lift and in the nath of the lift travel please use the WIPED

NOTE: For applications where fixtures are mounted above the lift and in the path of the lift travel, please use the WIRED HANDSET ONLY to avoid damages to the lift and other items!



FCC Caution.

a、§ 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b、§ 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c_{s} § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.