

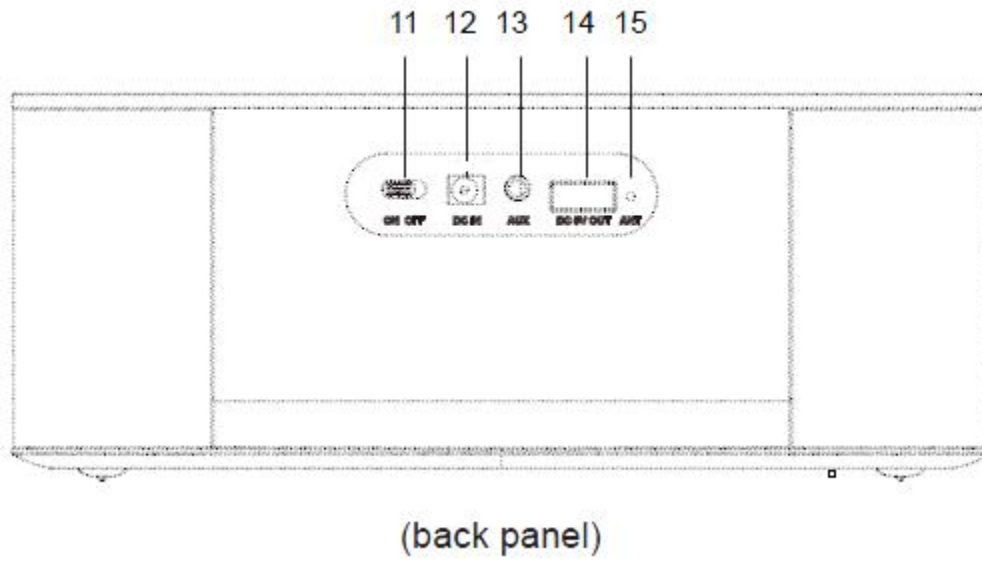


C200 使用说明书

1. 产品功能丝印图:

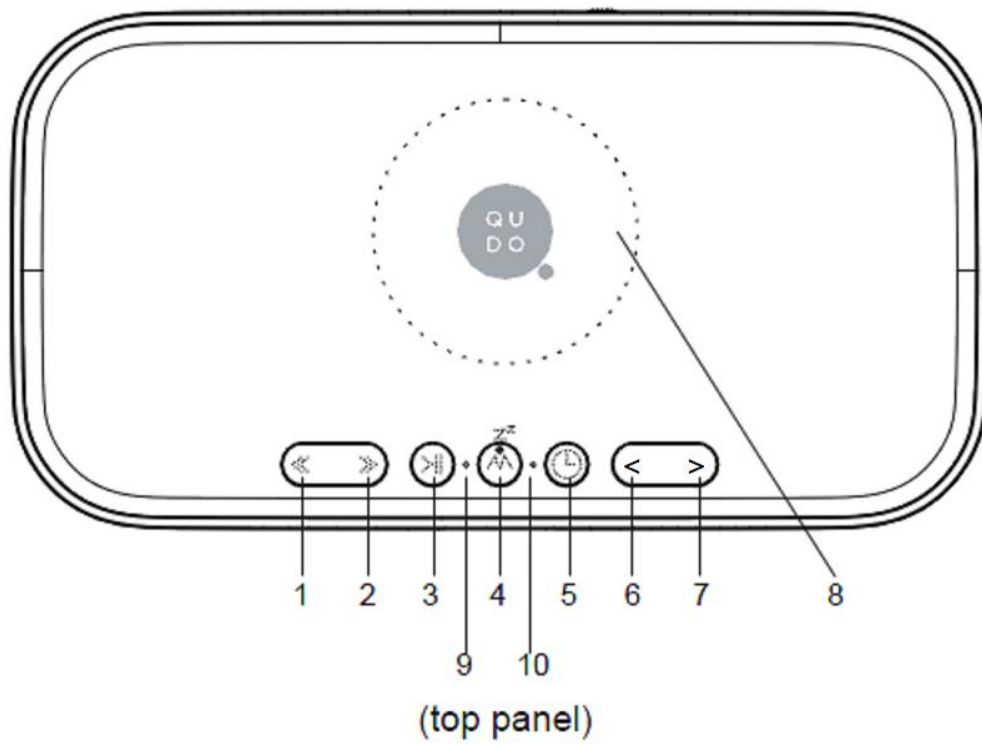

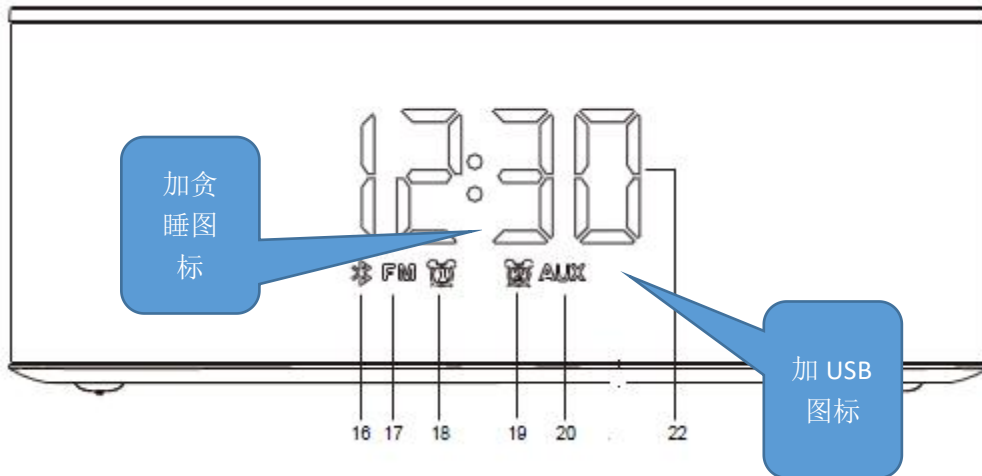

1. "Short press volume to reduce, long press the last song.
 2. "Short press the volume to reduce, long press the last song.
- Note for buttons 1 and 2: If you are in AUX input mode, the previous track and the next track can only be changed through your device.
3. > LL play/pause, phone answer/refuse/dial, automatic search FM radio station
 - When playing music button, short press to pause playing.
 - After receiving a call, when you are in connected Bluetooth mode, short press to answer or long press to reject the call. In a bluetooth call, short press to end the call. When the call ends, the music will continue to play. When in bluetooth mode, press twice to dial the number of the last call.
 - When in FM mode, long press > LL button, it will automatically search FM stations and remember channels, such as P01, P02, P03, P04...
 4. Mode switching (short press), long press to enter standby state, and long press again to enter working state
 5. Clock setting (short press)
 - Short press to switch the Settings of the screen, clock, alarm 1, alarm 2 and alarm FM
 6. When FM, press the previous radio station short and long press upward to semi-automatically search for radio station. With the clock key, the screen brightness can be adjusted and the number of clock alarm clock can be reduced
 7. When FM, press down a radio station, and long press down to semi-automatically search for radio stations. With the clock key, the screen brightness can be adjusted, and the number of clock alarm clock can be increased
 8. Location of wireless charging.
 9. Wireless charging indicator red indicator
 - The red indicator lights up when the device is turned on, and turns off when the device is wirelessly charging other devices.

10. Wireless charging indicator green indicator

- The green indicator lights up when the device is wirelessly charging other devices.

11. Power on/off

12. Power charging input interface Micro USB.

13. Audio input for external circuit.

14. Power 5V 1A output.

- Connect other devices that need to be charged to this outlet with a charging cable, and if the device is turned on, the other devices will be charged. When there is a wireless charging device for charging, the power supply has no output.

15. FM soft antenna.

16. Bluetooth icon

17. FM icon

18. Alarm 1 icon

19. Alarm 2 icon

The AUX icon

22. Clock/alarm display

23. The snooze icon. Press the key except M on the alarm clock to enter snooze mode, and the icon flashes

2. Operation Instructions:

Charging the speakers:

1. USB charging cable, one end is inserted into the DC input interface of the Bluetooth speaker, the other end is inserted into the interface with USB 5V power output. The output current is recommended to be more than 1.5A.

2, when charging the battery chart bright, full off.

Switch machine:

1, turn the power switch to the ON position, then the display screen is bright, and there is a boot prompt sound, and then display the contents of the clock.

2. Long press the M key to enter the standby mode, and then long press it to enter the working state

3. Turn OFF the power switch at OFF position, and the display screen is OFF.

Wireless charging:

1. Place the device to be charged in the circle position on the top of the Bluetooth speaker.

2. When the charging device is detected, it starts charging, and the green light is on

3. When no charging device is detected, the red light will be on

- Note: Please consult with your device manufacturer for wireless charging compatibility.

USB external charging:

Connect other devices that need to be charged to the USB output socket through the charging cable. When there is a wireless charging device for charging, the USB will not be charged externally.

Bluetooth connection:

1. Place the bluetooth speaker near the device that is bluetooth enabled.
2. The speaker is automatically in pairing mode when starting up. Bluetooth icon flash up.
3. Please connect the speakers according to the instructions of your device.
4. Pairing name "C-200DCF".
5. Complete pairing, Bluetooth icon is long and bright, and there is a prompt sound.
6. Bluetooth Connecting: Bluetooth will automatically connect the last device connected last time after power-on. If the connecting fails, the device will enter pairing mode.
7. Long press the MODE key for 3 seconds when Bluetooth is connected, to disconnect Bluetooth and force it into pairing MODE.

Bluetooth Operation Instructions:

1. After the Bluetooth connection is successful, operate the speaker > LL to play music.
2. Short press the "key" to reduce the volume of one order, long press to jump to the last song in the playlist.
3. Short press "button to increase the volume, long press to jump to the next song in the playlist.

AUX Operation Instructions:

1. After starting the machine, plug the 3.5mm audio cable into the AUX interface to automatically switch to AUX MODE. You can also press the MODE key to switch to AUX MODE to play music and the AUX icon will light up.
2. Short press the "key to reduce the volume of the first order.
- 3, short press "button, increase the volume of the first order.

FM Operation Instructions:

1. Press M key to switch to FM status, and the FM icon will be displayed on the screen.
2. When selecting FM for the first time, long press > LL to search for FM, please wait for a few minutes for automatic search, and it will automatically save when you find an available FM station
3. FM mute can be set by pressing > LL
4. Short press < and > to select the saved FM radio station, long press < and > to semi-automatically search the radio station

5, note: please make the FM antenna of the speaker as long as possible, and choose the position and direction to achieve the best FM effect.

Screen brightness setting :(press the clock button to enter the setting interface of screen display, clock, alarm clock 1, alarm clock 2 and alarm clock 3)

1, short press once, full screen flashing. Enter the screen brightness interface

2. Press < and > to adjust the screen brightness

3. Wait for 3S to automatically save and exit

Clock Settings:

1. Press the clock button twice and the clock flashes to enter the clock setting interface.

2. Long press the clock button, the hours flash, short press < and > to adjust the hours to decrease and increase

3. Long press the clock button again, and the minutes will flash. Short press < and > to adjust the minutes to decrease or increase

4. Long press the clock key for the second time to display 24Hr or 12Hr, indicating 12-hour system or 24-hour system. Short press < and > to switch

5. Wait for 3S to automatically save and exit

Alarm 1 Settings:

1. Short press the clock button three times to display the clock and alarm clock 1, and enter the setting interface of alarm clock 1.

2, Long press the clock button, hours and alarm 1 flash, short press < and > to adjust the hours to decrease and increase

3. Long press the clock button again, minutes and alarm 1 flash, short press < and > to adjust the minutes to decrease or increase

4. Long press the clock button for the third time to display OFF or ON, which means to turn OFF or turn ON the alarm clock. Short press < and > to switch

5. Wait for 3S to automatically save and exit

Alarm 2 Settings:

1. Press the clock button four times to display the clock and alarm clock 2, and enter the setting interface of alarm clock 2.

2. Long press the clock button, the hours and alarm clock 2 flash, short press < and > to adjust the hours to decrease and increase

3. Long press the clock button again, the minutes and alarm clock 2 flash, short press < and > to adjust the minutes to decrease or increase

4. Long press the clock button for the third time to display OFF or ON, which means to turn OFF or turn ON the alarm clock. Short press < and > to switch

5. Wait for 3S to automatically save and exit

Setting of FM Timing in:

1. Press the clock key five times to display the clock and FM, and enter the alarm clock FM setting interface.
2. Long press the clock key, hours and FM flash, short press < and > to adjust the hours to decrease and increase
3. Long press the clock button again, the minutes and FM flash, short press < and > to adjust the minutes to decrease and increase
4. Long press the clock button for the third time to display OFF or ON, which means to turn OFF or turn ON the alarm clock. Short press < and > to switch
5. Wait for 3S to automatically save and exit
6. The FM status is automatically recorded when the set time is transferred to the set time.

Alarm operation:

1. After setting the alarm clock, the alarm clock icon is always on. When reaching the alarm clock time, the alarm clock will sound automatically.
- 2, The default duration of the alarm clock is 1 minute. The alarm clock icon flashes when the alarm clock sounds. If there is no operation during the alarm clock, the alarm clock will stop automatically after completion.
3. When the alarm goes off, press M button to stop the alarm clock.
4. When the alarm goes off, press the key except M to enter the snooze mode.ZZ icon flashing, snooze for 5 minutes.
- 5, snooze after the alarm sounded again, you can operate the button again snooze or stop the alarm clock, a total of four snooze.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment