


## Inari10B label location

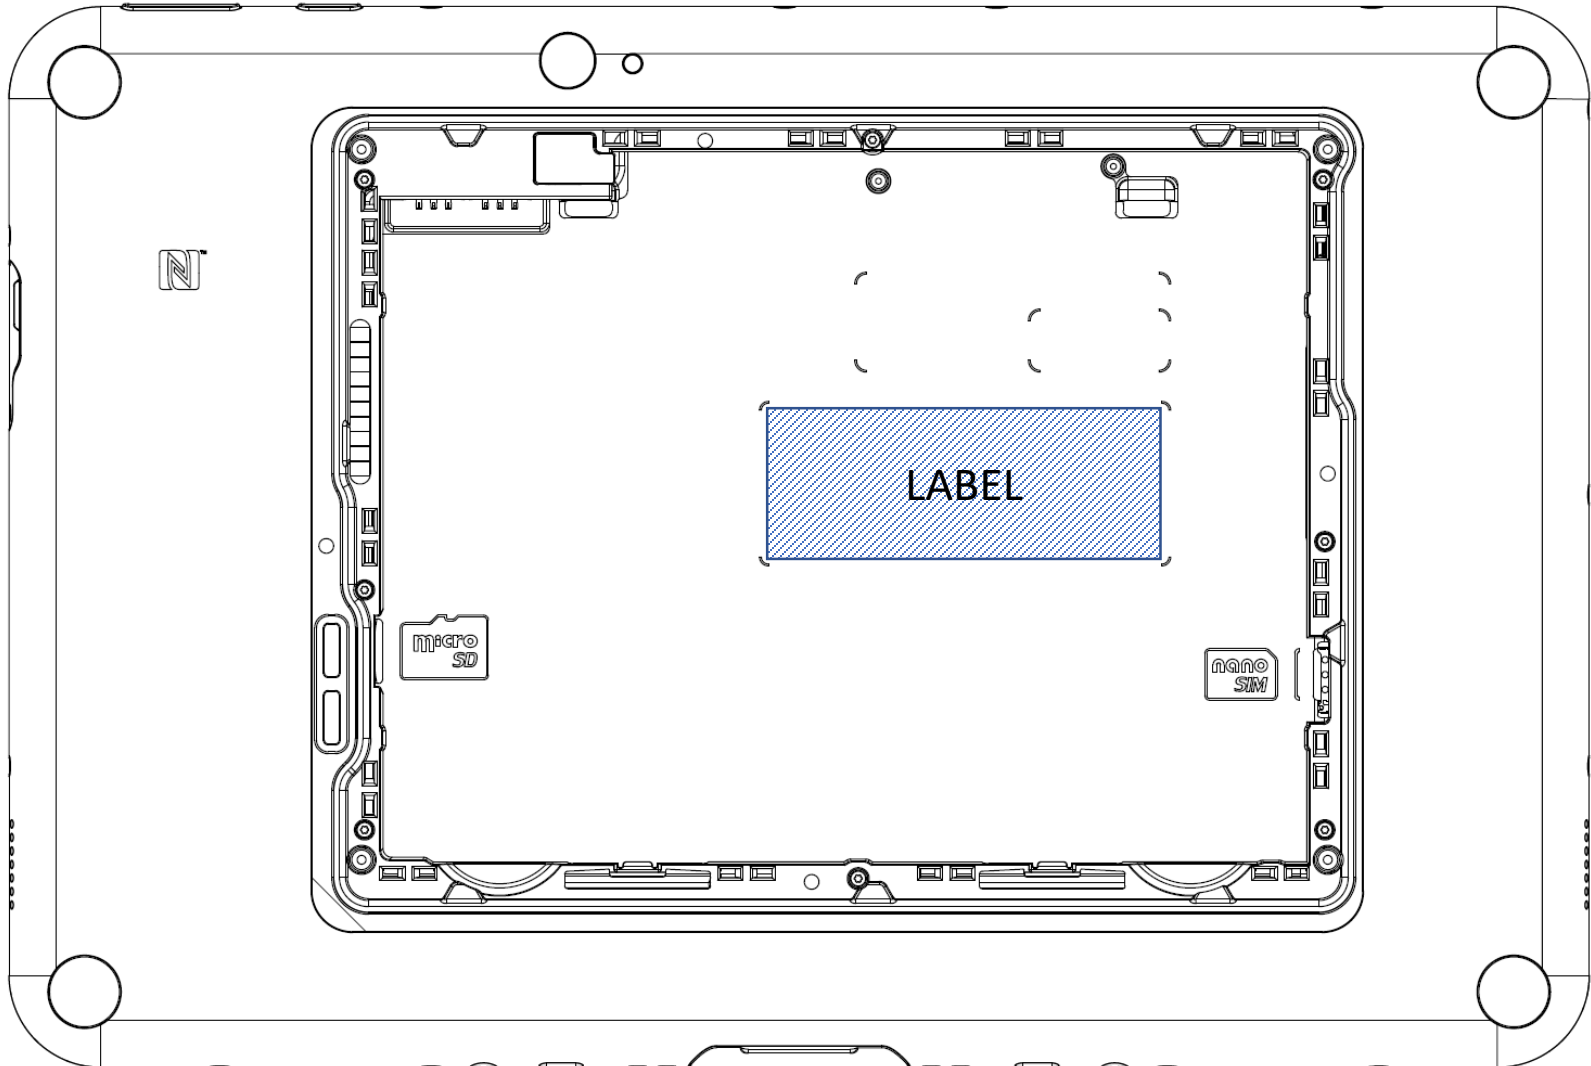

The label will be put inside the battery compartment. The label is visible to the users as they purchase the product and install the battery.