


## INARI8B Label Location

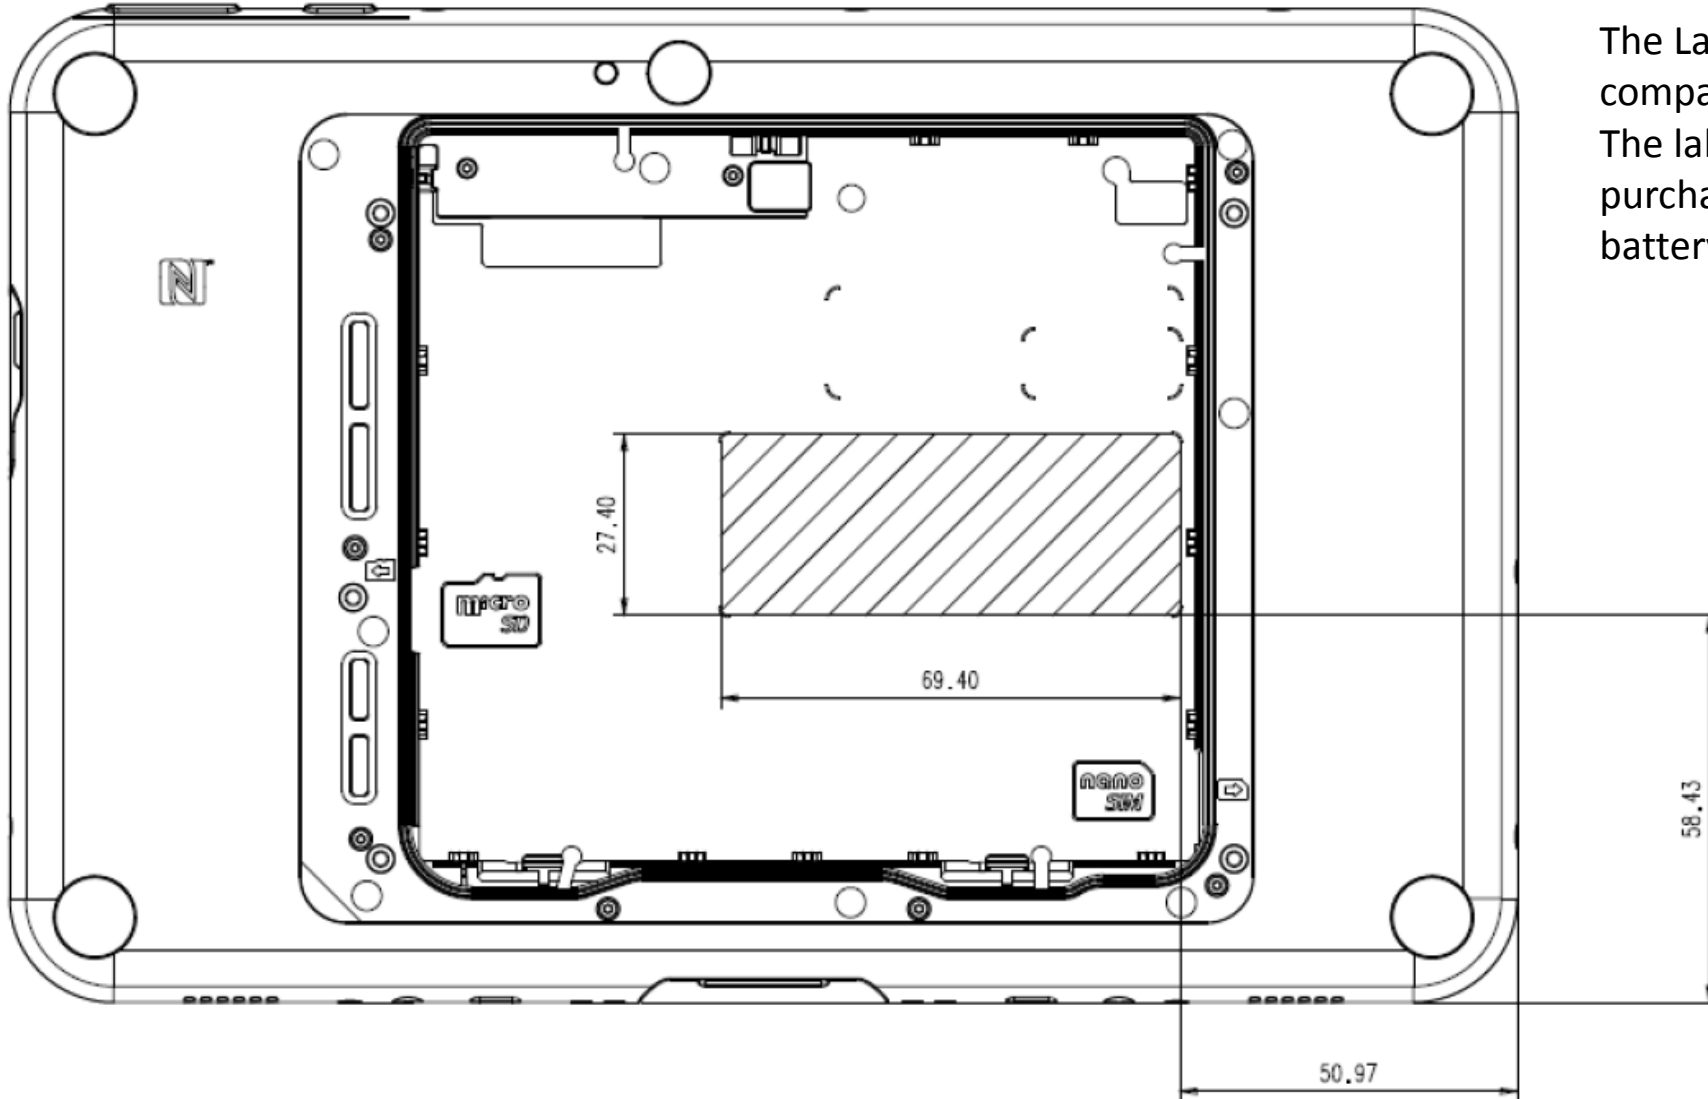

The Label will be put inside the battery compartment.

The label is visible to the users as they purchase the products and install the battery.