



## Quick Start Guide

Alcatel ONYX™




## Getting to Know your Alcatel ONYX™




## Phone Setup


1. Place the SIM tool in the hole next to the SIM/microSD tray and push until the SIM tray pops out.

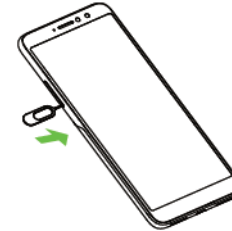

2. Hold the nano-SIM card with the cut corner to the bottom right and insert into tray. If applicable, hold microSD card (not included) with ridge to the left and insert it into the tray.

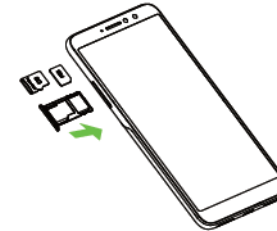

3. Carefully close the SIM tray.

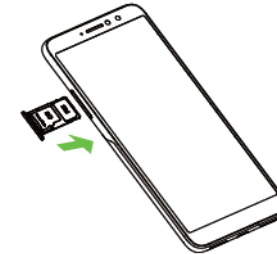

\* microSD card sold separately

**WARNING:** To avoid damage to the phone, only use the standard nano-SIM card provided by your service provider.

## Navigating your phone

- Use your finger tip to tap the screen
- Use quick flicks with your finger on the touch screen to swipe up, down, left, or right.
- Swipe up to access applications on your phone
- To return to the previous screen, tap the **Back key** ◀
- Tap the **Home key** ○ at any time to return to the main home screen
- Tap the **Recent apps key** □ to access recently viewed apps



## Notifications panel

To access alerts, including new messages, emails, and software updates:

- Tap the top of the home screen and drag your finger down to view the Notifications panel
- Swipe right or left to clear individual notifications or tap **CLEAR ALL** to clear all
- With the notification panel open, tap the top of the screen again and drag down to see the Quick Settings menu
- Tap ⚙️ to access the complete Settings menu



## Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS** 🖼️
- Select a wallpaper and tap **Set wallpaper** ✓ to set the image and then select an option whether it appears on the lock screen, home screen, or both. You can also tap **My photos** 📁 for additional options.



## Add to home screen

- To add app shortcuts, swipe up to access applications, press and hold the desired app, and drag it to the home screen
- To add widgets, press and hold a blank section of the screen and tap **WIDGETS** 📺, then press and hold the desired widget and drag it to the desired location on the home screen



## Organize home screens

- To move widget or app shortcut, press and hold it and then drag it to a new location. To delete it, drag it to "X Remove" located at the top center of the screen.
- To create a folder, press and hold an app shortcut and drag it on top of another then release
- To rename a folder, press the folder title to type a new name

## Cricket Services

These services make using Cricket even better and easier.



**myCricket:** Check account balance, make a quick payment, view usage and access support from the palm of your hand.



**Visual Voicemail:** Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.



**Deezer:** Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

## Additional Features

**Power Saving:** From the Settings menu, tap **Smart Manager**, then tap **Power Saving** to manage your power plan.

- Smart mode – For normal daily usage
- Normal saving mode – Stop most background apps and optimize your device settings.
- Super saving mode – Maximize battery life with a simplified experience limiting certain apps and functions



**Quick Camera Access:** From the Settings menu, tap **System** and then **Gestures**. Tap on **Jump to camera** and then tap on the switch to toggle on/off. When it is on, you can access the camera quickly by tapping the power button twice.

## More information

### On the web

Detailed support information including device specifications and troubleshooting are available at [www.cricketwireless.com/support/devices](http://www.cricketwireless.com/support/devices).

### On the phone

- Call Customer Care at 1-855-246-2461 or
- Dial 611 from your cell phone

## Accessories

For more information about accessories, please visit your local Cricket store or go to [www.cricketwireless.com/shop/accessories](http://www.cricketwireless.com/shop/accessories).



### Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID 2ACCJH100. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2019 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC.

Alcatel is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2019 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice.






All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

## Calls and Voicemail

### HD Voice Capable




Enjoy clearer conversations and reduced background noise with HD Voice\*.

### Make a call

1. From the home screen, tap **Phone** 
2. Type a name or phone number, or select one of the following options:
  -  : To manually enter a phone number
  -  : To choose from frequently called contacts
  -  : To choose from a list of people who you have recently called or have called you
  -  : To make a call from your contacts list






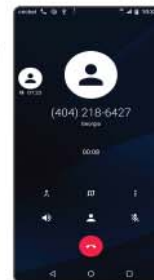
### Check voicemail

1. From the home screen, tap **Phone**  then tap 
2. Press and hold the **1 key** 

### Call waiting

Call waiting allows you to answer a second call while putting your existing call on hold. While on a call, you will hear a tone if another call comes in.

- Tap the incoming call to answer
- Tap  to switch between active calls
- Tap  to merge calls
- Tap  to end a call



\* To experience Cricket HD Voice, both callers must have a compatible HD Voice capable smartphone and make the call over Cricket's LTE Network or a compatible network. Cricket's LTE coverage is not equivalent to its overall network coverage. HD Voice calls made on a compatible device and on the LTE network may not experience an HD Voice connection at times of network congestion. Other carriers' networks may interoperate with Cricket's LTE network to support an HD Voice call.





## Text and picture messaging

### Send a text message

1. From the home screen, tap **Messaging** 
2. Tap **New message** button  to start a new text message
3. In the **To** field, enter a number or a contact name or tap **Contacts**  to access your contacts
4. Tap the **Type message** field and enter your message
5. Tap **SMS**  to send the message



### Send a picture message

1. Follow steps 1-4 above
2. Tap the **Paper Clip** 
3. Tap **Picture**  and select desired picture or tap the **Camera icon**  to take a picture to attach
4. Tap  to send the message




**WARNING: Please don't text and drive.**

## Email




### Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, Swipe up to access applications > **Email** 
2. Enter your email address and tap **NEXT**  and enter your password and then tap **NEXT**  again
3. Confirm email account settings and tap **NEXT** 
4. Enter your name which will be displayed on outgoing mails, and then tap **FINISH** 

**Note:** To set up corporate email, contact your IT administrator.

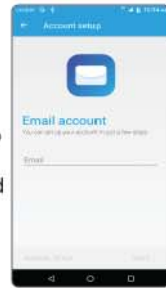




### Create and send an email message

1. From the home screen, Swipe up to access applications > **Email** 
2. To compose a new message, tap **Compose** 
3. Tap the **To** field and enter email address or name or tap **Contacts**  to access your contacts
4. Enter a subject and email message
5. To attach files to the email message, tap the **Paper Clip icon**  and make your selection
6. Tap **Send icon**  to send the message









## Camera and video

### Take a picture

1. From the home screen, tap **Camera** 
2. To select different camera features, tap the icons at the top of the screen.
3. Swipe the screen to select different modes.
  - Tap the Settings icon  to display camera settings in the **More** mode.
4. Zoom in and out by pinching the screen with
5. Tap the **Shutter button**  or press the **Volume Key** to take a photo.



### Take a video

1. From the home screen, tap **Camera** 
2. Tap the **Video** mode icon 
3. Tap the **Recording button**  to start and the **Recording button**  to stop recording.
4. Tap the **Pause button**  to pause and the **Pause button**  to continue a recording.




### View pictures

1. From the home screen, Swipe up to access applications
2. Tap **Gallery** 

## Apps on Google Play


You can install apps from Google Play Store.

### Access Google Play

1. From the Home screen, swipe up to view ALL APPS list, and then tap **Play Store** 
2. Enter your existing Google account or create one following the steps on the screen, if you have not signed in to your Google account.

### Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and more:

1. Tap a category to browse popular apps, games, movies, and music. Or, tap the **Search bar** to search for a specific game or app.
2. To install desired app, tap **INSTALL**  for the app and follow the instructions. Once installed, you will see a notification in the Notifications panel.
3. Open the app from this notification or by clicking on the app in the App list.
4. To see the App list, swipe the home screen up.

