



User Manual

V22

Android™ 11

User Manual


To ensure proper phone operation and longevity, please read this guide carefully.

Images and locations may vary slightly based on model version.

This manual should be used for general guidance and troubleshooting purposes.

Getting to know your phone


Key definitions

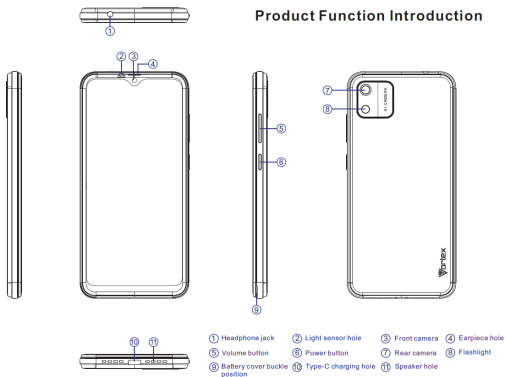

Insert the SIM and microSD cards

After opening the phone case, insert the SIM card into the lower slot. The SD card is inserted into the upper slot.


Caution: Use only the properly sized sim card, do not cut or force the SIM card into the slot.

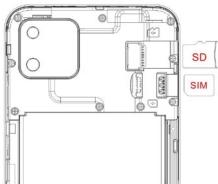

Turn on and adjust the volume

- **Turn on:** Hold down the "Power button" until the screen lights up.

- **Adjust the volume:** Press "Volume +" to turn up the volume, Press " Volume -" to turn down the volume



Screen control

You can control your phone through a series of operations on the screen.

- **Touch:** You can touch the items on the screen to make selections, open applications or use the keyboard to input characters.

- **Swipe or slide:** Quickly move your finger across the surface of the screen without pausing (be careful not to drag items).

- **Touch & hold:** You can touch & hold some items to get an available menu.

- **Drag:** You can drag some items on the screen to relocate the icon or produce certain operations.

- **Switch between landscape mode and portrait mode:** You can switch to the landscape mode by rotating your phone. The landscape mode is only valid under some interfaces, such as the text input interface, the message viewing interface and compatible applications.

- **Pinch:** In some apps (such as Maps and Photos), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to


zoom in).

Open and switch applications

Open and close the Applications screen

On the home screen, you can swipe up quickly to view more applications. Touch an icon to enter the corresponding application. Touch the **Home key** to return to the home screen.

Switch to a recently used application

On the home screen, touch the , opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it up.

Home Screen

Arrange & work with apps

- **Explore your widgets:** Touch the widgets tab at the top of any application screen.
- **Get more apps:** Touch the Play Store icon on the home screen and sign in to download additional apps.

Manage notifications

- **Open notifications panel:** When a new notification appears on the notification bar, you can drag the notification bar down from the top of the screen to open notifications panel when your

phone has been in idle mode or lock the screen.

- **Respond to a notification:** Touch it.
- **Dismiss a notification:** Swipe it sideways.
- **Close notifications:** Swipe left to turn off notifications.

Place an app icon on the Home screen

Touch & hold the app icon, slide your finger, and lift your finger to drop the icon in place.

Delete items on the homepage

Touch & hold the app icon, slide your finger toward the top of the screen, and drop the app over the Remove icon.

Use folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.

From any Home screen, you can

- **Open a folder:** Touch it. The folder opens:
- **Rename a folder:** Touch its name.
- **Move icons around your Home screens:** Touch, hold and slide.

Change wallpaper

1. Touch & hold anywhere that is not occupied on the home screen. A list of options appears.

2. Select wallpaper from **Photos/ Live Wallpapers/ Wallpapers**.

Switch to sleep mode

Sleep mode is a kind of power saving mode, which also helps to prevent inadvertent operations. If your phone has been in idle mode for a while, it will automatically switch to sleep mode.

You can also press the **Power button** to turn off the screen and enable sleep mode.

Wake up your phone

After the phone switches to the sleep mode, the screen will be turned off and locked. If needed, please wake your phone and unlock the screen if you want to use your phone.

1. Press the **Power** button to turn on the screen.

2. Swipe up to unlock the screen.


If you've set an unlock pattern or password, you need to draw the unlock pattern or input the password to enter the main interface.

Make and answer calls

Make a call

Directly make a call


On the home screen, touch the  button to display the dialing

keypad. Touch the numeric buttons to input the telephone number and touch the  button to make the call.


[Make the call from Contacts](#)

On the home screen, touch the **Contacts** icon, touch the desired contact and touch the phone number to dial it.


[Make the call from Call log](#)

On the home screen, touch the  button, notice the three tabs at the top of the phone. the call log shows recent calls. Touch the phone icon in a call log to display it.

[Make an international call](#)

On the home screen, touch the  button to display the dialing keypad. Touch & hold the “0” key until “+” appears on the screen, then dial the country code or region code, city code and phone number.

[Dial from Messaging](#)

1. On the home screen, touch the **Messaging** icon.
2. Select and open one message or conversation.
3. Touch the  icon at the top of the phone to dial a number.

[Answer a call](#)

Your phone will ring or vibrate (depending on the current mode and settings) upon an incoming call.

- Slide from middle to up to answer the call.
- If headphones are inserted, press the key on the headphones to answer the call.

Reject a call

Swipe down the middle to deny a call.

End a call

Touch the  button to hang up the call.

Adjust the volume

During a call, you can raise or lower the volume by using the volume keys.


Turn the speaker on or off

During a call, touch the **Speaker** button to turn on the speaker, and touch it again to turn off speaker.

Add a call

During a call, touch the **Add call** button then dial a number and touch the phone icon to add one call and put the current caller on hold. This function requires compatibility with your network operator.

Open the dialing keypad

In a call, you can touch the  button to open the dialing keypad to input additional numbers.

Contacts


You can place calls from the **Phone** app, the **Contacts** app, or other apps that display contact information. When you see a phone number, you can usually touch it to dial.

The contacts interface can be divided into the following tab pages:

- **Recents:** Call history of the call.
- **Contacts:** View the list of contacts.
- **Favorites:** Display the numbers you usually call.

All of your contacts are displayed alphabetically in a scrollable list. You can slide your finger up or down to scroll quickly.

Add new contact

1. In **Contacts**, touch the  icon at the bottom right hand corner of the screen.
2. Input all contact information. Slide up to move to the next field.
3. Touch the **Save** icon to save your contact.

Delete contacts

In **Contacts**, hold the contact and then select **Delete contact**.


Edit contact details

1. In **Contacts**, touch the contact whose details you want to edit.
2. Edit the contact information.

Search contacts

1. In **Contacts**, touch the Search contacts.
2. Type a key word of a contact name. The phone will automatically list all matched contacts.

Add a contact to Favorites

You can tap the contact you want to add to favorites in the contact interface, and then touch  in the upper right corner to add it to **Favorites** directly.

You can only add the contacts stored on the phone to the Favorites.

Accounts


You can synchronize contact information to your phone from a Google™ Account.

In **Contacts**, touch  and then select **Sign In**.

Share a contact

You can share a contact with someone.

1. In **Contacts**, tap the contact you want to share.

2. Touch  and then touch **Share**.
3. Select application with which to share (Bluetooth®, Email, Gmail, MMS, SMS and SD Card).

Messages



In **Messages**, you can send or receive text messages and multimedia messages.

On the home screen, touch the **Messaging** icon to open.

Send messages

1. In **Messaging**, touch the **Start chat**.
2. Input your desired telephone number in **Type name or number**.

You can also select contacts you want to send message from the **Contacts** and then touch.

3. You can touch the  icon to attach pictures, videos or audio files. The phone will automatically convert the message to a multimedia message.
4. Input some text in **Text message**.
5. After that, touch the  icon to send the message.


Receive messages

1. In idle mode, you will be reminded about the new messages in

the notification area. Slide down to open the notification panel to view.

2. Touch the message.

3. Directly input text to reply to the message.

4. Touch the  icon at the top of the phone to directly call back. Touch & hold the text to pop up the **Message options** menu, you can **Copy**, **Forward**, **Lock/Unlock** or **Delete** the message and etc.

Settings

In **Messaging**, touch the **Menu key** and then touch **Settings** to change relevant settings.

Gmail

You can use Gmail to read and write email from any mobile device or browser. Your email is always up to date and available no matter where you check it from.

On the home screen or in the All Apps screen, touch the **Gmail** icon to open **Gmail**.


Set up an Gmail account for the first time

You need to set up an Gmail account when you use Gmail for the first time.

1. If you already have a Gmail account, touch **Existing**, then enter the Gmail address and password.
2. Otherwise, touch **New** and follow the prompts to create a new Gmail account.

Send Emails with Gmail



After the setting of a Gmail account is completed, your phone will automatically enter the inbox of this Gmail account.

1. In the inbox of the Gmail account you want to use, touch .
2. Fill in one or more recipients. You can touch the **Menu** key to add CC/BCC.
3. Enter the email subject and then compose your message.
4. If you want to attach a photo or video, Touch the **Menu** key >

Attach picture/Attach video.

5. Touch  to send.

Replying to or forwarding email messages in Gmail

1. In the Gmail inbox, touch the email message.
2. To reply to the sender, touch . or Touch  and choose whether to **Reply all** or **Forward**.
3. If you selected **Reply all**, enter your reply message. If you selected **Forward**, specify the message recipients.

4. Touch  to send.

Network Applications

Network connection

Your phone can connect to the Internet, data services may incur additional charges. For details, please consult your network service provider.

Ways of Connecting to the Internet

Your phone's networking capabilities allow you to access the Internet via the mobile network's GSM/WCDMA connection and Wi-Fi.

GSM/WCDMA data connection

Different locations may have different mobile network availability. Initially, your phone is configured to use the fastest mobile network available for data.

You can also configure your phone to access a different set of networks entirely, or to behave in special ways when roaming.

The icons on the Status bar indicate which kind of data network you're connected to.

On the home screen, touch **Settings**> **Network & internet** > **Mobile networks** to change relevant settings.

Wi-Fi

Turn on/off Wi-Fi

1. On the home screen, touch **Settings** and then touch **Network & internet**.
2. To turn on Wi-Fi, touch **OFF** and slide it to the right. Touch **ON** and slide to the left to turn off Wi-Fi.

Connect to Wi-Fi


1. On the home screen, touch **Settings** and then touch **Network & internet**.
2. Turn on **Wi-Fi**.
3. Touch **Wi-Fi**. Your phone will automatically search for all nearby Wi-Fi networks.
4. Select the network you would like to connect to from the list.
 - If you've selected an open network, your phone will automatically connect to it.
 - If you've selected a secure network, you need to input the password.

Browser

You can use **Chrome** to view web pages and to search for information on the web.

Open Browser

1. On the home screen, touch the **Chrome** icon.
2. Touch the URL field at the top to input a web address.
3. Enter a new address and then touch **Go**.

You can touch  > **Bookmarks/History** to select the bookmark you want to open. Touch **SAVED PAGES** or **HISTORY** to open other web pages.


Browse web

After opening a web page, you can slide your finger on the screen to view other parts of the page.

Zoom in or out


You can use two fingers to zoom in or out. Spread your fingers apart or pinch them together to zoom in or out.

Browsing options

When browsing web pages, touch the  to select more operations such as **Save to bookmarks**, **Share page**, **Find in page**, **Request desktop site**.

Settings

You can choose settings that will affect how page content is displayed and privacy and security preferences to suit your browse style.

On the **Browser** screen, touch  > **Settings** to enter the settings interface.

Bluetooth

Via the Bluetooth® function, you can exchange data with other Bluetooth devices that are within a short distance. Because Bluetooth® devices communicate through radio waves; interference might exist due to obstacles or other electronic devices.

Turn on/off Bluetooth

1. On the home screen, touch **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Slide the **ON/OFF** button next to **Bluetooth®** to turn it on or off.



Pairing

1. Touch **Pair new device**, when Bluetooth is on to automatically search for devices. Your phone will scan for and display all Bluetooth devices it finds.
2. Touch the ID of the desired device.

Send files via Bluetooth

To send files via Bluetooth®, do as follows:

1. Select a file or item, such as a contact or a media file from an appropriate application or **File manager**.

2. Open it, touch the **Menu** key and choose **Share**, or touch and hold it, choose  then touch the  icon.
3. Search for and pair with a Bluetooth®-enabled device.

Change your phone's Bluetooth name

1. On the home screen, touch **Settings > Connected devices > Connection preferences > Bluetooth**
2. If the Bluetooth function is not turned on, turn it on.
3. Touch **Bluetooth**, then touch the **Device name** to edit the name of your device, then touch **Rename**.
4. Touch the name of the phone to toggle it to **Visibility timeout** so that other Bluetooth® devices can find your device.

Airplane mode

In areas where the use of mobile devices is restricted, you can activate **Airplane mode** to disable phone function but still use other functions of your phone such as calendar, music and games. You will not be able to make/answer calls, send/receive messages in **Airplane mode**.

1. On the home screen, touch **Settings > Network & internet**.
2. Check the box for **Airplane mode**. The phone will turn off all wireless connections when **Airplane mode** is enabled.

Experiencing Multimedia

Camera

Your phone has a camera, which can be used to take photos and record video clips.

Note:

Please respect the privacy of others and abide by the local regulations and customs when taking photos.


Take photos



1. On the home screen, touch the **Camera** icon to open the camera.

2. Tap the  icon to take photos after the view is satisfactory.

To view your picture, touch the thumbnail in the bottom left corner of the screen.

Record video clips

You can use  icon to change from Camera to Camcorder or vice versa.

Tap the  icon to start recording and touch the  icon to stop recording.

After a video is recorded, you can touch the frame in the bottom

left corner of the screen to view the video.

Photos

The **Photos** categorizes your pictures and videos by storage location and stores these files in folders. Tap a folder to view the pictures or videos inside.

More Applications


File Manager

On the home screen, touch the **Files** icon. You can view all files saved in the phone or on the memory card.

Clock

On the home screen, touch the **Clock** icon.

Adding an Alarm



1. Touch the **Alarm**.
2. Touch the  icon at the down of the screen.

Turning on/off an Alarm



On the **Alarms** screen, slide the **ON/OFF** button next to an alarm to turn it on or off.

Stopwatch

1. On the **Clock** screen, touch **Stopwatch**.

2. Touch  to start timing, press  to pause.

Timer

1. On the **Clock** screen, touch **Add timer**.
2. Set the length of time to count down.
2. Touch  to begin.
3. When the timer expires, touch  to stop the alert.

Manage applications

You can view and manage applications installed in your phone.

Install new applications

You can install applications from the **Play Store** or from elsewhere. When installing applications that are not from the **Play Store**, make sure the software is suitable for your phone.

Installing applications from the Play Store

1. On the home screen, touch the **Play Store** icon.
2. Search for the applications you want to install.

Installing applications not in the Play Store

1. Copy the application to the SD card and find the file from **File manager**.
2. Check **Unknown sources**.
3. Touch the file and complete the installation according to the

wizard.

Uninstall applications

1. On the home screen, touch the **settings > Apps & notifications**.
2. Scroll the list and touch the application you want to uninstall.

Compliance Information

FCC NOTICE

The following statement applies to all products that have received FCC approval. Applicable products wear the FCC logo, and /or an FCC ID in the format FCC ID:2ADLJ-V22 on the product label.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of

the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure

condition without restriction.

Certification Information



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Smart phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: V22 (FCC ID: 2ADLJ-V22) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.773W/kg and when properly worn on the body is 0.914W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

The EUT was tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility standards. The ANSI standard for hearing aid compatibility contains two types of ratings:

- M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids.
- T-Ratings: Rating for inductive coupling with hearing aids in telecoil mode.

This device complies with the FCC HAC requirements has also been tested E-Field, H-Field and T-Coil. M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings.

Your device is rated M3. T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings. Your device is rated T4.