

**Hisense**

# Hisense T203

User Guide

Before using the equipment, please read the user guide thoroughly.

Manufactured by Hisense Communications Co.,Ltd.

# Table of Contents

## Safety Precautions

- 1 General Safety Information
- 4 Medical Device
- 4 Road Safety
- 5 Power Supply & Charging
- 6 Hearing Protection
- 7 Protecting the Environment
- 7 Cleaning and Maintenance
- 8 Emergency Call
- 8 Copyright

## Phone at a glance

- 9 Phone Overview
- 11 Installing Micro SIM card / SD card
- 12 Battery
- 15 Turning Your Phone On/Off
- 16 Touchscreen Gestures
- 19 Notification Center
- 19 Locking the Phone

- 20 Customizing Screen

## Using Your Phone

- 21 Home Screen
- 23 Phone
- 24 Contacts
- 25 Messages
- 27 Camera
- 29 Calculator
- 30 Music
- 30 FM Radio
- 31 Browser
- 31 Email
- 32 Fingerprint Recognition
- 33 Sound Recorder

## Appendix

- 34 Important Information
- 34 IMEI Identification
- 35 Disclaimer
- 35 Troubleshooting

# Safety Precautions



**Warning:** situations that could cause injury to yourself or others.



**Caution:** situations that could cause damage to your device or other equipment.



**Notice:** notes, usage tips, or additional information.

## General Safety Information



Failure to follow the following safety instructions could result in fire, electric shock, injuries, or damage to your phone or other property. Read all the safety information below before using your phone.

- Do not crash, throw, or puncture your phone. Avoid falling, squeezing, and bending of your phone.
- Do not use your phone in a moist environment, such as bathroom. Prevent your phone from being soaked or washed in liquid.
- Do not power on your phone when it is prohibited to use or when the phone may cause interference or danger.
- Some parts of your phone are made of glass. The glass could be broken if your phone is dropped on a hard surface or receives a substantial impact. If the glass is broken, do not touch the glass parts of the phone or attempt to remove the broken glass from the phone. Stop using your phone until the glass is replaced by authorized service provider.
- Turn off your phone in aircraft. The phone may cause inter-

ference to control equipment of the aircraft.

- Turn off your phone near high-precision electronic devices. The phone may affect performance of these devices.
- Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
- The socket-outlet shall be installed near the phone and shall be easily accessible.
- Do not place your phone or its accessories in containers with a strong electromagnetic field.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep the phone away from direct sunlight. Do not put your phone in a high-temperature place or use it in a place with flammable gas such as gas station.
- Use only approved batteries and chargers to avoid the risk of explosion.
- Obey all laws or regulations on the use of the phone. Respect others' privacy and legal rights when using your phone.
- Strictly obey relevant instructions of this manual while using USB cable. Otherwise your phone or PC may be damaged.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Please backup your important data. Repair or other causes may result in data loss.

- Do not disconnect the phone during memory formatting or file transfer operations. Otherwise, it may cause program failure or files damage.
- Keep the phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Keep small phone accessories away from children to prevent choking hazard.
- Do not modify or remanufacture your phone.
- Do not immerse your phone in water or other liquids.
- Do not expose your phone to fire, explosion or other hazards.
- The phone shall only be connected to a USB interface of version USB 2.0.
- Ideal operating temperatures are 0°C to 40°C . Ideal storage temperatures are -20°C to 50°C .

## Medical Device

- Obey all rules or regulations in hospitals and health care facilities.
- Your phone contains radios that emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers or other medical devices.
- If you wear a pacemaker, maintain at least 20 cm of separation between your pacemaker and your phone.
- If you suspect your phone is interfering with your pacemaker or any other medical devices, stop using your phone and consult your physician for information specific to your medical device.
- When you perform repetitive activities such as typing or playing games on your phone, you may experience occasional discomfort in your hands, arms, wrists, shoulders, neck or other parts of your body. If you experience discomfort, stop using your phone and consult your physician.

## Road Safety

- Check local laws and regulations on using phone.
- Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
- Pull off road and park before making or answering a call if driving conditions require so.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It may cause the air bag to fail or cause serious injury due to improper performance.
- If you listen to music, please keep the volume at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.
- Using your phone in some circumstances can distract you and may cause danger. Obey rules that prohibit or restrict the use of phone or headphones (for example, avoid texting while driving a car or using headphones while riding a bicycle).

## Power Supply & Charging

- Charge your phone with the included USB cable and power adapter. Use of incompatible adapter or cable may cause permanently damage to your phone.
- Power adapter shall be installed near phone and shall be easily accessible.
- Using damaged cables or chargers, or charging when moisture is present, can cause electric shock.
- Power adapter is intended for indoor use only.
- Power outlet should be readily accessible. The outlet should not be blocked during use.
- To fully disconnect the phone from the mains, unplug the AC/DC cable from power outlet.
- Power adapters may become warm during normal use, and prolonged contact may cause injury.

- Always allow adequate ventilation around power adapters when using them.
- The ventilation should not be impeded by covering ventilation openings with items (for example newspapers, tablecloths, curtains and so on) to avoid overheating and malfunction. Maintain a clearance of at least 10 cm around the phone.
- The phone should be used in a moderate climate.
- Do not plug or unplug USB port with wet hands, or it may result in risk of electric shock.
- The phone is built with an internal rechargeable battery: do not expose the phone to excessive heat such as sunshine, fire or the like.
- Battery contains materials which are hazardous and harmful to the environment. The battery must be recycled or disposed of separately from household waste.

## Hearing Protection



The phone respects the current regulations for limiting the maximum output volume. Prolonged headset listening at high volume could lead to hearing damage!

- Stop using the product or lower the volume if you feel your ears ringing.
- Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.
- Excessive sound pressure from headsets and headphones



can cause hearing loss.

- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Please only use specified headphones with your phone.

## Protecting the Environment

- You must dispose of your used phone or battery according to local laws and regulations. Bring them to designated place for proper recycling.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Do not dispose of used phones or batteries in a household rubbish bin.

## Cleaning and Maintenance

- Turn off the phone before cleaning and maintenance. Charger should be unplugged from socket. Phone and charger should be disconnected to prevent any electric shock or short circuiting of battery or charger.
- Do not wipe the phone or charger by using chemical substance (alcohol benzene), chemical agents or abrasive cleaning agents to avoid damaging its parts or causing malfunction. You may clean with a slightly damp anti-static soft cloth.
- Do not scrape or alter phone case as paint substances, or it may cause allergic reaction. If such reaction occurs, stop using the phone immediately and seek medical help.

- Wipe dust off power plug and keep it dry to avoid risk of fire.
- If phone or accessories do not work properly, contact your local vendor.
- Do not disassemble phone or its accessories by yourself.

## Emergency Call


In an emergency situation, if the phone is on and you are within network range, it can be used to make an emergency call. However, emergency call numbers may not be reachable in all networks. You should never rely on your phone for emergency calls.

## Copyright

The equipment is for private use only. Copying CDs or downloading music, video or picture files for sale or other business purposes may be a violation of copyright law. Copyrighted materials, works of art and/or presentations may require authorization to be fully or partially copied or recorded. Be aware of all such applicable laws concerning recording and use of such contents in your country and jurisdiction.

# Phone at a glance

## Phone Overview

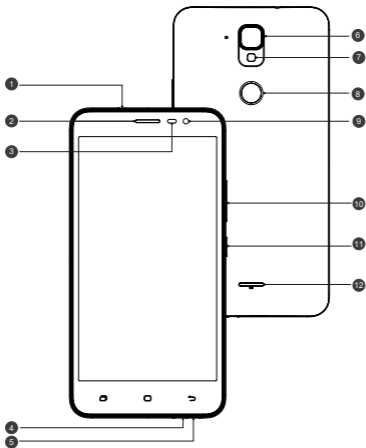


The phone features may vary based on your location, language, carrier and model.

The phone supplies OTG function, please use standard OTG data cable.

1. Earphone	7. Flashlight
2. Receiver	8. Fingerprint sensor
3. Light sensor	9. Front camera
4. Microphone	10. Volume button
5. Micro USB port	11. Power button
6. Camera	12. Speaker

### Power button

- To power on your phone, press and hold the power button until the screen turns on.
- To power off your phone, press and hold the power button, and then tap  **Power off**.
- To force your phone to restart, press and hold the power button until your device vibrates.

### Volume button

To adjust the volume, press volume button.

#### **Home key (virtual)**

To go back to the Home screen, tap .

#### **Recent key (virtual)**


To open the list of recent apps, tap .


#### **Return key (virtual)**

To go back to the previous screen, tap .


## Installing Micro SIM card / SD card

Before you start using your new phone, you need to set it up.

- 1 Press and hold the power button. Select  **Power off** to turn off your phone.
- 2 To remove the back cover, hold the phone firmly in one hand and lift the back cover upwards with the other hand.

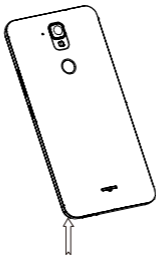

- 3 Insert Micro-SIM card and Micro-SD card.

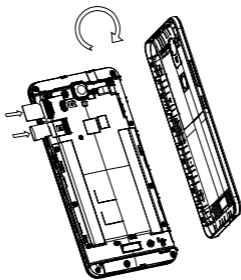

- 4 Install the back cover of your phone.



- Only Micro-SIM cards work with the device. Do not attempt to insert other SIM type, otherwise it may cause phone damage.
- Do not remove the Micro-SIM/SD card while the card is being used; otherwise, data loss or damage may occur. Hisense shall not be liable to any loss, including data loss, due to misuse of Micro-SIM/SD card.
- Turn off your phone before replacing or removing its Micro-SIM/SD card.
- Micro-SD card is not included; therefore you need to buy it separately.

## Battery

### Charging the battery

Charge the battery before using it for the first time or when it has been unused for extended periods of time.

- 1** Connect the USB cable to the USB power adaptor, and then plug the end of the USB cable into the USB port.
- 2** Plug the USB power adaptor into an electric socket.
- 3** After the battery is fully charged, disconnect the phone from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

### Battery charging tips and precautions

- Use only Hisense-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to

explode or damage the phone.

- Avoid using your phone when it is charging. Do not cover your phone or the power adaptor.
- Connecting the charger improperly may cause serious damage to the phone. Any damage caused by misuse is not covered by the warranty.
- If the AC power supply is of a lower voltage, then a longer charging time may be needed.
- If non-standard chargers such as computers are used for charging, then a longer charge time may be needed.
- The battery is built into the phone and is not removable. Do not remove the battery by yourself.
- Fully charge the battery before first using the phone and disconnect the charger immediately after the first charge is completed.
- Remove the charger from the electric socket when not charging the phone.
- The phone may not start immediately if charging with low battery. After a period of charging, the phone will start normally.
- The charging time may vary depending on the ambient temperature and the remaining battery level.
- The phone can be safely charged within the environment temperature of 0 °C to 40 °C . Charging at temperatures below 0°C or higher than 40°C will harm the battery performance and shorten its life. Long-term charging in extreme temperatures will damage the battery.


- While charging, the phone and the charger may heat up. This is normal and should not affect the phone's lifespan or performance. If the battery gets hotter than usual, stop charging it. Place your phone in a cool place and allow it to cool down. Avoid prolonged contact with the surface of your phone if it becomes hot.



## Turning Your Phone On/Off

### Turning on the phone

Press the Power button on the right side of phone and wait for a few seconds until the screen lights up.

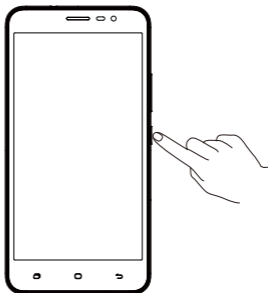


When you turn on your phone for the first time or after performing data reset, follow the on-screen instructions to set up your device.



If the battery is empty, make sure you charge it at least 30 minutes.

### Turning off the phone

Press and hold Power button to pop up option menu, select 

**Power off.**


# Basics

## Touchscreen Gestures

Use a few simple gestures to use your phone and its apps.


### Tapping

To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

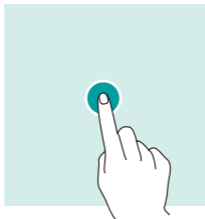

### Tapping and holding


Tap and hold an item or the screen for more than 2 seconds to access available options.

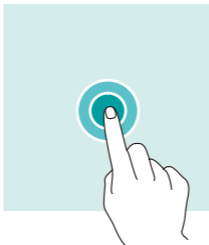

## Swiping


Swipe to the left or right on the Home screen or the Apps screen to view other panels.

Swipe upwards or downward to scroll through a webpage or a list of items.

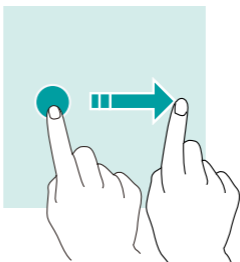

## Spreading and Pinching

Spread two fingers apart on a webpage, map or image to zoom in a part.

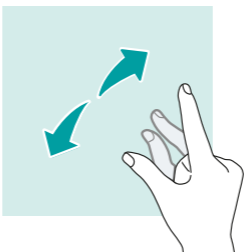


Pinch to zoom out.



## Dragging


To move an item, tap and hold it and drag it to the target position.

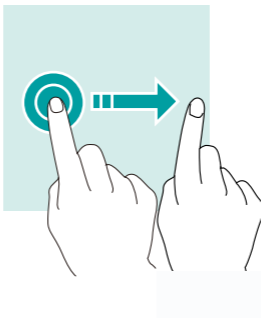

## Notification Center

### Open notification center

- 1 Swipe down from the top edge of the screen to open notification center.
- 2 Swipe down again from the top edge of the screen to go to the shortcuts tab.

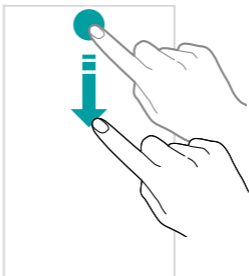

### Set notification options

- 1 Go to **Settings > Notification**.
- 2 Enable or disable notification settings as desired.

### Close notification center

Swipe up or press the Home button to close notification center.

## Locking the Phone

Lock the phone for protecting user's data.

- To lock the phone, do the following: **Settings > Security**

>**Screen Lock** > in the option select **Pattern, PIN, password, etc.** and follow the setup instructions until completing the process.

- The screen will lock automatically and enter sleep mode after it has been idle for a period of time to reduce power consumption and prevent unintended operations.

## Customizing Screen

- 1 Press and hold the blank area on the screen to access the home screen editor.
- 2 Select **WALLPAPERS** and **WIDGETS** to customize your screen.


# Using Your Phone

## Home Screen

Home screen is the starting point for accessing all of the phone's features. It displays widgets, shortcuts to apps and more.



Home screen may appear differently depending on the region or service provider.

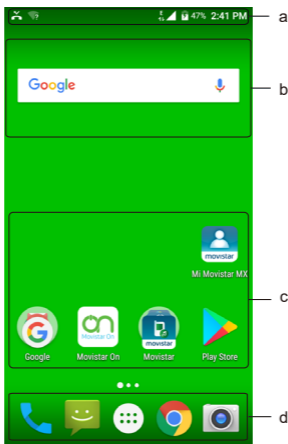

### **Status Bar (a)**

It displays status icons and notifications.

### **Widget (b)**

Widgets are small apps that launch specific app functions to provide information and convenient access on your Home screen.

### **Application Icons (c)**

Tap an icon, such as an app or a folder, to open and use it.




### **Hot Dock (d)**


It provides quick access to apps in hot dock.





# Phone

## Making calls

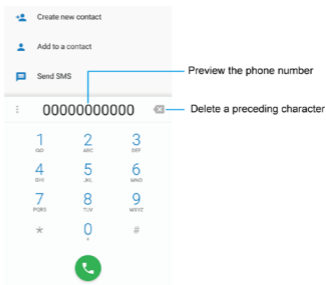

- 1 Tap  .
- 2 Tap  to open the keypad and enter a phone number.
- 3 Tap  to make a call.



## Making calls from call logs or contacts list


Tap  or , and tap a contact or a phone number to make a call.

## Making an international call


- 1 Tap  to open the keypad.
- 2 Tap and hold 0 until the + sign appears.
- 3 Enter the country code, area code, and the phone number.  
Then tap  .

## Receiving calls

### Answering a call

To answer a call, drag  right.




### Rejecting a call

To reject a call, drag  left.



## Contacts

### Adding contacts



#### Creating contact manually

- 1 Tap .
- 2 Tap  to enter contact information.
- 3 Tap  to save.

#### Adding from the keypad

- 4 Tap  to open .
- 5 Enter the number and tap **Create new contact**.

#### Adding from received calls

- 1 Tap .
- 2 Tap  to view received calls.
- 3 Add received calls to a contact.

### Importing contacts

You can import contacts from storage services to your device.

- 1 Tap .


2 Tap **IMPORT CONTACTS**.

3 Select an import option.






## Searching for contacts

Tap .

Use one of the following search methods:

- Scroll up or down the contacts list.
- Drag a finger along the index at the left side of the contacts list to scroll through it quickly.
- Tap  at the top of the screen to search for a contact.

Once a contact is selected, you can do the following:

- : Add to favourite contacts.
- : Make a call.
- : Compose a message.
- : Edit the contact information.
- : Delete, Share, or Place on Home screen.


## Messages

### Sending messages

1 Tap .


2 Tap  to create a message.

### 3 Add recipients and enter a message.

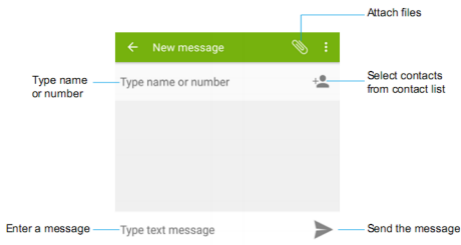



### 4 Tap to send the message.

## Viewing messages

- 1 Tap .
- 2 Select a contact on the message list.
- 3 View your conversation.

## Searching messages

- 1 Tap .
- 2 Tap  to enter key words to search messages.

## Setting up message notification

You can change notification sound, display options, and more.

- 1 Tap .
- 2 Tap  to go to **Settings > Notifications**.




3 Change the notification settings.

- **Mute:** Set the mute state.
- **Sound:** Change the notification sound.
- **Vibrate:** Set the device to vibrate when you receive messages.
- **Popup notification:** Show popup for push notifications.




## Camera


You can take photos or record videos.

### Taking photos

- 1 Tap .
- 2 Frame your subject on the screen. A green square appears where the camera is focused.
- 3 Tap  to take a photo. Your picture will be automatically saved to  **Gallery**.

### Recording videos


- 1 Tap  to start recording the video.
  - 2 Tap  to stop recording. To capture an image from the video while recording, tap .
- Spread two fingers apart on the screen to zoom in, and pinch to zoom out.


- Tap  to switch between front camera and rear camera.



## Launching camera on locked screen


To quickly take photos, launch Camera on the locked screen.

Drag  outside the large circle on the locked screen.

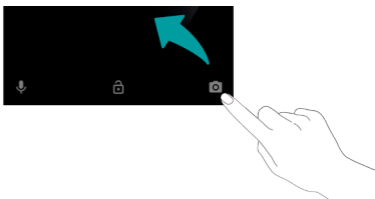


## Gallery



### Viewing images or videos

- 1 Tap .
- 2 Select an image or a video.

### Deleting images or videos


To delete images or videos, tap and hold the images or videos you desired to delete, and tap  to delete the images or videos.

### Sharing images or videos

- 1 Tap .
- 2 Select an image or a video, and tap .
- 3 Select a sharing method.


## Calculator


You can do simple or complex calculations by using Calculator app.

- 1 Tap .
- 2 Rotate the screen orientation to switch between the standard calculator and the scientific calculator.

## Music


### Listening to music

- 1 Tap .
- 2 Select a song to play.

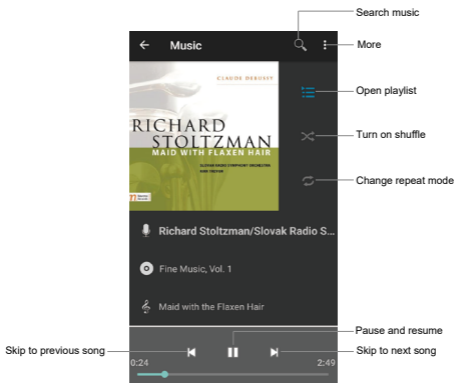

- 3 When a song is playing, tap Home button to exit the music playback screen without stopping the song. To return to the music playback screen, open the notification center and tap the cover of the song.

## FM Radio



- 1 To use the FM Radio function, first you need to connect your earphone.
- 2 Tap  to activate.
- 3 Select the frequency following the app instructions and set



the volume to a comfortable level.

## Browser


Connect the webpage to search for information and bookmark your favorite webpages to access them conveniently.

- 1 Tap .
- 2 Enter the address field in the search bar, and tap . You can access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.



## Email

### Setting up email accounts

Set up an email account when opening Email for the first time.

- 1 Tap .
- 2 Enter the email address and then tap **NEXT**. Enter the password and then tap **NEXT**. To manually register a company email account, tap **MANUAL SETUP**.
- 3 Follow the on-screen instructions to complete the setup.

### Sending emails

- 1 Tap  to compose an email.
- 2 Add recipients and enter an email text.
- 3 Tap  to send the email.

## Fingerprint Recognition

The fingerprint sensor can be used to unlock your phone, authorize purchases, or sign in to apps.

### Configuring your fingerprint ID

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Select **Pattern, PIN, or Password**, and then follow the on-screen instructions to set a screen lock password.
- 3 Once you have configured the password, locate your finger on fingerprint sensor to add your fingerprint.
- 4 Put your fingertip on the sensor. Press down lightly on the sensor until your phone vibrates. Repeat this step using different parts of your fingertip until your phone has successfully added your fingerprint.
- 5 Once you have added your fingerprint, tap **DONE**. Tap **ADD ANOTHER** if you want to add more fingerprints.

### Deleting fingerprint

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Input your password.
- 3 Select the desired fingerprint and choose **DELETE**.




### Adding fingerprint

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Input your password.
- 3 Tap **Add fingerprint** to add.

## Sound Recorder

The phone supports long period of recording. Make sure your phone storage is available before recording.

### Recording sound

- 1 Open .
- 2 Tap  to start recording.
- 3 Tap  to stop recording. Then tap **Done** to save your recording, or tap **Discard** to discard your recording. The recordings are automatically stored in **My Files > Phone storage**.

### Playing a recording

- 1 Go to **My Files > Phone storage**.
- 2 Select and tap a recording to play it.

### Managing recordings

- 1 Go to **My Files > Phone storage**.
- 2 Tap and hold a recording. You can rename, share or delete it.

# Appendix

## Important Information

For an optimal experience, the phone regularly connects to mail and internet servers. This automatically and inevitably generates data exchanges that may be charged in addition to your existing package, or may be deducted from prepaid credit or a prepaid system.

To avoid billing problems related to services that use the Internet, it is strongly recommended to have a suitable option which includes unlimited Internet and emails and to avoid changing the settings preconfigured by default.

If you wish, connect to Wi-Fi for a faster and more stream lined experience. It is particularly recommended to use Wi-Fi for streaming, or downloading games, videos or bulky films.

## IMEI Identification

The IMEI (International Mobile Equipment Identity) code can be found in the equipment package, on a label at the back of the battery or it can be displayed on screen by dialing the following combination of symbols and numbers in the phone keyboard (no spaces): \*#06#.

## Disclaimer

- The usage of non-original accessories, such as headsets, chargers and so on, will cause incompatibility between phone and accessories. It may cause bad performance or malfunction, and we are not responsible for any damage that it might occur.
- The user manual only contains general overview. Specifications and functions of your phone may be different to those contained in the user manual.
- Your phone has been confirmed to work properly since produced from the factory. If there is any damage or defect due to manufacturing, it should follow terms and conditions in the warranty card.
- If the functions of your phone are related to features and services by operator, it should follow the terms and conditions applicable by the operator.
- Note that your phone still has its limitations referring to the specifications and functions. These limitations cannot be considered as damage or defect, and cannot be regarded as manufacturer damage.
- Use your phone in accordance with the purposes and functions.

## Troubleshooting

This part lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most of them are easy to be fixed by yourself.

## **SIM card has error**

Ensure that the SIM card is correctly inserted.

## **No network connection / Dropped network**

- Move toward a window or into an open area. Check network provider coverage map.
- Check whether the SIM card is too old. If so, change your SIM card at your network provider's nearest branch. Contact your service provider.

## **Codes do not match**

If you forget the code, contact your service provider.

## **Calls are not available**

- Ensure that there is no dialling error. New network is not authorized.
- If new SIM card is inserted, check for new restrictions.
- If pre-paid charge reached its limit, contact service provider.

## **Phone cannot be switched on**

- Ensure to press the Power button for at least two seconds.
- Charge battery. Check the charging indicator on the screen.

## **Charge has error**

- Outside temperature is too hot or cold. Charge the battery.
- Ensure that phone is charging at a normal temperature.
- Check the charger and its connection to the phone.
- Plug the charger into a different socket.

- Ensure that charger is not defective. If so, replace the charger.
- Use only original accessories.

## **Impossible to receive or send SMS and photos**

Ensure that the storage is sufficient. Delete some messages in your phone.

## **Files cannot be opened**

Check the supported file formats.

## **Screen does not light up when receiving a call.**

- If you use a protection tape or case, ensure that it has not covered the area around the light sensor.
- Ensure that the area around the light sensor is clean.

## **Phone has no sound**

Check the settings status in the sound menu to ensure that the phone is not in vibration or silent mode.

## **Phone hangs up or freezes**

Update your software through the website.

## **Contacts display doubly**

Contacts are saved in both phone and SIM card. Check contacts saved.

## **App cannot be installed**

- Not supported by service provider or registration required.

Contact your service provider.

- Your phone has insufficient storage. Delete some messages from your phone.

### **Phone cannot be connected to computer**

- Change data cable.
- Change computer port.

### **Call logs are not saved**

Ensure that the time is not wrongly set. Check the time setting.



Hisense México S. de R.L. de C.V.

Blvd. Miguel de Cervantes Saavedra,

No. 301 Torre Norte, Piso 2,

Col. Ampliación Granada,

Municipio o Demarcación Territorial Miguel Hidalgo,

C.P. 11520, Ciudad de México,

R.F.C. HME110512IY3

BRAND: HISENSE

MODEL: Hisense T203

FCC ID: 2ADOBT203

ELECTRIC CHARACTERISTICS

ADAPTOR

BRAND: HISENSE

MODEL: CC10-050200U

INPUT: AC 100-240V 50/60Hz 0.35A

OUTPUT: DC 5V, 2V

RECHARGEABLE BATTERY

BRAND: HISENSE

MODEL: LPN385300

MADE IN CHINA

## **Medical devices**

Implanted medical devices, such as pacemakers, may be affected by the use of this product.

Avoid potential interference radiated from the product in the implanted medical device, by keeping the product at least 20 cm away from the device.

Do not carry the product in the chest pocket.

Turn off the product immediately if you suspect any interference.

## **ONLY FOR MEXICO**

“For use in Mexico, the operation of this product is subject to the following two conditions: (1) this equipment or device may not cause detrimental interference and (2) this equipment or device must accept any interference, including interference that may cause unwanted operation.”

## **FCC Compliance**

This phone complies with section 15 of FCC Regulations.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR

value reported under this standard during product certification for use when properly worn on the body.


The highest SAR value reported to the FCC for this type of devices is 0.73 W/kg when used over the ear, 0.44 W/kg when used at 15 mm away from the body and 1.16 W/kg when used at a wireless access point (HOTSPOT) 10mm.

Even though there may be differences between SAR levels of different phones and in different positions, all of them comply with the requirements of the government.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ADOBT203

## Specification

<b>Model Name</b>	Hisense T203
<b>Dimensions</b>	154.39*78.14*9.1mm
<b>OS</b>	Android N
<b>CPU</b>	MT6737 1.3GHz
<b>Memory Internal</b>	1 GB RAM + 16 GB ROM
<b>Camera</b>	8 Mpix + 13Mpix 13 Mpix + 16Mpix Improved cameras via software
<b>Size</b>	5.5 Inches
<b>Resolution</b>	HD
<b>Color</b>	16.7 million colors
<b>LTE</b>	Band 2/4/5/7
<b>3G</b>	Band 2/4/5
<b>2G</b>	850/900/1800/1900 MHz
<b>Data Speed</b>	LTE DL 150Mbps LTE UL 50Mbps
<b>WLAN</b>	WIFI 802.11 b/g/n
<b>Bluetooth</b>	BT V4.2
<b>GPS</b>	Yes
<b>FM</b>	Yes
<b>Interface</b>	Micro USB2.0
<b>Battery</b>	3.85 V  3000 mAh